

User Manual



**ENS500-AC/ENS500EXT-AC/
ENS610EXT/ENS620EXT**
version 1.1

11AC Wave2 Outdoor Access Point / CPE

IMPORTANT

To install this Access Point please refer to the **Quick Installation Guide** included in the product packaging.

Table of Contents

Chapter 1 Product Overview.....	4	Wireless Security.....	51
Introduction.....	5	Wireless MAC Filtering.....	54
Technical Specifications.....	8	Wireless Advanced.....	55
Physical Interface.....	16	Fast Roaming.....	56
Chapter 2 Before You Begin.....	19	WDS Link Settings.....	57
Computer Settings.....	20	Guest Network Settings.....	58
Hardware Installation.....	24	Chapter 8 Management	58
Mounting the AP.....	25	Management VLAN Settings.....	60
Install Ground cable.....	28	Advanced Settings.....	61
Chapter 3 Configuring Your Access Point.....	29	Time Zone.....	64
Default Settings./Web Configuration.....	30	Auto Reboot Settings.....	65
Chapter 4 Building a Wireless Network.....	31	Wi-Fi Scheduler.....	66
Access Point Mode.....	32	Tools.....	67
Client Bridge Mode.....	33	Account/Firmware.....	70
WDS AP Mode.....	35	Backup/Restore	71
WDS Bridge Mode.....	36	Log.....	73
WDS Station Mode.....	37	Logout/Reset.....	74
Chapter 5 Status.....	38	Appendix.....	75
Overview.....	39	FCC Interference Statement.....	76
Connection.....	41	CE Interference Statement.....	77
Realtime.....	41	Professional Installation Instruction.....	82
Chapter 6 Network	43		
Basic IPv4/IPv6 Settings.....	44		
Spanning Tree Protocol Setting.....	44		
Chapter 7 2.4 GHz/5 GHz Wireless.....	46		
Wireless Settings.....	47		
2.4 GHz/5 GHz Wireless Network.....	48		
2.4GHz/5 GHz SSID Profile.....	50		