# **Fit6 4×4**

EnGenius Fit 802.11ax 4×4 Dual Band Managed Indoor Wireless Access Point (EWS377-FIT)

## Introduction

This Quick Start Guide is designed to guide you through the installation of the **Fit6 4×4** access point, model **EWS377-FIT**, including hardware mounting and configuration.



### Fit6 4×4

# EnGenius Fit 802.11ax 4×4 Dual Band Managed Indoor Wireless Access Point

Model: EWS377-FIT


- Wi-Fi 6 technology for high-performance Wi-Fi in high-density, multidevice environments.
- Four spatial streams support up to 2,400 Mbps (5GHz) & 1,200 Mbps (2.4GHz).
- Multiple applications for cloud and on premises solutions

#### Content Quick Links

- Hardware Mounting
- Powering the EnGenius Fit AP
- Management Plane
- Option A: Cloud Management
- Option B: On-Premises Management

• Option C: Standalone Configuration

# **Package Contents**

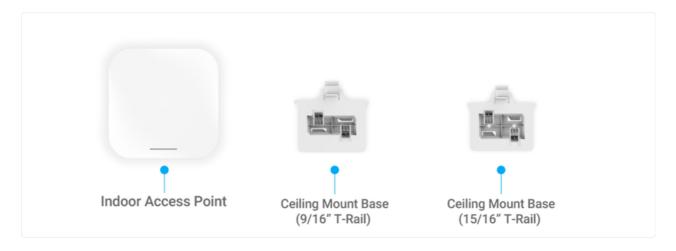




# **System Requirements**

#### **Web Browser**

- Google Chrome (57.0.2987.110 and later)
- Microsoft Edge (80.0.361.103 and later)
- Mozilla Firefox (52.0 and later)

# **Hardware Overview**

## **Ports**

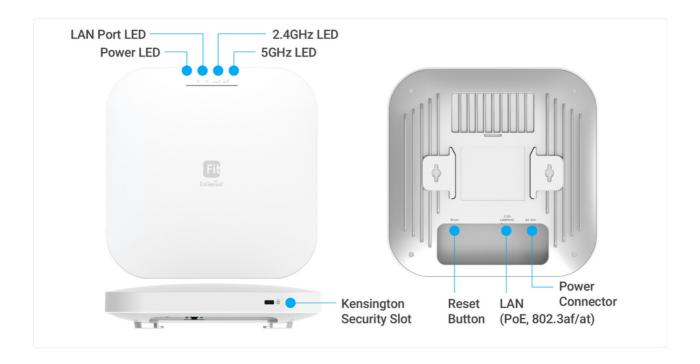

# (i) Reset Button:

• Reset to default: Press and hold the reset button for over 10 seconds, and the LED (PWR) will start Fast Flashing (0.2 sec). Then, the device will be reset to factory default settings.

### **LEDs**

Status	LED Color	LED Behavior
Connecting to the Management (FitExpress/ FitController)	PVVR (Orange)	Flashing (0.5 Sec)
Management Connected (FitExpress/ FitController/ Standalone)	PVVR (Orange)	Solid On
LAN Connected	LAN (Blue)	Solid On
LAN Transmitting	LAN (Blue)	Flashing
2.4GHz Radio On	2.4GHz (Blue)	Solid On
2.4GHz Transmitting	2.4GHz (Blue)	Flashing

5GHz Radio On	5GHz (Blue)			Solid On	
5GHz Transmitting	5GHz (Blue)				Flashing
Firmware Upgrading	PWR	LAN	2.4GHz	5GHz	Flashing (0.5 Sec)
Reset to Default	PWR (Orange)			Fast Flashing	
AP Locating Mode	PWR	LAN	2.4GHz	5GHz	Flashing (1.5 sec on -> 0.5 sec off)