Fit6 2×2 Outdoor

EnGenius Fit 802.11ax 2×2 Dual-Band Managed Outdoor Wireless Access Point (EWS850-FIT)

Introduction

This Quick Start Guide is designed to guide you through the installation of the Fit6 2×2 Outdoor access point, model EWS850-FIT, including hardware mounting and configuration.



Fit6 2×2 Outdoor

EnGenius Fit 802.11ax 2×2 Dual-Band Managed Outdoor Wireless Access Point

Model: EWS850-FIT


- Wi-Fi 6 technology for high-performance Wi-Fi in high-density, multidevice environments.
- Two spatial streams support up to 1,200 Mbps (5GHz) & 574 Mbps (2.4GHz).
- Multiple applications for cloud and on premises solutions

Content Quick Links

- Hardware Mounting
- Powering the EnGenius Fit AP
- Management Plane
- Option A: Cloud Management
- Option B: On-Premises Management

• Option C: Standalone Configuration

Package Contents

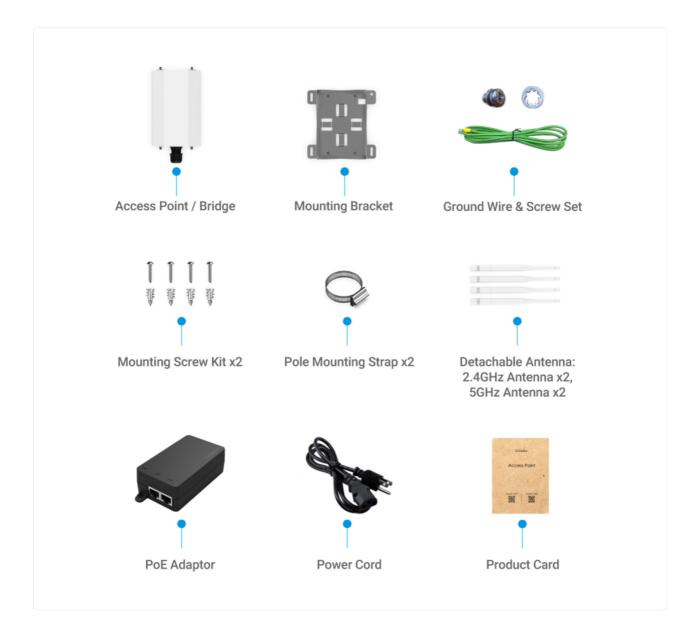

System Requirements


Web Browser

• Google Chrome (57.0.2987.110 and later)

- Microsoft Edge (80.0.361.103 and later)
- Mozilla Firefox (52.0 and later)

Hardware Overview

Ports

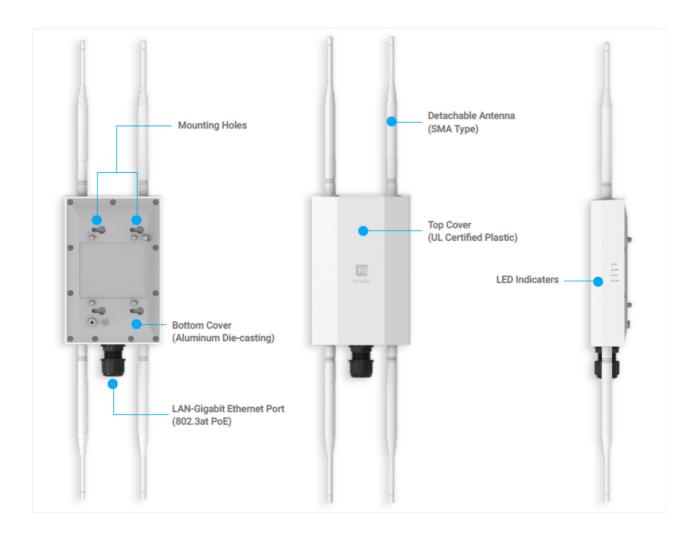

Reset by EnGenius PoE Adapter:

Reset to default: Press and hold the reset button on the PoE adaptor for over 10 seconds, and the LED (PWR) will start Fast Flashing (0.2 sec).
 Then, the device will be reset to factory default settings.

LEDs

| Status | LED Color | | | LED Behavior | |
|--|----------------|-----|------------|--------------------|---|
| Connecting to the Management (FitExpress/ FitController) | PVVK (Orange) | | | Flashing (0.5 Sec) | |
| Management Connected (FitExpress/ FitController/ Standalone) | PWR (Orange) | | | | Solid On |
| LAN Connected | LAN (1G) | | LAN | (2.5G) | Solid On |
| LAN Transmitting | LAN (1G) | | LAN (2.5G) | | Flashing |
| 2.4GHz Radio On | 2.4GHz (Green) | | | | Solid On |
| 2.4GHz Transmitting | 2.4GHz (Green) | | | | Flashing |
| 5GHz Radio On | 5GHz (Green) | | | | Solid On |
| 5GHz Transmitting | 5GHz (Green) | | | | Flashing |
| Firmware Upgrading | PWR | LAN | 2.4GHz | 5GHz | Flashing (0.5 Sec) |
| Reset to Default | PWR (Orange) | | | | Fast Flashing |
| AP Locating Mode | PWR | LAN | 2.4GHz | 5GHz | Flashing (1.5 sec on -> 0.5 sec off) |