



ECS4110-28P
28-Port Layer 2
Gigabit Ethernet PoE Switch

Installation Guide

Installation Guide

ECS4110-28P Gigabit Ethernet PoE Switch

Layer 2 Gigabit Ethernet Switch,
with 24 10/100/1000BASE-T (RJ-45) PoE Ports,
and 4 Gigabit SFP Ports

How to Use This Guide

This guide includes detailed information on the switch hardware, including network ports, power, cabling requirements, as well as plug-in modules and transceivers. This guide also provides general installation guidelines and recommended procedures.

Who Should Read This Guide? This guide is for network administrators and support personnel that install, operate, and maintain network equipment. The guide assumes a basic working knowledge of Layer 2 and Layer 3 switching and routing.

How This Guide is Organized The organization of this guide is based on the switch's main hardware components. Each chapter includes information about a specific component with relevant specifications and installation procedures. A switch overview section is also provided.

To deploy this switch effectively and ensure trouble-free operation, it is recommended that you read each chapter of this guide in sequence while installing the switch.

The guide includes these chapters:

- ◆ [Chapter 1 - Switch Description](#) — Includes a switch overview, key component identification, and key technical specifications.
- ◆ [Chapter 2 - Installation Overview](#) — Includes details of the package contents and an outline of switch installation tasks.
- ◆ [Chapter 3 - Switch Chassis](#) — Includes switch chassis rack installation and system cooling requirements.
- ◆ [Chapter 4 - Power and Grounding](#) — Includes information on AC power requirements, switch grounding, and powering on the switch.
- ◆ [Chapter 5 - Switch Management](#) — Connecting to the switch for management, and information on the system status LEDs.
- ◆ [Chapter 6 - Port Connections](#) — Includes information on network interfaces, installing optional transceivers, and cabling specifications.
- ◆ [Appendix A - Troubleshooting](#) — Information for troubleshooting switch installation and operation.

Related Documentation This guide focuses on switch hardware and installation, it does not cover software configuration of the switch. For specific information on how to operate and use the management functions of the switch, see the following guide:

Management Guide

For all safety information and regulatory statements, see the following document:

Quick Start Guide

Safety and Regulatory Information

Conventions The following conventions are used throughout this guide to show information:



Note: Emphasizes important information or calls your attention to related features or instructions.



Caution: Alerts you to a potential hazard that could cause loss of data, or damage the system or equipment.



Warning: Alerts you to a potential hazard that could cause personal injury.

Revision History This section summarizes the changes in each revision of this guide.

November 2015 Revision

This is the second revision of this guide. This revision includes the following change:

- ◆ Updated specification information.

June 2014 Revision

This is the first revision of this guide.

Contents

How to Use This Guide	3
Contents	5
Figures	7
Tables	8
1 Switch Description	9
System Overview	9
Power-over-Ethernet	9
Hardware Components	9
Key Technical Specifications	11
2 Installation Overview	12
Package Contents	12
General Installation Guidelines	13
Installation Precautions	13
Switch Installation Tasks	14
3 Switch Chassis	15
Rack Mount Guidelines	15
Switch Cooling Requirements	16
Rack/Cabinet Cooling	16
How to Install the Switch in a Rack	17
How to Install the Switch on a Desktop or Shelf	18
How to Install an SFP Transceiver	19
4 Power and Grounding	21
About the Switch Power Supply	21
How to Ground the Chassis	22
How to Connect to AC Power	23

5	Switch Management	24
	Management Overview	24
	Understanding the Switch Status LEDs	25
	How to Connect to the Console Port	26
	How to Reset the Switch	29
6	Port Connections	30
	Cable Labeling and Connection Records	30
	Copper Cabling Guidelines	31
	10/100BASE-TX Pin Assignments	32
	1000BASE-T Assignments	32
	Power-over-Ethernet Guidelines	33
	Fiber Cabling Guidelines	34
	How to Connect to Twisted-Pair Copper Ports	35
	How to Connect to SFP Fiber Optic Ports	36
A	Troubleshooting	37
	Diagnosing LED Indicators	37
	System Self-Diagnostic Test Failure	37
	Power Problems	38
	Installation	38
	In-Band Access	38
	Index	39

Figures

Figure 1: Front Panel	9
Figure 2: Rear Panel	10
Figure 3: Switch Cooling	16
Figure 4: Attaching the Brackets	17
Figure 5: Installing the Switch in a Rack	18
Figure 6: Attaching the Adhesive Feet	18
Figure 7: Inserting an SFP Transceiver into a Slot	20
Figure 8: AC Power Supply Socket	21
Figure 9: Grounding Terminal	22
Figure 10: AC Power Cord and Power Socket	23
Figure 11: System and Port Status LEDs	25
Figure 12: Console Port	26
Figure 13: Console Port Connection	27
Figure 14: Reset Button	29
Figure 15: RJ-45 Connector	32
Figure 16: Making Twisted-Pair Connections	35
Figure 17: Making a Connection to an SFP Port	36

Tables

Table 1: Switch Specifications	11
Table 2: Switch Installation Tasks	14
Table 3: AC Power Supply Specifications	21
Table 4: System Status LEDs	25
Table 5: Port Status LEDs	25
Table 6: Console Cable Wiring	27
Table 7: Using the Reset Button	29
Table 8: Maximum Twisted-Pair Copper Cable Lengths	31
Table 9: 10/100BASE-TX MDI and MDI-X Port Pinouts	32
Table 10: 1000BASE-T MDI and MDI-X Port Pinouts	33
Table 11: Maximum Gigabit Ethernet Fiber Cable Lengths	34
Table 12: Maximum Fast Ethernet Fiber Cable Lengths	34
Table 13: Troubleshooting Chart	37

1

Switch Description

This chapter includes these sections:

- ◆ “System Overview” on page 9
- ◆ “Key Technical Specifications” on page 11

System Overview


The ECS4110-28P is a Gigabit Ethernet Layer 2 switch with 24 10/100/1000BASE-T Power-over-Ethernet (PoE) ports, and four Small Form Factor Pluggable (SFP) transceiver slots for fiber connectivity.

The switch also includes an SNMP-based management agent, which provides both in-band and out-of-band access for managing the switch.

Power-over-Ethernet All of the 10/100/1000 Mbps ports on the switch support both the IEEE 802.3af and IEEE 802.3at-2009 PoE standards that enable DC power to be supplied to attached devices using wires in the connecting Ethernet cable.

Hardware Components Each chapter in this manual describes related switch components together with their installation requirements and procedures. To understand each component in detail, refer to the relevant chapter.

Figure 1: Front Panel

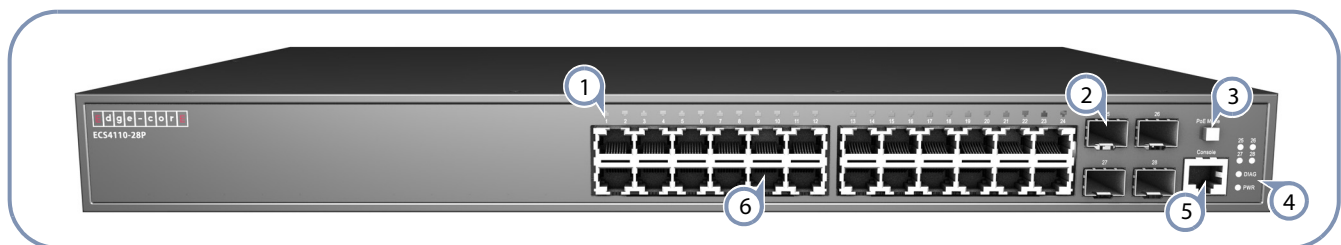

- | | |
|---------------------|------------------------------|
| ① Port LEDs | ④ System LEDs |
| ② Gigabit SFP Slots | ⑤ RJ-45 Console Port |
| ③ Mode Button | ⑥ 1000BASE-T RJ-45 PoE Ports |

10/100/1000BASE-T RJ-45 Ports: The switch contains 24 10/100/1000BASE-T RJ-45 ports that support data and PoE links to other devices.

Gigabit SFP Slots: The switch contains four SFP transceiver slots that operate up to 1 Gbps full duplex.


Mode Button: Pressing the Mode button on the front panel changes the Diag LED to display PoE status.

Console Port: The RJ-45 connector on the front panel labeled “Console” provides an out-of-band serial connection to a terminal or a PC running terminal emulation software. The port can be used for performing switch monitoring and configuration.

System LEDs: The switch supports indicator LEDs for displaying system status.

Port LEDs: The switch supports indicator LEDs for displaying port status.

Figure 2: Rear Panel

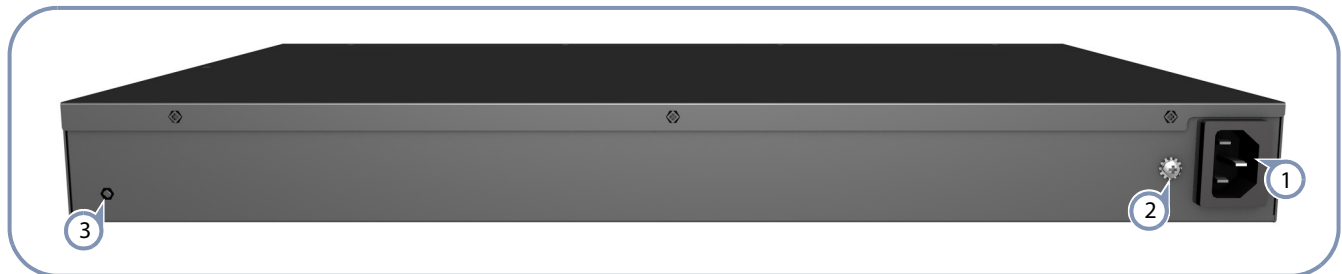

1 AC Power Socket

2 Grounding Point

3 Reset Button

AC Power Socket: The switch includes a standard AC power socket that connects to a 100-240 VAC, 50-60 Hz AC power source.

Grounding Terminal: The switch supports a single-screw grounding terminal. The grounding terminal must be connected to a ground source that provides local earth potential.

Reset Button: The switch supports a reset button on the rear panel that causes the switch to execute a hard reset.

Key Technical Specifications

The following table contains key system specifications for the switch.

Table 1: Switch Specifications

Item	Specification
Ports	24 10/100/1000BASE-T RJ-45 ports with Auto-negotiation 4 Gigabit SFP transceiver slots
Network Interface	Ports 1~24: RJ-45 <ul style="list-style-type: none"> ◆ RJ-45 connector, auto MDI/X Ports 25~28: SFP <ul style="list-style-type: none"> ◆ Gigabit SFP transceivers
Buffer Architecture	8 Mbits
Aggregate Bandwidth	56 Gbps
Switching Database:	16K MAC address entries
LEDs	System: Power, Diag (Diagnostic) Ports 1~28: Status (link, activity, speed)
AC Input Power	AC 100-240 V, 50-60 Hz, 6 A
Power Consumption	450 W maximum
Weight	3.6 kg (7.83 lb)
Size (W x D x H)	44.0 x 28.0 x 4.4 cm (17.32 x 11.00 x 1.73 in)
Temperature	Operating: 0° C to 50° C (32° F to 122° F) Storage: -40° C to 70° C (-40° F to 158° F)
Humidity	Operating: 10% to 90% (non-condensing)
Out-of-Band Management	RJ-45 console port
In-Band Management	SSH, Telnet, SNMP, or HTTP
Software Loading	HTTP, FTP/TFTP in-band
Forwarding Mode	Store-and-forward
Throughput	Wire speed
Flow Control	Full Duplex: IEEE 802.3x Half Duplex: Back pressure

2

Installation Overview

This chapter includes these sections:

- ◆ “Package Contents” on page 12
- ◆ “General Installation Guidelines” on page 13
- ◆ “Installation Precautions” on page 13
- ◆ “Switch Installation Tasks” on page 14

Package Contents

After unpacking the switch, check the contents to be sure you have received all the components.

- ◆ ECS4110-28P Switch
- ◆ Rack Mounting Kit — contains two brackets and eight screws
- ◆ Console cable — RJ-45 to DB-9
- ◆ Grounding wire
- ◆ Power Cord — either Japan, US, Continental Europe, or UK
- ◆ Four adhesive foot pads
- ◆ Documentation — *Quick Start Guide* and *Regulatory and Safety Information*
- ◆ Documentation CD — includes *Installation Guide* and *Management Guide*

General Installation Guidelines

Be sure to follow the guidelines below when choosing a location.

- ◆ The installation location should:
 - be able to maintain its temperature within 0 to 50 °C (32 to 122 °F) and its humidity within 10% to 90%, non-condensing.
 - provide adequate space (approximately five centimeters or two inches) on all sides for proper air flow.
 - be accessible for installing, cabling and maintaining the device.
 - allow the status LEDs to be clearly visible.
- ◆ Make sure twisted-pair cable is always routed away from power lines, fluorescent lighting fixtures and other sources of electrical interference, such as radios and transmitters.
- ◆ Make sure that the unit is connected to a separate grounded power outlet and is powered from an independent circuit breaker. As with any equipment, using a filter or surge suppressor is recommended. Verify that the external power requirements for the switch can be met as listed under [“Power Supply Units” on page 27](#).

Installation Precautions



Warning: This switch uses lasers to transmit signals over fiber optic cable. The lasers are compliant with the requirements of a Class 1 Laser Product and are inherently eye safe in normal operation. However, you should never look directly at a transmit port when it is powered on.

Warning: When selecting a fiber SFP device, considering safety, please make sure that it can function at a temperature that is not less than the recommended maximum operational temperature of the product. You must also use an approved Laser Class 1 SFP transceiver.



Caution: Before installing your switch, first review all the safety statements and guidelines in the *Regulatory and Safety Information* document.

Caution: Installing the switch in a rack requires two people: One should position the switch in the rack, while the other secures it using the mounting screws.

Caution: The earth connection must not be removed unless all supply connections have been disconnected.








Switch Installation Tasks

Follow these tasks to install the switch in your network. For full details on each task, go to the relevant chapter or section by clicking on the reference link.



Note: The chapters in this guide are organized in the same sequence as the installation tasks. For detailed installation procedures, it is recommended to read chapters 3 through 6 in sequence.

Table 2: Switch Installation Tasks

Task Number	Task Action	Detailed Information Reference
Task 1	Unpack Package and Check Contents Unpack your switch and check the package contents to be sure you have received all the items.	 "Package Contents" on page 12
Task 2	Install the Chassis Be sure to plan your rack installation, taking into account switch cooling requirements.	 "Switch Chassis" on page 15
Task 3	Ground the Chassis Use the grounding wire to connect to a rack grounding point.	 "How to Ground the Chassis" on page 22
Task 4	Power On the Switch Connect an AC power source to the switch.	 "How to Connect to AC Power" on page 23
Task 5	Verify Switch Operation Verify basic switch operation by checking the system LEDs.	 "Understanding the Switch Status LEDs" on page 25
Task 6	Make Initial Configuration Changes Make basic switch configuration changes before connecting to the network. It is suggested to connect to the switch console port to perform this task.	 "How to Connect to the Console Port" on page 26
Task 7	Install Transceivers and Connect Cables Install SFP transceivers and connect network cables to port interfaces.	 "Port Connections" on page 30

3

Switch Chassis

This chapter includes these sections:

- ◆ [“Rack Mount Guidelines” on page 15](#)
- ◆ [“Switch Cooling Requirements” on page 16](#)
- ◆ [“How to Install the Switch in a Rack” on page 17](#)
- ◆ [“How to Install the Switch on a Desktop or Shelf” on page 18](#)
- ◆ [“How to Install an SFP Transceiver” on page 19](#)

Rack Mount Guidelines

When rack mounting the switch, pay particular attention to the following factors:

- ◆ **Rack Types:** You can use any standard EIA 19-inch equipment rack with either two or four posts. The bracket hole pattern should be spaced 1U (1.75 in. or 4.45 cm) apart.
- ◆ **Rack Stability:** Whenever possible, secure the rack to the building ceiling or floor, particularly if you are located in a region where earthquakes are common.
- ◆ **Rack Planning:** When installing equipment in a rack, first plan how units can be best arranged. Try to always mount the heaviest equipment at the bottom of the rack.
- ◆ **Temperature:** Since the temperature within a rack assembly may be higher than the ambient room temperature, check that the rack-environment temperature is within the specified operating temperature range. See [“Switch Cooling Requirements” on page 16](#).
- ◆ **Mechanical Loading:** Do not place any equipment on top of a rack-mounted unit.
- ◆ **Circuit Overloading:** Be sure that the supply circuit to the rack assembly is not overloaded.
- ◆ **Grounding:** Rack-mounted equipment should be properly grounded.

Switch Cooling Requirements

Wherever the switch is located, be sure to pay close attention to switch cooling requirements. The location should be well ventilated and provide unrestricted airflow at the front, back, and sides of the switch. If the airflow is insufficient, it may cause the switch to overheat and fail. Figure 3 shows the airflow through the switch.

Figure 3: Switch Cooling



Rack/Cabinet Cooling When mounting the switch in an enclosed rack or cabinet, be sure to check the following guidelines to prevent overheating:

- ◆ Make sure that enough cool air can flow into the enclosure for the equipment it contains.
- ◆ Check that the rack or cabinet allows the hot air to exit the enclosure (normally from the top) without circulating back into equipment.
- ◆ If the enclosure has sides or doors with ventilation holes, make sure they are not blocked by cables or other obstructions.
- ◆ Route cables within the rack or cabinet to maximize the airflow.
- ◆ When possible, do not completely fill the rack or cabinet with equipment, allow some unused space within the enclosure for better airflow.

How to Install the Switch in a Rack

Before you start to rack-mount the switch, be sure to have the following items available:

- ◆ Four mounting screws for each device you plan to install in a rack—these are not included. Be sure to use the rack mounting screws that are supplied with the rack.
- ◆ A screwdriver (Phillips or flathead, depending on the type of screws used).


To rack mount the switch, follow these steps:



Caution: Installing the switch in a rack requires two people: One should position the switch in the rack, while the other secures it using the mounting screws.

1. Attach the brackets to the device using the screws provided in the Rack Mounting Kit.

Figure 4: Attaching the Brackets

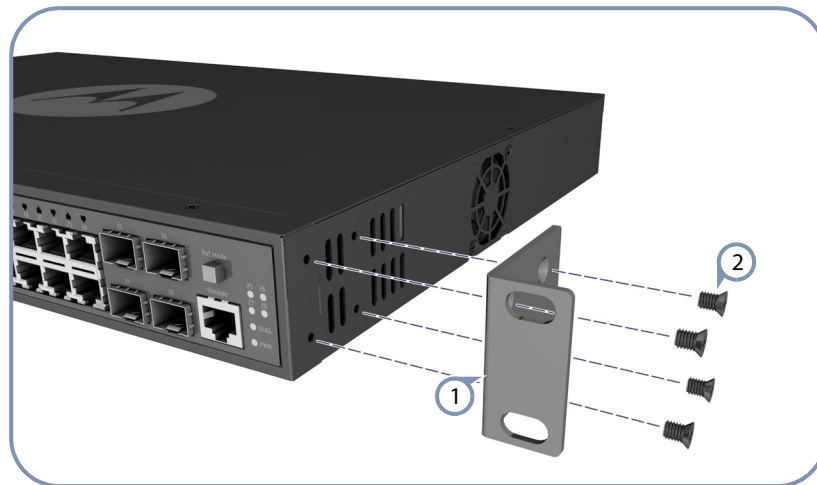


① Rack mount bracket.

② Bracket screws.

2. Following your rack plan, mark the holes in the rack where the switch will be installed.
3. One person should lift the switch into the rack so that it is aligned with the marked holes.
4. The second person should secure the switch in the rack, using four rack-mounting screws (not provided).

Figure 5: Installing the Switch in a Rack

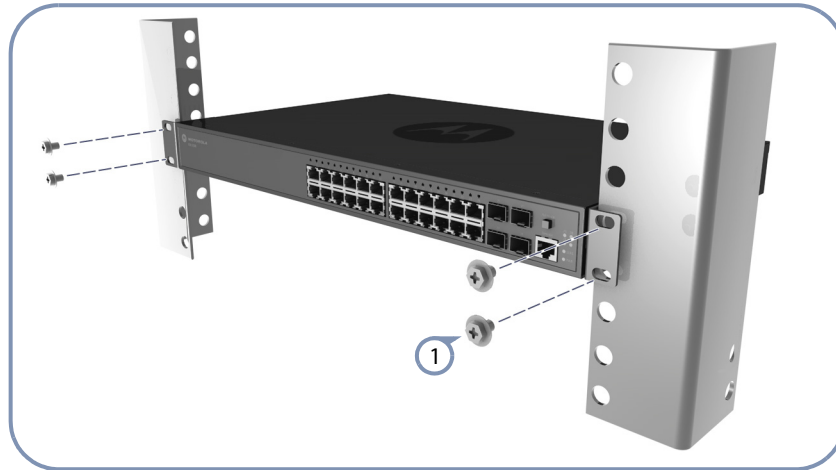

① Rack mounting screws.

5. If installing a single switch, go to [“Power and Grounding”](#) on page 21.
6. If installing multiple switches, repeat steps 1 to 4 to mount the switches following your rack plan.

How to Install the Switch on a Desktop or Shelf

The switch can be installed on any flat surface such as a desktop or shelf. To mount the switch on a flat surface follow these steps:

1. Attach the four adhesive feet to the bottom of the first switch.

Figure 6: Attaching the Adhesive Feet



① Adhesive foot pad.

② Foot pad location mark.

2. Set the device on a flat surface near an AC power source, making sure there are at least two inches of space on all sides for proper airflow.
3. If installing a single switch only, go to [“How to Connect to AC Power” on page 23.](#)
4. If installing multiple switches, attach four adhesive feet to each one. Place each device squarely on top of the one below, in any order.

How to Install an SFP Transceiver

The switch provides slots for optional SFP transceivers. The supported transceiver types are listed below:

- ◆ 1000BASE-SX
- ◆ 1000BASE-LX
- ◆ 1000BASE-LH
- ◆ 100BASE-FX
- ◆ 1000BASE-T




Note: SFP transceivers are hot-swappable. The switch does not need to be powered off before installing or removing a transceiver.

Note: SFP transceivers are not provided in the switch package.

To install an SFP transceiver, do the following:

1. Consider network and cabling requirements to select an appropriate transceiver type that is also compatible with the switch transceiver support.
2. If the SFP slot is covered with a rubber protective cap, remove the cap and keep it for later replacement.
3. Insert the transceiver with the optical connector facing outward and the slot connector facing down. Note that SFP transceivers are keyed so they can only be installed in the correct orientation.
4. Slide the transceiver into the slot until it clicks into place. If you do not immediately connect a cable to the port, use a rubber protective cap to keep the transceiver optics clean.

Figure 7: Inserting an SFP Transceiver into a Slot

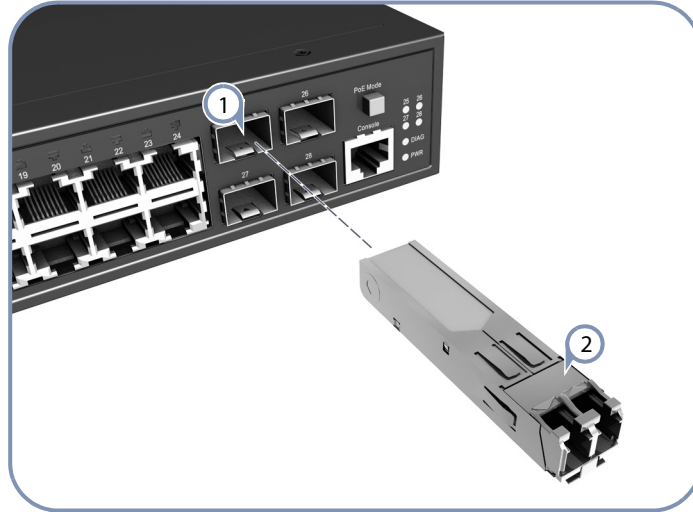

1 SFP transceiver slot.

2 SFP fiber transceiver.



Note: To uninstall a transceiver: First disconnect the network cable, then pull the tab to remove the transceiver from the slot.

4

Power and Grounding

This chapter includes these sections:

- ◆ “About the Switch Power Supply” on page 21
- ◆ “How to Ground the Chassis” on page 22
- ◆ “How to Connect to AC Power” on page 23

About the Switch Power Supply

The switch requires power from an external AC power supply that can provide 100 to 240 VAC, 50-60 Hz. A standard AC power socket is located on the rear panel of the switch. The power socket is for the AC power cord.

Figure 8: AC Power Supply Socket




Table 3: AC Power Supply Specifications

Item	Description
AC Input	100-240 VAC, 50-60 Hz 6 A
Power Supply	100-240 VAC, 50-60 Hz, auto-sensing
Max. Power Consumption	100 VAC@50 Hz 450 W

How to Ground the Chassis

The rear panel of the switch chassis includes a single hole grounding terminal. It must be connected to ground to ensure proper operation and to meet electromagnetic interference (EMI) and safety requirements.

Figure 9: Grounding Terminal

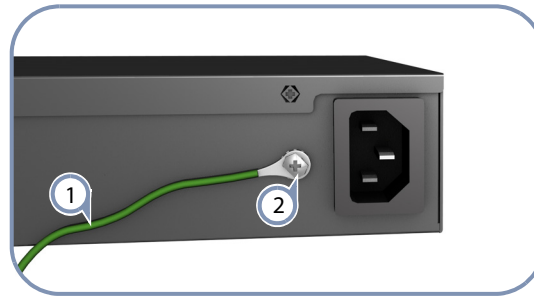

① Grounding wire.

② Grounding terminal.

Before powering on the switch, ground the switch to earth as described below.

1. Ensure that the rack on which the switch is to be mounted is properly grounded and in compliance with ETSI ETS 300 253.
2. Ensure that there is a good electrical connection to the grounding point on the rack (no paint or isolating surface treatment).
3. Disconnect all power cables to the switch.
4. Attach a 6 AWG stranded copper wire to the grounding terminal on the switch.

The switch chassis is connected internally to 0 V. This circuit is connected to the single-hole grounding terminal on the rear panel of the switch (left of the AC power socket). The surface area around this terminal is not painted in order to provide for a good connection.

5. Attach the grounding wire to the ground point on the rack.



Caution: The earth connection must not be removed unless all supply connections have been disconnected.


How to Connect to AC Power

To supply AC power to the switch, first verify that the external AC power supply can provide the switch an adequate source of power. The power source must meet the specifications listed in [Table 3](#).

To connect the switch to an AC power source:

1. Plug the power cord into a grounded, 3-pin, AC power source.

Figure 10: AC Power Cord and Power Socket

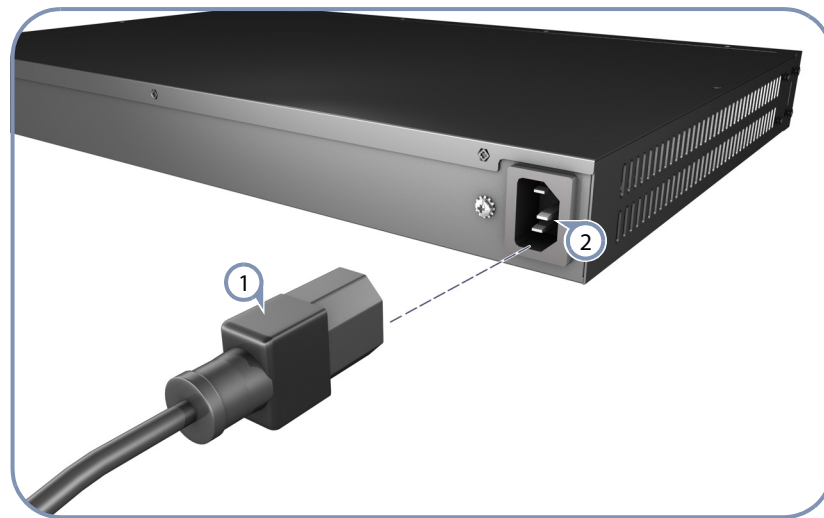

① AC power cord.

② AC power socket.

2. Insert the plug on the other end of the power cord directly into the AC input socket on the back of the switch.



Note: Your country's AC power outlet standards may not match the power plug of the included AC power cord, you may need to change the AC power cord. You must use a cord set that has been approved for the socket type in your country.

3. Check the LED indicators on the switch front panel as the unit is powered on to verify that power is being received. If not, recheck the power cord connections at the AC supply source and back panel power input connector.

5

Switch Management

This chapter includes these sections:

- ◆ “Management Overview” on page 24
- ◆ “Understanding the Switch Status LEDs” on page 25
- ◆ “How to Connect to the Console Port” on page 26
- ◆ “How to Reset the Switch” on page 29

Management Overview


The switch includes a management agent that allows you to configure or monitor the switch using its embedded management software. To manage the switch, you can make a direct connection to the console port (out-of-band), or you can manage it through a network connection (in-band) using Telnet, Secure Shell (SSH), a web browser, or SNMP-based network management software.

For a detailed description of the switch’s software features, refer to the *Management Guide*.

Understanding the Switch Status LEDs

The switch includes LED indicators on the front panel that display system and port status. Understanding the LED states will help you monitor switch operation and alert you to any problems.

Figure 11: System and Port Status LEDs

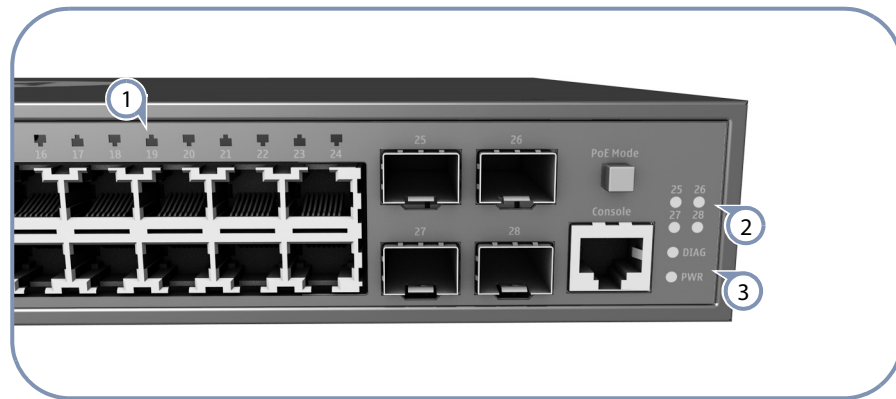

- 1 Ports 1-24 Link/Activity LEDs.
- 2 Ports 25-28 Link/Activity LEDs.
- 3 System status LEDs.

Table 4: System Status LEDs

LED	Condition	Status
PWR	On Green	Internal power operating normally.
	Off	No AC power is connected or the internal power supply has failed.
DIAG (Diagnostic)	On Green	The system diagnostic test has completed successfully.
	On Amber	System diagnostic in progress or the PoE button is pressed down.
	Blinking Amber	The system self-diagnostic test has detected a fault.
	Blinking Amber and Green	The switch system is booting up.

Table 5: Port Status LEDs

LED	Condition	Status
1000BASE-T RJ-45 Ports (1-24)		
Link/Activity	On/Blinking Amber	Port has a valid 10/100 Mbps link. Blinking indicates traffic on the port.
	On/Blinking Green	Port has a valid 1000 Mbps link. Blinking indicates traffic on the port.
	Off	The link is down.

Table 5: Port Status LEDs (Continued)

LED	Condition	Status
PoE Status*	On Amber	A PoE device is connected.
	Off	No PoE device is connected.
Gigabit SFP Ports (25-28)		
Link/Activity	On/Blinking Green	Port has a valid 1000 Mbps link (high speed). Blinking indicates traffic on the port.
	Off	The link is down.

* When Mode button is pressed in.


How to Connect to the Console Port

The RJ-45 Console port on the front panel of the switch is used to connect a console device to the switch for out-of-band console configuration. The console device can be a PC or workstation running a VT-100 terminal emulator, or a VT-100 terminal. A console cable is supplied with the switch for connecting to a PC's RS-232 serial DB-9 DTE (COM) port.



Note: To connect to notebooks or other PCs that do not have a DB-9 COM port, use a USB-to-male DB-9 adapter cable (not included with the switch).

Figure 12: Console Port

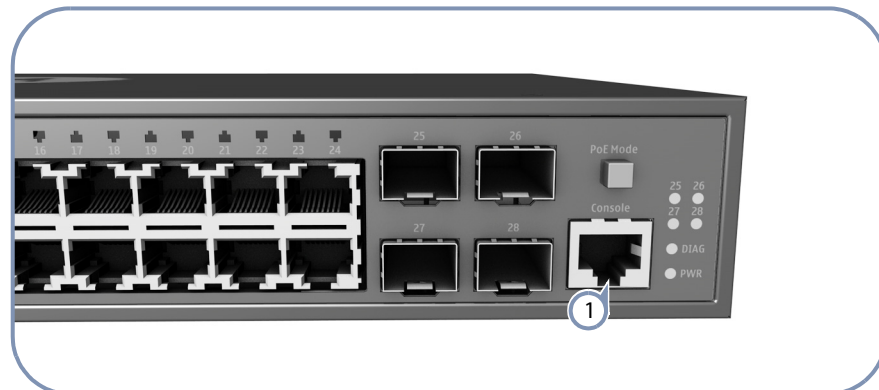

1 Console port.

The following table describes the pin assignments used in the console cable.

Table 6: Console Cable Wiring


Switch's RJ-45 Console Port	Null Modem	PC's 9-Pin DTE Port
6 RXD (receive data)	<-----	3 TXD (transmit data)
3 TXD (transmit data)	----->	2 RXD (receive data)
4,5 SGND (signal ground)	-----	5 SGND (signal ground)

No other pins are used.

The serial port's default settings are as follows:

- ◆ Default Baud rate—115200 bps
- ◆ Character Size—8 Characters
- ◆ Parity—None
- ◆ Stop bit—One
- ◆ Data bits—8
- ◆ Flow control—None

Figure 13: Console Port Connection

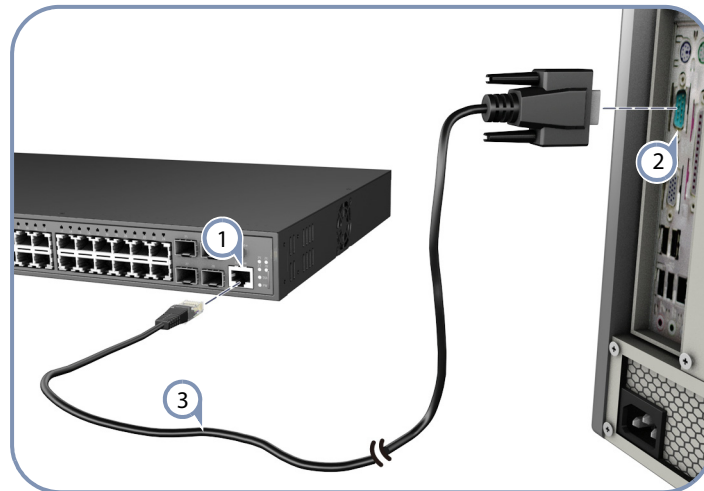

① Switch's Console port.

② PC's DB-9 COM port.

③ RJ-45 to DB-9 console cable.

Follow these steps to connect to the Console port:

1. Connect one end of the included RJ-45 to DB-9 serial cable to a DB-9 COM port connector on a management PC.
2. Plug in the RJ-45 end of the serial cable to the Console port on the switch.
3. Configure the PC's COM port required settings using VT-100 terminal emulator software (such as HyperTerminal) running on the management PC. The switch's default console port settings are:
 - 115200 bps, 8 data bits, 1-stop bit, and no parity
4. Log in to the command-line interface (CLI) using one of the default user login settings:
 - User — admin
 - Password — admin

or

- User — guest
- Password — guest

Note that the guest default user login will only allow a user to view switch parameter data.

For a detailed description of connecting to the console and using the switch's command-line interface (CLI), refer to the *Management Guide*.

How to Reset the Switch

The Reset button located on the rear panel of the switch can be used to restart the device and set the configuration back to either the current saved configuration file or the factory default settings.

Press the Reset button for 3 to less than 6 seconds to restart the system software using the current saved configuration file. Press the Reset button for 6 seconds or more to restart the system software using the factory default settings. Refer to the table below for further details.

Table 7: Using the Reset Button

Duration Pressed	Result	Settings Integrity
Less than 3 seconds	No result	No change to any settings.
From 3 seconds to less than 6 seconds	Switch reboots using saved configuration file	Unsaved settings in the current running configuration are lost
6 seconds or more	Switch reboots using the factory default settings	Saved configuration file integrity maintained

Figure 14: Reset Button



1 Reset button.

6

Port Connections

This chapter includes these sections:

- ◆ [“Cable Labeling and Connection Records” on page 30](#)
- ◆ [“Copper Cabling Guidelines” on page 31](#)
- ◆ [“Power-over-Ethernet Guidelines” on page 33](#)
- ◆ [“Fiber Cabling Guidelines” on page 34](#)
- ◆ [“How to Connect to Twisted-Pair Copper Ports” on page 35](#)
- ◆ [“How to Connect to SFP Fiber Optic Ports” on page 36](#)

Cable Labeling and Connection Records

When planning a network installation, it is essential to label the opposing ends of cables and to record where each cable is connected. Doing so will enable you to easily locate inter-connected devices, isolate faults and change your topology without need for unnecessary time consumption.

To best manage the physical implementations of your network, follow these guidelines:

- ◆ Clearly label the opposing ends of each cable.
- ◆ Using your building’s floor plans, draw a map of the location of all network-connected equipment. For each piece of equipment, identify the devices to which it is connected.
- ◆ Note the length of each cable and the maximum cable length supported by the switch ports.
- ◆ For ease of understanding, use a location-based key when assigning prefixes to your cable labeling.
- ◆ Use sequential numbers for cables that originate from the same equipment.
- ◆ Differentiate between racks by naming accordingly.
- ◆ Label each separate piece of equipment.

- ◆ Display a copy of your equipment map, including meanings of all abbreviations at each equipment rack.

Copper Cabling Guidelines

The RJ-45 ports on the switch support automatic MDI/MDI-X pinout configuration, which enables you to use standard straight-through twisted-pair cables to connect to any other network device (PCs, servers, switches, routers, or hubs).

The connection requires an unshielded twisted-pair (UTP) or shielded twisted-pair (STP) cable with RJ-45 connectors at both ends.

Table 8: Maximum Twisted-Pair Copper Cable Lengths

Cable Type	Maximum Cable Length	Connector
1000BASE-T		
Category 5, 5e, or 6 100-ohm UTP or STP	100 m (328 ft)	RJ-45
100BASE-TX		
Category 5 or better 100-ohm UTP or STP	100 m (328 ft)	RJ-45
10BASE-T		
Category 3 or better 100-ohm UTP	100 m (328 ft)	RJ-45


To ensure proper operation when installing the switch into a network, make sure that the current cables are suitable for 10BASE-T, 100BASE-TX, or 1000BASE-T operation. Check the following criteria against the current installation of your network:

- ◆ Cable type: Unshielded twisted pair (UTP) or shielded twisted pair (STP) cables with RJ-45 connectors; Category 5, 5e or better cable for 1000BASE-T connections, Category 5 or better for 100BASE-TX connections, and Category 3 or better for 10BASE-T connections..
- ◆ Protection from radio frequency interference emissions
- ◆ Electrical surge suppression
- ◆ Separation of electrical wires (switch related or other) and electromagnetic fields from data based network wiring
- ◆ Safe connections with no damaged cables, connectors or shields

10/100BASE-TX Pin Assignments

All 100BASE-TX RJ-45 ports support automatic MDI/MDI-X operation, so you can use straight-through or crossover cables for all network connections to PCs, switches, or hubs. In straight-through cable, pins 1, 2, 3, and 6, at one end of the cable, are connected straight through to pins 1, 2, 3, and 6 at the other end of the cable.

Figure 15: RJ-45 Connector

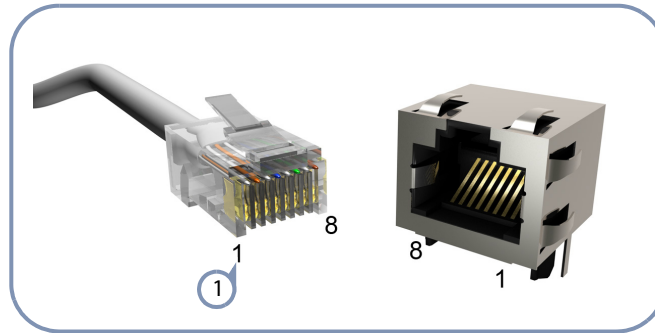

① RJ-45 pin numbers.

Table 9: 10/100BASE-TX MDI and MDI-X Port Pinouts

Pin	MDI Signal Name ^a	MDI-X Signal Name
1	Transmit Data plus (TD+) -52V power (Negative V _{port})	Receive Data plus (RD+) GND (Positive V _{port})
2	Transmit Data minus (TD-) -52V power (Negative V _{port})	Receive Data minus (RD-) GND (Positive V _{port})
3	Receive Data plus (RD+) GND (Positive V _{port})	Transmit Data plus (TD+) -52V power (Negative V _{port})
4	-52V power (Negative V _{port})	GND (Positive V _{port})
5	-52V power (Negative V _{port})	GND (Positive V _{port})
6	Receive Data minus (RD-) GND (Positive V _{port})	Transmit Data minus (TD-) -52V power (Negative V _{port})
7	GND (Positive V _{port})	-52V power (Negative V _{port})
8	GND (Positive V _{port})	-52V power (Negative V _{port})

a. The “+” and “-” signs represent the polarity of the wires that make up each wire pair.

1000BASE-T Assignments

All 1000BASE-T ports support automatic MDI/MDI-X operation, so you can use straight-through cables for all network connections to PCs, servers, or switches.

The table below shows the 1000BASE-T MDI and MDI-X port pinouts. These ports require that all four pairs of wires be connected. Note that for 1000BASE-T operation, all four pairs of wires are used for both transmit and receive.

Table 10: 1000BASE-T MDI and MDI-X Port Pinouts

Pin	MDI Signal Name	MDI-X Signal Name
1	Bi-directional Pair A Plus (BI_DA+) -52V power (Negative V_{port})	Bi-directional Pair B Plus (BI_DB+) GND (Positive V_{port})
2	Bi-directional Pair A Minus (BI_DA-) -52V power (Negative V_{port})	Bi-directional Pair B Minus (BI_DB-) GND (Positive V_{port})
3	Bi-directional Pair B Plus (BI_DB+) GND (Positive V_{port})	Bi-directional Pair A Plus (BI_DA+) -52V power (Negative V_{port})
4	Bi-directional Pair C Plus (BI_DC+) -52V power (Negative V_{port})	Bi-directional Pair D Plus (BI_DD+) GND (Positive V_{port})
5	Bi-directional Pair C Minus (BI_DC-) -52V power (Negative V_{port})	Bi-directional Pair D Minus (BI_DD-) GND (Positive V_{port})
6	Bi-directional Pair B Minus (BI_DB-) GND (Positive V_{port})	Bi-directional Pair A Minus (BI_DA-) -52V power (Negative V_{port})
7	Bi-directional Pair D Plus (BI_DD+) GND (Positive V_{port})	Bi-directional Pair C Plus (BI_DC+) -52V power (Negative V_{port})
8	Bi-directional Pair D Minus (BI_DD-) GND (Positive V_{port})	Bi-directional Pair C Minus (BI_DC-) -52V power (Negative V_{port})

1000BASE-T Cable Requirements

All Category 5 UTP cables that are used for 100BASE-TX connections should also work for 1000BASE-T, providing that all four wire pairs are connected. However, it is recommended that for all critical connections, or any new cable installations, Category 5e (enhanced Category 5) or Category 6 cable should be used. The Category 5e and 6 specifications include test parameters that are only recommendations for Category 5. Therefore, the first step in preparing existing Category 5 cabling for running 1000BASE-T is a simple test of the cable installation to be sure that it complies with the IEEE 802.3-2008 standards.

Power-over-Ethernet Guidelines

The switch supports both IEEE 802.3af and IEEE 802.3at-2009 PoE standards that enable DC power to be supplied from the switch's RJ-45 copper ports to connected devices by utilizing certain wire pairs in the connecting Ethernet cable.

The total PoE power delivered by all ports cannot exceed the 390 W switch power budget. This means that up to 12 ports can supply a maximum 30 W of power simultaneously to connected devices, or all 24 ports can supply a maximum of 15.4 W simultaneously. For each attached PoE-compliant device, the switch automatically senses the load and dynamically supplies the required power.

Any PoE-compliant device attached to a port can directly draw power from the switch over the Ethernet cable without requiring its own separate power source. This capability gives network administrators centralized power control for devices

such as IP phones and wireless access points, which translates into greater network availability.

Fiber Cabling Guidelines

The switch provides four slots for SFP-compliant fiber-optic transceivers.

Note that all 1000BASE fiber optic ports operate at 1 Gbps full duplex. The 100BASE fiber optic ports operate at 100 Mbps full duplex.

Table 11: Maximum Gigabit Ethernet Fiber Cable Lengths

Cable Type	Fiber Bandwidth	Maximum Cable Length	Connector
1000BASE-SX			
62.5/125 micron multimode	160 MHz/km	2-220 m (7-722 ft)	LC
	200 MHz/km	2-275 m (7-902 ft)	LC
50/125 micron multimode	400 MHz/km	2-500 m (7-1641 ft)	LC
	500 MHz/km	2-550 m (7-1805 ft)	LC
1000BASE-LX			
9/125 micron single-mode	N/A	2 m - 10 km (7 ft - 6.2 miles)	LC
1000BASE-LH			
9/125 micron single-mode	N/A	2 m - 80 km (7 ft - 50 miles)	LC

Table 12: Maximum Fast Ethernet Fiber Cable Lengths

Type	Cable Type	Max. Cable Length	Connector
100BASE-FX	50/125 or 62.5/125 micron multimode	2 km	LC
	9/125 micron single-mode	20 km	LC



Note: The length of fiber optic cable for a single switched link should not exceed the relevant standards specified in this section. However, power budget constraints should also be considered when calculating the maximum fiber optic cable length for a particular link.

Note: Maximum distances may vary for different SFP vendors.

To ensure proper operation when installing the switch into a network, make sure that the current fiber cables are suitable for 1000BASE or 100BASE operation. Check the following criteria against the current installation of your network:

- ◆ Be sure to secure fiber cables properly and route them away from the switch.


- ◆ Do not exceed the minimum bending radius for fiber cables (typically a few inches).
- ◆ Use cable ties to bundle fiber cables together and secure coiled loops of excess cable.
- ◆ Do not let fiber cables hang free supporting their own weight.
- ◆ Do not let fiber cables pull in any way that puts stress on the connectors.

How to Connect to Twisted-Pair Copper Ports

Follow these steps to connect cables to 1000BASE-T RJ-45 twisted-pair copper ports.

1. Attach one end of a twisted-pair cable segment to the device's RJ-45 connector.

Figure 16: Making Twisted-Pair Connections

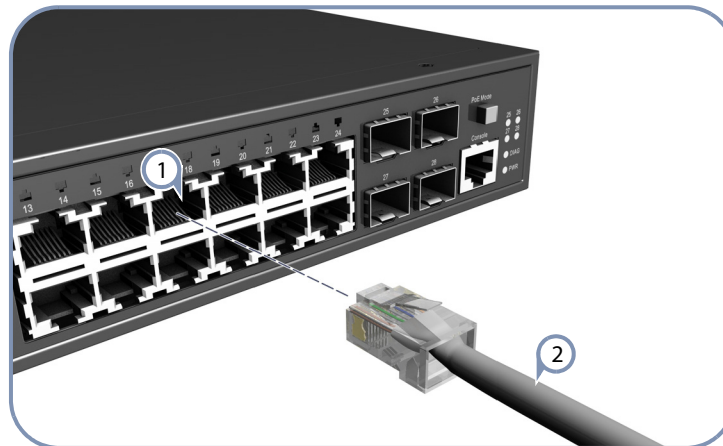

① 1000BASE-T RJ-45 Port

② Category 5,5e or 6 Cable

2. Attach the other end to an available port on the switch.

Make sure each twisted pair cable does not exceed 100 meters (328 ft) in length.

3. As each connection is made, the Link LED (on the switch) corresponding to each port will turn on green to indicate that the connection is valid.

How to Connect to SFP Fiber Optic Ports

Follow these steps to connect cables to SFP transceiver ports.




Warning: This switch uses lasers to transmit signals over fiber optic cable. The lasers are compliant with the requirements of a Class 1 Laser Product and are inherently eye safe in normal operation. However, you should never look directly at a transmit port when it is powered on.

Warning: When selecting a fiber SFP device, considering safety, please make sure that it can function at a temperature that is not less than the recommended maximum operational temperature of the product. You must also use an approved Laser Class 1 SFP transceiver.

1. Remove and keep the fiber port's rubber plug. When not connected to a fiber cable, the rubber plug should be replaced to protect the optics.
2. Check that the fiber terminators are clean. You can clean the cable plugs by wiping them gently with a clean tissue or cotton ball moistened with a little ethanol. Dirty fiber terminators on fiber optic cables will impair the quality of the light transmitted through the cable and lead to degraded performance on the port.
3. Connect one end of the cable to the SFP port on the switch and the other end to the SFP port on the other device. Since SFP connectors are keyed, the cable can be attached in only one orientation.

Figure 17: Making a Connection to an SFP Port

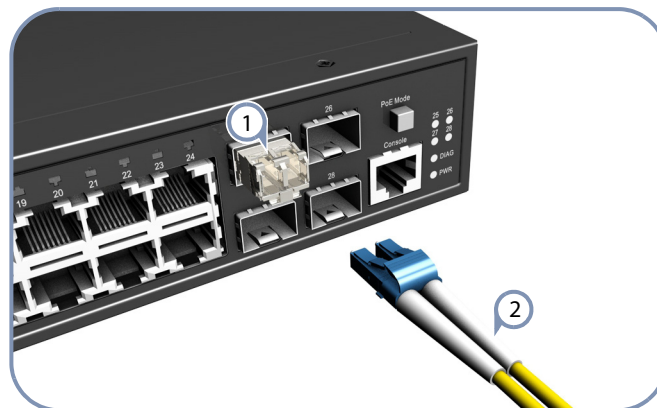

- ① SFP transceiver port. ② Fiber optic cable.

4. As a connection is made, check the Link LED on the switch to be sure that the connection is valid.



Troubleshooting

Diagnosing LED Indicators

Table 13: Troubleshooting Chart

Symptom	Action
PWR LED is Off	<ul style="list-style-type: none">◆ Check connections between the switch, the power cord, and the AC power outlet.◆ Check the AC power outlet is supplying 110-240 VAC.◆ Contact your dealer for assistance.
DIAG LED is blinking Amber	<ul style="list-style-type: none">◆ Power cycle the switch to try and clear the condition.◆ If the condition does not clear, contact your dealer for assistance.
DIAG LED is blinking Amber with PoE Mode button pressed	<ul style="list-style-type: none">◆ Turn off or unplug PoE devices until the condition clears.◆ If the condition does not clear, contact your dealer for assistance.
Link/Act LED is Off	<ul style="list-style-type: none">◆ Verify that the switch and attached device are powered on.◆ Check the cable connectors are firmly plugged into both the switch and corresponding device.◆ If the switch is installed in a rack, check the connections to the punch-down block and patch panel.◆ Verify that the proper cable type is used and its length does not exceed specified limits.◆ Check the attached device and cable connections for possible defects. Replace the defective cable if necessary.

System Self-Diagnostic Test Failure

If the DIAG LED indicates a failure of the system power-on-self-test (POST), you can use a console connection to view the POST results. The POST results may indicate a failed component or help troubleshoot the problem. For more information on connecting to the console port and using the CLI, refer to the *Management Guide*.

Note a POST failure normally indicates a serious hardware fault that cannot be rectified or worked around. If you encounter a POST failure, you should contact your dealer for assistance.

Power Problems

If a power indicator does not turn on when the power cord is plugged in, you may have a problem with the power outlet, power cord, or internal power supply. However, if the switch shuts down after operating for a continuous period, check for loose power connections, power losses or surges at the power outlet. If you still cannot isolate the problem, the internal power supply may be defective.

Installation

Verify that all system components have been properly installed. If one or more components appear to be malfunctioning (such as the power cord or network cabling), test them in an alternate environment where you are sure that all the other components are validated to be functioning properly.

In-Band Access

You can access the management agent in the switch through a connection to any port using Telnet, a web browser, or other network management software tools. However, you must first configure the switch with a valid IP address, subnet mask, and default gateway. If you have trouble establishing a link to the management agent, check to see if you have a valid network connection. Then verify that you entered the correct IP address. Also, be sure the switch port has not been disabled. If it has not been disabled, then check the network cabling that connects your remote location to the switch.

Index

Numerics

- 10 Mbps collision domain 34
- 10 Mbps connectivity rules 34
- 10/100 PIN assignments 32
- 1000BASE fiber cable lengths 34
- 1000BASE-T PIN assignments 32
- 10BASE-T
 - cable lengths 34

A

- adhesive feet, attaching 18
- air flow requirements 13

B

- brackets, attaching 17
- buffer size 11

C

- cable
 - Ethernet cable compatibility 31
 - labeling and connection records 30
- cable types 31
- connectivity rules
 - 10 Mbps 34
- console port
 - default com port settings 28
 - pin assignments 26
 - user name and password login 28
- console port, pin assignments 26
- contents of package 12
- cord sets, international 23

D

- diag LED
 - blinking amber 37
 - failure 37
- diagnosing LED indicators 37

E

- electrical interference, avoiding 13
- equipment checklist 12
- ethernet 31

- Ethernet connectivity rules 34
- Ethernet Port
 - connecting to 35

F

- factory default settings 29

I

- in-band access 38
- indicators, LED 25
- installation
 - power requirements 13
 - site requirements 13
- installation troubleshooting 38
- introduction 9, 12

L

- laser safety 13, 36
- LED indicators
 - DIAG 25
 - port 25, 26
 - PWR 25
- location requirements 13

M

- management
 - out-of-band 24
 - web-based 24

O

- out-of-band management 24

P

- package contents 12
- pin assignments
 - console port 26
- POST
 - failure 37
- power and cooling problems 38
- Power-over-Ethernet 9, 33

R

- reset button 29
 - resetting the switch 29
- RJ-45 port
 - connecting to 35
- rubber foot pads, attaching 18

S

- screws for rack mounting 17
- SFP port
 - connection procedure 36
 - installing transceiver 19
- site selection 13
- specifications
 - environmental 11
- status LEDs 25
- surge suppressor, using 13

W

- web-based management 24



The Declaration of Conformity (DoC) can be obtained from www.edge-core.com -> support -> download -> declarations & certifications.

ECS4110-28P
E112015-AP-R02
150200000928A