

CLI Reference Guide

VES Switch


VDSL Switch

Versions 1.00, 3.60, 3.70, 3.80

Default Login Details

IP Address	http://192.168.0.1 (Out-of-band MGMT port) http://192.168.1.1 (In-band ports)
User Name	admin
Password	1234

Edition 8, 2/2021

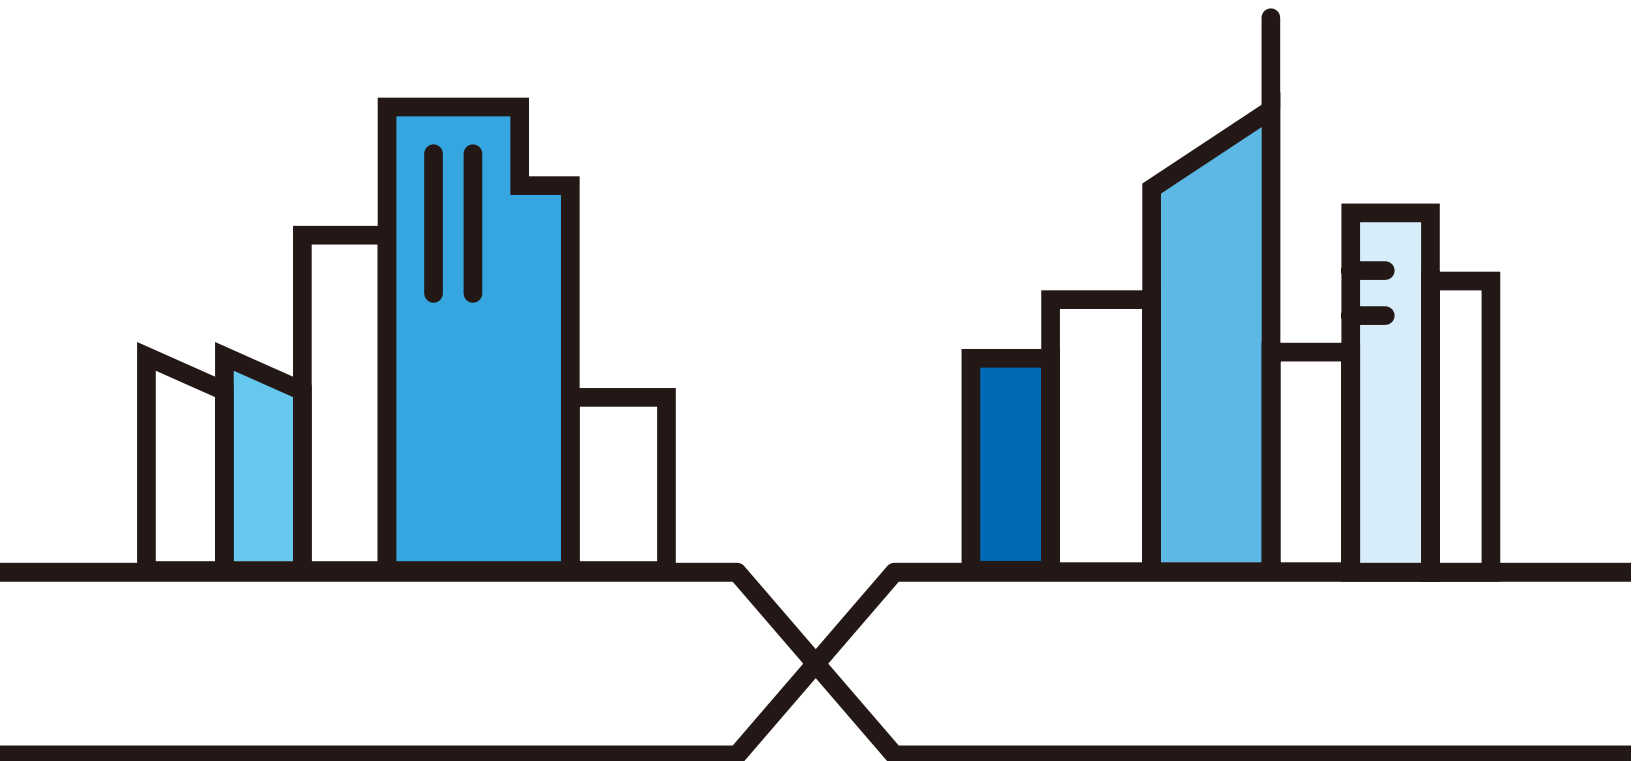

IMPORTANT!

READ CAREFULLY BEFORE USE.

KEEP THIS GUIDE FOR FUTURE REFERENCE.

Do not use commands not documented in this guide. Use of undocumented commands or misconfiguration can damage the unit and possibly render it unusable.

This guide covers the following models at the time of writing.

VES-1624FA-54	VES-1608FE-57	VES-1602FE-57	VES1724-55C
VES1724-56	VES1724-56B2		

Note: This guide is intended as a command reference for a series of products and firmware versions. Therefore many commands in this guide may not be available in your product or firmware version. Use only the commands your device displays. See your User's Guide for a list of supported features and details about feature implementation.

Screenshots and graphics in this book may differ slightly from your product due to differences in your product firmware or your computer operating system. Every effort has been made to ensure that the information in this manual is accurate.

- More Information

Go to support.zyxel.com to find other information on the Switch.



Contents Overview

Introduction	6
Getting Started	7
Privilege Level and Command Mode	12
Tutorials	16
Reference	20
AAA Commands	21
ADSL Fallback Commands	24
ARP Commands	27
ARP Inspection Commands	28
Bandwidth Commands	33
Broadcast Storm Commands	35
CFM Commands	37
Classifier Commands	44
Cluster Commands	47
Date and Time Commands	50
DHCP Commands	53
DHCP Snooping and DHCP VLAN Commands	62
DHCPv6 Relay Commands	67
DHCPv6 Snooping Commands	70
DiffServ Commands	71
DoS Prevention Commands	72
Error Disable and Recovery Commands	74
Ethernet OAM Commands	78
External Alarm Commands	83
GARP Commands	85
GVRP Commands	87
HTTPS Server Commands	88
IEEE 802.1x Authentication Commands	91
IGMP Commands	93
IGMP Filtering Commands	99
Ingress Check Commands	101
Interface Commands	102
IP Commands	110
IP Commands for IPv6	115
IPv6 Commands	125
IPQoS Commands	150
IP Source Binding Commands	152

Layer 2 Protocol Tunnel (L2PT) Commands	154
LACP Commands	157
LLDP Commands	159
Login Account Commands	164
Login Precedence Commands	165
Loopguard Commands	166
MAC Address Commands	168
MAC Authentication Commands	170
MAC-based VLAN Commands	172
MAC Filter Commands	174
MAC Forward Commands	175
Mirror Commands	176
MRSTP Commands	177
MSTP Commands	179
Multiple Login Commands	183
MVR Commands	184
NDP Inspection Commands	186
Packet Filter Commands	189
Password Commands	191
Policy Commands	193
Port Security Commands	196
Port-based VLAN Commands	198
PPPoE Intermediate Agent Commands	199
Protocol-based VLAN Commands	205
RADIUS Commands	208
Rate Limit Commands	210
Remote CPE Device Commands	213
Remote Management Commands	233
Running Configuration Commands	235
Service Control Commands	237
SFP Thresholds	239
SNMP Server Commands	243
SSH Commands	247
Static Multicast Commands	249
Static Route Commands	251
STP and RSTP Commands	253
Subnet-based VLAN Commands	256
Syslog Commands	258
TACACS+ Commands	259
Trunk Commands	260
trTCM Commands	261
VDSL Alarm Profile Commands	263
VDSL Counters Commands	267

VDSL Loop Diagnostic Commands	273
VDSL Profile Commands	276
VDSL Settings Commands	297
VLAN Commands	301
VLAN Mapping Commands	305
VLAN Port Isolation Commands	307
VLAN-Profile Commands	309
VLAN-Security Commands	311
VLAN Stacking Commands	312
VLAN Translation	317
VLAN Trunking Commands	320
Additional Commands	321
Appendices and Index of Commands	334

PART I

Introduction

CHAPTER 1

Getting Started

This chapter introduces the command line interface (CLI).

1.1 Accessing the CLI

Use any of the following methods to access the CLI.

1.1.1 Console Port

- 1 Connect your computer to the console port on the Switch using the appropriate cable.
- 2 Use terminal emulation software with the following settings:

Table 1 Default Settings for the Console Port

SETTING	DEFAULT VALUE
Terminal Emulation	VT100
Baud Rate	9600 or 115200 bps
Parity	None
Number of Data Bits	8
Number of Stop Bits	1
Flow Control	None

- 3 Press [ENTER] to open the login screen.

1.1.2 Telnet

- 1 Connect your computer to the **MGMT** port.
- 2 Open a Telnet session to the Switch's IP address. If this is your first login, use the default values.

Table 2 Default Management IP Address

SETTING	DEFAULT VALUE
IP Address	192.168.0.1
Subnet Mask	255.255.255.0

Make sure your computer IP address is in the same subnet, unless you are accessing the Switch through one or more routers.

1.1.3 SSH

- 1 Connect your computer to the **MGMT** port.
- 2 Use a SSH client program to access the Switch. If this is your first login, use the default values in [Table 2 on page 7](#) and [Table 3 on page 8](#). Make sure your computer IP address is in the same subnet, unless you are accessing the Switch through one or more routers.

1.2 Logging in

Use the administrator username and password. If this is your first login, use the default values.

Table 3 Default User Name and Password

SETTING	DEFAULT VALUE
User Name	admin
Password	1234

Note: The Switch automatically logs you out of the management interface after five minutes of inactivity. If this happens to you, simply log back in again.

1.3 Using Shortcuts and Getting Help

This table identifies some shortcuts in the CLI, as well as how to get help.

Table 4 CLI Shortcuts and Help

COMMAND / KEY(S)	DESCRIPTION
history	Displays a list of recently-used commands.
↵↵ (up/down arrow keys)	Scrolls through the list of recently-used commands. You can edit any command or press [ENTER] to run it again.
[CTRL]+Z	Returns to the previous mode. See Chapter 2 on page 12 for more information about modes.
[CTRL]+U	Clears the current command.
[TAB]	Auto-completes the keyword you are typing if possible. For example, type <code>config</code> , and press [TAB]. The Switch finishes the word <code>configure</code> .
?	Displays the keywords and/or input values that are allowed in place of the ?.
help	Displays the (full) commands that are allowed in place of <code>help</code> .

The help generally follows these syntax conventions:

- Each interface refers to a port on the Switch.
- Required input values are in angle brackets `<>`; for example, `ping <ip-address>` means that you must specify an IP number for this command.

- Lists (such as `<port-list>`) consist of one or more elements separated by commas. Each element might be a single value (1, 2, 3, ...) or a range of values (1-2, 3-5, ...) separated by a dash. Use an asterisk (*) to indicate all possible elements.
- The | (bar) symbol means "or".
- Optional fields are in square brackets []; for instance, in `snmp-server [contact <system contact>] [location <system location>]`, the `contact` and `location` fields are optional.
- The `<cr>` means press the [ENTER] key.

1.4 Saving Your Configuration

When you run a command, the Switch saves any changes to its run-time memory. The Switch loses these changes if it is turned off or loses power. Use the `write memory` command in enable mode to save the current configuration permanently to non-volatile memory.

```
sysname# write memory
```

Note: You should save your changes after each CLI session. All unsaved configuration changes are lost once you restart the Switch.

1.5 Logging Out

Enter `logout` to log out of the CLI. You have to be in user, enable, or config mode. See [Chapter 2 on page 12](#) for more information about modes.

1.6 How to Use This Guide

This section explains how commands are introduced in this guide.

1.6.1 Background Information (Optional)

Note: See the User's Guide for background information about most features.

This section provides background information about features that you cannot configure in the Web Configurator. In addition, this section identifies related commands in other chapters.

1.6.2 Command Summary

The following table describes user-input values available in multiple commands for this feature.

Table 5 Example: User-input Values

COMMAND	DESCRIPTION
<code>vlan-id</code>	1~4094

This section lists the commands for this feature in one or more tables.

Table 6 Example: Command Summary Table

COMMAND	DESCRIPTION	M	P
show vlan	Displays the status of all VLANs.	E	3
vlan <vlan-id>	Enters config-vlan mode for the specified VLAN. Creates the VLAN, if necessary.	C	13
inactive	Disables the specified VLAN.	C	13
no inactive	Enables the specified VLAN.	C	13
no vlan <vlan-id>	Deletes a VLAN.	C	13

The **Table** title identifies the specific keyword(s) that the commands share.

The **Command** column shows the syntax of the command. The syntax follows the same conventions the help ([Section 1.3 on page 8](#)) does, in addition to the following.

- *these* terms represent user-input values that are explained in more detail in the **Description** column or in the user-input value table.
- If a command is indented, users have to run it in one of the config- modes. You can identify the specific mode by looking at the last config-mode command above it.
- If a command is not indented, users have to run it in enable or config mode.

The **Description** column explains what the command does. It also identifies legal input values for user-input values, if necessary.

The **M** column helps identify the mode in which users have to run the command.

- **E**: The command is available in enable mode. It is also available in user mode if the privilege level (**P**) is less than 13.
- **C**: The command is available in config (not indented) or one of the config- (indented) modes.

The **P** column identifies the privilege level of the command.

1.6.3 Syntax Conventions

Command descriptions follow these conventions:

- Commands are in `courier new font`.
- Required input values are in angle brackets <>; for example, `ping <ip>` means that you must specify an IP address for this command.
- Optional fields are in square brackets []; for instance `show logins [name]`, the `name` field is optional. The following is an example of a required field within an optional field: `snmp-server [contact <system contact>]`, the `contact` field is optional. However, if you use `contact`, then you must provide the `system contact` information.
- Lists (such as `<port-list>`) consist of one or more elements separated by commas. Each element might be a single value (1, 2, 3, ...) or a range of values (1-2, 3-5, ...) separated by a dash.
- The | (bar) symbol means "or".
- *italic* terms represent user-defined input values; for example, in `snmp-server [contact <system contact>]`, `system contact` can be replaced by the administrator's name.

- A key stroke is denoted by square brackets and uppercase text, for example, [ENTER] means the "Enter" or "Return" key on your keyboard
- <cr> means press the [ENTER] key.
- An arrow (-->) indicates that this line is a continuation of the previous line.

1.7 Command Examples (Optional)

This section contains any examples for the commands in this feature.

CHAPTER 2

Privilege Level and Command Mode

This chapter introduces privilege levels and the command modes that are available in the CLI.

- The privilege level determines whether or not a user can run a particular command.
- If a user can run a particular command, the user has to run it in the correct mode.

2.1 Privilege Levels

Every command has a privilege level (0-14). Users can run a command if the session's privilege level is greater than or equal to the command's privilege level. The session's privilege level initially comes from the login account's privilege level, though it is possible to change the session's privilege level after logging in.

2.1.1 Privilege Levels for Commands

The privilege level of each command is listed in the corresponding command summary table.

At the time of writing, commands have a privilege level of 0, 3, 13, or 14. The following table summarizes the types of commands at each of these privilege levels.

Table 7 Types of Commands at Different Privilege Levels

PRIVILEGE LEVEL	TYPES OF COMMANDS AT THIS PRIVILEGE LEVEL
0	Display basic system information.
3	Display configuration or status.
13	Configure features except for login accounts, login precedence, multiple logins, and administrator and enable passwords.
14	Configure login accounts, login precedence, multiple logins, and administrator and enable passwords.

2.1.2 Privilege Levels for Login Accounts

You can manage the privilege levels for login accounts the following ways:

- Use commands. Login accounts can be configured by the **admin** account or any login account with a privilege level of 14. See [Chapter 39 on page 164](#).
- Use vendor-specific attributes in an external authentication servers. See the User's Guide for more information.

The **admin** account has a privilege level of 14, so the administrator can run every command. You cannot change the privilege level of the **admin** account.

2.1.3 Privilege Levels for Sessions

The session's privilege level initially comes from the privilege level of the login account the user used to log in to the Switch. After logging in, the user can use the following commands to change the session's privilege level.

2.1.3.1 enable

This command raises the session's privilege level to 14. It also changes the session to enable mode, if necessary. This command is available in user mode or enable mode, and users have to know the enable password.

In the following example, the login account **user0** has a privilege level of 0 but knows that the enable password is **123456**. Afterwards, the session's privilege level is 14, instead of 0, and the session changes to enable mode.

```
sysname> enable
Password: 123456
sysname#
```

The default enable password is **1234**. Use this command to set the enable password.

```
password <password>
```

<password> consists of 1-32 alphanumeric characters. For example, the following command sets the enable password to **123456**. See [Chapter 90 on page 321](#) for more information about this command.

```
sysname(config)# password 123456
```

2.1.3.2 enable <0-14> Command

This command raises the session's privilege level to the specified level. It also changes the session to enable mode, if the specified level is 13 or 14. This command is available in user mode or enable mode, and users have to know the password for the specified privilege level.

In the following example, the login account **user0** has a privilege level of 0 but knows that the password for privilege level 13 is **pswd13**. Afterwards, the session's privilege level is 13, instead of 0, and the session changes to enable mode.

```
sysname> enable 13
Password: pswd13
sysname#
```

Users cannot use this command until you create passwords for specific privilege levels. Use the following command to create passwords for specific privilege levels.

```
password <password> privilege <0-14>
```

<password> consists of 1-32 alphanumeric characters. For example, the following command sets the password for privilege level 13 to **pswd13**. See [Chapter 54 on page 191](#) for more information about this command.

```
sysname(config)# password pswd13 privilege 13
```

2.1.3.3 disable

This command reduces the session's privilege level to 0. It also changes the session to user mode. This command is available in enable mode.

2.2 Command Modes

The CLI is divided into several modes. If a user has enough privilege to run a particular command, the user has to run the command in the correct mode. The modes that are available depend on the session's privilege level.

2.2.1 Command Modes for Privilege Levels 0-12

If the session's privilege level is 0-12, the user and all of the commands are in user mode. Users do not have to change modes to run any allowed commands.

2.2.2 Command Modes for Privilege Levels 13-14

If the session's privilege level is 13-14, the allowed commands are in one of several modes.

Table 8 Command Modes for Privilege Levels 13-14 and the Types of Commands in Each One

MODE	PROMPT	TYPES OF COMMANDS IN THIS MODE
enable	sysname#	Displays current configuration, diagnostics, maintenance.
config	sysname (config) #	Configures features other than those below.
config-bonding-profile	sysname (config-bonding-profile) #	Configures VDSL bonding groups.
config-interface	sysname (config-interface) #	Configures ports.
config-mvr	sysname (config-mvr) #	Configures multicast VLAN.
config-port	sysname (config-port) #	Configures VLAN port isolation.
config-RmtVtur	sysname (config-RmtVtur) #	Configures remote (CPE) devices.
config-vdsl-alarmprofile	sysname (config-vdslalarmprofile) #	Configures VDSL alarm profiles.
config-vdsl-profile	sysname (config-vdslprofile) #	Configures VDSL profiles.
config-vlan	sysname (config-vlan) #	Configures static VLAN.

Each command is usually in one and only one mode. If a user wants to run a particular command, the user has to change to the appropriate mode. The command modes are organized like a tree, and users

start at the root of the tree in enable mode. The following table explains how to change from one mode to another.

Table 9 Changing Between Command Modes for Privilege Levels 13-14

MODE	ENTER MODE	LEAVE MODE
enable	--	--
config	configure	exit
config-bonding-profile	gbond <group-id>	exit
config-interface	interface port-channel <port-list>	exit
config-mvr	mvr <vlan-id>	exit
config-port	vlan1q port-isolation <port-list>	exit
config-vdsl-alarmprofile	vdsl-alarmprofile <profile-name>	exit
config-vdsl-profile	vdsl-profile <profile-name>	exit
config-vlan	vlan <vlan-id>	exit
config-RmtVtur	rmt-vtur port-channel <port-list>	exit

CHAPTER 3

Tutorials

This chapter identifies tasks you might want to do when you first configure the Switch.

3.1 Changing the Administrator Password

Note: It is recommended you change the default administrator password.

Use this command to change the administrator password.

```
admin-password <password> <confirm-password>
```

where <password> and <confirm-password> may be 1-32 alphanumeric characters long.

```
sysname# configure
sysname(config)# admin-password t1g2y7i9 t1g2y7i9
```

3.2 Changing the Enable Password

Note: It is recommended you change the default enable password.

Use this command to change the enable password.

```
password <password>
```

where <password> may be 1-32 alphanumeric characters long.

```
sysname# configure
sysname(config)# password k8s8s3dl0
```

3.3 Prohibiting Concurrent Logins

By default, multiple CLI sessions are allowed via the console port or Telnet. See the User's Guide for the maximum number of concurrent sessions for your Switch. Use this command to prohibit concurrent logins.

```
no multi-login
```


Console port has higher priority than Telnet. See [Chapter 50 on page 183](#) for more multi-login commands.

```
sysname# configure
sysname(config)# no multi-login
```

3.4 Changing the Management IP Address

Use this command to change the management IP address when you are connected to the **MGMT** port.

```
ip address <ip-address> <mask>
```

or

```
ip outband address <ip-address> <mask>
```

This example shows you how to change the out-of-band management IP address to 172.1.1.10 with subnet mask 255.255.255.0.

```
sysname# configure
sysname(config)# ip address 172.1.1.10 255.255.255.0
```

or

```
sysname# configure
sysname(config)# ip outband address 172.1.1.10 255.255.255.0
```

Note: Afterwards, you have to use the new IP address to access the Switch.

Use this command to change the management IP address when you are connected to any other ports.

```
vlan <vlan-id> ip address inband-default <ip-address> <mask>
```

or

```
ip inband address <ip-address> <mask>
```

Alternatively, use this command if you want the Switch can get the in-band management IP address from a DHCP server.

```
vlan <vlan-id> ip address inband-default dhcp-bootp
```

or

```
ip inband client
```

3.5 Looking at Basic System Information

Use this command to look at general system information about the Switch.

```
show system-information
```

This is illustrated in the following example.

```
sysname# show system-information

Product Model       : VES1724-55C
System Name        : VES1724-55C
System Serial Number : xxxxxxxxxxxxxxxxxx
System Contact     :
System Location    :
System up Time     :      0:24:35 (24078 ticks)
Ethernet Address   : cc:5d:4e:11:22:12
Bootbase Version   : V0.2 | 05/12/2014
ZyNOS F/W Version  : V1.00(AATL.11)C0 | 05/29/2020
Config Boot Image  : 1
Current Boot Image : 1
Current Config     : 1
Power Module       : AC
1st F/W Version    : V1.00(AATL.11)C0 | 05/29/2020
2nd F/W Version    : V1.00(AATL.1)C0 | 01/12/2015
Config Port Reverse : Normal
```

See [Chapter 90 on page 321](#) for more information about these attributes.

3.6 Looking at the Operating Configuration

Use this command to look at the current operating configuration.

```
show running-config
```

This is illustrated in the following example.

```

sysname# show running-config
Building configuration...

Current configuration:

; Product Name = VES1724-55C
; Firmware Version = V1.00(AATL.11)C0 | 05/29/2020
; SysConf Engine Version = 1.1
vdsl-line-profile DEFVAL
exit
vdsl-chan-profile DEFVAL
exit
vdsl-inm-profile DEFVAL
exit
vdsl-line-template DEFVAL
exit
vdsl-line-alarm-profile DEFVAL
exit
vdsl-chan-alarm-profile DEFVAL
exit
vdsl-alarm-template DEFVAL
exit
vdsl-port 1 line-template DEFVAL
vdsl-port 2 line-template DEFVAL
vdsl-port 3 line-template DEFVAL
----- SNIP -----

```

3.7 Show Logs

When troubleshooting the Switch, it may be useful to check system logs. The example below shows logs with an "error" severity.

```

VES1724-55C# show logging severity ?
  alert          severity alert
  critical       severity critical
  debug         severity debug
  emergency     severity emergency
  error         severity error
  info          severity info
  notice        severity notice
  warning       severity warning
VES1724-55C# show logging severity error
  1 Jan  1 02:32:29 ER PP1b SYSTEM RESET: addr=800880d8

```

To show all system logs, enter "show logging" without specifying a severity.

PART II

Reference

CHAPTER 4

AAA Commands

Use these commands to configure authentication, authorization and accounting on the Switch.

4.1 Command Summary

The following section lists the commands for this feature.

Table 10 aaa authentication Command Summary

COMMAND	DESCRIPTION	M	P
<code>show aaa authentication</code>	Displays what methods are used for authentication.	E	13
<code>show aaa authentication enable</code>	Displays the authentication method(s) for checking privilege level of administrators.	E	13
<code>aaa authentication enable <method1> [<method2> ...]</code>	Specifies which method should be used first, second, and third for checking users' privileges for settings. <i>method: local, radius, or tacacs+.</i>	C	13
<code>aaa authentication enable try-cont <enable disable></code>	Moves on to another authentication method if the first method fails.	C	14
<code>no aaa authentication enable</code>	Resets the method list for checking privileges to its default value.	C	13
<code>show aaa authentication login</code>	Displays the authentication methods for administrator login accounts.	E	13
<code>aaa authentication login <method1> [<method2> ...]</code>	Specifies which method should be used first, second, and third for the authentication of login accounts. This is used to determine a user can log into the Switch or not. <i>method: local, radius, or tacacs+.</i>	C	13
<code>aaa authentication login try-cont <enable disable></code>	Moves on to another login authentication method if the first method fails.	C	14
<code>no aaa authentication login</code>	Resets the method list for the authentication of login accounts to its default value.	C	13

Table 11 aaa accounting Command Summary

COMMAND	DESCRIPTION	M	P
<code>show aaa accounting</code>	Displays accounting settings configured on the Switch.	E	3
<code>show aaa accounting update</code>	Display the update period setting on the Switch for accounting sessions.	E	3
<code>aaa accounting update periodic <1-2147483647></code>	Sets the update period (in minutes) for accounting sessions. This is the time the Switch waits to send an update to an accounting server after a session starts.	C	13
<code>no aaa accounting update</code>	Resets the accounting update interval to the default value.	C	13

Table 11 aaa accounting Command Summary (continued)

COMMAND	DESCRIPTION	M	P
show aaa accounting commands	Displays accounting settings for recording command events.	E	3
aaa accounting commands <privilege> stop-only tacacs+ [broadcast]	Enables accounting of command sessions and specifies the minimum privilege level (0-14) for the command sessions that should be recorded. Optionally, sends accounting information for command sessions to all configured accounting servers at the same time.	C	13
no aaa accounting commands	Disables accounting of command sessions on the Switch.	C	13
show aaa accounting dot1x	Displays accounting settings for recording IEEE 802.1x session events.	E	3
aaa accounting dot1x <start-stop stop-only> <radius tacacs+> [broadcast]	Enables accounting of IEEE 802.1x authentication sessions and specifies the mode and protocol method. Optionally, sends accounting information for IEEE 802.1x authentication sessions to all configured accounting servers at the same time.	C	13
no aaa accounting dot1x	Disables accounting of IEEE 802.1x authentication sessions on the Switch.	C	13
show aaa accounting exec	Displays accounting settings for recording administrative sessions via SSH, Telnet or the console port.	E	3
aaa accounting exec <start-stop stop-only> <radius tacacs+> [broadcast]	Enables accounting of administrative sessions via SSH, Telnet and console port and specifies the mode and protocol method. Optionally, sends accounting information for administrative sessions via SSH, Telnet and console port to all configured accounting servers at the same time.	C	13
no aaa accounting exec	Disables accounting of administrative sessions via SSH, Telnet or console on the Switch.	C	13
show aaa accounting system	Displays accounting settings for recording system events, for example system shut down, start up, accounting enabled or accounting disabled.	E	3
aaa accounting system <radius tacacs+> [broadcast]	Enables accounting of system events and specifies the protocol method. Optionally, sends accounting information for system events to all configured accounting servers at the same time.	C	13
no aaa accounting system	Disables accounting of system events on the Switch.	C	13

Table 12 aaa authorization Command Summary

COMMAND	DESCRIPTION	M	P
show aaa authorization	Displays what methods are used for authorization.	E	0
show aaa authorization exec	Displays the authentication methods for checking the privilege level of administrator configuration sessions.	E	0
aaa authorization exec <method1> [<method2> ...]	Specifies which method should be used first and second for checking the privilege level of administrator configuration sessions. If a user is authenticated with local, the Switch will automatically authorize the user with local privilege. <i>method: local, radius, or tacacs+.</i>	C	13
aaa authorization exec try-cont <enable disable>	Moves on to another authorization method if the first method fails.	C	14
no aaa authorization exec	Resets the method list for checking the privilege level of administrator configuration sessions to its default value.	C	13

4.2 Command Examples

This example displays how to show the current authentication method settings.

```
sysname# show aaa authentication
Authentication:
      Type      Method 1      Method 2      Method 3
      Enable    local         -             -
      Login     local         -             -
```

This example displays how to sets the authentication methods first to use radius server and second to use the Switch's local database.

```
sysname# configure
sysname(config)# aaa authentication enable radius local
sysname(config)# aaa authentication login radius local
sysname(config)# exit
sysname# show aaa authentication
Authentication:
      Type      Method 1      Method 2      Method 3
      Enable    radius        local         -
      Login     radius        local         -
sysname#
```

CHAPTER 5

ADSL Fallback Commands

Use these commands to configure general ADSL settings.

5.1 Command Summary

The following tables list the commands for this feature.

Table 13 ippvc interface Command Summary

COMMAND	DESCRIPTION	M	P
<pre>ippvc interface port-channel <interface-id> vpi <0-255> vci <32-65535> pvid <vlan-id> encap <llc/vc> priority <0-7> subnet <ip> <mask> default-route <ip> [inactive]</pre>	<p>Sets up a routed PVC for IPoA packets on the specified port.</p> <p><i><interface-id></i>: VDSL port number</p> <p><i>vpi</i>: Virtual Path Identifier</p> <p><i>vci</i>: Virtual Circuit Identifier</p> <p><i>pvid</i>: PVID of PVC</p> <p><i>encap</i>: encapsulation method for PVC <i><llc/vc></i></p> <p><i>priority</i>: PVLAN priority <i><0-7></i></p> <p><i>subnet</i>: subnet IP address and mask <i><ip> <mask></i></p> <p><i>default-route</i>: default gateway IP address <i><ip></i></p> <p><i>inactive</i>: Include this to disable the routed PVC.</p>	C	13
<pre>no ippvc interface port-channel <interface-id> vpi <0-255> vci <32-65535> <cr></pre>	<p>Deletes the routed PVC interface.</p> <p><i><interface-id></i>: VDSL port number</p> <p><i>vpi</i>: Virtual Path Identifier</p> <p><i>vci</i>: Virtual Circuit Identifier</p>	C	13
<pre>no ippvc interface port-channel <interface-id> vpi <0-255> vci <32-65535> inactive</pre>	<p>Enables the routed PVC interface.</p> <p><i><interface-id></i>: VDSL port number</p> <p><i>vpi</i>: Virtual Path Identifier</p> <p><i>vci</i>: Virtual Circuit Identifier</p>	C	13
<pre>show ippvc <cr></pre>	<p>Displays the routed PVC interfaces.</p>	E	0

Table 14 paepvc interface Command Summary

COMMAND	DESCRIPTION	M	P
<pre>paepvc interface port-channel <interface-id> vpi <0-255> vci <32-65535> pvid <vlan-id> encap <llc/vc> priority <0-7> [inactive]</pre>	<p>Configures a PPPoA to PPPoE PVC for PAE translation on the specified port.</p> <p><i><interface-id></i>: VDSL port number</p> <p>vpi: Virtual Path Identifier</p> <p>vci: Virtual Circuit Identifier</p> <p>pvid: PVID of PVC</p> <p>encap: encapsulation method for PVC <llc/vc></p> <p>priority: PVLAN priority <0-7></p> <p>inactive: Include this to disable the PPPoA to PPPoE PVC.</p>	C	13
<pre>no paepvc interface port- channel <interface-id> vpi <0- 255> vci <32-65535> <cr></pre>	<p>Discards the PPPoA to PPPoE PVC.</p> <p><i><interface-id></i>: VDSL port number</p> <p>vpi: Virtual Path Identifier</p> <p>vci: Virtual Circuit Identifier</p>	C	13
<pre>no paepvc interface port- channel <interface-id> vpi <0- 255> vci <32-65535> inactive</pre>	<p>Enables the PPPoA to PPPoE PVC.</p> <p><i><interface-id></i>: VDSL port number</p> <p>vpi: Virtual Path Identifier</p> <p>vci: Virtual Circuit Identifier</p>	C	13
<pre>show paepvc <cr></pre>	<p>Displays the PPPoA to PPPoE PVCs.</p>	E	0

Table 15 pvc interface Command Summary

COMMAND	DESCRIPTION	M	P
<pre>pvc interface port-channel <interface-id> vpi <0-255> vci <32-65535> pvid <vlan-id> encap <llc/vc> priority <0-7> <fcs/ no-fcs> mvlan <enable/disable> [inactive]</pre>	<p>Sets up a bridge PVC for Ethernet over ATM (EoA) packets on the specified port.</p> <p><i><interface-id></i>: VDSL port number</p> <p><i>vpi</i>: Virtual Path Identifier</p> <p><i>vci</i>: Virtual Circuit Identifier</p> <p><i>pvid</i>: PVID of PVC</p> <p><i>encap</i>: encapsulation method for PVC <i><llc/vc></i></p> <p><i>priority</i>: PVLAN priority <i><0-7></i></p> <p><i>fcs/no-fcs</i>: preserve the PDU's Frame Check Sequence or not</p> <p><i>mvlan</i>: Enable or disable multicast VLAN. Multicast VLAN allows one single multicast VLAN to be shared among different subscriber VLANs on the network. This improves bandwidth utilization by reducing multicast traffic in the subscriber VLANs and simplifies multicast group management.</p> <p><i>inactive</i>: Include this to disable the created bridge PVC.</p>	C	13
<pre>no pvc interface port-channel <interface-id> vpi <0-255> vci <32-65535> <cr></pre>	<p>Discards the bridge PVC interface.</p> <p><i><interface-id></i>: VDSL port number</p> <p><i>vpi</i>: Virtual Path Identifier</p> <p><i>vci</i>: Virtual Circuit Identifier</p>	C	13
<pre>no pvc interface port-channel <interface-id> vpi <0-255> vci <32-65535> inactive</pre>	<p>Enables the bridge PVC interface.</p> <p><i><interface-id></i>: VDSL port number</p> <p><i>vpi</i>: Virtual Path Identifier</p> <p><i>vci</i>: Virtual Circuit Identifier</p>	C	13
<pre>show pvc <cr></pre>	<p>Displays the bridge PVCs.</p>	E	0

CHAPTER 6

ARP Commands

Use these commands to look at IP-to-MAC address mapping(s).

6.1 Command Summary

The following section lists the commands for this feature.

Table 16 arp Command Summary

COMMAND	DESCRIPTION	M	P
show ip arp	Displays the ARP table.	E	13
show ip arp flush	Clears the ARP table.	E	13
no arp	Flushes the ARP table entries.	E	13

6.2 Command Examples

This example shows the ARP table.

```
sysname# show ip arp
  Index   IP             MAC                VLAN  Age (s)  Type
    1     172.16.10.254  00:04:80:9b:78:00    1     300     dynamic
```

The following table describes the labels in this screen.

Table 17 show ip arp

LABEL	DESCRIPTION
Index	This field displays the index number.
IP	This field displays the learned IP address of the device.
MAC	This field displays the MAC address of the device.
VLAN	This field displays the VLAN to which the device belongs.
Age(s)	This field displays how long the entry remains valid.
Type	This field displays how the entry was learned. dynamic: The Switch learned this entry from ARP packets.

CHAPTER 7

ARP Inspection Commands

Use these commands to filter unauthorized ARP packets in your network.

7.1 Command Summary

The following section lists the commands for this feature.

Table 18 arp inspection Command Summary

COMMAND	DESCRIPTION	M	P
show arp inspection	Displays ARP inspection configuration details.	E	3
arp inspection	Enables ARP inspection on the Switch. You still have to enable ARP inspection on specific VLAN and specify trusted ports.	C	13
no arp inspection	Disables ARP inspection on the Switch.	C	13
clear arp inspection statistics	Removes all ARP inspection statistics on the Switch.	E	3
clear arp inspection statistics vlan <vlan-list>	Removes ARP inspection statistics for the specified VLAN(s).	E	3
show arp inspection statistics	Displays all ARP inspection statistics on the Switch.	E	3
show arp inspection statistics vlan <vlan-list>	Displays ARP inspection statistics for the specified VLAN(s).	E	3

Table 19 Command Summary: arp inspection filter

COMMAND	DESCRIPTION	M	P
show arp inspection filter [<mac-addr>] [vlan <vlan-id>]	Displays the current list of MAC address filters that were created because the Switch identified an unauthorized ARP packet. Optionally, lists MAC address filters based on the MAC address or VLAN ID in the filter.	E	3
no arp inspection filter <mac-addr> vlan <vlan-id>	Specifies the ARP inspection record you want to delete from the Switch. The ARP inspection record is identified by the MAC address and VLAN ID pair.	E	13
clear arp inspection filter	Delete all ARP inspection filters from the Switch.	E	13
arp inspection filter-aging-time <1-2147483647>	Specifies how long (1-2147483647 seconds) MAC address filters remain in the Switch after the Switch identifies an unauthorized ARP packet. The Switch automatically deletes the MAC address filter afterwards.	C	13
arp inspection filter-aging-time none	Specifies the MAC address filter to be permanent.	C	13
no arp inspection filter-aging-time	Resets how long (1-2147483647 seconds) the MAC address filter remains in the Switch after the Switch identifies an unauthorized ARP packet to the default value.	C	13

Table 20 Command Summary: arp inspection log

COMMAND	DESCRIPTION	M	P
show arp inspection log	Displays the log settings configured on the Switch. It also displays the log entries recorded on the Switch.	E	3
clear arp inspection log	Delete all ARP inspection log entries from the Switch.	E	13
arp inspection log-buffer entries <0-1024>	Specifies the maximum number (1-1024) of log messages that can be generated by ARP packets and not sent to the syslog server. If the number of log messages in the Switch exceeds this number, the Switch stops recording log messages and simply starts counting the number of entries that were dropped due to unavailable buffer.	C	13
arp inspection log-buffer logs <0-1024> interval <0-86400>	Specifies the number of syslog messages that can be sent to the syslog server in one batch and how often (1-86400 seconds) the Switch sends a batch of syslog messages to the syslog server.	C	13
no arp inspection log-buffer entries	Resets the maximum number (1-1024) of log messages that can be generated by ARP packets and not sent to the syslog server to the default value.	C	13
no arp inspection log-buffer logs	Resets the maximum number of syslog messages the Switch can send to the syslog server in one batch to the default value.	C	13

Table 21 Command Summary: interface arp inspection

COMMAND	DESCRIPTION	M	P
show arp inspection interface port-channel <port-list>	Displays the ARP inspection settings for the specified port(s).	E	3
interface port-channel <port-list>	Enters config-interface mode for the specified port(s).	C	13
arp inspection limit rate <0-2048> [burst interval <1-15>]	Specifies the maximum rate in packets per second (1-2048 pps) at which the Switch receives ARP packets through each port. The Switch discards any additional ARP packets. Use 0 to disable this limit. Burst interval is the length of time over which the rate of ARP packets is monitored for each port. For example, if the rate is 15 pps and the burst interval is 1 second, then the Switch accepts a maximum of 15 ARP packets in every one-second interval. If the burst interval is 5 seconds, then the Switch accepts a maximum of 75 ARP packets in every five-second interval. Set the length (1-15 seconds) of the burst interval.	C	13
arp inspection trust	Sets the port to be a trusted port for arp inspection. The Switch does not discard ARP packets on trusted ports for any reason.	C	13
no arp inspection trust	Disables this port from being a trusted port for ARP inspection.	C	13
arp inspection limit rate <pps> [burst interval <seconds>]	Sets a rate limit (in pps, packets per second) for ARP packets on the port. You can also set the burst interval (in seconds) over which the rate of ARP packets is monitored.	C	13
no arp inspection limit	Disables the rate limit for ARP packets.	C	13

Table 22 Command Summary: arp inspection vlan

COMMAND	DESCRIPTION	M	P
show arp inspection vlan <vlan-list>	Displays ARP inspection settings for the specified VLAN(s).	E	3
arp inspection vlan <vlan-list>	Enables ARP inspection on the specified VLAN(s).	C	13
no arp inspection vlan <vlan-list>	Disables ARP inspection on the specified VLAN(s).	C	13
arp inspection vlan <vlan-list> logging [all none permit deny]	Enables logging of ARP inspection events on the specified VLAN(s). Optionally specifies which types of events to log.	C	13
no arp inspection vlan <vlan-list> logging	Disables logging of messages generated by ARP inspection for the specified VLAN(s).	C	13

7.2 Command Examples

This example looks at the current list of MAC address filters that were created because the Switch identified an unauthorized ARP packet. When the Switch identifies an unauthorized ARP packet, it automatically creates a MAC address filter to block traffic from the source MAC address and source VLAN ID of the unauthorized ARP packet.

```

sysname# show arp inspection filter
  Filtering aging timeout : 300

      MacAddress  VLAN   Port  Expiry (sec)      Reason
-----
Total number of bindings: 0

```

The following table describes the labels in this screen.

Table 23 show arp inspection filter

LABEL	DESCRIPTION
Filtering aging timeout	This field displays how long the MAC address filters remain in the Switch after the Switch identifies an unauthorized ARP packet. The Switch automatically deletes the MAC address filter afterwards.
MacAddress	This field displays the source MAC address in the MAC address filter.
VLAN	This field displays the source VLAN ID in the MAC address filter.
Port	This field displays the source port of the discarded ARP packet.
Expiry (sec)	This field displays how long (in seconds) the MAC address filter remains in the Switch. You can also delete the record manually (Delete).
Reason	This field displays the reason the ARP packet was discarded. MAC+VLAN: The MAC address and VLAN ID were not in the binding table. IP: The MAC address and VLAN ID were in the binding table, but the IP address was not valid. Port: The MAC address, VLAN ID, and IP address were in the binding table, but the port number was not valid.

This example looks at log messages that were generated by ARP packets and that have not been sent to the syslog server yet.

```

sysname# show arp inspection log
  Total Log Buffer Size : 32
  Syslog rate : 5 entries per 1 seconds

  Port  Vlan          Sender MAC          Sender IP  Pkts      Reason
      Time
-----
-----
Total number of logs: 0

```

The following table describes the labels in this screen.

Table 24 show arp inspection log

LABEL	DESCRIPTION
Total Log Buffer Size	This field displays the maximum number (1-1024) of log messages that were generated by ARP packets and have not been sent to the syslog server yet. If the number of log messages in the Switch exceeds this number, the Switch stops recording log messages and simply starts counting the number of entries that were dropped due to unavailable buffer.
Syslog rate	This field displays the maximum number of syslog messages the Switch can send to the syslog server in one batch. This number is expressed as a rate because the batch frequency is determined by the Log Interval .
Port	This field displays the source port of the ARP packet.
Vlan	This field displays the source VLAN ID of the ARP packet.
Sender MAC	This field displays the source MAC address of the ARP packet.
Sender IP	This field displays the source IP address of the ARP packet.
Pkts	This field displays the number of ARP packets that were consolidated into this log message. The Switch consolidates identical log messages generated by ARP packets in the log consolidation interval into one log message.
Reason	This field displays the reason the log message was generated. static deny: An ARP packet was discarded because it violated a static binding with the same MAC address and VLAN ID. deny: An ARP packet was discarded because there were no bindings with the same MAC address and VLAN ID. static permit: An ARP packet was forwarded because it matched a static binding.
Time	This field displays when the log message was generated.
Total number of logs	This field displays the number of log messages that were generated by ARP packets and that have not been sent to the syslog server yet. If one or more log messages are dropped due to unavailable buffer, there is an entry called overflow with the current number of dropped log messages.

This example displays whether ports are trusted or untrusted ports for ARP inspection.

```

sysname# show arp inspection interface port-channel 1
Interface  Trusted State  Rate (pps)  Burst Interval
-----
          1      Untrusted      15          1

```

The following table describes the labels in this screen.

Table 25 show arp inspection interface port-channel

LABEL	DESCRIPTION
Interface	This field displays the port number. If you configure the * port, the settings are applied to all of the ports.
Trusted State	This field displays whether this port is a trusted port (Trusted) or an untrusted port (Untrusted). Trusted ports are connected to DHCP servers or other switches, and the switch discards DHCP packets from trusted ports only if the rate at which DHCP packets arrive is too high.
Rate (pps)	This field displays the maximum number for DHCP packets that the switch receives from each port each second. The switch discards any additional DHCP packets.
Burst Interval	This field displays the length of time over which the rate of ARP packets is monitored for each port. For example, if the Rate is 15 pps and the burst interval is 1 second, then the switch accepts a maximum of 15 ARP packets in every one-second interval. If the burst interval is 5 seconds, then the switch accepts a maximum of 75 ARP packets in every five-second interval.

CHAPTER 8

Bandwidth Commands

Use these commands to configure the maximum allowable bandwidth for incoming or outgoing traffic flows on a port.

8.1 Command Summary

The following table describes user-input values available in multiple commands for this feature.

Table 26 bandwidth-control and bandwidth-limit User-input Values

COMMAND	DESCRIPTION
<code>rate</code>	0~1000000 or 1000~1000000 Kbps.
<code>port-list</code>	Enter one or more port number(s). Use dash or comma to specify multiple port numbers. For example, "1~10" means from port 1 to port 10. "1,10" means port 1 and port 10.

The following section lists the commands for this feature.

Table 27 bandwidth-control and bandwidth-limit Command Summary

COMMAND	DESCRIPTION	M	P
<code>show interfaces config <port-list> bandwidth-control</code>	Displays the current settings for interface bandwidth control.	E	13
<code>bandwidth-control</code>	Enables bandwidth control on the Switch.	C	13
<code>no bandwidth-control</code>	Disables bandwidth control on the Switch.	C	13
<code>interface port-channel <port-list></code>	Enters config-interface mode for the specified port(s).	C	13
<code>bandwidth-limit</code>	Enables bandwidth limits on the port(s).	C	13
<code>no bandwidth-limit</code>	Disables bandwidth limits on the port(s).	C	13
<code>bandwidth-limit cir <rate></code>	Sets the Committed Information Rate (CIR) which is the guaranteed bandwidth for the incoming traffic flow on a port.	C	13
<code>bandwidth-limit ingress <rate></code>	Sets the maximum bandwidth in kbps allowed for incoming traffic on the port(s).	C	13

Table 27 bandwidth-control and bandwidth-limit Command Summary (continued)

COMMAND	DESCRIPTION	M	P
<code>bandwidth-limit egress <rate></code>	Sets the maximum bandwidth in kbps allowed for outgoing traffic on the port(s).	C	13
<code>bandwidth-limit pir <rate></code>	<p>Sets the Peak Information Rate (PIR) in kbps which is the maximum bandwidth allowed for the incoming traffic flow on a port when there is no network congestion.</p> <p>The CIR and PIR should be set for all ports that use the same uplink bandwidth. If the CIR is reached, packets are sent at the rate up to the PIR. When network congestion occurs, packets through the ingress port exceeding the CIR will be marked for drop.</p> <p>Note: The CIR should be less than the PIR.</p> <p>Note: The sum of CIRs cannot be greater than or equal to the uplink bandwidth.</p>	C	13

8.2 Command Examples

This example sets the outgoing traffic bandwidth limit to 5000 Kbps and the incoming traffic bandwidth limit to 4000 Kbps for port 1.

```

sysname# configure
sysname(config)# bandwidth-control
sysname(config)# interface port-channel 1
sysname(config-interface)# bandwidth-limit
sysname(config-interface)# bandwidth-limit egress 5000
sysname(config-interface)# bandwidth-limit ingress 4000
sysname(config-interface)# exit
sysname(config)# exit

```

This example deactivates the bandwidth limits on port 1.

```

sysname# configure
sysname(config)# interface port-channel 1
sysname(config-interface)# no bandwidth-limit
sysname(config-interface)# exit
sysname(config)# exit

```

CHAPTER 9

Broadcast Storm Commands

Use these commands to limit the number of broadcast, multicast and destination lookup failure (DLF) packets the Switch receives per second on the ports.

9.1 Command Summary

The following table describes user-input values available in multiple commands for this feature.

Table 28 storm-control, bmstorm-control, and limit User-input Values

COMMAND	DESCRIPTION
<i>pkt/s</i>	0~148800 or 0~262143

The following section lists the commands for this feature.

Table 29 storm-control, bmstorm-control, and limit Command Summary

COMMAND	DESCRIPTION	M	P
<code>show interfaces config <port-list> bstorm-control</code>	Displays the current settings for broadcast storm control.	E	13
<code>storm-control</code>	Enables broadcast storm control on the Switch.	C	13
<code>no storm-control</code>	Disables broadcast storm control on the Switch.	C	13
<code>storm-limit</code>	Enables broadcast rate limit on the Switch.	C	13
<code>storm-limit CIR <cir></code>	Sets the guaranteed data rate allowed for the broadcast, DLF and multicast packets. <i>cir</i> : Enters the committed information rate from 1 to 16384 kbps.	C	13
<code>no storm-limit</code>	Disables broadcast rate limit on the Switch.	C	13
<code>interface port-channel <port-list></code>	Enters config-interface mode for the specified port(s).	C	13
<code> broadcast-limit</code>	Enables the broadcast packet limit on the specified port(s).	C	13
<code> broadcast-limit <pkt/s></code>	Sets the broadcast packet limit (in packets per second) on the specified port(s).	C	13
<code> no broadcast-limit</code>	Disables the broadcast packet limit on the specified port(s).	C	13
<code> dlf-limit</code>	Enables the Destination Lookup Failure (DLF) packet limit.	C	13
<code> dlf-limit <pkt/s></code>	Sets the DLF packet limit (in packets per second) on the specified port(s).	C	13
<code> no dlf-limit</code>	Disables the destination lookup failure (DLF) packet limit on the specified port(s).	C	13
<code> multicast-limit</code>	Enables the multicast packet limit on the specified port(s).	C	13

Table 29 storm-control, bmstorm-control, and limit Command Summary (continued)

COMMAND	DESCRIPTION	M	P
multicast-limit <pkt/s>	Sets the multicast packet limit (in packets per second) on the specified port(s).	C	13
no multicast-limit	Disables the multicast packet limit on the specified port(s).	C	13

9.2 Command Examples

This example enables broadcast storm control on port 1 and limits the maximum number of broadcast packets to 128 packets per second.

```
sysname# configure
sysname(config)# storm-control
sysname(config)# interface port-channel 1
sysname(config-interface)# broadcast-limit
sysname(config-interface)# broadcast-limit 128
sysname(config-interface)# exit
sysname(config)# exit
```

CHAPTER 10

CFM Commands

Use these commands to configure the Connectivity Fault Management (CFM) on the Switch.

10.1 CFM Term Definition

This section lists the common term definition appears in this chapter. Refer to User's Guide for more detailed information about CFM.

Table 30 CFM Term Definition

TERM	DESCRIPTION
CFM	CFM (Connectivity Fault Management) is used to detect, analyze connectivity faults in bridged LANs.
MD	An MD (Maintenance Domain) is a group identified by a level number. You can create more than one MA groups in one MD.
MA	An MA (Maintenance Association) is a group identified by a VLAN ID. One MA should belong to one and only one MD group.
CFM Domain	A CFM domain is a group identified by an MD and an MA. For example, ports in MD level 1 and MA VLAN 2 are in the same CFM domain while ports in MD level 7 and MA VLAN 2 are in another CFM domain.
CFM Action	CFM provides three tests to discover connectivity faults. <ul style="list-style-type: none">• CC (Connectivity Check) - enables an MEP port sending Connectivity Check Messages (CCMs) periodically to other MEP ports. An MEP port collects CCMs to get other MEP information within an MA.• LBT (Loop Back Test) - checks if the MEP port receives its LBR (Loop Back Response) from its target after it sends the LBM (Loop Back Message). If no response is received, there might be a connectivity fault between them.• LTT (Link Trace Test) - provides additional connectivity fault analysis to get more information on where the fault is. In the link trace test, MIP ports also send LTR (Link Trace Response) to response the source MEP port's LTM (Link Trace Message). If an MIP or MEP port does not respond to the source MEP, this may indicate a fault. Administrators can take further action to check and resume services from the fault according to the line connectivity status report.
MEP	An MEP port has the ability to send and reply the CCMs, LBMs and LTMs. It also gets other MEP port information from neighbor switches' CCMs in an MA.
MIP	An MIP port forwards the CCMs, LBMs, and LTMs and replies the LBMs and LTMs by sending Loop Back Responses (LBRs) and Link Trace Responses (LTRs).

10.2 User Input Values

This section lists the common term definition appears in this chapter. Refer to User's Guide for more detailed information about CFM.

Table 31 CFM command user input values

USER INPUT	DESCRIPTION
level <0~7> vlan <1~4094>	This identifies a specified CFM domain which consists of an MD level and an MA VLAN ID.

10.3 Command Summary

The following section lists the commands for this feature.

Table 32 CFM Command Summary

COMMAND	DESCRIPTION	M	P
cfm domain <domain-name> level <0~7>	Creates an MD with the name and the level number.	C	13
service <ma-name> vlan <1~4094> [name-format <1:PVID 2:String 3:Integer>]	Creates an MA (Maintenance Association) and defines its VLAN ID under the MD. You can also define the format which the Switch uses to send this MA information in the domain (MD). Note: This specified VLAN ID must be existed already before you specify it for an MA.	C	13
service <ma-name> ccm-interval <3~7>	Sets the time interval the Switch waits to send a connectivity check message (CCM). 3: 100 milliseconds, 4: 1 second, 5: 10 second, 6: 1 minute, 7: 10 minute	C	13
no service <ma-name>	Deletes the MA under the MD.	C	13
cfm debug <0:disable 1:enable>	Disables or enables the CFM debug mode.	C	13
cfm-action enable	Enables the global switch of CFM action.	C	13
cfm-action cc level <0~7> vlan <1~4094>	Enables Connectivity Check (CC) in the MD level and the MA VLAN. This enables all MEP ports in a specified CFM domain to send CCM (Connectivity Check message).	C	13
cfm-action loopback level <0~7> vlan <1~4094> mepid <1~8191> destination <dest-mac-address> count <count>	Specify the MD level, MA vlan ID, MEP ID, destination MAC address and how many times to perform a loopback test. This enables the MEP port (with the specified MEP ID) in a specified CFM domain to send the LBM (Loop Back Message) to a specified remote interface a specified number of times.	C	13
cfm-action loopback level <0~7> vlan <1~4094> mepid <1~8191> target-mepid <1~8191> count <count>	This enables the MEP port (with the specified MEP ID) in a specified CFM domain to send the LBM (Loop Back Message) to a specified remote MEP.	C	13
cfm-action loopback print	Displays the loopback testing result in the console.	C	13

Table 32 CFM Command Summary (continued)

COMMAND	DESCRIPTION	M	P
cfm-action loopback interval <interval>	Sets the loopback test interval. Each unit represents 100 ms.	C	13
cfm-action linktrace level <0~7> vlan <1~4094> mepid <1~8191> destination <dest-mac-address>	Specifies the MD level, MA vlan ID, MEP ID, destination MAC address to perform a link trace test. This enables the MEP port (with the specified MEP ID) in a specified CFM domain to send the LTM (Link Trace Message) to a specified remote interface.	C	13
cfm-action linktrace level <0~7> vlan <1~4094> mepid <1~8191> target-mepid <1~8191>	This enables the MEP port (with the specified MEP ID) in a specified CFM domain to send the LTM (Link Trace Message) to a specified remote MEP.	C	13
clear cfm mep-counter level <0~7> vlan <1~4094> mepid <1~8191>	Removes the CFM counters for the specified MEP port.	E	13
interface port-channel <port-list>	Enters config-interface mode for the specified port(s).	C	13
cfm mip level <level> vlan <vlan_id>	Associates MIP ports with the specified CFM domain.	C	13
cfm mep level <level> mepid <mepid> vlan <vlan_id> [direction <1:downstream 2:upstream>]	Associates MEP ports with the specified CFM domain.	C	13
no cfm mip level <level> vlan <vlan_id>	Unassociates MEP ports with the specified CFM domain.	C	13
no cfm mep level <level> vlan <vlan_id>	Unassociates MIP ports with the specified CFM domain.	C	13
no cfm domain <domain-name all>	Deletes a specified MD or all MDs.	C	13
no cfm-action enable	Disables the global switch of CFM action.	C	13
no cfm-action cc level <0~7> vlan <1~4094>	Stops all MEP ports sending the CCM in the specified CFM domain.	C	13
no cfm-action loopback level <0~7> vlan <1~4094> mepid <mepid>	Stops the loopback test from the MEP port (with the specified MEP ID) in the specified CFM domain.	C	13
no cfm-action loopback print	Disables the loopback testing result displaying in the console.	C	13
show cfm domain <domain-name all>	Displays CFM domains (MD; Maintenance Domain).	E	13
show cfm-action	Displays CFM action settings.	E	13
show cfm-action counter level <0~7> vlan <1~4094> mepid <1~8191>	Displays the index number for each test try from the MEP port (with the specified MEP ID) in a specified CFM domain. Use this to check the progress of a CFM test.	E	13
show cfm-action mepccmdb level <0~7> vlan <1~4094>	Displays the MEP-CCM database information which stores neighbors' MEP ports information getting from the incoming CC in the specified CFM domain. You can use this database information to provide the destination's (an MEP port) MAC address when starting a CFM action such as loopback test or link trace test.	E	13

Table 32 CFM Command Summary (continued)

COMMAND	DESCRIPTION	M	P
show cfm-action mipccmdb level <0~7> vlan <1~4094>	Displays the MIP-CCM database information which stores neighbors' MEP ports information getting from the incoming CC in the specified CFM domain. Local MIP ports use this database information to forward CFM messages.	E	13
show cfm-action ltmreplylist level <0~7> vlan <1~4094> mepid <1~8191>	Displays the LTM response list in a link trace test.	E	13
show cfm-action ltmreplylist level <0~7> vlan <1~4094> mepid <1~8191> transid <trans-id>	Displays the LTM response list for the specified transaction in a link trace test. <i>trans-id</i> : This is the index number of the LTM sent in a link trace test.	E	13

10.4 Command Examples

This example creates **MD1** (with level 1). Then it creates **MA2** (with VLAN 2) and **MA3** (with VLAN 3) under **MD1** that defines a CFM domain.

```
sysname# config
sysname(config)# cfm domain MD1 level 1
sysname(config-CFM_MD(1-1))# service MA2 vlan 2
sysname(config-CFM_MD(1-1))# service MA3 vlan 3
sysname(config-CFM_MD(1-1))# exit
sysname(config)# exit
sysname# write memory
```

Note: Remember to save new settings using `write memory` command.

This example deletes **MA3** from **MD1**.

```
sysname# config
sysname(config)# cfm domain MD1 level 1
sysname(config-CFM_MD(1-1))# no service MA3
sysname(config-CFM_MD(1-1))# exit
sysname(config)# exit
sysname# write memory
```


This example associates port 17 as an MEP port with MEP ID 100 and port 18 as an MIP port in the specified CFM domain (MD level 1, MA VLAN 2).

```

sysname(config)# interface port-channel 17
sysname(config-interface)# cfm mep level 100 mepid 1 vlan 2
sysname(config-interface)# exit
sysname(config)# interface port-channel 18
sysname(config-interface)# cfm mip level 1 vlan 2
sysname(config-interface)# exit
sysname(config)# exit
sysname# write memory

```

This example lists all CFM domains. In this example, only one MD (**MD1**) is configured. The **MA2** with the associated MEP ID **100** and MIP port **17** and **18** are under this **MD1**.

```

sysname# show cfm domain all
Maintenance Domain:
  Name: MD1, Level: 1
Service Instance:
  ID: MA2, VLAN ID: 2, CCM Interval: 1 sec
  Short MA name Format: Integer
MEP:
  Port: 17, ID: 100
MIP:
  Port: 18

```

This example enables CFM action and then displays the CFM action status, loopback message result printing (is off) and the interval a MEP sends a loopback message (every 1000 milliseconds).

```

sysname(config)# cfm-action enable
sysname# show cfm-action
Status: Enabled
Print Loopback Message: N
Interval to Send Loopback Message: 10 * 100ms

```

This example enables the loopback test result displaying on the console. It starts a LBT (Loop Back Test) and sends an LBM five times. You can see each LBM (Loop Back Message) with the transaction ID numbers shown next to it.

```

sysname# config
sysname(config)# cfm-action loopback print
sysname(config)# cfm-action loopback level 1 vlan 2 mepid 15 destination
00a0c5134925 count 5
sysname(config)#
LBM sent to 25:13:f4:e8:02:13 transaction ID: 0
LBM sent to 25:13:f4:e8:02:13 transaction ID: 1
LBM sent to 25:13:f4:e8:02:13 transaction ID: 2
LBM sent to 25:13:f4:e8:02:13 transaction ID: 3
...

```

This example displays all neighbors' MEP port information in the MEP-CCM and MIP-CCM databases. You can use the MEP-CCM database to get and use a MAC address as the destination to starting a CFM test. But for the MIP-CCM database, local MIP ports use the information to forward CFM messages.

```

sysname# show cfm-action mepccmdb level 2 vlan 101
MEP ID  MAC Address          lastRDI    last SeqNum  CCMdefect
   1    00:19:cb:00:12:35      N           176          N

sysname# show cfm-action mipccmdb level 2 vlan 101
MEP ID  VLAN ID  MAC Address      Port
   1     101   00:19:cb:00:12:35  26

```

The following table describes the labels in this screen.

Table 33 show cfm-action mepccmdb

LABEL	DESCRIPTION
MEP ID	Displays neighbors' MEP's MEP ID coming from the incoming CCM (Connectivity Check Message).
MAC Address	Displays the MAC address of the MEP port.
lastRDI	Displays the state of the RDI (Remote Defect Indication) coming from the last incoming CCM (Connectivity Check Message). This indicates whether the MEP detected connectivity faults.
last SeqNum	Displays the sequence number of the last received CCM.
CCMdefect	Displays whether the switch received this MEP's CCMs during the last time interval (3.25 multiplied by the CCM interval value). Y displays if the MEP has not received any CCMs for a while and there might be a connectivity fault between the device and the remote MEP. Otherwise, it displays N.

Table 34 show cfm-action mipccmdb

LABEL	DESCRIPTION
MEP ID	Displays the neighbor MEP port's ID number.
VLAN ID	Displays the MA VLAN ID of the last received CCM.
MAC Address	Displays the MAC address of the MEP port.
Port	Displays the MEP port's number on the switch receiving the last CCM.

This example displays a loopback test report initialized from a MEP 101 which belongs to MD level 1 and VLAN 1.

```

sysname# cfm-action counter level 1 vlan 1 mepid 101
someMACstatusDefect: N
someRMEPCCMdefect: N
errorCCMdefect: N
xconCCMdefect: N
CCMsequenceErrors: 0
CCIsentCCMs: 343
nextLBMtransID: 100
expectedLBRtransID: 100
inorderLBRs: 100
outorderLBRs: 0
unmatchedLBRs: 0
nextLTMtransID: 2
unexpectedLTRs: 0
transmittedLBRs: 10

```

The following table describes the labels in this screen.

Table 35 show cfm-action counter

LABEL	DESCRIPTION
someMACstatusDefect	This field displays Y if remote MEP(s) detected an OSI layer-2 problem. Otherwise, it displays N . A broken link connection or port is an example of an OSI layer-2 problem.
someRMEPCCMdefect	This field displays Y if remote MEP(s) didn't receive some CCMs (connectivity check messages). Otherwise, it displays N .
errorCCMdefect	This field displays Y if remote MEP(s) received erroneous CCMs. Otherwise, it displays N .
xconCCMdefect	This field displays Y if remote MEP(s) received CCMs which belong to other MA (maintenance association). Otherwise, it displays N .
CCMsequenceErrors	This field displays the number of out-of-sequence CCMs the MEP has received.
CCIsentCCMs	This field displays the number of CCMs the MEP has transmitted.
nextLBMtransID	This field displays the transaction ID with which the MEP should transmit in the next loopback message (LBM).
expectedLBRtransID	This field displays the transaction ID with which the MEP expects to receive in the next loopback response (LBR) message sent from a remote MEP.
inorderLBRs	This field displays the number of in-order LBR messages the MEP has received since it started up.
outorderLBRs	This field displays the number of out-of-order LBR messages the MEP has received since it started up. The higher number of this field might due to a fault connectivity between the MEP and a remote MEP.
unmatchedLBRs	This field displays the number of LBR messages with unexpected content information the MEP has received since it started up.
nextLTMtransID	This field displays the transaction ID with which the MEP will transmit in the next LTM (link trace message).
unexpectedLTRs	This field displays the number of unexpected LTR (link trace response) messages the MEP has received since it started up.
transmittedLBRs	This field displays the total number of LBR messages the MEP has transmitted.

CHAPTER 11

Classifier Commands

Use these commands to identify traffic flows based on various criteria. After you identify a traffic flow, you can specify the treatment it gets in the network using policy commands (see [Chapter 55 on page 193](#)).

11.1 Command Summary

The following section lists the commands for this feature.

Table 36 classifier Command Summary

COMMAND	DESCRIPTION	M	P
<code>show classifier [name]</code>	Displays all classifier-related information. Optionally, displays the specified classifier.	E	13
<code>classifier <name> <[packet-format <802.3untag 802.3tag EtherIIuntag EtherIItag>] [priority <0-7>] [vlan <vlan-id>] [ethernet-type <ether-num ip ipv6 ipx arp rarp apple-talk decnet sna netbios dlc>] [source-mac <src-mac-addr>] [source-port <port-num>] [destination-mac <dest-mac-addr>] [dscp <0-63>] [ip-protocol <protocol-num tcp udp icmp egp ospf rsvp igmp igp pim ipsec>] [establish-only]] [source-ip <src-ip-addr> [mask-bits <mask-bits>]] [ipv6-source-ip <src-ipv6-addr> [mask-bits <mask-bits>]] [source-socket <socket-num>] [destination-ip <dest-ip-addr> [mask-bits <mask-bits>]] [ipv6-destination-ip <dest-ipv6-addr> [mask-bits <mask-bits>]] [destination-socket <socket-num>] [inactive]></code>	<p>Configures a classifier. A classifier groups traffic into data flows according to the following criteria:</p> <p><i>name</i>: 1~32 English keyboard characters</p> <p><i>packet-format</i>: Ethernet frame type and VLAN tagging.</p> <p><i>priority</i>: IEEE 802.1p priority.</p> <p><i>vlan</i>: VLAN ID.</p> <p><i>ethernet-type</i>: Protocol number of the frame or pre-defined option.</p> <p><i><ether-num></i>: 32-bit Ethernet protocol number in hexadecimal format (FFFF).</p> <p><i>source-mac</i>: Source MAC address.</p> <p><i>source-port</i>: Source port number.</p> <p><i>destination-mac</i>: Destination MAC address.</p> <p><i>dscp</i>: DSCP value.</p> <p><i>ip-protocol</i>: Specific IP protocol number or pre-defined option.</p> <p><i>protocol-num</i>: 8-bit IP protocol number in decimal format (0~255).</p> <p><i>source-ip</i>: Range of source IPv4 addresses, specified by IPv4 address and the number of subnet mask bits.</p> <p><i>source-socket</i>: Source socket number.</p> <p><i>destination-ip</i>: Range of destination IPv4 addresses, specified by IPv4 address and the number of subnet mask bits.</p> <p><i>destination-socket</i>: Destination socket number.</p> <p><i>inactive</i>: Deactivates the classifier.</p> <p><i>ipv6-source-ip</i>: Range of source IPv6 addresses, specified by IPv6 address and the number of subnet mask bits.</p> <p><i>ipv6-destination-ip</i>: Range of destination IPv6 addresses, specified by IPv6 address and the number of subnet mask bits.</p> <p><i>destination-socket</i>: Destination socket number.</p> <p>The options vary depending on your model.</p>	C	13
<code>no classifier <name></code>	<p>Disables the classifier. Each classifier has one rule.</p> <p>If you disable a classifier you cannot use policy rule related information.</p>	C	13

Table 36 classifier Command Summary (continued)

COMMAND	DESCRIPTION	M	P
<code>no classifier <name> inactive</code>	Enables a classifier.	C	13
<code>classifier help</code>	Provides more information about the specified command.	C	13

11.2 Command Examples

See [Chapter 55 on page 193](#).

CHAPTER 12

Cluster Commands

Use these commands to configure cluster management settings. Cluster management allows you to manage switches through one switch, called the cluster manager. The switches must be directly connected and be in the same VLAN group so as to be able to communicate with one another.

12.1 Command Summary

The following section lists the commands for this feature.

Table 37 cluster Command Summary

COMMAND	DESCRIPTION	M	P
<code>show cluster</code>	Displays all classifier related information.	E	13
<code>show cluster candidates</code>	Displays cluster candidate information.	E	13
<code>show cluster member</code>	Displays the MAC address of the cluster member(s).	E	13
<code>show cluster member config</code>	Displays the configuration of the cluster member(s).	E	13
<code>show cluster member mac <mac-address></code>	Displays the status of the cluster member(s).	E	13
<code>no classifier <name></code>	Disables the classifier. Each classifier has one rule. If you disable a classifier you cannot use policy rule related information.	C	13
<code>cluster <vlan-id></code>	Sets the cluster management VLAN ID.	C	13
<code>cluster member <mac-address> password <password></code>	Sets the cluster member switch's hardware MAC address and password.	C	13
<code>cluster name <cluster-name></code>	Configures a name to identify the cluster manager.	C	13
<code>cluster rcommand <mac-address></code>	Logs into a cluster member switch.	C	13
<code>no cluster</code>	Disables cluster management on the Switch.	C	13
<code>no cluster member <mac-address></code>	Removes the cluster member.	C	13

12.2 Command Examples

This example creates the cluster CManage in VLAN 1. Then, it looks at the current list of candidates for membership in this cluster and adds two switches to cluster.

```

sysname# configure
sysname(config)# cluster 1
sysname(config)# cluster name CManage
sysname(config)# exit
sysname# show cluster candidates
Clustering Candidates:
  Index Candidates (MAC/HostName/Model)
    0 00:13:49:00:00:01/VES-1616FB-35/VES-1616FB-35
    1 00:13:49:00:00:02/VES-1616FB-35/VES-1616FB-35
    2 00:19:cb:00:00:02/VES-1616FB-35/VES-1616FB-35
sysname# configure
sysname(config)# cluster member 00:13:49:00:00:01 password 1234
sysname(config)# cluster member 00:13:49:00:00:02 password 1234
sysname(config)# exit
sysname# show cluster member
Clustering member status:
  Index MACAddr           Name                               Status
    1 00:13:49:00:00:01 VES-1616FB-35                     Online
    2 00:13:49:00:00:02 VES-1616FB-35                     Online

```

The following table describes the labels in this screen.

Table 38 show cluster member

LABEL	DESCRIPTION
Index	This field displays an entry number for each member.
MACAddr	This field displays the member's MAC address.
Name	This field displays the member's system name.
Status	<p>This field displays the current status of the member in the cluster.</p> <p>Online: The member is accessible.</p> <p>Error: The member is connected but not accessible. For example, the member's password has changed, or the member was set as the manager and so left the member list. This status also appears while the Switch finishes adding a new member to the cluster.</p> <p>Offline: The member is disconnected. It takes approximately 1.5 minutes after the link goes down for this status to appear.</p>

This example logs in to the CLI of member 00:13:49:00:00:01, looks at the current firmware version on the member switch, logs out of the member's CLI, and returns to the CLI of the manager.

```

sysname# configure
sysname(config)# cluster rcommand 00:13:49:00:00:01
Connected to 127.0.0.2
Escape character is '^]'.

User name: admin

Password: ****
Copyright (c) 1994 - 2008 Zyxel Communications Corp.

sysname# show system

System Name           : VES-1616FB-35
System Contact        :
System Location       :
Ethernet Address      : 00:19:cb:d7:e8:7f
ZyNOS F/W Version     : V360AYW0B3 | 09/17/2008
RomRasSize           : 3683034
System up Time        : 26:55:20 (93e369 ticks)
Bootbase Version      : V1.06 | 07/25/2008
VES-1616FB-35# exit
Telnet session with remote host terminated.

Closed
sysname(config)#

```

This example looks at the current status of the Switch's cluster.

```

sysname# show cluster
Cluster Status: Manager
VID: 1
Manager: 00:13:49:ae:fb:7a

```

The following table describes the labels in this screen.

Table 39 show cluster

LABEL	DESCRIPTION
Cluster Status	This field displays the role of this Switch within the cluster. Manager: This Switch is the device through which you manage the cluster member switches. Member: This Switch is managed by the specified manager. None: This Switch is not in a cluster.
VID	This field displays the VLAN ID used by the cluster.
Manager	This field displays the cluster manager's MAC address.

CHAPTER 13

Date and Time Commands

Use these commands to configure the date and time on the Switch.

13.1 Command Summary

The following table describes user-input values available in multiple commands for this feature.

Table 40 time User-input Values

COMMAND	DESCRIPTION
<i>week</i>	Possible values (daylight-saving-time commands only): <i>first, second, third, fourth, last.</i>
<i>day</i>	Possible values (daylight-saving-time commands only): <i>Sunday, Monday, Tuesday, ...</i>
<i>month</i>	Possible values (daylight-saving-time commands only): <i>January, February, March, ...</i>
<i>o'clock</i>	Possible values (daylight-saving-time commands only): <i>0-23</i>

The following section lists the commands for this feature.

Table 41 time Command Summary

COMMAND	DESCRIPTION	M	P
<code>show time</code>	Displays current system time and date.	E	13
<code>time <hour:min:sec></code>	Sets the current time on the Switch. <i>hour: 0~23, min: 0~59, sec: 0~59</i> An example, 10:27:30, means the time is at 10 o'clock 27 minutes and 30 seconds. Note: If you configure Daylight Saving Time after you configure the time, the Switch will apply Daylight Saving Time.	C	13
<code>time date <month/day/year></code>	Sets the current date on the Switch. <i>month: 1~12, day: 1~31, year: 1970~2037</i> An example, 3/20/2008, means the date is in March 20th, 2008.	C	13
<code>time timezone <-1200 ... 1200></code>	Selects the time difference between UTC (formerly known as GMT) and your time zone.	C	13
<code>time daylight-saving-time</code>	Enables daylight saving time. The current time is updated if daylight saving time has started.	C	13

Table 41 time Command Summary (continued)

COMMAND	DESCRIPTION	M	P
<code>time daylight-saving-time start-date <week> <day> <month> <o'clock></code>	Sets the day and time when Daylight Saving Time starts. In most parts of the United States, Daylight Saving Time starts on the second Sunday of March at 2 A.M. local time. In the European Union, Daylight Saving Time starts on the last Sunday of March at 1 A.M. GMT or UTC, so the <i>o'clock</i> field depends on your time zone.	C	13
<code>time daylight-saving-time end-date <week> <day> <month> <o'clock></code>	Sets the day and time when Daylight Saving Time ends. In most parts of the United States, Daylight Saving Time ends on the first Sunday of November at 2 A.M. local time. In the European Union, Daylight Saving Time ends on the last Sunday of October at 1 A.M. GMT or UTC, so the <i>o'clock</i> field depends on your time zone.	C	13
<code>no time daylight-saving-time</code>	Disables daylight saving on the Switch.	C	13
<code>time daylight-saving-time help</code>	Provides more information about the specified command.	C	13
<code>show time daylight-saving-time</code>	Shows the schedule for daylight saving.	E	3
<code>time help</code>	Provides more information about the specified command.	C	13

Table 42 timesync Command Summary

COMMAND	DESCRIPTION	M	P
<code>show timesync</code>	Displays time server information.	E	13
<code>timesync server <ip-address></code>	Sets the IP address of your time server. The Switch synchronizes with the time server in the following situations: <ul style="list-style-type: none"> • When the Switch starts up. • Every 24 hours after the Switch starts up. • When the time server IP address or protocol is updated. 	C	13
<code>timesync <daytime time ntp></code>	Sets the time server protocol. You have to configure a time server before you can specify the protocol.	C	13
<code>no timesync</code>	Disables timeserver settings.	C	13

13.2 Command Examples

This example sets the current date, current time, time zone, and daylight savings time.

```

sysname# configure
sysname(config)# time date 06/04/2007
sysname(config)# time timezone -600
sysname(config)# time daylight-saving-time
sysname(config)# time daylight-saving-time start-date second Sunday
--> March 2
sysname(config)# time daylight-saving-time end-date first Sunday
--> November 2
sysname(config)# time 13:24:00
sysname(config)# exit
sysname# show time
Current Time 13:24:03 (UTC-05:00 DST)
Current Date 2007-06-04

```

This example looks at the current time server settings.

```

sysname# show timesync

Time Configuration
-----
Time Zone          :UTC 0
Time Sync Mode     :USE_DAYTIME
Time Server IP Address:172.1.1.2

```

The following table describes the labels in this screen.

Table 43 show timesync

LABEL	DESCRIPTION
Time Zone	This field displays the time zone.
Time Sync Mode	This field displays the time server protocol the Switch uses. It displays <code>NO_TIMESERVICE</code> if the time server is disabled.
Time Server IP Address	This field displays the IP address of the time server.

CHAPTER 14

DHCP Commands

Use these commands to configure the DHCP features on the Switch.

14.1 Command Summary

The following section lists the commands for this feature.

Table 44 dhcp Command Summary

COMMAND	DESCRIPTION	M	P
show dhcp	Displays DHCP settings on the Switch.	E	13
dhcp mode <0 1>	Specifies the DHCP role of the Switch. 0: The Switch is a DHCP server. 1: The Switch is a DHCP relay.	C	13
dhcp-relay <relay agent>	Specifies the DHCP role of the Switch. relay: Sets the Switch to be a DHCP relay. agent: Sets the Switch to be a DHCP server.	C	13

This section lists the commands for the DHCP relay feature. Note that some commands have a hyphen (dhcp-relay) but some do not (dhcp relay). Make sure which should use on your Switch uses before using the command. You can use a question mark (?) to check the available commands in a mode on your Switch.

Table 45 dhcp relay Command Summary

COMMAND	DESCRIPTION	M	P
dhcp-relay helper-address <remote-dhcp-server1> [<i>remote-dhcp-server2</i>] [<i>remote-dhcp-server3</i>]	Sets the IP address of up to 3 DHCP servers.	C	13
dhcp relay helper-address <remote-dhcp-server1> [<i>remote-dhcp-server2</i>] [<i>remote-dhcp-server3</i>]	Sets the IP address of up to 3 DHCP servers.	C	13

Table 45 dhcp relay Command Summary (continued)

COMMAND	DESCRIPTION	M	P
<pre>dhcp relay <vlan-id> helper- address <remote-dhcp-server1> [<remote-dhcp-server2>] [<remote-dhcp-server3>] [<circuit-id>] [<circuitID-type> <user- define hostname system>] [circu itID-information <information>] [circuitID-user- define <format>] [remote- id] [remoteID-type <portname system all user- define>] [remoteID-information <information>] [remoteID-user- define <format>] [swap-circuit- remote-id] [spv-option <private sp pv sv spv>] [delimi ter <none # ; . comma / space>] [remoteID-delimiter <character>] [linechar- enable] [linechar-mode <rate full>]</pre>	<p>Enables DHCP relay and configures the settings on the specified VLAN.</p> <p>Note: You must enter an existing VLAN ID with corresponding IP interface. You can create VLAN IDs using the <code>vlan <vlan-id></code> command, and create an IP interface in the VLAN setting by using <code>ip address <ip-addr> <ip mask></code>.</p> <p><i>remote-dhcp-server</i>: Type the IP address of a remote DHCP server.</p> <p><i>circuit-id</i>: Have the Switch add the configured circuit ID string to client DHCP requests.</p> <p><i>circuitID-type</i>: Set the kind of circuit ID string the Switch adds to client DHCP requests: a string according to a user-defined format, the host name, or the system name.</p> <p><i>circuitID-information <information></i>: Type a string (for example, system name) that the Switch adds to client DHCP requests.</p> <p><i>circuitID-user-define <format></i>: Type a string of up to 63 ASCII characters that the Switch adds to client DHCP requests. See <i>user-define <format></i> below for the required format.</p> <p><i>remote-id</i>: Has the Switch add the configured remote ID information into the client DHCP requests it receives.</p> <p><i>remoteID-type</i>: Select what data the Switch adds as remote ID to the client DHCP requests it receives; <i>portname</i> = name of port; <i>system</i> = user configured info string; <i>all</i> = append remote ID by user identifier + port name + port TEL; <i>user-define</i> = a user-defined string.</p> <p><i>remoteID-information <information></i>: Type up to 32 characters for the remote ID information.</p> <p><i>remoteID-user-define <format></i>: Type a string of up to 63 ASCII characters for the remote ID information. See <i>user-define <format></i> below for the required format.</p> <p><i>user-define <format></i>: The circuit-ID or remote-ID user defined format can use the following components:</p> <ul style="list-style-type: none"> % marks the start of the predefined runtime variable. The rules are: %%: equals character % %0x00~FF: represents byte value %pname: the name configured for the port %pid: port index %ptel: the telephone number configured for the port %chid: the UNI VLAN ID %slotid: slot index of the logic port %svlan: the SVLAN ID the DHCP client runs on %hname: the host device name %cmac: the client's MAC address, represented as a Byte. For example: 00:00:00:01:11:11 %blank: blank character %phtype: Ethernet "eth" 	C	13

Table 45 dhcp relay Command Summary (continued)

COMMAND	DESCRIPTION	M	P
	<p>Continued:</p> <p><code>swap-circuit-remote-id</code>: Has the Switch add information (slot number, port number, and VLAN ID) and the circuit ID and remote ID sub-option but switch their positions in client DHCP requests that it relays to a DHCP server.</p> <p><code>spv-option</code>: Select the information the Switch generates and adds into the DHCP relay option 82 circuit ID sub-option for DHCP requests.</p> <ul style="list-style-type: none"> • <code>private</code>: has the Switch use the DHCP relay option 82 old format (slot-port-VLAN) in binary. • <code>sp</code>: slot-port in ASCII code. • <code>pv</code>: port-VLAN in ASCII code. • <code>sv</code>: slot-VLAN in ASCII code. • <code>spv</code>: slot-port-VLAN in ASCII code. <p>The Switch uses a zero for the slot value in the DHCP requests.</p> <p><code>delimiter</code>: Select a delimiter to separate the slot ID, port number, and/or VLAN ID from each other. You can use a pound key (#), semi-colon (;), period (.), comma (,), forward slash (/) or space. Use none to not use any delimiter.</p> <p><code>remoteID-delimiter <character></code>: Sets the delimiter for the remote ID to separate portname or telephone or user string.</p> <p><code>linechar-enable</code>: Includes additional option 82 information about the line in the DHCP packets for the specified VLAN.</p> <p><code>linechar-mode <rate full>]</code>: Sets how much additional option 82 line information to include in the DHCP packets.</p> <ul style="list-style-type: none"> • <code>rate</code>: Include only the actual bit rate information of the DHCP packet. • <code>full</code>: Include the full line characteristics information of the DHCP packet. This includes the circuit ID, remote ID, vendor specifications, actual data upstream/downstream, and access loop encapsulation. 		

Table 45 dhcp relay Command Summary (continued)

COMMAND	DESCRIPTION	M	P
<pre>dhcp relay <vlan-id> helper- address <remote-dhcp-server1> [remote-dhcp-server2] [remote- dhcp-server3] [circuit-id] [circuitID-type <hostname system>] [circuitID- information <information>] [remote- id] [remoteID-type <portname system all>] [remoteID- information <information>] [swap-circuit- remote-id] [spv-option <private sp pv sv spv>] [delimi- ter <none # ; . comma / space>] [remoteID-delimiter <character>]</pre>	<p>Enables DHCP relay and configures the settings on the specified VLAN.</p> <p>Note: You must enter an existing VLAN ID with corresponding IP interface. You can create VLAN IDs using the <code>vlan <vlan-id></code> command, and create an IP interface in the VLAN setting by using <code>ip address <ip-addr> <ip mask ></code>.</p> <p><i>remote-dhcp-server</i>: Type the IP address of a remote DHCP server.</p> <p><i>circuit-id</i>: Have the Switch add the configured circuit ID string to client DHCP requests.</p> <p><i>circuitID-type</i>: Set the Switch to add the circuit ID string to client DHCP requests as a host name or as a system name.</p> <p><i>circuitID-information</i>: Type a string (for example, system name) that the Switch adds to client DHCP requests.</p> <p><i>remote-id</i>: Has the Switch add the configured remote ID information into the client DHCP requests it receives.</p> <p><i>remoteID-type</i>: Select what data the Switch adds as remote ID to the client DHCP requests it receives; <i>portname</i> = name of port; <i>system</i>=user configured info string; <i>all</i>=append remote ID by user identifier + port name + port TEL.</p> <p><i>remoteID-information</i>: Type up to 32 characters for the remote ID information.</p> <p><i>swap-circuit-remote-id</i>: Has the Switch add information (slot number, port number and VLAN ID) and the Circuit ID and Remote ID sub-option but switch their positions in client DHCP requests that it relays to a DHCP server.</p> <p><i>spv-option</i>: Select the information the Switch generates and adds into the DHCP relay option 82 Circuit ID sub-option for DHCP requests.</p> <ul style="list-style-type: none"> • <i>private</i>: has the Switch use the DHCP relay option 82 old format (slot-port-VLAN) in binary. • <i>sp</i>: slot-port in ASCII code. • <i>pv</i>: port-VLAN in ASCII code. • <i>sv</i>: slot-VLAN in ASCII code. • <i>spv</i>: slot-port-VLAN in ASCII code. <p>The Switch uses a zero for the slot value in the DHCP requests.</p> <p><i>remote-id</i>: Type a string that the Switch adds into the client DHCP requests. Spaces are allowed.</p> <p><i>delimiter</i>: Select a delimiter to separate the slot ID, port number and/or VLAN ID from each other. You can use a pound key (#), semi-colon (;), period (.), comma (,), forward slash (/) or space. Use <i>none</i> to not use any delimiter.</p>	C	13

Table 45 dhcp relay Command Summary (continued)

COMMAND	DESCRIPTION	M	P
	Continued: remoteID-delimiter: Select a delimiter to separate the slot ID, port number and/or VLAN ID from each other. You can use a pound key (#), semi-colon (;), period (.), comma (,), forward slash (/) or space. Use none to not use any delimiter.		
no dhcp relay <vlan-id> swap-circuit-remote-id	Disables the per-VLAN feature of swapping the circuit ID and Remote ID positions.	C	13
no dhcp-relay helper-address	Resets all DHCP server IP addresses that you configured to 0.0.0.0.	C	13
no dhcp-relay	Disables the DHCP relay function.	C	13
no dhcp relay	Disables the DHCP relay function.	C	13
dhcp relay information <string>	Sets the Switch to add the specified string to client DHCP requests that it relays to a DHCP server. <string>: 1-30 English keyboard characters.	C	13
dhcp-relay information	Sets the Switch to add the system name to client DHCP requests that it relays to a DHCP server.	C	13
no dhcp-relay information	Clears the specified string or the system name that the Switch adds to client DHCP requests.	C	13
no dhcp relay information	Clears the specified string that the Switch adds to client DHCP requests.	C	13
dhcp-relay option	Sets the Switch to add Option 82 information (slot number, port number, and VLAN ID) to DHCP requests that it relays to a DHCP server.	C	13
dhcp relay option	Sets the Switch to add Option 82 information (slot number, port number, and VLAN ID) to DHCP requests that it relays to a DHCP server.	C	13
no dhcp-relay option	Sets to not append the system name to the option 82 information field in client DHCP requests.	C	13
no dhcp relay option	Sets to not append the system name to the option 82 information field in client DHCP requests.	C	13
dhcp-relay <relay agent>	Enables the Switch as a DHCP relay agent on the specified VLAN.	C	13
dhcp-relay remote-id	Sets the Switch to add additional information (configured using the dhcp-relay remoteID-information command) to client DHCP requests that it relays to a DHCP server.	C	13
no dhcp-relay remote-id	Clears the specified remote ID information that the Switch adds to client DHCP requests.	C	13
dhcp-relay remoteID-information <remoteid-information>	Sets the Switch to add the specified string as remote ID information to client DHCP requests that it relays to a DHCP server.	C	13
dhcp relay <vlan-id>	Enables the Switch as a DHCP relay agent on the specified VLAN.	C	13
no dhcp relay <vlan-id>	Deletes DHCP relay on the specified VLAN.	C	13
show dhcp dhcp-relay	Displays the DHCP relay settings that are applied to the whole system.	E	13
show dhcp relay <vlan-id>	Displays the DHCP relay settings on the specified VLAN.	E	13
show dhcp relay all	Displays DHCP relay settings on all VLANs.	E	13

Table 45 dhcp relay Command Summary (continued)

COMMAND	DESCRIPTION	M	P
no dhcp relay <vlan-id> information	Clears the specified string that the Switch adds to client DHCP requests on the specified VLAN.	C	13
no dhcp relay <vlan-id> option	Sets to not append the system name to the option 82 information field in client DHCP requests on the specified VLAN.	C	13
no dhcp relay <vlan-id> remote-id	Clears the specified remote ID information that the Switch adds to client DHCP requests on the specified VLAN.	C	13
dhcp relay-broadcast	Enables the DHCP relay broadcast function.	C	13
no dhcp relay-broadcast	Disables the DHCP relay broadcast function.	C	13
interface port-channel <port-list> telephone <port-telephone-number>	Sets a telephone number for the specified port. The DHCP remote ID type "Append Remote ID by user identifier + port name + port TEL" and DHCP snooping remote ID type "all" use this telephone number.	C	13

Table 46 dhcp server Command Summary

COMMAND	DESCRIPTION	M	P
dhcp server starting-address <ip> <mask> size-of-client-ip-pool <1~253> [default-gateway <ip-address>] [primary-dns <ip-address>] [secondary-dns <ip-address>]	Configures the Switch as a DHCP server and configures the range of IP addresses the Switch can assign to DHCP clients. Optionally, specifies the default gateway and DNS server(s) provided to DHCP clients as well.	C	13
no dhcp server	Disables the DHCP server in the Switch.	C	13
no dhcp server default-gateway	Clears the default gateway setting.	C	13
no dhcp server primary-dns	Clears the primary DNS server setting.	C	13
no dhcp server secondary-dns	Clears the secondary DNS server setting.	C	13

Use the `dhcp smart-relay` commands to configure DHCP relay for all broadcast domains.

Table 47 dhcp smart-relay Command Summary

COMMAND	DESCRIPTION	M	P
show dhcp smart-relay	Displays global DHCP relay settings.	E	13
no dhcp smart-relay	Disables global DHCP relay on the Switch.	C	13
dhcp smart-relay	Enables global DHCP relay on the Switch. The Switch forwards all DHCP requests to the same DHCP server. Note: You can enable one DHCP relay method (DHCP relay on a VLAN or global DHCP relay) at the same time.	C	13
dhcp smart-relay circuitID-type <user-define hostname system>	Sets whether the Switch uses a string according to a user-defined format, the host name, or the system name for the circuit ID if you choose not to append your own circuit ID.	C	13

Table 47 dhcp smart-relay Command Summary (continued)

COMMAND	DESCRIPTION	M	P
dhcp smart-relay circuitID-user-define <format>	Sets a string of up to 63 ASCII characters to set the format for the circuit ID the Switch adds to client DHCP requests. <format>: The circuit-ID user defined format can use the following components: % marks the start of the predefined runtime variable. The rules are: %=: equals character % %0x00~FF: represents byte value %pname: the name configured for the port %pid: port index %ptel: the telephone number configured for the port %chid: the UNI VLAN ID %slotid: slot index of the logic port %svlan: the SVLAN ID the DHCP client runs on %hname: the host device name %cmac: the client's MAC address, represented as a Byte. For example: 00:00:00:01:11:11 %blank: blank character %phtype: Ethernet "eth"	C	13
dhcp smart-relay helper-address <remote-dhcp-server1> [remote-dhcp-server2] [remote-dhcp-server3]	Sets the global DHCP relay settings. remote-dhcp-server: Type the IP address of a remote DHCP server.	C	13
dhcp smart-relay information	Sets the Switch to add the system name to client DHCP requests that it relays to a DHCP server.	C	13
no dhcp smart-relay information	Stops the Switch from adding the system name to client DHCP requests.	C	13
dhcp smart-relay linechar	Enables DHCP relay agent and includes additional option 82 information in the DHCP packets.	C	13
dhcp smart-relay linechar mode <rate full>	Sets how many line characteristics to include. rate: Includes only the upstream and downstream actual data rates. full: Also includes the upstream and downstream minimum data rates, upstream and downstream attainable data rates, upstream and downstream maximum data rates, upstream and downstream minimum data rates for the low power state, upstream and downstream maximum interleaving delay, upstream and downstream actual interleaving delay, and access loop encapsulation.	C	13
no dhcp smart-relay linechar	Disables the line characteristic feature, in which DHCP relay agent is enabled and additional option 82 information is included in the DHCP packets.	C	13
dhcp smart-relay option	Sets the Switch to add Option 82 information (slot number, port number, and VLAN ID) to DHCP requests that it relays to a DHCP server.	C	13
no dhcp smart-relay option	Has the Switch not add Option 82 information to DHCP requests.	C	13
dhcp smart-relay option-information <string>	Sets the Switch to add the specified string to client DHCP requests that it relays to a DHCP server.	C	13
dhcp smart-relay remote-id	Sets the Switch to add information configured using the dhcp smart-relay remoteID-information command to client DHCP requests that it relays to a DHCP server.	C	13

Table 47 dhcp smart-relay Command Summary (continued)

COMMAND	DESCRIPTION	M	P
dhcp smart-relay remoteID-type <portname system all user-define>	Select what data the Switch adds as remote ID to the client DHCP requests it receives; portname = name of port; system = user configured info string; all = append remote ID by user identifier + port name + port TEL; or user-define = a user-defined string.	C	13
dhcp smart-relay remoteID-user-define <format>	Sets a string of up to 63 ASCII characters to set the format for the remote ID information. <format>: The remote-ID user defined format can use the following components: % marks the start of the predefined runtime variable. The rules are: %%: equals character % %0x00~FF: represents byte value %pname: the name configured for the port %pid: port index %ptel: the telephone number configured for the port %chid: the UNI VLAN ID %slotid: slot index of the logic port %svlan: the SVLAN ID the DHCP client runs on %hname: the host device name %cmac: the client's MAC address, represented as a Byte. For example: 00:00:00:01:11:11 %blank: blank character %phtype: Ethernet "eth"	C	13
no dhcp smart-relay remote-id	Stops the Switch from adding information configured using the dhcp smart-relay remoteID-information command to client DHCP requests.	C	13
dhcp smart-relay delim <none # ; . comma / space>	Set the delimiter in the circuit ID to separate the slot or port or VLAN from the appended information.	C	13
dhcp smart-relay remoteID-delim <character>	Set the delimiter in the remote ID to separate the portname or telephone or user string.	C	13
dhcp smart-relay remoteID-information <remoteid-information>	Sets remote ID information which you want the Switch to add to client DHCP requests that it relays to a DHCP server. <i>remoteid-information</i> : Type up to 15 characters for the remote ID information.	C	13
dhcp smart-relay remoteID-type <portname system all>	Select what data the Switch adds as remote ID to the client DHCP requests it receives; portname = name of port; system = user configured info string; all = append remote ID by user identifier + port name + port TEL.	C	13
dhcp smart-relay spv-option <private sp pv sv spv>	Select the circuit ID format. <ul style="list-style-type: none"> • private: slot-port-VLAN in binary format. • sp: slot-port in string format. • pv: port-VLAN in string format. • sv: slot-VLAN in string format. • spv: slot-port-VLAN in string format. 	C	13
dhcp smart-relay swap-circuit-remote-id	Has the Switch add information (slot number, port number and VLAN ID) and the Circuit ID and Remote ID sub-option but switch their positions in client DHCP requests that it relays to a DHCP server.	C	13
no dhcp smart-relay swap-circuit-remote-id	Disables the feature of swapping the circuit ID and Remote ID positions.	C	13

14.2 Command Examples

This example configures the Switch to relay DHCP requests to 192.168.10.1 and to add the system name `sysname` to the requests.

```
sysname# configure
sysname(config)# dhcp agent
sysname(config)# dhcp-relay helper-address 192.168.10.1
sysname(config)# dhcp-relay information sysname
sysname(config)# exit
```

or

```
sysname# configure
sysname(config)# dhcp mode 1
sysname(config)# dhcp relay helper-address 192.168.10.1
sysname(config)# dhcp relay information sysname
sysname(config)# exit
```

This example configures the Switch as a DHCP server that can assign IP addresses 192.168.1.32~192.168.1.63.

```
sysname# configure
sysname(config)# dhcp server starting-address 192.168.1.32 255.255.255.0
--> size-of-client-ip-pool 32
sysname(config)# exit
```

This example configures the following global DHCP relay settings on the Switch.

- Enables globally DHCP relay.
- Forward all DHCP requests to 192.168.10.1.
- Add the system name `sysname` to the DHCP requests.
- Add remote ID information `ABC` to the DHCP requests.
- Displays all global DHCP relay settings.

```
sysname# configure
sysname(config)# dhcp smart-relay
sysname(config)# dhcp smart-relay helper-address 192.168.10.1
sysname(config)# dhcp smart-relay information sysname
sysname(config)# dhcp smart-relay remoteID-information ABC
sysname(config)# dhcp smart-relay remote-id
sysname(config)# exit
sysname# show dhcp smart-relay
DHCP Relay Agent Configuration
Active:          Yes
Remote DHCP Server 1:192.168.10.1
Remote DHCP Server 2:  0.0.0.0
Remote DHCP Server 3:  0.0.0.0
Option82: Disable    Option82Inf:  Enable:
Remote ID:  Enable    RemoteIDInf:          ABC
```

CHAPTER 15

DHCP Snooping and DHCP VLAN Commands

Use the `dhcp snooping` commands to configure the DHCP snooping on the Switch and the `dhcp vlan` commands to specify a DHCP VLAN on your network. DHCP snooping filters unauthorized DHCP packets on the network and builds the binding table dynamically.

15.1 Command Summary

The following section lists the commands for this feature.

Table 48 dhcp snooping Command Summary

COMMAND	DESCRIPTION	M	P
<code>show dhcp snooping</code>	Displays DHCP snooping configuration on the Switch.	E	3
<code>show dhcp snooping binding</code>	Displays the DHCP binding table.	E	3
<code>show dhcp snooping circuit-id-user-define</code>	Displays all DHCP snooping circuit ID user-define configuration.	E	13
<code>show dhcp snooping circuit-id-user-define vlan <vlan-list></code>	Displays the DHCP snooping circuit ID user-define configuration for the specified VLAN.	E	13
<code>show dhcp snooping database</code>	Displays DHCP snooping database update statistics and settings.	E	3
<code>show dhcp snooping database detail</code>	Displays DHCP snooping database update statistics in full detail form.	E	3
<code>show dhcp snooping remote-id-info <cr></code>	Displays per-VLAN DHCP snooping remote ID configuration.	E	3
<code>show dhcp snooping remote-id-info vlan <vlan-list></code>	Displays DHCP snooping remote ID configuration for the specified VLAN.	E	13
<code>show dhcp snooping remote-id-user-define</code>	Displays all DHCP snooping remote ID user-define configuration.	E	13
<code>show dhcp snooping remote-id-user-define vlan <vlan-list></code>	Displays the DHCP snooping remote ID user-define configuration for the specified VLAN.	E	13
<code>dhcp snooping</code>	Enables DHCP Snooping on the Switch.	C	13
<code>no dhcp snooping</code>	Disables DHCP Snooping on the Switch.	C	13
<code>dhcp snooping vlan <vlan-list> circuit-id-type <none hostname user-define></code>	Sets whether the Switch uses nothing, a host name, or a user-defined string for the circuit ID if you choose not to append your own circuit ID.	C	13
<code>no dhcp snooping vlan <vlan-list> circuit-id-type</code>	Removes the setting for what the Switch uses for the circuit ID if you choose not to append your own circuit ID.	C	13

Table 48 dhcp snooping Command Summary (continued)

COMMAND	DESCRIPTION	M	P
dhcp snooping vlan <vlan-list> circuit-id-user-define <format>	Sets a string of up to 63 ASCII characters to set the format for the circuit ID the Switch adds to client DHCP requests. <format>: The circuit-ID user defined format can use the following components: % marks the start of the predefined runtime variable. The rules are: %%: equals character % %0x00~FF: represents byte value %pname: the name configured for the port %pid: port index %ptel: the telephone number configured for the port %chid: the UNI VLAN ID %slotid: slot index of the logic port %svlan: the SVLAN ID the DHCP client runs on %hname: the host device name %cmac: the client's MAC address, represented as a Byte. For example: 00:00:00:01:11:11 %blank: blank character %phtype: Ethernet "eth"	C	13
no dhcp snooping vlan <vlan-list> circuit-id-user-define	Removes the user defined string that sets the format for the circuit ID the Switch adds to client DHCP requests.	C	13
dhcp snooping database <tftp://host/filename>	Specifies the location of the DHCP snooping database. The location should be expressed like this: tftp://{domain name or IP address}/directory, if applicable/file name; for example, tftp://192.168.10.1/database.txt.	C	13
no dhcp snooping database	Removes the location of the DHCP snooping database.	C	13
dhcp snooping database timeout <seconds>	Specifies how long (10-65535 seconds) the Switch tries to complete a specific update in the DHCP snooping database before it gives up.	C	13
no dhcp snooping database timeout	Resets how long (10-65535 seconds) the Switch tries to complete a specific update in the DHCP snooping database before it gives up to the default value (300).	C	13
dhcp snooping database write-delay <seconds>	Specifies how long (10-65535 seconds) the Switch waits to update the DHCP snooping database the first time the current bindings change after an update.	C	13
no dhcp snooping database write-delay <seconds>	Resets how long (10-65535 seconds) the Switch waits to update the DHCP snooping database the first time the current bindings change after an update to the default value (300).	C	13
dhcp snooping vlan <vlan-list>	Specifies the VLAN IDs for VLANs you want to enable DHCP snooping on.	C	13
no dhcp snooping vlan <vlan-list>	Specifies the VLAN IDs for VLANs you want to disable DHCP snooping on.	C	13
dhcp snooping vlan <vlan-list> delimiter <none # ; . comma / space>	Set the per-VLAN delimiter for the circuit ID to separate the slot or port or VLAN from the appended information.	C	13
no dhcp snooping vlan <vlan-list> delimiter	Resets the circuit ID delimiter of DHCP snooping on the specified VLAN.	C	13
dhcp snooping vlan <vlan-list> linechar	Enables DHCP relay agent and includes additional option 82 information in the DHCP packets.	C	13
no dhcp snooping vlan <vlan-list> linechar	Disables line characteristic.	C	13

Table 48 dhcp snooping Command Summary (continued)

COMMAND	DESCRIPTION	M	P
dhcp snooping vlan <vlan-list> linechar-mode <rate full>	Sets how many line characteristics to include. rate: include only the upstream and downstream actual data rates. full: also include the upstream and downstream minimum data rates, upstream and downstream attainable data rates, upstream and downstream maximum data rates, upstream and downstream minimum data rates for the low power state, upstream and downstream maximum interleaving delay, upstream and downstream actual interleaving delay, and access loop encapsulation.	C	13
dhcp snooping vlan <vlan-list> remote-id-delim <none # ; . comma / space>	Set the per-VLAN delimiter in the remote ID to separate the portname or telephone or user string.	C	13
no dhcp snooping vlan <vlan-list> remote-id-delim	Resets the remote ID delimiter of DHCP snooping on the specified VLAN.	C	13
dhcp snooping vlan <vlan-list> remote-id-info <remoteid-information>	Set the per-VLAN remote ID information the Switch adds to client DHCP requests it relays to a DHCP server.	C	13
no dhcp snooping vlan <vlan-list> remote-id-info	Resets the remote ID user string of DHCP snooping on the specified VLAN.	C	13
dhcp snooping vlan <vlan-list> remote-id-type <portname system all>	Select what data the Switch adds as remote ID to the client DHCP requests it receives on the VLAN; portname = name of port; system=user configured info string; all=append remote ID by user identifier + port name + port TEL.	C	13
dhcp snooping vlan <vlan-list> remote-id-type <portname system all user-define>	Select what data the Switch adds as remote ID to the client DHCP requests it receives on the VLAN; portname = name of port; system = user configured info string; all = append remote ID by user identifier + port name + port TEL; user-define = a user-defined string.	C	13
dhcp snooping vlan <vlan-list> remote-id-user-define <format>	Sets a string of up to 63 ASCII characters to set the format for the remote ID information. <format>: The remote-ID user defined format can use the following components: % marks the start of the predefined runtime variable. The rules are: %%: equals character % %0x00~FF: represents byte value %pname: the name configured for the port %pid: port index %ptel: the telephone number configured for the port %chid: the UNI VLAN ID %slotid: slot index of the logic port %svlan: the SVLAN ID the DHCP client runs on %hname: the host device name %cmac: the client's MAC address, represented as a Byte. For example: 00:00:00:01:11:11 %blank: blank character %phtype: Ethernet "eth"	C	13
no dhcp snooping vlan <vlan-list> remote-id-user-define	Removes the user defined string that sets the format for the remote ID information for the specified VLANs.	C	13
no dhcp snooping vlan <vlan-list> remote-id-type	Resets the remote ID format of DHCP snooping on the specified VLAN.	C	13

Table 48 dhcp snooping Command Summary (continued)

COMMAND	DESCRIPTION	M	P
dhcp snooping vlan <vlan-list> spv-option <private sp pv sv spv>	Select the circuit ID format the Switch uses for this VLAN. <ul style="list-style-type: none"> private: slot-port-VLAN in binary format. sp: slot-port in string format. pv: port-VLAN in string format. sv: slot-VLAN in string format. spv: slot-port-VLAN in string format. 	C	13
no dhcp snooping vlan <vlan-list> spv-option	Resets the circuit ID slot-port-vlan format of DHCP snooping on the specified VLAN.	C	13
dhcp snooping vlan <vlan-list> information	Sets the Switch to add the system name to DHCP requests that it broadcasts to the DHCP VLAN, if specified, or VLAN.	C	13
no dhcp snooping vlan <vlan-list> information	Sets the Switch to not add the system name to DHCP requests that it broadcasts to the DHCP VLAN, if specified, or VLAN.	C	13
dhcp snooping vlan <vlan-list> option	Sets the Switch to add the slot number, port number and VLAN ID to DHCP requests that it broadcasts to the DHCP VLAN, if specified, or VLAN.	C	13
no dhcp snooping vlan <vlan-list> option	Sets the Switch to not add the slot number, port number and VLAN ID to DHCP requests that it broadcasts to the DHCP VLAN, if specified, or VLAN.	C	13
clear dhcp snooping database statistics	Delete all statistics records of DHCP requests going through the Switch.	E	13
renew dhcp snooping database	Loads dynamic bindings from the default DHCP snooping database.	E	13
renew dhcp snooping database <tftp://host/filename>	Loads dynamic bindings from the specified DHCP snooping database.	E	13
interface port-channel <port-list>	Enables a port or a list of ports for configuration.	C	13
force-agent-information <force transparent>	Per-port option that indicates if incoming DHCP packets already have option 82, the Switch will replace it (force) or keep it unchanged (transparent).	C	13
dhcp snooping trust	Sets this port as a trusted DHCP snooping port. Trusted ports are connected to DHCP servers or other switches, and the Switch discards DHCP packets from trusted ports only if the rate at which DHCP packets arrive is too high.	C	13
dhcp snooping limit rate <pps>	Sets the maximum rate in packets per second (pps) that DHCP packets are allowed to arrive at a trusted DHCP snooping port.	C	13
no dhcp snooping trust	Disables this port from being a trusted port for DHCP snooping.	C	13
no dhcp snooping limit rate	Resets the DHCP snooping rate to the default (0).	C	13

The following table describes the dhcp-vlan commands.

Table 49 dhcp-vlan Command Summary

COMMAND	DESCRIPTION	M	P
dhcp dhcp-vlan <vlan-id>	Specifies the VLAN ID of the DHCP VLAN.	C	13
no dhcp dhcp-vlan	Disables DHCP VLAN on the Switch.	C	13

15.2 Command Examples

This example:

- Enables DHCP snooping on the Switch.
- Sets up an external DHCP snooping database on a network server with IP address 172.16.3.17.
- Enables DHCP snooping on VLANs 1,2,3,200 and 300.
- Sets the Switch to add the slot number, port number and VLAN ID to DHCP requests that it broadcasts to the DHCP VLAN.
- Sets ports 1 - 5 as DHCP snooping trusted ports.
- Sets the maximum number of DHCP packets that can be received on ports 1 - 5 to 100 packets per second.
- Configures a DHCP VLAN with a VLAN ID 300.
- Displays DHCP snooping configuration details.

```

sysname(config)# dhcp snooping
sysname(config)# dhcp snooping database tftp://172.16.3.17/snoopdata.txt
sysname(config)# dhcp snooping vlan 1,2,3,200,300
sysname(config)# dhcp snooping vlan 1,2,3,200,300 option
sysname(config)# interface port-channel 1-5
sysname(config-interface)# dhcp snooping trust
sysname(config-interface)# dhcp snooping limit rate 100
sysname(config-interface)# exit
sysname(config)# dhcp dhcp-vlan 300
sysname(config)# exit
sysname# show dhcp snooping
  Switch DHCP snooping is enabled
  DHCP Snooping is configured on the following VLANs:
    1-3,200,300
  Option 82 is configured on the following VLANs:
    1-3,200,300
  Appending system name is configured on the following VLANs:

  DHCP VLAN is disabled
Interface  Trusted  Rate Limit (pps)
-----  -
         1      yes      1000
         2      yes      1000
         3      yes      1000
         4      yes      1000
         5      yes      1000
         6      no      unlimited
         7      no      unlimited
         8      no      unlimited
         9      no      unlimited
        10      no      unlimited
        11      no      unlimited
        12      no      unlimited
        13      no      unlimited
        14      no      unlimited
        15      no      unlimited
        16      no      unlimited
        17      no      unlimited
        18      no      unlimited
sysname#

```

CHAPTER 16

DHCPv6 Relay Commands

Use the `dhcpv6 relay` commands to add information to client DHCPv6 requests from different VLANs before forwarding the requests to the DHCPv6 server. This information helps in authenticating the source of the requests. You can also specify additional information for the system to add to the DHCPv6 requests that it relays to the DHCPv6 server.

16.1 Command Summary

This section lists the commands for this feature.

Table 50 dhcpv6 relay Command Summary

COMMAND	DESCRIPTION	M	P
<code>dhcpv6 relay <1-4094></code>	Enters the "config-dhcpv6-relay" config mode for the specified VLAN. Creates a DHCPv6 relay for the specified VLAN if one does not already exist.	C	13
<code>no dhcpv6 relay <1-4094></code>	Removes the DHCPv6 LDRA setting for the specified VLAN-ID on the Switch.	C	13
<code>dhcpv6 relay <1-4094> exit</code>	Leave the "config-dhcpv6-relay" config mode.	C	13
<code>dhcpv6 relay <1-4094> ldra</code>	Enables Lightweight DHCPv6 Relay Agent (LDRA) for this VLAN. LDRA adds information (such as this system's host name and subscriber port from which the request was received) to client DHCPv6 requests before forwarding them to the DHCPv6 server.	C	13
<code>dhcpv6 relay <1-4094> ldra client-facing <port-list></code>	Set up a LDRA Client-facing interface. It forwards traffic towards the DHCPv6 client. It can be a DSL port or an Ethernet port connected to a subtended (daisy-chained) LDRA-enabled Switch or DSLAM. Use the network-facing role for the uplink port on the subtended Switch or DSLAM	C	13
<code>dhcpv6 relay <1-4094> ldra forbidden <port-list></code>	Sets up an LDRA forbidden interface. The Switch will not add any information to the VLAN's DHCPv6 requests it receives on the specified ports. The Switch drops all DHCPv6 requests for a VLAN if this is set and DHCPv6 LDRA is enabled on the VLAN.	C	13
<code>dhcpv6 relay <1-4094> ldra network-facing <port-list></code>	Set up an LDRA network-facing interface. Use the network-facing role for the Ethernet port you use as the uplink port to connect towards the DHCPv6 server.	C	13
<code>dhcpv6 relay <1-4094> ldra untrust client-facing <port-list></code>	Set up an LDRA untrusted client-facing interface. Use this for a client-facing interface you deem untrusted to have the Switch discard RELAY-FORW (12) type messages.	C	13
<code>dhcpv6 relay <1-4094> no ldra</code>	Disables LDRA for this VLAN.	C	13
<code>dhcpv6 relay <1-4094> no ldra untrust client-facing</code>	Clears all un-trusted client-facing settings for this VLAN.	C	13

Table 50 dhcpv6 relay Command Summary (continued)

COMMAND	DESCRIPTION	M	P
dhcpv6 relay <1-4094> no ldra untrust client-facing <port-list>	Removes an LDRA untrusted client-facing interface.	C	13
dhcpv6 relay <1-4094> no option	Deletes all LDRA related options for this VLAN.	C	13
dhcpv6 relay <1-4094> no option interface-id	Disables the LDRA interface ID (option 18) option for this VLAN.	C	13
dhcpv6 relay <1-4094> no option remote-id	Disables the LDRA remote ID (option 37) option for this VLAN.	C	13
dhcpv6 relay <1-4094> option interface-id	Enable interface-ID option in this VLAN.	C	13
dhcpv6 relay <1-4094> option interface-id <format>	<p>Set a <format> string for relay agent option 18 (interface-ID) for appending to outgoing DHCPv6 packets forwarded from the specified VLAN.</p> <p>Use the '%' character as the beginning of predefined runtime variables as described below:</p> <p>%%: equals character %</p> <p>%0x00~%0xFF: represents byte value</p> <p>%pname: the name configured for the port</p> <p>%pid: port index</p> <p>%svlan: SVLAN ID that the DHCP server runs on.</p> <p>%hname: host device name</p> <p>%cmac: MAC address of client represents as Byte string. Ex: 00:00:00:01:11:11</p> <p>%blank: blank character</p> <p>%ptel: telephone number of client-facing interface</p>	C	13
dhcpv6 relay <1-4094> option remote-id	Enable remote-ID option in this VLAN	C	13

Table 50 dhcpv6 relay Command Summary (continued)

COMMAND	DESCRIPTION	M	P
dhcpv6 relay <1-4094> option remote-id <format>	<p>Set a <format> string for relay agent option 37 (remote ID) for appending to outgoing DHCPv6 packets forwarded from the specified VLAN.</p> <p>Use the '%' character as the beginning of predefined runtime variables as described below:</p> <p>%%: equals character %</p> <p>%0x00~%0xFF: represents byte value</p> <p>%pname: the name configured for the port</p> <p>%pid: port index</p> <p>%svlan: SVLAN ID that the DHCP server runs on.</p> <p>%hname: host device name</p> <p>%mac: MAC address of client represents as Byte string. Ex: 00:00:00:01:11:11</p> <p>%hname: name of host device</p> <p>%blank: blank character</p> <p>%ptel: telephone number of client-facing interface"</p>	C	13
show dhcpv6 relay counter <cr>	Displays all DHCPv6 relay packet counters on the Switch.	E	3
show dhcpv6 relay counter <port-list>	Displays DHCPv6 relay packet counters for the specified ports.	E	3
clear dhcpv6 relay counter <cr>	Resets all DHCPv6 relay counters on the Switch.	E	13
clear dhcpv6 relay counter <port-list>	Resets the DHCPv6 relay packet counters for the specified ports.	E	13
show dhcpv6 relay ldra <cr>	Displays all LDRA settings on the Switch.	E	3
show dhcpv6 relay ldra <vlan-id>	Displays all of the LDRA settings for the specified VLAN-ID on the Switch.	E	3

CHAPTER 17

DHCPv6 Snooping Commands

Use the `dhcpv6 snooping` commands to configure an acceptable rate for receiving DHCPv6 packets on each port. A port dropped additional DHCP packets after the receiving rate reaches the configured number.

17.1 Command Summary

This section lists the commands for this feature.

Table 51 dhcpv6 snooping Command Summary

COMMAND	DESCRIPTION	M	P
<code>dhcpv6 snooping</code>	Enables DHCPv6 snooping on the Switch.	C	13
<code>no dhcpv6 snooping</code>	Disables DHCPv6 snooping on the Switch.	C	13
<code>interface port-channel <port-list> dhcpv6 snooping limit rate <pps></code>	Sets a DHCPv6 snooping rate limit in packets per second (pps) for the specified ports on the Switch.	C	13
<code>interface port-channel <port-list> no dhcpv6 snooping limit rate</code>	Removes the DHCPv6 snooping rate limit setting for the specified ports on the Switch.	C	13
<code>show dhcpv6 snooping <cr></code>	Displays the DHCPv6 snooping settings for all ports on the Switch.	E	3
<code>show dhcpv6 snooping binding</code>	Displays the DHCPv6 binding table.	E	3

CHAPTER 18

DiffServ Commands

Use these commands to configure Differentiated Services (DiffServ) on the Switch.

18.1 Command Summary

The following section lists the commands for this feature.

Table 52 diffserv Command Summary

COMMAND	DESCRIPTION	M	P
<code>show diffserv</code>	Displays general DiffServ settings.	E	13
<code>diffserv</code>	Enables DiffServ on the Switch.	C	13
<code>no diffserv</code>	Disables DiffServ on the Switch.	C	13
<code>diffserv dscp <0~63> priority <0~7></code>	Sets the DSCP-to-IEEE 802.1q mappings.	C	13
<code>interface port-channel <port-list></code>	Enters config-interface mode for the specified port(s).	C	13
<code>diffserv</code>	Enables DiffServ on the port(s).	C	13
<code>no diffserv</code>	Disables DiffServ on the port(s).	C	13

CHAPTER 19

DoS Prevention Commands

Use these commands to configure DoS Prevention on the Switch.

19.1 Command Summary

The following section lists the commands for this feature.

Table 53 DoS-prevention Command Summary

COMMAND	DESCRIPTION	M	P
DoS-prevention-setting active	Enables DoS prevention on the Switch.	C	13
DoS-prevention-setting ICMP-fragment	Drops any fragmented ICMP packets.	C	13
DoS-prevention-setting IP-address-checking	Drops any IP packets whose source IP address and destination IP address are the same.	C	13
DoS-prevention-setting Mac-address-checking	Drops any packets whose source MAC address and destination MAC address are the same.	C	13
DoS-prevention-setting TCP-control/SN	Drops the TCP packets whose control (flag) bit and sequence number are 0.	C	13
DoS-prevention-setting TCP-FIN/URG/PSH/SN	Drops the TCP packets whose FIN (Finish), URG (URGent) and PSH (Push) flags bits and sequence number are 0.	C	13
DoS-prevention-setting TCP-fragment	Drops the TCP fragments with a Data Offset of 1.	C	13
DoS-prevention-setting TCP-port	Drops any TCP packets whose source port and destination port are the same.	C	13
DoS-prevention-setting TCP-SYN	Drops any TCP SYN packets whose source port numbers are zero.	C	13
DoS-prevention-setting TCP-SYN/FIN	Drops the TCP packets that contain both SYN (SYNchronize) and FIN (Finish) flags.	C	13
DoS-prevention-setting UDP-port	Drops any UDP packets whose source port and destination port are the same.	C	13
no DoS-prevention-setting	Returns all DoS prevention settings to the defaults.	C	13
no DoS-prevention-setting active	Disables DoS prevention on the Switch.	C	13
no DoS-prevention-setting ICMP-fragment	Sets the Switch to not drop the fragmented ICMP packets.	C	13
no DoS-prevention-setting IP-address-checking	Sets the Switch to not drop the IP packets whose source IP address and destination IP address are the same.	C	13
no DoS-prevention-setting Mac-address-checking	Sets the Switch to not drop the packets whose source MAC address and destination MAC address are the same.	C	13

Table 53 DoS-prevention Command Summary (continued)

COMMAND	DESCRIPTION	M	P
no DoS-prevention-setting TCP-control/SN	Sets the Switch to not drop the TCP packets whose control (flag) bit and sequence number are 0.	C	13
no DoS-prevention-setting TCP-FIN/URG/PSH/SN	Sets the Switch to not drop the TCP packets whose FIN (Finish), URG (URGent) and PSH (Push) flags bits and sequence number are 0.	C	13
no DoS-prevention-setting TCP-fragment	Sets the Switch to not drop the TCP fragments with a Data Offset of 1.	C	13
no DoS-prevention-setting TCP-port	Sets the Switch to not drop the TCP packets whose source port and destination port are the same.	C	13
no DoS-prevention-setting TCP-SYN	Sets the Switch to not drop the TCP SYN packets whose source port numbers are zero.	C	13
no DoS-prevention-setting TCP-SYN/FIN	Sets the Switch to not drop the TCP packets that contain the SYN (SYNchronize) and FIN (Finish) flags.	C	13
no DoS-prevention-setting UDP-port	Sets the Switch to not drop the UDP packets whose source port and destination port are the same.	C	13
show DoS-prevention-setting	Displays DoS prevention settings.	E	13

CHAPTER 20

Error Disable and Recovery Commands

Use these commands to configure the CPU protection and error disable recovery features on the Switch.

20.1 CPU Protection Overview

Switches exchange protocol control packets in a network to get the latest networking information. If a switch receives large numbers of control packets, such as ARP or BPDU packets, which are to be processed by the CPU, the CPU may become overloaded and be unable to handle regular tasks properly.

The CPU protection feature allows you to limit the rate of ARP and BPDU packets to be delivered to the CPU on a port. This enhances the CPU efficiency and protects against potential DoS attacks or errors from other networks. You then can choose to drop control packets that exceed the specified rate limit or disable a port on which the packets are received.

20.2 Error-Disable Recovery Overview

Some features, such as loop guard or CPU protection, allow the Switch to shut down a port or discard specific packets on a port when an error is detected on the port. For example, if the Switch detects that packets sent out the port(s) loop back to the Switch, the Switch can shut down the port(s) automatically. After that, you need to enable the port(s) or allow the packets on a port manually via the web configurator or the commands. With error-disable recovery, you can set the disabled port(s) to become active or start receiving the packets again after the time interval you specify.

20.3 User Input Values

This section lists the common term definition appears in this chapter.

Table 54 errdisable recovery command user input values

USER INPUT	DESCRIPTION
<i>port-list</i>	The port number or a range of port numbers that you want to configure.

20.4 Command Summary

The following section lists the commands for this feature.

Table 55 `cpu-protection` Command Summary

COMMAND	DESCRIPTION	M	P
<code>interface port-channel <port-list></code>	Enters config-interface mode for the specified port(s).	C	13
<code>cpu-protection cause <ARP BPDU> rate-limit <0-256></code>	Sets the maximum number of ARP or BPDU packets that the specified ports are allowed to receive or transmit per second. 0 means no rate limit.	C	13
<code>cpu-protection cause help</code>	Displays all the possible causes.	C	13
<code>clear cpu-protection interface port-channel <port-list> cause <ARP BPDU></code>	Resets the "Total Drop" counters for the specified ports to zero (0). You can see the counter using the <code>show cpu-protection</code> command. The "Total Drops" means the number of ARP, BPDU or IGMP packets that have been dropped due to the Error Disable feature in rate-limitation mode.	E	0
<code>reset cpu-protection interface port-channel <port-list> cause <ARP BPDU></code>	Sets the specified ports to handle all ARP or BPDU packets instead of ignoring them, if the port(s) are in <code>inactive-reason</code> mode (set by using the <code>errdisable detect cause</code> command).	E	0
<code>reset cpu-protection interface port-channel <port-list> cause help</code>	Displays all the possible causes.	E	0
<code>show cpu-protection interface port-channel <port-list></code>	Shows the CPU Protection settings and the number of ARP or BPDU packets that has been dropped by the Error Disable feature for the specified port(s).	E	0

Table 56 `errdisable` recovery Command Summary

COMMAND	DESCRIPTION	M	P
<code>errdisable detect cause <ARP BPDU></code>	Sets the Switch to detect if the number of ARP or BPDU packets exceeds the rate limit on port(s) (set by using the <code>cpu-protection cause</code> command).	C	13
<code>errdisable detect cause <ARP BPDU> mode <inactive-reason rate-limitation></code>	Sets the action that the Switch takes when the number of ARP, BPDU or IGMP packets exceeds the rate limit on port(s). <code>inactive-reason</code> : The Switch bypasses the processing of the specified control packets (such as ARP or IGMP packets), or drops all the specified control packets (such as BPDU) on the port. <code>rate-limitation</code> : The Switch drops the additional control packets the port(s) have to handle in every one second.	C	13
<code>errdisable detect cause help</code>	Displays all the possible causes.	C	13
<code>errdisable recovery</code>	Turns on the disabled port recovery function on the Switch.	C	13
<code>errdisable recovery cause <ARP BPDU></code>	Enables the recovery timer for the specified feature that causes the Switch to shut down port(s).	C	13
<code>errdisable recovery cause <ARP BPDU> interval <30-2592000></code>	Sets how many seconds the Switch waits before enabling the ports that were shut down.	C	13
<code>errdisable recovery cause help</code>	Displays all the possible causes.	C	13

Table 56 errdisable recovery Command Summary (continued)

COMMAND	DESCRIPTION	M	P
no errdisable detect cause <ARP BPDU >	Disables the rate limit for ARP or BPDU packets on ports, set by using the <code>cpu-protection cause</code> command.	C	13
no errdisable recovery	Turns off the disabled port recovery function on the Switch.	C	13
no errdisable recovery cause <ARP BPDU>	Disables the recovery timer for the specified feature that causes the Switch to shut down a port.	C	13
show errdisable	Displays which ports are detected (by Error Disable), the mode of the ports, and the type of packets (ARP or BPDU) detected.	E	0
show errdisable detect	Displays the Error Disable settings including the available protocol of packets (ARP or BPDU), the current status (enabled or disabled), and the corresponding action the Switch takes when a detected port is handling packets over the limit.	E	0
show errdisable recovery	Displays the disabled port recovery settings and after how many seconds which port(s) will be activated.	E	0

20.5 Command Examples

This example shows you how to configure the following:

- limit the number of ARP packets that port 7 can handle to 100 packets per second.
- set to drop the ARP packets that exceed the rate limit.
- display the CPU protection settings that you just set for port 7.
- display the Error Disable status and action mode for ARP packet handling.

```

systemname# config
systemname(config)# interface port-channel 7
systemname(config-interface)# cpu-protection cause ARP rate-limit 100
systemname(config-interface)# exit
systemname(config)# errdisable detect cause ARP
systemname(config)# errdisable detect cause ARP mode rate-limit
systemname(config)# exit
systemname# show cpu-protection interface port-channel 7
  Port : 7

Reason          Rate          Mode          Total Drops
-----
  ARP            100          rate-limitation          0
  BPDU           0            inactive-reason          N/A

systemname# show errdisable detect

Reason          Status          Mode
-----
  ARP            enable          rate-limitation
  BPDU           disable          inactive-reason
systemname#

```

This example enables the disabled port recovery function and the recovery timer for the ARP packet handling feature on the Switch. If a port limits the ARP packets rate due to the specified reason, the Switch activates the port 300 seconds (the default value) later. This example also shows the number of the disabled port(s) and the time left before the port(s) becomes active.

```
sysname# configure
sysname(config)# errdisable recovery
sysname(config)# errdisable recovery cause ARP
sysname(config)# exit
sysname# show errdisable recovery
  Errdisable Recovery Status:Enable

  Errdisable Recovery Status:Enable

Reason                Timer Status          Time
-----                -
                ARP                Enable                300
                BPDU               Disable               300

Interfaces that will be enabled at the next timeout:

Interface             Reason                Time left (sec)      Mode
-----
sysname#
```

CHAPTER 21

Ethernet OAM Commands

Use these commands to use the link monitoring protocol IEEE 802.3ah Link Layer Ethernet OAM (Operations, Administration and Maintenance).

21.1 IEEE 802.3ah Link Layer Ethernet OAM Implementation

Link layer Ethernet OAM (Operations, Administration and Maintenance) as described in IEEE 802.3ah is a link monitoring protocol. It utilizes OAM Protocol Data Units or OAM PDU's to transmit link status information between directly connected Ethernet devices. Both devices must support IEEE 802.3ah. Because link layer Ethernet OAM operates at layer two of the OSI (Open Systems Interconnection Basic Reference) model, neither IP or SNMP are necessary to monitor or troubleshoot network connection problems.

The Switch supports the following IEEE 802.3ah features:

- **Discovery** - this identifies the devices on each end of the Ethernet link and their OAM configuration.
- **Remote Loopback** - this can initiate a loopback test between Ethernet devices.

21.2 Command Summary

The following section lists the commands for this feature.

Table 57 ethernet oam Command Summary

COMMAND	DESCRIPTION	M	P
<code>show ethernet oam discovery</code> <code><port-list></code>	Displays OAM configuration details and operational status of the specified ports.	E	3
<code>show ethernet oam statistics</code> <code><port-list></code>	Displays the number of OAM packets transferred for the specified ports.	E	3
<code>show ethernet oam summary</code>	Displays the configuration details of each OAM activated port.	E	3
<code>no ethernet oam</code>	Disables Ethernet OAM on the Switch.	C	13

21.3 Command Examples

This example performs Ethernet OAM discovery from port 7.

```

sysname# show ethernet oam discovery 7
Port 7
Local client
-----
OAM configurations:
  Mode           : Active
  Unidirectional : Not supported
  Remote loopback : Not supported
  Link events    : Not supported
  Variable retrieval: Not supported
  Max. OAMPDU size : 1518

Operational status:
  Link status      : Down
  Info. revision   : 3
  Parser state     : Forward
  Discovery state  : Active Send Local

```

The following table describes the labels in this screen.

Table 58 show ethernet oam discovery

LABEL	DESCRIPTION
OAM configurations	The remote device uses this information to determine what functions are supported.
Mode	<p>This field displays the OAM mode. The device in active mode (typically the service provider's device) controls the device in passive mode (typically the subscriber's device).</p> <p>Active: The Switch initiates OAM discovery; sends information PDUs; and may send event notification PDUs, variable request/response PDUs, or loopback control PDUs.</p> <p>Passive: The Switch waits for the remote device to initiate OAM discovery; sends information PDUs; may send event notification PDUs; and may respond to variable request PDUs or loopback control PDUs.</p> <p>The Switch might not support some types of PDUs, as indicated in the fields below.</p>
Unidirectional	This field indicates whether or not the Switch can send information PDUs to transmit fault information when the receive path is non-operational.
Remote loopback	This field indicates whether or not the Switch can use loopback control PDUs to put the remote device into loopback mode.
Link events	This field indicates whether or not the Switch can interpret link events, such as link fault and dying gasp. Link events are sent in event notification PDUs and indicate when the number of errors in a given interval (time, number of frames, number of symbols, or number of errored frame seconds) exceeds a specified threshold. Organizations may create organization-specific link event TLVs as well.
Variable retrieval	This field indicates whether or not the Switch can respond to requests for more information, such as requests for Ethernet counters and statistics, about link events.
Max. OAMPDU size	This field displays the maximum size of PDU for receipt and delivery.
Operational status	
Link status	This field indicates that the link is up or down.

Table 58 show ethernet oam discovery (continued)

LABEL	DESCRIPTION
Info. revision	This field displays the current version of local state and configuration. This two-octet value starts at zero and increments every time the local state or configuration changes.
Parser state	<p>This field indicates the current state of the parser.</p> <p>Forward: The packet is forwarding packets normally.</p> <p>Loopback: The Switch is in loopback mode.</p> <p>Discard: The Switch is discarding non-OAMPDUs because it is trying to or has put the remote device into loopback mode.</p>
Discovery state	<p>This field indicates the state in the OAM discovery process. OAM-enabled devices use this process to detect each other and to exchange information about their OAM configuration and capabilities. OAM discovery is a handshake protocol.</p> <p>Fault: One of the devices is transmitting OAM PDUs with link fault information, or the interface is not operational.</p> <p>Active Send Local: The Switch is in active mode and is trying to see if the remote device supports OAM.</p> <p>Passive Wait: The Switch is in passive mode and is waiting for the remote device to begin OAM discovery.</p> <p>Send Local Remote: This state occurs in the following circumstances.</p> <ul style="list-style-type: none"> • The Switch has discovered the remote device but has not accepted or rejected the connection yet. • The Switch has discovered the remote device and rejected the connection. <p>Send Local Remote OK: The Switch has discovered the remote device and has accepted the connection. In addition, the remote device has not accepted or rejected the connection yet, or the remote device has rejected the connected.</p> <p>Send Any: The Switch and the remote device have accepted the connection. This is the operating state for OAM links that are fully operational.</p>

This example looks at the number of OAM packets transferred on port 1.

```

sysname# show ethernet oam statistics 1
Port 1
Statistics:
-----
Information OAMPDU Tx      : 0
Information OAMPDU Rx      : 0
Event Notification OAMPDU Tx : 0
Event Notification OAMPDU Rx : 0
Loopback Control OAMPDU Tx  : 0
Loopback Control OAMPDU Rx  : 0
Variable Request OAMPDU Tx  : 0
Variable Request OAMPDU Rx  : 0
Variable Response OAMPDU Tx : 0
Variable Response OAMPDU Rx : 0
Unsupported OAMPDU Tx       : 0
Unsupported OAMPDU Rx       : 0

```


The following table describes the labels in this screen.

Table 59 show ethernet oam statistics

LABEL	DESCRIPTION
Information OAMPDU Tx	This field displays the number of OAM PDUs sent on the port.
Information OAMPDU Rx	This field displays the number of OAM PDUs received on the port.
Event Notification OAMPDU Tx	This field displays the number of unique or duplicate OAM event notification PDUs sent on the port.
Event Notification OAMPDU Rx	This field displays the number of unique or duplicate OAM event notification PDUs received on the port.
Loopback Control OAMPDU Tx	This field displays the number of loopback control OAM PDUs sent on the port.
Loopback Control OAMPDU Rx	This field displays the number of loopback control OAM PDUs received on the port.
Variable Request OAMPDU Tx	This field displays the number of OAM PDUs sent to request MIB objects on the remote device.
Variable Request OAMPDU Rx	This field displays the number of OAM PDUs received requesting MIB objects on the Switch.
Variable Response OAMPDU Tx	This field displays the number of OAM PDUs sent by the Switch in response to requests.
Variable Response OAMPDU Rx	This field displays the number of OAM PDUs sent by the remote device in response to requests.
Unsupported OAMPDU Tx	This field displays the number of unsupported OAM PDUs sent on the port.
Unsupported OAMPDU Rx	This field displays the number of unsupported OAM PDUs received on the port.

This example looks at the configuration of ports on which OAM is enabled.

```

sysname# show ethernet oam summary

OAM Config: U : Unidirection, R : Remote Loopback
             L : Link Events , V : Variable Retrieval

      Local          Remote
-----
Port  Mode    MAC Addr          OUI    Mode    Config
-----
1    Active

```

The following table describes the labels in this screen.

Table 60 show ethernet oam summary

LABEL	DESCRIPTION
Local	This section displays information about the ports on the Switch.
Port	This field displays the port number.
Mode	This field displays the operational state of the port.
Remote	This section displays information about the remote device.
MAC Addr	This field displays the MAC address of the remote device.
OUI	This field displays the OUI (first three bytes of the MAC address) of the remote device.

Table 60 show ethernet oam summary (continued)

LABEL	DESCRIPTION
Mode	This field displays the operational state of the remote device.
Config	This field displays the capabilities of the Switch and remote device. The capabilities are identified in the OAM Config section.

CHAPTER 22

External Alarm Commands

Use these commands to configure the external alarm features on the Switch.

22.1 Command Summary

The following section lists the commands for this feature.

Table 61 externalalarm Command Summary

COMMAND	DESCRIPTION	M	P
externalalarm <index> name <string>	Sets the name of the specified external alarm (1-4).	C	13
externalalarm <index> off	Turns off the specified external alarm (1-4).	C	13
externalalarm <index> on	Turns on the specified external alarm (1-4).	C	13
no externalalarm <index> name	Clears the name set for the specified external alarm (1-4).	C	13
no externalalarm <index> switch	Turns on the alarm for the specified external alarm (1-4).	C	13
externalalarm extalarm1 <alarmname_string>	Sets the name of the first external alarm. <i>alarmname_string</i> : Enters a name of up to 32 ASCII characters.	C	13
externalalarm extalarm2 <alarmname_string>	Sets the name of the second external alarm	C	13
externalalarm extalarm3 <alarmname_string>	Sets the name of the third external alarm	C	13
externalalarm extalarm4 <alarmname_string>	Sets the name of the fourth external alarm	C	13
no externalalarm extalarm1	Resets the name of the first external alarm to the default (External alarm 1).	C	13
no externalalarm extalarm2	Resets the name of the second external alarm to the default (External alarm 2).	C	13
no externalalarm extalarm3	Resets the name of the third external alarm to the default (External alarm 3).	C	13
no externalalarm extalarm4	Resets the name of the fourth external alarm to the default (External alarm 4).	C	13
show externalalarm	Displays external alarm settings.	E	13

22.2 Command Examples

This example configures and shows the name of the external alarm.

```
sysname# configure
sysname(config)# externalalarm extalarm1 dooropen
sysname(config)# exit
sysname# show externalalarm
extalarm1: dooropen
extalarm2: External alarm 2
extalarm3: External alarm 3
extalarm4: External alarm 4
```

CHAPTER 23

GARP Commands

Use these commands to configure GARP.

23.1 GARP Overview

Switches join VLANs by making a declaration. A declaration is made by issuing a Join message using GARP. Declarations are withdrawn by issuing a Leave message. A Leave All message terminates all registrations. GARP timers set declaration timeout values.

23.2 Command Summary

The following section lists the commands for this feature.

Table 62 garp Command Summary

COMMAND	DESCRIPTION	M	P
<code>show garp</code>	Displays GARP information.	E	13
<code>garp join <join-timer> leave <200~65535> leaveall <200~65535></code>	Configures GARP time settings (in milliseconds), including the join, leave and leave all timers for each port. Leave Time must be at least two times larger than Join Timer, and Leave All Timer must be larger than Leave Timer. <i>join-timer</i> : 100~65535 or 100~32767. This timer range may vary depending on the Switch model.	C	13

23.3 Command Examples

In this example, the administrator looks at the Switch's GARP timer settings and decides to change them. The administrator sets the Join Timer to 300 milliseconds, the Leave Timer to 800 milliseconds, and the Leave All Timer to 11000 milliseconds.

```
sysname# show garp

GARP Timer
-----
Join Timer      :200
Leave Timer      :600
Leave All Timer  :10000
sysname# configure
sysname(config)# garp join 300 leave 800 leaveall 11000
sysname(config)# exit
sysname# show garp

GARP Timer
-----
Join Timer      :300
Leave Timer      :800
Leave All Timer  :11000
```

CHAPTER 24

GVRP Commands

Use these commands to configure GVRP.

24.1 Command Summary

The following section lists the commands for this feature.

Table 63 gvrp Command Summary

COMMAND	DESCRIPTION	M	P
show vlan1q gvrp	Displays GVRP settings.	E	13
vlan1q gvrp	Enables GVRP.	C	13
no vlan1q gvrp	Disables GVRP on the Switch.	C	13
interface port-channel <port-list>	Enters config-interface mode for the specified port(s).	C	13
gvrp	Enables this function to permit VLAN groups beyond the local Switch.	C	13
no gvrp	Disable GVRP on the port(s).	C	13

24.2 Command Examples

This example shows the Switch's GVRP settings.

```
sysname# show vlan1q gvrp

GVRP Support
-----
gvrpEnable = YES
gvrpPortEnable:
```

This example turns off GVRP on ports 1~5.

```
sysname# configure
sysname(config)# interface port-channel 1-5
sysname(config-interface)# no gvrp
sysname(config-interface)# exit
sysname(config)# exit
```

CHAPTER 25

HTTPS Server Commands

Use these commands to configure the HTTPS server on the Switch.

25.1 Command Summary

The following section lists the commands for this feature.

Table 64 https Command Summary

COMMAND	DESCRIPTION	M	P
<code>show https</code>	Displays the HTTPS settings, statistics, and sessions.	E	13
<code>show https certificate</code>	Displays the HTTPS certificates.	E	13
<code>show https key <rsa dsa></code>	Displays the HTTPS key.	E	13
<code>show https key <rsa dsa dh></code>	Displays the HTTPS key.	E	13
<code>show https session</code>	Displays current settings for HTTPS sessions.	E	13
<code>show https timeout</code>	Displays current HTTPS cache timeout.	E	13
<code>https timeout <0~65535></code>	Sets the cache timeout value.	C	13
<code>no https timeout</code>	Resets the cache timeout to the default value.	C	13
<code>https cert-regeneration <rsa dsa></code>	Re-generates a certificate.	C	13

25.2 Command Examples

This example shows the current HTTPS settings, statistics, and sessions.

```

sysname# show https
Configuration
  Version                : SSLv3, TLSv1
  Maximum session number: 64 sessions
  Maximum cache number  : 128 caches
  Cache timeout         : 300 seconds
  Support ciphers       :
    DHE-RSA-AES256-SHA DHE-DSS-AES256-SHA AES256-SHA EDH-RSA-DES-CBC3-SHA
    EDH-DSS-DES-CBC3-SHA DES-CBC3-SHA DES-CBC3-MD5 DHE-RSA-AES128-SHA
    DHE-DSS-AES128-SHA AES128-SHA DHE-DSS-RC4-SHA IDEA-CBC-SHA RC4-SHA
    RC4-MD5 IDEA-CBC-MD5 RC2-CBC-MD5 RC4-MD5

Statistics:
  Total connects          : 7
  Current connects       : 2
  Connects that finished: 7
  Renegotiate requested : 0
  Session cache items    : 1
  Session cache hits     : 6
  Session cache misses   : 0
  Session cache timeouts: 0

Sessions:
  Remote IP      Port   Local IP      Port   SSL bytes  Sock bytes
  172.23.5.15   4011  127.0.0.1    1032   4303      2170
  172.23.5.15   4012  127.0.0.1    1033   3697      2161

```

The following table describes the labels in this screen.

Table 65 show https

LABEL	DESCRIPTION
Configuration	
Version	This field displays the current version of SSL (Secure Sockets Layer) and TLS (Transport Layer Security).
Maximum session number	This field displays the maximum number of HTTPS sessions the Switch supports.
Maximum cache number	This field displays the maximum number of entries in the cache table the Switch supports for HTTPS sessions.
Cache timeout	This field displays how long entries remain in the cache table before they expire.
Support ciphers	This field displays the SSL or TLS cipher suites the Switch supports for HTTPS sessions. The cipher suites are identified by their OpenSSL equivalent names. If the name does not include the authentication used, assume RSA authentication. See SSL v2.0, SSL v3.0, TLS v1.0, and RFC 3268 for more information.
Statistics	
Total connects	This field displays the total number of HTTPS connections since the Switch started up.
Current connects	This field displays the current number of HTTPS connections.
Connects that finished	This field displays the number of HTTPS connections that have finished.
Renegotiate requested	This field displays the number of times the Switch requested clients to renegotiate the SSL connection parameters.

Table 65 show https (continued)

LABEL	DESCRIPTION
Session cache items	This field displays the current number of items in cache.
Session cache hits	This field displays the number of times the Switch used cache to satisfy a request.
Session cache misses	This field displays the number of times the Switch could not use cache to satisfy a request.
Session cache timeouts	This field displays the number of items that have expired in the cache.
Sessions	
Remote IP	This field displays the client's IP address in this session.
Port	This field displays the client's port number in this session.
Local IP	This field displays the Switch's IP address in this session.
Port	This field displays the Switch's port number in this session.
SSL bytes	This field displays the number of bytes encrypted or decrypted by the Secure Socket Layer (SSL).
Sock bytes	This field displays the number of bytes encrypted or decrypted by the socket.

This example shows the current settings for HTTPS sessions.

```

sysname# show https session
SSL-Session:
  Protocol   : SSLv3
  Cipher     : RC4-MD5
  Session-ID:
68BFB25BF4FEE3F0F15AB7B038EAB6BACE4AB7A4A6A5280E55943B7191057C96
  Session-ID-ctx: 7374756E6E656C20534944
  Master-Key:
65C110D9BD9BB0EE36CE0C76408C121DAFD1E5E3209614EB0AC5509CDB60D0904937DA4B
A5BA058B57FD7169ACDD4ACF
  Key-Arg    : None
  Start Time: 2252
  Timeout    : 300 (sec)
  Verify return code: 0 (ok)

```

The following table describes the labels in this screen.

Table 66 show https session

LABEL	DESCRIPTION
Protocol	This field displays the SSL version used in the session.
Cipher	This field displays the encryption algorithms used in the session.
Session-ID	This field displays the session identifier.
Session-ID-ctx	This field displays the session ID context, which is used to label the data and cache in the sessions and to ensure sessions are only reused in the appropriate context.
Master-Key	This field displays the SSL session master key.
Key-Arg	This field displays the key argument that is used in SSLv2.
Start Time	This field displays the start time (in seconds, represented as an integer in standard UNIX format) of the session.
Timeout	This field displays the timeout for the session. If the session is idle longer than this, the Switch automatically disconnects.
Verify return code	This field displays the return code when an SSL client certificate is verified.

CHAPTER 26

IEEE 802.1x Authentication Commands

Use these commands to configure IEEE 802.1x authentication.

Note: Do not forget to configure the authentication server.

26.1 Command Summary

The following section lists the commands for this feature.

Table 67 port-access-authenticator Command Summary

COMMAND	DESCRIPTION	M	P
<code>show port-access-authenticator</code>	Displays all port authentication settings.	E	13
<code>show port-access-authenticator <port-list></code>	Displays port authentication settings on the specified port(s).	E	13
<code>port-access-authenticator</code>	Enables 802.1x authentication on the Switch.	C	13
<code>no port-access-authenticator</code>	Disables port authentication on the Switch.	C	13
<code>port-access-authenticator <port-list></code>	Enables 802.1x authentication on the specified port(s).	C	13
<code>no port-access-authenticator <port-list></code>	Disables authentication on the listed ports.	C	13
<code>port-access-authenticator <port-list> reauthenticate</code>	Sets a subscriber to periodically re-enter his or her username and password to stay connected to a specified port.	C	13
<code>no port-access-authenticator <port-list> reauthenticate</code>	Disables the re-authentication mechanism on the listed port(s).	C	13
<code>port-access-authenticator <port-list> reauth-period <1-65535></code>	Specifies how often (in seconds) a client has to re-enter the username and password to stay connected to the specified port(s).	C	13

26.2 Command Examples

This example configures the Switch in the following ways:

- 1 Specifies the RADIUS server at IP address 10.10.10.1 on port 1890 with the string secretKey as the password.

- 2 Enables port authentication on the Switch.
- 3 Enables port authentication on ports 4 to 8.
- 4 Activates reauthentication on the ports.
- 5 Specifies 1800 seconds as the interval for client reauthentication.

```
sysname(config)# radius-server host 10.10.10.1 auth-port 1890 key  
--> secretKey  
sysname(config)# port-access-authenticator  
sysname(config)# port-access-authenticator 4-8  
sysname(config)# port-access-authenticator 4-8 reauthenticate  
sysname(config)# port-access-authenticator 4-8 reauth-period 1800
```

This example configures the Switch in the following ways:

- 1 Disables authentication on the Switch.
- 2 Disables re-authentication on ports 1, 3, 4, and 5.
- 3 Disables authentication on ports 1, 6, and 7.

```
sysname(config)# no port-access-authenticator  
sysname(config)# no port-access-authenticator 1,3-5 reauthenticate  
sysname(config)# no port-access-authenticator 1,6-7
```


CHAPTER 27

IGMP Commands

Use these commands to configure IGMP related commands on the Switch. See following for IGMP related term definitions.

IGMP (Internet Group Management Protocol) - This is a protocol used to establish membership in a multicast group.

Figure 1 IGMP Example

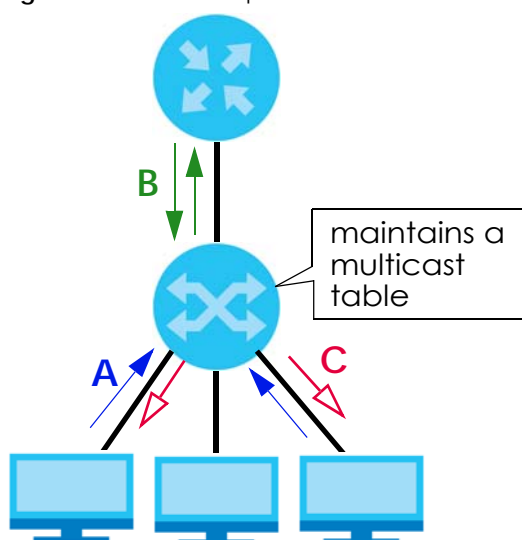

- IGMP join/leave reports (**A**) - An IGMP join report is sent from a host when it wants to be a member of a multicast group. When the host doesn't want to be a member of a multicast group any more, it sends an IGMP leave report.
- IGMP query and report (**B**) - A router sends an IGMP query to its downlink switch(es) to ask a multicast group member list (also called multicast table). Then the switch(es) that received the IGMP query send the list to the router.
- IGMP snooping - This feature groups multicast traffic (**C**) and only forwards a group's traffic to ports that are members of that group. Without IGMP snooping, a switch does not understand multicast and will broadcast multicast traffic to all the ports in a network. IGMP snooping generates no additional network traffic, allowing you to significantly reduce multicast traffic passing through your switch.
- IGMP group limit - This feature limits the number of multicast groups a port is allowed to join.
- IGMP immediate leave - The Switch removes a port from the multicast table immediately when an IGMP leave report is received on the port.
- IGMP proxy - The Switch only forwards IGMP join/leave reports to its uplink router when necessary. It can reduce the upstream multicast traffic to the aggregated device significantly.

Note: See [Chapter 28 on page 99](#) for IGMP filtering commands.

27.1 Command Summary

The following section lists the commands for this feature.

Table 68 igmp-flush Command Summary

COMMAND	DESCRIPTION	M	P
igmp-flush	Removes all IGMP information.	E	13

Table 69 igmp-snooping Command Summary

COMMAND	DESCRIPTION	M	P
show igmp-snooping	Displays global IGMP snooping settings.	E	13
show igmp-snooping current-group <port-number>	Displays the number of multicast groups the specified VDSL port is currently a member of.	E	13
show igmp-snooping join-counetr <port-number>	Displays the number of IGMP join reports the specified VDSL port received from the VDSL subscriber.	E	13
show igmp-snooping leave-counetr <port-number>	Displays the number of IGMP leave reports the specified VDSL port received from the VDSL subscriber.	E	13
show igmp-snooping querier	Displays the IGMP query mode for the ports on the Switch.	E	3
show igmp-snooping query-counetr <port-number>	Displays the number of the IGMP queries received or transmitted on the specified port.	E	3
igmp-snooping	Enables IGMP snooping. Note: You have to disable IGMP proxy before enabling IGMP proxy.	C	13
no igmp-snooping	Disables IGMP snooping.	C	13
igmp-snooping 8021p-priority <0~7>	Sets the 802.1p priority for outgoing IGMP snooping frames.	C	13
no igmp-snooping 8021p-priority	Disables changing the priority of outgoing IGMP control frames.	C	13
igmp-snooping mld-support	Enables Multicast Listener Discovery version one (MLD v1) and version two (MLD v2) on the Switch. See Chapter 32 on page 115 for information about MLD.	C	13
no igmp-snooping mld-support	Disables MLD v1 and MLD v2 on the Switch.	C	13
igmp-snooping host-timeout <1-16711450>	Sets how many seconds to remove an IGMP group membership entry if the Switch does not receive any IGMP join or leave reports from the host.	C	13
igmp-snooping leave-timeout <1-16711450>	Sets how many seconds the Switch waits before removing an IGMP snooping membership entry when an IGMP leave report is received from a host.	C	13

Table 69 igmp-snooping Command Summary (continued)

COMMAND	DESCRIPTION	M	P
igmp-snooping reserve-multicast-frame <drop flooding>	Sets the action to perform when the Switch receives a frame with a reserved multicast address. flooding: Sets this if you want the Switch to forward the reserved multicast frame to all ports. drop: Sets this if you want the Switch to drop the frame.	C	13
igmp-snooping unknown-multicast-frame <drop flooding>	Sets the action to perform when the Switch receives an unknown multicast frame. As the "unknown", for example, no any subscriber requested to join a multicast group but uplink device sends the group traffic to the Switch. flooding: Sets this if you want the Switch to forward the unknown multicast frame to all ports. drop: Sets this if you want the Switch to drop the frame.	C	13

Table 70 igmp-snooping vlan Command Summary

COMMAND	DESCRIPTION	M	P
show igmp-snooping vlan	Displays the VLANs on which IGMP snooping is enabled.	E	13
igmp-snooping vlan mode <auto fixed>	Specifies how the VLANs on which the Switch snoops IGMP frames are selected. auto: The Switch learns multicast group membership on all VLANs. See the User's Guide for the maximum number of VLANs the switch supports for IGMP snooping. The Switch drops any IGMP control messages after it reaches this maximum number (auto mode). fixed: The Switch only learns multicast group membership on specified VLAN(s). The Switch drops any IGMP control messages for any unspecified VLANs (fixed mode). See the User's Guide for the maximum number of VLANs the switch supports for IGMP snooping.	C	13
igmp-snooping vlan <vlan-id> [name <name>]	Specifies which VLANs to perform IGMP snooping on if the query mode is fixed. Optionally, sets a name for the multicast VLAN. name: 1-64 printable characters; spaces are allowed if you put the string in double quotation marks ("").	C	13
no igmp-snooping vlan <vlan-id>	Removes IGMP snooping configuration on the specified VLAN if the query mode is fixed.	C	13

Table 71 igmp-proxy Command Summary

COMMAND	DESCRIPTION	M	P
show igmp-proxy	Displays global IGMP proxy settings.	E	13
show igmp-proxy current-group <port-number>	Displays the number of IGMP groups the specified VDSL port currently joins.	E	13
show igmp-proxy join-counter <port-number>	Displays the number of IGMP join reports the specified VDSL port received from DSL subscribers.	E	13
show igmp-proxy leave-counter <port-number>	Displays the number of IGMP leave reports the specified VDSL port received from DSL subscribers.	E	13
show igmp-proxy query-counter <port-number>	Displays the number of IGMP query reports the specified VDSL port received from an IGMP multicast router.	E	13

Table 71 igmp-proxy Command Summary (continued)

COMMAND	DESCRIPTION	M	P
igmp-proxy	Enables IGMP proxy. Note: You have to disable IGMP snooping before enabling IGMP proxy.	C	13
igmp-proxy v3mode	Enables Multicast Group Membership Discovery version three (MGMDv3) and has the Switch send IGMPv3 or MLDv2 queries instead of IGMPv2 or MLDv1 queries. MGMD version two (MGMDv2) indicates IGMPv2 in IPv4 networks and MLDv1 in IPv6 networks. MGMDv3 indicates IGMPv3 in IPv4 networks and MLDv2 in IPv6 networks. Note: This setting applies only in IGMP proxy mode.	C	13
no igmp-proxy	Disables IGMP proxy.	E	13
no igmp-proxy v3mode	Disables MGMDv3 and has the Switch send IGMPv2 or MLDv1 queries instead of IGMPv3 or MLDv2 queries.	E	13

Table 72 interface igmp Command Summary

COMMAND	DESCRIPTION	M	P
show interfaces config <port-list> igmp-group-limited	Displays the group limits for IGMP snooping.	E	13
show interfaces config <port-list> igmp-immediate-leave	Displays the immediate leave settings for IGMP snooping.	E	13
show interfaces config <port-list> igmp-query-mode	Displays the IGMP query mode setting for the specified port(s).	E	13
show interfaces config <port-list> igmp-msg-limited	Displays the IGMP message limits for IGMP snooping.	E	13
interface port-channel <port-list>	Enters config-interface mode for the specified port(s).	C	13
igmp-group-limited	Enables the group limiting feature for IGMP snooping. You must enable IGMP snooping as well.	C	13
no igmp-group-limited	Disables multicast group limits.	C	13
igmp-group-limited number <0~255>	Sets the maximum number of multicast groups to which the port is allowed to join.	C	13
igmp-immediate-leave	Enables the immediate leave function for IGMP snooping. You must enable IGMP snooping as well.	C	13
no igmp-immediate-leave	Disables the immediate leave function for IGMP snooping.	C	13
igmp-msg-limited	Enables the IGMP message limit for IGMP snooping.	C	13
igmp-msg-limited number <0~255>	Sets the maximum number of multicast frames this port is allowed to flow through.	C	13

Table 72 interface igmp Command Summary (continued)

COMMAND	DESCRIPTION	M	P
no igmp-msg-limited	Enables the IGMP message limiting feature for IGMP snooping.	C	13
igmp-querier-mode <auto fixed edge>	Specifies whether or not and under what conditions the port(s) is (are) IGMP query port(s). The Switch forwards IGMP join or leave frames to an IGMP query port, treating the port as being connected to an IGMP multicast router (or server). You must enable IGMP snooping as well. fixed: The Switch always treats the port(s) as IGMP query port(s). Select this when you connect an IGMP multicast server to the port(s). auto: The Switch uses the port as an IGMP query port if the port received IGMP query frames recently. An auto port doesn't forward any multicast group member information to its uplink router if the switch didn't receive any IGMP query frames from the router within a period. edge: The Switch does not use the port as an IGMP query port. The Switch does not keep any record of an IGMP router being connected to this port. The Switch does not forward IGMP join or leave frames to this port.	C	13

27.2 Command Examples

This example enables IGMP snooping on the Switch, sets the `host-timeout` and `leave-timeout` values to 30 seconds, and sets the Switch to drop frames from unknown multicast groups.

```
sysname(config)# igmp-snooping
sysname(config)# igmp-snooping host-timeout 30
sysname(config)# igmp-snooping leave-timeout 30
sysname(config)# igmp-snooping unknown-multicast-frame drop
```

In this example, port 1 can join up to five multicast groups.

```
sysname# configure
sysname(config)# igmp-snooping
sysname(config)# interface port-channel 1
sysname(config-interface)# igmp-group-limited
sysname(config-interface)# igmp-group-limited number 5
sysname(config-interface)# exit
sysname(config)# exit
sysname# show interfaces config 1 igmp-group-limited
Port          Enable      Max Multicast Group
1             YES         5
```

This example displays the global IGMP snooping settings.

Note: This command output may vary depending on the device model.

```

sysname# show igmp-snooping
  IGMP Snooping           : Enable
  802.1P Priority          : 1
  Host Timeout             : 260
  Leave Timeout           : 2
  Unknown Multicast Frame : Flooding
  Reserved Multicast Frame : Flooding

```

The following table describes the labels in this screen.

Table 73 show igmp-snooping

LABEL	DESCRIPTION
IGMP Snooping	Displays whether IGMP snooping is enabled or disabled currently.
802.1P Priority	Displays whether the Switch changes the priority before forwarding the IGMP snooping control frames to uplink port(s). No Changed displays if you want to keep the original frames' priorities. 0-7 displays if you want to change the original frames' priorities to the priority level (0 is the lowest and 7 is the highest).
Host Timeout	Displays how many seconds to remove an IGMP group membership entry if the Switch does not receive any IGMP join reports from the host.
Leave Timeout	Displays how many seconds the Switch waits before removing an IGMP snooping membership entry when an IGMP leave report is received from a host. The Switch ignores this setting for the port on which you enable "Immediate Leave".
Unknown Multicast Frame	Displays the action to perform when the Switch receives a frame with a reserved multicast address. flood: Sets this if you want the Switch to forward the frame to all ports. drop: Sets this if you want the Switch to drop the frame.
Reserved Multicast Frame	Displays the action to perform when the Switch receives an unknown multicast frame. flood: Sets this if you want the Switch to forward the frame to all ports. drop: Sets this if you want the Switch to drop the frame.

This example displays the global IGMP proxy settings.

```

sysname# show igmp-proxy
  IGMP Proxy       : Disable
  MLD support      : Disable
  MGMTv3 mode      : Enabled

```

The following table describes the labels in this screen.

Table 74 show igmp-proxy

LABEL	DESCRIPTION
IGMP Proxy	Displays whether IGMP proxy is enabled or disabled currently.
IGMP Proxy Query Count	Displays the number of IGMP queries the Switch receives from its uplink port.

CHAPTER 28

IGMP Filtering Commands

Use these commands to configure IGMP filters and IGMP filtering on the Switch. IGMP filtering limits the IGMP groups a subscriber on a port can join. See other IGMP related terms in the [Chapter 27 on page 93](#).

28.1 Command Summary

The following section lists the commands for this feature.

Table 75 igmp-filtering Command Summary

COMMAND	DESCRIPTION	M	P
show igmp-filtering profile [<i><name></i> all]	Displays IGMP filtering profile settings for the specified profile or for all profiles.	E	13
igmp-filtering	Enables IGMP filtering on the Switch. Ports can only join multicast groups specified in their IGMP filtering profile.	C	13
no igmp-filtering	Disables IGMP filtering on the Switch.	C	13
igmp-filtering profile <i><name></i> start-address <i><ip-address></i> end-address <i><ip-address></i>	Sets the range of multicast address(es) in a profile. <i>name</i> : 1-32 alphanumeric characters	C	13
no igmp-filtering profile <i><name></i>	Removes the specified IGMP filtering profile. You cannot delete an IGMP filtering profile that is assigned to any ports.	C	13
no igmp-filtering profile <i><name></i> start-address <i><ip-address></i> end-address <i><ip-address></i>	Clears the specified rule of the specified IGMP filtering profile.	C	13
show interfaces config <i><port-list></i> igmp-filtering	Displays IGMP filtering settings.	E	13
interface port-channel <i><port-list></i>	Enters config-interface mode for the specified port(s).	C	13
igmp-filtering profile <i><name></i>	Assigns the specified IGMP filtering profile to the port(s). If IGMP filtering is enabled on the Switch, the port(s) can only join the multicast groups in the specified profile.	C	13
no igmp-filtering profile	Prohibits the port(s) from joining any multicast groups if IGMP filtering is enabled on the Switch.	C	13

28.2 Command Examples

This example restricts ports 1-4 to multicast IP addresses 224.255.255.0 through 225.255.255.255.

```
sysname# configure
sysname(config)# igmp-filtering
sysname(config)# igmp-filtering profile example1 start-address
--> 224.255.255.0 end-address 225.255.255.255
sysname(config)# interface port-channel 1-4
sysname(config-interface)# igmp-filtering profile example1
sysname(config-interface)# exit
sysname(config)# exit
```

CHAPTER 29

Ingress Check Commands

Use these commands to configure ingress checking on the Switch.

29.1 Command Summary

The following section lists the commands for this feature.

Table 76 ingress-check Command Summary

COMMAND	DESCRIPTION	M	P
<code>interface port-channel <port-list></code>	Enters config-interface mode for the specified port(s).	C	13
<code>ingress-check</code>	Enables the ingress check on the specified port(s).	C	13
<code>no ingress-check</code>	Disables the ingress check on the specified port(s).	C	13

CHAPTER 30

Interface Commands

Use these commands to configure basic port settings.

30.1 Command Summary

The following section lists the commands for this feature.

Table 77 interface Command Summary

COMMAND	DESCRIPTION	M	P
<code>clear interface <port-number></code>	Clears all statistics for the specified port.	E	13
<code>show interface <port-number></code>	Displays the current interface status.	E	13
<code>show interfaces <port-list></code>	Displays the current interface status for the specified port(s).	E	13
<code>no interface <port-number></code>	Clears all statistics for the specified port.	C	13
<code>show interfaces config <port-list></code>	Displays current interface configuration.	E	13
<code>interface port-channel <port-list></code>	Enters config-interface mode for the specified port(s).	C	13
<code>bpdu-control <peer tunnel discard network></code>	Sets how Bridge Protocol Data Units (BPDUs) are used in STP port states.	C	13
<code>force-agent-information <force transparent keep drop></code>	<p>Determines how the Switch handles DHCP option 82 tag settings.</p> <p>force: Allows the Switch to add/replace a PPPoE IA option 82 tag on packets received by the port for the following applications:</p> <ul style="list-style-type: none"> • PPPoE IA • DHCP relay • DHCP VLAN • DHCP snooping <p>transparent: Ignores the PPPoE IA and DHCP option 82 tag settings of packets received on this port.</p> <p>keep: Retains the original PPPoE IA and DHCP option 82 tag settings of packets received on this port; and adds PPPoE IA and DHCP option 82 tags to PPPoE and DHCP packets received without them.</p> <p>drop: Drops the original PPPoE IA and DHCP option 82 tag settings of packets received on this port; and adds PPPoE IA and DHCP option 82 tags to PPPoE and DHCP packets received without them.</p>	C	13
<code>frame-type <all tagged untagged></code>	Choose to accept tagged and/or untagged incoming frames on a port.	C	13

Table 77 interface Command Summary (continued)

COMMAND	DESCRIPTION	M	P
ge-spq <q0~q7>	Enables Strict Priority Queuing and specifies a queue on the gigabit Ethernet (10/100/1000 Mbps) ports.	C	13
no ge-spq	Disables Strict Priority Queuing on the gigabit Ethernet (10/100/1000 Mbps) ports.	C	13
inactive	Disables the specified port(s) on the Switch.	C	13
no inactive	Enables the port(s) on the Switch.	C	13
name <port-name-string>	Sets a name for the port(s). <port-name-string>: up to 9 English keyboard characters	C	13
pvid <1~4094>	The default PVID is VLAN 1 for all ports. Sets a PVID in the range 1 to 4094 for the specified interface.	C	13
speed-duplex <auto 10-half 10-full 100-half 100-full 1000-full>	Sets the duplex mode (half or full) and speed (10, 100 or 1000 Mbps) of the connection on the interface. Select auto (auto-negotiation) to let the specified port(s) negotiate with a peer to obtain the connection speed and duplex mode.	C	13
flow-control	Enables interface flow control. Flow control regulates transmissions to match the bandwidth of the receiving port.	C	13
no flow-control	Disables flow control on the port(s).	C	13
qos priority <0~7>	Sets the quality of service priority for an interface.	C	13
test	Runs an internal loopback test on the port(s).	C	13
test <internal external>	Runs the specified interface loopback test.	C	13
weight <wt1> <wt2> ... <wt8>	Sets the queue weighting for weighted round robin (WRR) and weighted fair scheduling (WFS) on the specified port(s). wt1, wt2, ..., wt8: 1~15	C	13

30.2 Command Examples

This example looks at the current status of a VDSL port on VES-1624FA-54.

```

sysname# show interface 2
  Port Info      Port NO.      :2
                Link          :100M/F
                Status       :FORWARDING ( Copper )
                Up Time      :0:47:00
                Up Stream / Down Stream
Line Rate       : 18.855 / 57.121 Mbps
Actual net data rate : 18.738 / 56.898 Mbps
SNR Margin      : 31.3 / 30.7 dB
Actual delay    : 6.0 / 6.0 ms
Tx Power        : 9.0 / 8.3 dBm
Rx Power        : 5.7 / 6.0 dBm
Actual INP      : 20.0 / 20.0 symbols
Attenuation     : 2.9 / 2.6 dB
Attainable net data rate: 52.006 / 55.878 Mbps
RS Correct      : 0 / 0
RS Uncorrect    : 0 / 0
ES              : 0 / 0
SES             : 0 / 0
UAS             : 0 / 0
CodeViolation(CRC) : 0 / 0
LACP            :Disabled
TxPkts         :227048
RxBkts         :384273
Errors         :0
Tx Kbps/s      :0.273
Rx Kbps/s      :0.192
VDSL Band Status
SNR margin     US0   US1   US2   US3   DS1   DS2   DS3
Signal Atten   NA    1.1dB 4.0dB NA    0.6dB 0.8dB 9.8dB
Line Atten     2.4dB 1.3dB 4.1dB NA    0.5dB 1.0dB 9.9dB
Tx Power       NA    3.4dBm 7.6dBm NA    3.3dBm 2.8dBm 4.4dBm
Rx Power       NA    2.3dBm 3.6dBm NA    2.7dBm 2.0dBm -5.4dBm
TX Packet      Tx Packets :227048
                Multicast  :195
                Broadcast  :1374
                Pause      :0
                OutDiscards :0
                Tagged     :0

```



```

RX Packet      Rx Packets      :384273
                Multicast      :19801
                Broadcast      :102121
                Pause          :0
                InDiscards     :0
                Control        :0
TX Collison    Single          :0
                Multiple       :0
                Excessive      :0
                Late           :0
Error Packet   RX CRC          :0
                Length         :0
                Runt           :0
Distribution   64             :236999
                65 to 127     :55939
                128 to 255    :110902
                256 to 511    :28253
                512 to 1023   :9391
                1024 to 1518  :169855
                Giant         :0
VDSL Performance Data
                Vtuc /        Vtur
                LOFs          :      0 /      0
                LOSs         :      0 /      0
                LOLs         :      0 /      0
                LPRs         :      0 /      0
                C15MinsTimeElapsed :    486 /    486
                Curr15MinLofs :      0 /      0
                Curr15MinLoss :      0 /      0
                Curr15MinLols :      0 /      0
                Curr15MinLprs :      0 /      0
                C1DayTimeElapsed :   3378 /   3378
                Curr1DayLofs  :      0 /      0
                Curr1DayLoss  :      0 /      0
                Curr1DayLols  :      0 /      0
                Curr1DayLprs  :      0 /      0
sysname#

```

The following table describes the labels in this screen.

Note: This command output result may vary depending on the Switch model. Not all the following fields your Switch displays.

Note: You can also refer to part of the following description for the command to show the current status of an Ethernet port.

Table 78 show interface (VDSL port)

LABEL	DESCRIPTION
Port Info	
Port NO.	This field displays the port number you are viewing.
Link	This field displays the speed (either 10M for 10 Mbps, 100M for 100 Mbps or 1000M for 1000 Mbps) and the duplex (F for full duplex or H for half duplex). This field displays Down if the port is not connected to any device.

Table 78 show interface (VDSL port) (continued)

LABEL	DESCRIPTION
Status	If STP (Spanning Tree Protocol) is enabled, this field displays the STP state of the port. If STP is disabled, this field displays FORWARDING if the link is up, otherwise, it displays STOP. It also shows the cable type (Copper or Fiber).
Up Time	This field shows the total amount of time the connection has been up.
Line Rate	This field displays the upstream/downstream transmission rate.
Actual net data rate (or Payload Rate)	This field displays the actual upstream/downstream data transmission rate.
SNR Margin	This field displays the upstream/downstream SNR (Signal-to-Noise Rate) margin.
Actual delay (or interleave delay)	This field displays the actual upstream/downstream transmission delay (in milliseconds).
Tx Power	This field displays the upstream/downstream transmission power of the line. It ranges from 0 to 25.5 dBm, with 0.1 dB steps for downstream. It ranges from 0 to 25.5 dBm, with 0.1 dB steps for upstream.
Rx Power	This field displays the upstream/downstream receiving power of the line. The range is from 0 to 25.5 dBm with 0.1 dB steps for both downstream and upstream.
Actual INP	This field displays the actual impulse noise protection (INP).
Attenuation	This field displays the upstream/downstream attenuation.
Attainable net data rate	This parameter indicates the maximum upstream/downstream net data rate currently attainable by the CO transmitter and the CPE receiver or by the CPE transmitter and the CO receiver.
RS Correct	This field displays the number of Reed-Solomon (RS) correct packets.
RS Uncorrect	This field displays the number of Reed-Solomon (RS) uncorrect packets.
ES	This displays port endpoint error seconds (ESs).
SES	This displays port endpoint severely error seconds (SEs).
UAS	This is a count of 1-second intervals for which the line is unavailable. Use this to define this line tolerance to allow how long for a period of Unavailable Seconds (UAS). Refer to ITU-T G997.1 chapter 7.2.1.1.5 for more detailed information.
CodeViolation(CRC) (or CRC Error)	This field displays a count of anomalies occurring in this line during an accumulation period.
LACP	This field shows if LACP is enabled on this port or not.
TxPkts	This field shows the number of transmitted frames on this port
RxPkts	This field shows the number of received frames on this port
Errors	This field shows the number of received errors on this port.
Tx KBs/s	This field shows the number kilobytes per second transmitted on this port.
Rx KBs/s	This field shows the number of kilobytes per second received on this port.
VDSL Band Status	The fields in this section display the status for upstream bands 0, 1, 2, 3 (U0, U1, U2, U3) and downstream bands 1, 2, 3 (D1, D2, D3).
SNR margin	This field displays signal-to-noise ratio margin for each upstream and downstream bands. NA displays when the band is not used.
Signal Atten	This field displays the signal attenuation status for each upstream and downstream bands. NA displays when the band is not used.
Line Atten	This field displays the line attenuation status for each upstream and downstream bands. NA displays when the band is not used.
Tx Power	This field displays the transmission power for each upstream and downstream bands. NA displays when the band is not used.

Table 78 show interface (VDSL port) (continued)

LABEL	DESCRIPTION
Rx Power	This field displays the receiving power for each upstream and downstream bands. NA displays when the band is not used.
Tx Packet	The following fields display detailed information about packets transmitted.
TX Packets	This field shows the number of good packets (unicast, multicast and broadcast) transmitted.
Multicast	This field shows the number of good multicast packets transmitted.
Broadcast	This field shows the number of good broadcast packets transmitted.
Pause	This field shows the number of 802.3x Pause packets transmitted.
OutDiscards	This field shows the number of outgoing packets discarded.
Tagged	This field shows the number of packets transmitted with a VLAN tag.
Rx Packet	The following fields display detailed information about packets received.
RX Packets	This field shows the number of good packets (unicast, multicast and broadcast) received.
Multicast	This field shows the number of good multicast packets received.
Broadcast	This field shows the number of good broadcast packets received.
Pause	This field shows the number of 802.3x Pause packets received.
InDiscards	This field shows the number of incoming packets discarded.
Control	This field shows the number of control packets received (including those with CRC errors) but it does not include the 802.3x Pause packets.
TX Collision	The following fields display information on collisions while transmitting.
Single	This is a count of successfully transmitted packets for which transmission is inhibited by exactly one collision.
Multiple	This is a count of successfully transmitted packets for which transmission was inhibited by more than one collision.
Excessive	This is a count of packets for which transmission failed due to excessive collisions. Excessive collision is defined as the number of maximum collisions before the retransmission count is reset.
Late	This is the number of times a late collision is detected, that is, after 512 bits of the packets have already been transmitted.
Error Packet	The following fields display detailed information about packets received that were in error.
RX CRC	This field shows the number of packets received with CRC (Cyclic Redundant Check) error(s).
Length	This field shows the number of packets received with a length that was out of range.
Runt	This field shows the number of packets received that were too short (shorter than 64 octets), including the ones with CRC errors.
Distribution	
64	This field shows the number of packets (including bad packets) received that were 64 octets in length.
65 to 127	This field shows the number of packets (including bad packets) received that were between 65 and 127 octets in length.
128 to 255	This field shows the number of packets (including bad packets) received that were between 128 and 255 octets in length.
256 to 511	This field shows the number of packets (including bad packets) received that were between 256 and 511 octets in length.
512 to 1023	This field shows the number of packets (including bad packets) received that were between 512 and 1023 octets in length.
1024 to 1518	This field shows the number of packets (including bad packets) received that were between 1024 and 1518 octets in length.

Table 78 show interface (VDSL port) (continued)

LABEL	DESCRIPTION
Giant	This field shows the number of packets dropped because they were bigger than the maximum frame size.
VDSL Performance Data	This section displays current VDSL performance measured at CO side (<code>vtuc</code>) and CPE side (<code>vtur</code>).
LOFs	This field displays the count of 1-second intervals containing one or more Loss of Framing (LOF) failures.
LOSs	This field displays the count of 1-second intervals containing one or more Loss of Signal (LOS) failures.
LOLs	This field displays the count of 1-second intervals containing one or more Loss Of Link (LOL) failures occurred.
LPRs	This field displays the count of 1-second intervals containing one or more Power (LPR) failures occurred.
BMIN	If the actual SNR falls below the minimum SNR, the DSL connection will be dropped and re-initialized. This field displays how many times the connection has been dropped due to the average SNR' falling below the specified minimum SNR.
BERR	This field displays how many times the connection has been dropped due to the CRC errors' being increasing for more than 30 consecutive seconds.
C15MinsTimeElapsed	This field displays how many seconds has elapsed currently in this 15-minute (900 seconds) time segment. The counter restarts to zero after entering the next time segment.
Curr15MinLofs	This field displays the count of 1-second intervals containing one or more LOF failures since the last 15 minute (900 seconds) time segment. The counter restarts to zero after the time segment elapses.
Curr15MinLoss	This field displays the count of 1-second intervals containing one or more LOS failures since the last 15 minute (900 seconds) time segment. The counter restarts to zero after the time segment elapses.
Curr15MinLols	This field displays the count of 1-second intervals containing one or more LOL failures occurred since the last 15 minute (900 seconds) time segment. The counter restarts to zero after the time segment elapses.
Curr15MinLprs	This field displays the count of 1-second intervals containing one or more LPR failures since the last 15 minute (900 seconds) time segment. The counter restarts to zero after the time segment elapses.
Curr15MinBMIN	This field displays how many times the connection has been dropped due to the average SNR' falling below the specified minimum SNR within the last 15 minute (900 second) time segment. The counter resets to zero after the time segment elapses.
Curr15MinBERR	This field displays how many times the connection has been dropped due to the CRC errors' being increasing for more than 30 consecutive seconds within the last 15 minute (900 second) time segment. The counter resets to zero after the time segment elapses.
C1DayTimeElapsed	This field displays how many seconds has elapsed currently in this 1-day (86400 seconds) time segment. The counter restarts to zero after entering the next time segment.
Curr1DayLofs	This field displays the count of 1-second intervals containing one or more LOF failures since the last 1-day period. The counter restarts to zero after the time segment elapses.
Curr1DayLoss	This field displays the count of 1-second intervals containing one or more LOS failures since the last 1-day time segment. The counter restarts to zero after the time segment elapses.
Curr1DayLols	This field displays the count of 1-second intervals containing one or more LOL failures occurred since the last 1-day period. The counter restarts to zero after the time segment elapses.
Curr1DayLprs	This field displays the count of 1-second intervals containing one or more LPR failures occurred since the last 1-day period. The counter restarts to zero after the time segment elapses.

Table 78 show interface (VDSL port) (continued)

LABEL	DESCRIPTION
Curr1DayBMIN	This field displays how many times the connection has been dropped due to the average SNR's falling below the specified minimum SNR within the last 1-day period. The counter resets to zero after the time segment elapses.
Curr1DayBERR	This field displays how many times the connection has been dropped due to the CRC errors being increasing for more than 30 consecutive seconds within the last 1-day period. The counter resets to zero after the time segment elapses.

This example configures ports 1, 3, 4, and 5 in the following ways:

- 1 Sets the IEEE 802.1p quality of service priority to four (4).
- 2 Sets the name "Test".
- 3 Sets the speed to 100 Mbps in half duplex mode.\

```
sysname(config)# interface port-channel 1,3-5
sysname(config-interface)# qos priority 4
sysname(config-interface)# name Test
sysname(config-interface)# speed-duplex 100-half
```

This example sets the default port vlan-id to 200 for ports 1-5 and configures ports 1-5 to accept only tagged frames.

```
sysname (config)# interface port-channel 1-5
sysname (config-interface)# pvid 200
sysname (config-interface)# frame-type tagged
```

This example performs an internal loopback test on ports 1, 3, 4, and 5. The test result are all right.

```
sysname# configure
sysname(config)# interface port-channel 1,3-5
sysname(config-interface)# test
03. IS3: Testing MAC internal loopback on port 1 :Passed!
VDSL Port 1 Test ok.

03. IS3: Testing MAC internal loopback on port 3 :Passed!
VDSL Port 3 Test ok.

03. IS3: Testing MAC internal loopback on port 4 :Passed!
VDSL Port 4 Test ok.

03. IS3: Testing MAC internal loopback on port 5 :Passed!
VDSL Port 5 Test ok.
```

CHAPTER 31

IP Commands

Use these commands to configure the default domain name server and to look at IP domains.

Note: See [Chapter 70 on page 251](#) for static route commands.

31.1 Command Summary

The following section lists the commands for this feature.

Table 79 ip Command Summary

COMMAND	DESCRIPTION	M	P
show ip	Displays current IP interfaces.	E	0
ip inband address <ip-address> <mask>	Sets the management IP address and subnet mask.	C	13
ip inband default-gateway <ip-address>	Sets the default gateway's IP address.	C	13
ip inband client [release renew]	Sets the inband management interface as a DHCP client. Optionally, releases or renews the information provided by a DHCP server.	C	13
ip name-server <ip ipv6>	Sets the IPv4 or IPv6 address of the domain name server.	C	13
no ip name-server	Removes the DNS server addresses.	C	13
no ip	Clears the out-of-band management IP settings.	C	13
no ip inband	Sets the inband management IP address and subnet mask to the default values.	C	13
vlan <1-4094> ip address inband-default dhcp-bootp option-12	Enables DHCP option 12 (hostname). This has the Switch add its name in the DHCP request messages it sends.	C	13
vlan <1-4094> ip address inband-default dhcp-bootp option-12 <hostname>	Set the name (DHCP option 12) the Switch's DHCP client adds in the DHCP request messages it sends.	C	13
vlan <1-4094> no ip address inband-default dhcp-bootp option-12	Disables DHCP option 12 (hostname).	C	13
vlan <1-4094> no ip address inband-default dhcp-bootp option-12 <hostname>	Resets the name (DHCP option 12) in the Switch's DHCP client.	C	13
vlan <1-4094> ip address inband-default dhcp-bootp option-60	Enables DHCP option 60 (vendor class identifier). This has the Switch add its vendor type in the DHCP request messages it sends.	C	13

Table 79 ip Command Summary (continued)

COMMAND	DESCRIPTION	M	P
vlan <1-4094> ip address inband-default dhcp-bootp option-60 <vendor-class-id>	Set the vendor class identifier (DHCP option 60) the Switch's DHCP client adds in the DHCP request messages it sends.	C	13
vlan <1-4094> no ip address inband-default dhcp-bootp option-60	Disables DHCP option 60 (vendor class identifier).	C	13
vlan <1-4094> no ip address inband-default dhcp-bootp option-60 <vendor-class-id>	Resets the vendor class identifier (DHCP option 60) in the Switch's DHCP client.	C	13
ip mvid <vlan-id>	Sets the management VLAN ID.	C	13
ip name-server <ip-address>	Sets the IP address of the domain name server.	C	13
ip address <ip-address> <mask>	Sets the management IP address and subnet mask for the out-of-band management port.	C	13
ip address default-gateway <ip-address>	Sets the default gateway's IP address for the out-of-band management port.	C	13
ip outband address <ip-address> <mask>	Sets the management IP address and subnet mask for the out-of-band management port.	C	13
no ip outband	Sets the management IP address and subnet mask for the out-of-band management port to the default values.	C	13
show ip name-server	Shows the IP address of the domain name server.	E	3

Table 80 tcp and udp Command Summary

COMMAND	DESCRIPTION	M	P
show ip tcp	Displays IP TCP information.	E	13
show ip udp	Displays IP UDP information.	E	13
kick tcp <session-id>	Disconnects the specified TCP session.	E	13

31.2 Command Examples

This example shows the TCP statistics and listener ports.

```

sysname# show ip tcp
( 1)tcpRtoAlgorithm          4      ( 2)tcpRtoMin                0
( 3)tcpRtoMax                4294967295 ( 4)tcpMaxConn                4294967295
( 5)tcpActiveOpens           9      ( 6)tcpPassiveOpens           41
( 7)tcpAttemptFails          0      ( 8)tcpEstabResets            12
( 9)tcpCurrEstab              7      (10)tcpInSegs                 6974
(11)tcpOutSegs                7969  (12)tcpRetransSegs            84
(14)tcpInErrs                 0      (15)tcpOutRsts                2
    &TCB Rcv-Q Snd-Q Rcv-Wnd Snd-Wnd Local socket      Remote socket
    State
f05ac8      0   620    128   64369 172.1.1.204:23      172.23.5.15:4153
    Estab
efde88      0     0    128     1 0.0.0.0:23         0.0.0.0:0
    Listen (S)
f05774      0     0  22400  63259 172.1.1.204:443    172.23.5.15:4146
    Estab
f05304      0     0  22400  64411 172.1.1.204:443    172.23.5.15:4145
    Estab
f05658      0     0  16384  20860 127.0.0.1:80       127.0.0.1:1034
    Estab
f0553c      0     0  22400  16384 127.0.0.1:1034     127.0.0.1:80
    Estab
f059ac      0     0  16384   1575 127.0.0.1:80       127.0.0.1:1035
    Estab
f05890      0     0  22400  16384 127.0.0.1:1035     127.0.0.1:80
    Estab
efeldc      0     0  16384     1 0.0.0.0:80         0.0.0.0:0
    Listen (S)
efeabc      0     0  22400     1 0.0.0.0:443        0.0.0.0:0
    Listen (S)
efecf4      0     0    128     1 0.0.0.0:22         0.0.0.0:0
    Listen
efdfa4      0     0  16384     1 0.0.0.0:21         0.0.0.0:0
    Listen

```

The following table describes the labels in this screen.

Table 81 show ip tcp

LABEL	DESCRIPTION
tcpRtoAlgorithm	This field displays the algorithm used to determine the timeout value that is used for retransmitting unacknowledged octets.
tcpRtoMin	This field displays the minimum timeout (in milliseconds) permitted by a TCP implementation for the retransmission timeout. More refined semantics for objects of this type depend upon the algorithm used to determine the retransmission timeout. In particular, when the timeout algorithm is rsre(3), an object of this type has the semantics of the LBOUND quantity described in RFC 793.
tcpRtoMax	This field displays the maximum timeout (in milliseconds) permitted by a TCP implementation for the retransmission timeout. More refined semantics for objects of this type depend upon the algorithm used to determine the retransmission timeout. In particular, when the timeout algorithm is rsre(3), an object of this type has the semantics of the UBOUND quantity described in RFC 793.

Table 81 show ip tcp (continued)

LABEL	DESCRIPTION
tcpMaxConn	This field displays the maximum number of TCP connections the Switch can support. If the maximum number is dynamic, this field displays -1.
tcpActiveOpens	This field displays the number of times TCP connections have made a direct transition to the SYN-SENT state from the CLOSED state.
tcpPassiveOpens	This field displays the number of times TCP connections have made a direct transition to the SYN-RCVD state from the LISTEN state.
tcpAttemptFails	This field displays the number of times TCP connections have made a direct transition to the CLOSED state from either the SYN-SENT state or the SYN-RCVD state, plus the number of times TCP connections have made a direct transition to the LISTEN state from the SYN-RCVD state.
tcpEstabResets	This field displays the number of times TCP connections have made a direct transition to the CLOSED state from either the ESTABLISHED state or the CLOSE-WAIT state.
tcpCurrEstab	This field displays the number of TCP connections for which the current state is either ESTABLISHED or CLOSE-WAIT.
tcpInSegs	This field displays the total number of segments received, including those received in error. This count includes segments received on currently established connections.
tcpOutSegs	This field displays the total number of segments sent, including those on current connections but excluding those containing only retransmitted octets.
tcpRetransSegs	This field displays the total number of TCP segments transmitted containing one or more previously transmitted octets.
tcpInErrs	This field displays the total number of segments received with error (for example, bad TCP checksums).
tcpOutRsts	This field displays the number of TCP segments sent containing the RST flag.
	This section displays the current TCP listeners.
&TCB	This field displays the process ID.
Rcv-Q	This field displays the items on the receive queue in this connection.
Snd-Q	This field displays the sequence number of the first unacknowledged segment on the send queue in this connection.
Rcv-Wnd	This field displays the receiving window size in this connection. It determines the amount of received data that can be buffered.
Snd-Wnd	This field displays the sending window size in this connection. It is offered by the remote device.
Local socket	This field displays the local IP address and port number in this TCP connection. In the case of a connection in the LISTEN state that is willing to accept connections for any IP interface associated with the node, the value is 0.0.0.0.
Remote socket	This field displays the remote IP address and port number in this TCP connection.
State	This field displays the status of the TCP connection. Estab: The Switch has established a connection with a remote device. Listen: The Switch is listening for a request.

This example shows the UDP statistics and listener ports.

```

sysname# show ip udp
( 1)udpInDatagrams          33      ( 2)udpNoPorts             9660
( 3)udpInErrors             0       ( 4)udpOutDatagrams        0
  &UCB Rcv-Q Local socket
  e8eb10 0 0.0.0.0:520
  e8eb6c 0 0.0.0.0:263
  1a6e088 0 0.0.0.0:161
  e8f1e4 0 0.0.0.0:1026
  e8ecdc 0 0.0.0.0:1025
  e8ec80 0 0.0.0.0:1024
  e8ec24 0 0.0.0.0:53
  e8ebc8 0 0.0.0.0:69

```

The following table describes the labels in this screen.

Table 82 show ip udp

LABEL	DESCRIPTION
udpInDatagrams	This field displays the total number of UDP datagrams delivered to UDP users.
udpNoPorts	This field displays the total number of received UDP datagrams for which there was no application at the destination port.
udpInErrors	This field displays the number of received UDP datagrams that could not be delivered for reasons other than the lack of an application at the destination port.
udpOutDatagrams	This field displays the total number of UDP datagrams sent by the Switch.
&UCB	This field displays the process ID.
Rcv-Q	This field displays the queue number of pending datagrams in this connection.
Local socket	This field displays the local IP address and port number for this UDP listener. In the case of a UDP listener that is willing to accept datagrams for any IP interface associated with the node, the value is 0.0.0.0.

This example displays the IP settings, clears the out-of-band management IP settings and then displays the IP settings again to see the result.

```

sysname# show ip
Out-of-band Management IP Address = 192.168.0.1
Management IP Address
  IP[192.168.0.1], Netmask[255.255.255.0], VID[0]
IP Interface
  IP[192.168.1.1], Netmask[255.255.255.0], VID[1]
sysname# config
sysname(config)# no ip
sysname(config)# exit
sysname# show ip
Out-of-band Management IP Address = 0.0.0.0
Management IP Address
  IP[0.0.0.0], Netmask[255.255.255.255], VID[0]
IP Interface
  IP[192.168.1.1], Netmask[255.255.255.0], VID[1]
sysname#

```

CHAPTER 32

IP Commands for IPv6

32.1 IPv6 Overview

IPv6 (Internet Protocol version 6), is designed to enhance IP address size and features. The increase in IPv6 address size to 128 bits (from the 32-bit IPv4 address) allows up to 3.4×10^{38} IP addresses. At the time of writing, the Switch supports the following features.

- Static address assignment (see [Section 32.1.1 on page 115](#)) and stateless autoconfiguration (see [Stateless Autoconfiguration on page 118](#))
- Neighbor Discovery Protocol (see [Neighbor Discovery Protocol \(NDP\) on page 119](#))
- ICMPv6 (see [ICMPv6 on page 119](#))
- IPv4/IPv6 dual stack; the Switch can run IPv4 and IPv6 at the same time.
- Multicast Listener Discovery (MLD) snooping and proxy (see [Multicast Listener Discovery on page 119](#))

For more information on IPv6 addresses, refer to RFC 2460 and RFC 4291.

32.1.1 IPv6 Addressing

The 128-bit IPv6 address is written as eight 16-bit hexadecimal blocks separated by colons (:). This is an example IPv6 address `2001:0db8:1a2b:0015:0000:0000:1a2f:0000`.

IPv6 addresses can be abbreviated in two ways:

- Leading zeros in a block can be omitted. So `2001:0db8:1a2b:0015:0000:0000:1a2f:0000` can be written as `2001:db8:1a2b:15:0:0:1a2f:0`.
- Any number of consecutive blocks of zeros can be replaced by a double colon. A double colon can only appear once in an IPv6 address. So `2001:0db8:0000:0000:1a2f:0000:0000:0015` can be written as `2001:0db8::1a2f:0000:0000:0015`, `2001:0db8:0000:0000:1a2f::0015`, `2001:db8::1a2f:0:0:15` or `2001:db8:0:0:1a2f::15`.

32.1.2 IPv6 Terms

IPv6 Prefix and Prefix Length

Similar to an IPv4 subnet mask, IPv6 uses an address prefix to represent the network address. An IPv6 prefix length specifies how many most significant bits (start from the left) in the address compose the network address. The prefix length is written as "/x" where x is a number. For example,

```
2001:db8:1a2b:15::1a2f:0/32
```

means that the first 32 bits (`2001:db8`) is the subnet prefix.

IPv6 Subnet Masking

Both an IPv6 address and IPv6 subnet mask compose of 128-bit binary digits, which are divided into eight 16-bit blocks and written in hexadecimal notation. Hexadecimal uses four bits for each character (1 ~ 10, A ~ F). Each block's 16 bits are then represented by four hexadecimal characters. For example, FFFF:FFFF:FFFF:FFFF:FC00:0000:0000:0000.

The first 48 bits of the IPv6 subnet mask are for Internet routing or fixed for local address, the 49th to the 64th bits are for subnetting and the last 64 bits are for interface identifying. The 16 binary digits for subnetting allows an organization to set up to 65,535 individual subnets.

Interface ID

In IPv6, an interface ID is a 64-bit identifier. It identifies a physical interface (for example, an Ethernet port) or a virtual interface (for example, the management IP address for a VLAN). One interface should have a unique interface ID.

Link-local Address

A link-local address uniquely identifies a device on the local network (the LAN). It is similar to a "private IP address" in IPv4. You can have the same link-local address on multiple interfaces on a device. A link-local unicast address has a predefined prefix of fe80::/10. The link-local unicast address format is as follows.

Table 83 Link-local Unicast Address Format

1111 1110 10	0	Interface ID
10 bits	54 bits	64 bits

Global Address

A global address uniquely identifies a device on the Internet. It is similar to a "public IP address" in IPv4. A global unicast address starts with a 2 or 3. The global address format as follows.

Table 84 Global Address Format

001	Global ID	Subnet ID	Interface ID
3 bits	45 bits	16 bits	64 bits

The global ID is the network identifier or prefix of the address and is used for routing. This may be assigned by service providers.

The subnet ID is a number that identifies the subnet of a site.

Multicast Address

In IPv6, multicast addresses provide the same functionality as IPv4 broadcast addresses. Broadcasting is not supported in IPv6. A multicast address allows a host to send packets to all hosts in a multicast group.

Multicast scope allows you to determine the size of the multicast group. A multicast address has a predefined prefix of ff00::/8. The following table describes some of the predefined multicast addresses.

Table 85 Predefined Multicast Address

MULTICAST ADDRESS	DESCRIPTION
FF01:0:0:0:0:0:0:1	All hosts on a local node.
FF01:0:0:0:0:0:0:2	All routers on a local node.
FF02:0:0:0:0:0:0:1	All hosts on a local connected link.
FF02:0:0:0:0:0:0:2	All routers on a local connected link.
FF05:0:0:0:0:0:0:2	All routers on a local site.
FF05:0:0:0:0:0:1:3	All DHCP servers on a local site.

The following table describes the multicast addresses which are reserved and can not be assigned to a multicast group.

Table 86 Reserved Multicast Address

MULTICAST ADDRESS
FF00:0:0:0:0:0:0:0
FF01:0:0:0:0:0:0:0
FF02:0:0:0:0:0:0:0
FF03:0:0:0:0:0:0:0
FF04:0:0:0:0:0:0:0
FF05:0:0:0:0:0:0:0
FF06:0:0:0:0:0:0:0
FF07:0:0:0:0:0:0:0
FF08:0:0:0:0:0:0:0
FF09:0:0:0:0:0:0:0
FF0A:0:0:0:0:0:0:0
FF0B:0:0:0:0:0:0:0
FF0C:0:0:0:0:0:0:0
FF0D:0:0:0:0:0:0:0
FF0E:0:0:0:0:0:0:0
FF0F:0:0:0:0:0:0:0

Loopback

A loopback address (0:0:0:0:0:0:0:1 or ::1) allows a host to send packets to itself. It is similar to "127.0.0.1" in IPv4.

Unspecified

An unspecified address (0:0:0:0:0:0:0:0 or ::) is used as the source address when a device does not have its own address. It is similar to "0.0.0.0" in IPv4.

EUI-64

The EUI-64 (Extended Unique Identifier) defined by the IEEE (Institute of Electrical and Electronics Engineers) is an interface ID format designed to adapt with IPv6. It is derived from the 48-bit (6-byte) Ethernet MAC address as shown next. EUI-64 inserts the hex digits fffe between the third and fourth bytes of the MAC address and complements the seventh bit of the first byte of the MAC address. See the following example.

Table 87

MAC	00	:	13	:	49	:	12	:	34	:	56
-----	----	---	----	---	----	---	----	---	----	---	----

Table 88

EUI-64	02	:	13	:	49	:	FF	:	FE	:	12	:	34	:	56
--------	----	---	----	---	----	---	----	---	----	---	----	---	----	---	----

Stateless Autoconfiguration

With stateless autoconfiguration in IPv6, addresses can be uniquely and automatically generated. Unlike DHCPv6 (Dynamic Host Configuration Protocol version six) which is used in IPv6 stateful autoconfiguration, the owner and status of addresses don't need to be maintained by a DHCP server. Every IPv6 device is able to generate its own and unique IP address automatically when IPv6 is initiated on its interface. It combines the prefix and the interface ID (generated from its own Ethernet MAC address, see [Interface ID](#) and [EUI-64](#)) to form a complete IPv6 address.

When IPv6 is enabled on a device, its interface automatically generates a link-local address (beginning with fe80).

When the interface is connected to a network with a router and the `ipv6 address autoconfig` command is issued on the Switch, it generates ¹another address which combines its interface ID and global and subnet information advertised from the router. This is a routable global IP address.

DHCPv6

The Dynamic Host Configuration Protocol for IPv6 (DHCPv6, RFC 3315) is a server-client protocol that allows a DHCP server to assign and pass IPv6 network addresses, prefixes and other configuration information to DHCP clients. DHCPv6 servers and clients exchange DHCP messages using UDP.

Each DHCP client and server has a unique DHCP Unique Identifier (DUID), which is used for identification when they are exchanging DHCPv6 messages. The DUID is generated from the MAC address, time, vendor assigned ID and/or the vendor's private enterprise number registered with the IANA. It should not change over time even after you reboot the device.


Identity Association

An Identity Association (IA) is a collection of addresses assigned to a DHCP client, through which the server and client can manage a set of related IP addresses. Each IA must be associated with exactly one interface. The DHCP client uses the IA assigned to an interface to obtain configuration from a DHCP server for that interface. Each IA consists of a unique IAID and associated IP information.

The IA type is the type of address in the IA. Each IA holds one type of address. IA_NA means an identity association for non-temporary addresses and IA_TA is an identity association for temporary addresses. An IA_NA option contains the T1 and T2 fields, but an IA_TA option does not. The DHCPv6 server uses T1 and T2 to control the time at which the client contacts with the server to extend the lifetimes on any

1. In IPv6, all network interfaces can be associated with several addresses.

addresses in the IA_NA before the lifetimes expire. After T1, the client sends the server (S1) (from which the addresses in the IA_NA were obtained) a Renew message. If the time T2 is reached and the server does not respond, the client sends a Rebind message to any available server (S2). For an IA_TA, the client may send a Renew or Rebind message at the client's discretion.

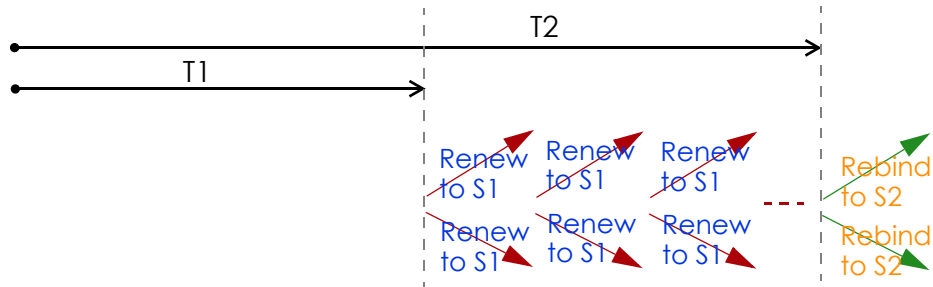

DHCP Relay Agent

A DHCP relay agent is on the same network as the DHCP clients and helps forward messages between the DHCP server and clients. When a client cannot use its link-local address and a well-known multicast address to locate a DHCP server on its network, it then needs a DHCP relay agent to send a message to a DHCP server that is not attached to the same network.

The DHCP relay agent can add the remote identification (remote-ID) option and the interface-ID option to the Relay-Forward DHCPv6 messages. The remote-ID option carries a user-defined string, such as the system name. The interface-ID option provides slot number, port information and the VLAN ID to the DHCPv6 server. The remote-ID option (if any) is stripped from the Relay-Reply messages before the relay agent sends the packets to the clients. The DHCP server copies the interface-ID option from the Relay-Forward message into the Relay-Reply message and sends it to the relay agent. The interface-ID should not change even after the relay agent restarts.

ICMPv6

Internet Control Message Protocol for IPv6 (ICMPv6 or ICMP for IPv6) is defined in RFC 4443. ICMPv6 has a preceding Next Header value of 58, which is different from the value used to identify ICMP for IPv4. ICMPv6 is an integral part of IPv6. IPv6 nodes use ICMPv6 to report errors encountered in packet processing and perform other diagnostic functions, such as "ping".

Neighbor Discovery Protocol (NDP)

The Neighbor Discovery Protocol (NDP) is a protocol used to discover other IPv6 devices and track neighbor's reachability in a network. A neighbor is "reachable" means a neighbor solicitation message (from the Switch) is responded with a neighbor advertisement message from the neighbor.

Multicast Listener Discovery

The Multicast Listener Discovery (MLD) protocol (defined in RFC 2710) is derived from IPv4's Internet Group Management Protocol version 2 (IGMPv2). MLD uses ICMPv6 message types, rather than IGMP message types. MLDv1 is equivalent to IGMPv2 and MLDv2 is equivalent to IGMPv3.

MLD allows an IPv6 switch or router to discover the presence of MLD hosts who wish to receive multicast packets and the IP addresses of multicast groups the hosts want to join on its network.

MLD snooping and MLD proxy are analogous to IGMP snooping and IGMP proxy in IPv4.

MLD filtering controls which multicast groups a port can join.

MLD Messages


A multicast router or switch periodically sends general queries to MLD hosts to update the multicast forwarding table. When an MLD host wants to join a multicast group, it sends an MLD Report message for that address.

An MLD Done message is equivalent to an IGMP Leave message. When an MLD host wants to leave a multicast group, it can send a Done message to the router or switch. If the leave mode is not set to `immediate`, the router or switch sends a group-specific query to the port on which the Done message is received to determine if other devices connected to this port should remain in the group.

MLD Port Role

A port on the Switch can be either a downstream port or upstream port in MLD. A downstream port (**DSP** in the figure) connects to MLD hosts and acts as a multicast router to send MLD queries and listen to the MLD host's Report and Done messages. An upstream port (**USP** in the figure) connects to a multicast router and works as a host to send Report or Done messages when receiving queries from a multicast router.

Figure 2 MLD Port Role Example

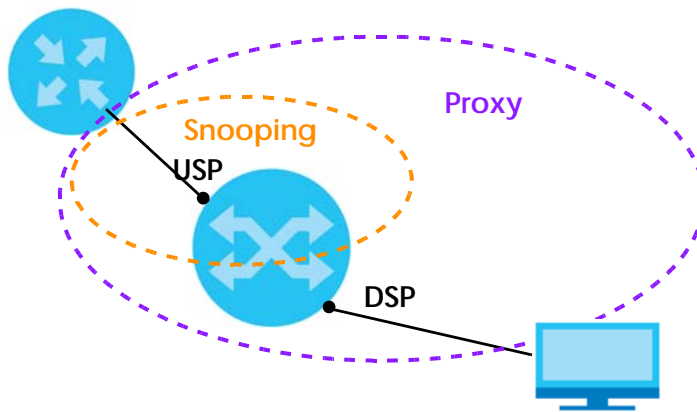

32.2 Command Summary

The following section lists the commands for this feature.

Table 89 ipv6 Command Summary

COMMAND	DESCRIPTION	M	P
<code>ip address ipv6 <ipv6-address/maskbits></code>	Manually configures a static out-of-band management IPv6 global address.	C	13
<code>ip address default-gateway ipv6 <ipv6-address></code>	Manually configures a static out-of-band IPv6 global address for the default outgoing gateway.	C	13
<code>ip ipv6 default-gateway <ipv6-address></code>	Manually configures a static in-band IPv6 global address for the default outgoing gateway.	C	13

Table 89 ipv6 Command Summary (continued)

COMMAND	DESCRIPTION	M	P
<code>ip ipv6 inband-default <ipv6-address/maskbits></code>	Manually configures a static in-band management IPv6 global address.	C	13
<code>no ipv6 in-band</code>	Removes the manually configured in-band management IPv6 address and default gateway address.	C	13
<code>no ipv6 out-of-band</code>	Removes the manually configured out-of-band management IPv6 address and default gateway address.	C	13
<code>show ip ipv6</code>	Displays the link-local addresses the Switch generated automatically. This also shows the manually configured in-band/out-of-band management IPv6 address and default gateway address.	E	3
<code>show ip ipv6 default-router</code>	Displays IPv6 addresses of on-link routers that will help forward packets.	E	3
<code>show ip ipv6 destination</code>	Displays the mapping list of the next-hop address to an IPv6 destination address.	E	3
<code>show ip ipv6 neighbor</code>	Displays the neighbor cache, which lists the MAC addresses of the Switch's interfaces and neighboring devices.	E	3
<code>show ip ipv6 prefix</code>	Displays the list of on-link prefixes. The prefixes are used to determine whether an IP address is on the same link as the Switch or should be reached through a router. A prefix is considered to be on-link when it is assigned to an interface on a link. It's used to determine if an address is on the Switch's subnet and can be reached directly without passing through a router. An on-link interface is directly connected to the Switch or connected through another switch.	E	3
<code>show ip ipv6 route</code>	Displays the IPv6 routing table.	E	3

32.3 Command Examples

This example displays the link-local addresses the Switch automatically generated for the in-band and out-of-band management interfaces.

```

sysname# show ip ipv6
In-band IPv6 Link-local Address = fe80::219:cbff:fe00:2
Out-of-band IPv6 Link-local Address = fe80::219:cbff:fe00:1
In-band Management
  IP Address[::]
  Default Netmask[::]
  Default gateway[::]
Out-of-band Management
  IP Address[::]
  Default Netmask[::]
  Default gateway[::]
sysname#

```

This example shows how to manually configure an IPv6 in-band management address, and then displays the result.

```

sysname# config
sysname(config)# ip ipv6 inband-default 2001:db8:c18:1::12b/64
sysname(config)# exit
sysname# show ip ipv6
In-band IPv6 Link-local Address = fe80::219:cbff:fe00:2
Out-of-band IPv6 Link-local Address = fe80::219:cbff:fe00:1
In-band Management
  IP Address [2001:db6:c18:1::12b]
  Default Netmask [ffff:ffff:ffff:ffff::]
  Default gateway [::]
Out-of-band Management
  IP Address [::]
  Default Netmask [::]
  Default gateway [::]
sysname#

```

This example shows the link-layer addresses of the Switch's interfaces or a neighbor which is reachable from the Switch.

```

sysname# show ip ipv6 neighbor

Interface: In-band
Neighbor                               Linklayer Address  Expire    Flags
-----
fe80::219:cbff:fe00:2                 00:19:cb:00:00:02 permanent Reachable

Interface: Out-of-band
Neighbor                               Linklayer Address  Expire    Flags
-----
fe80::219:cbff:fe00:1                 00:19:cb:00:00:01 permanent Reachable
Flags-state: "Incomplete", "Reachable", "Stale", "Delay",
              "Probe", "Invalid", "Unknown"
Flags-IsRouter: "(R)"
sysname#

```

The following table describes the labels in this screen.

Table 90 show ipv6 neighbor

LABEL	DESCRIPTION
Interface	This is the interface on which the IPv6 address is created or through which a neighbor can be reached.
Neighbor	This is the IPv6 address of the Switch's interface or a neighboring device.
Linklayer Address	This is the MAC address of the interface on which the IPv6 address is configured.


Table 90 show ipv6 neighbor (continued)

LABEL	DESCRIPTION
Expire	This displays how long (<i>hh:mm:ss</i>) an address can be used before it expires. If an address is manually configured, it displays <code>permanent</code> (never expires).
Flags	<p>This field displays whether the neighboring IPv6 interface is reachable. In IPv6, "reachable" means an IPv6 packet can be correctly forwarded to a neighboring node (host or router) and the neighbor can successfully receive and handle the packet. The available options in this field are:</p> <ul style="list-style-type: none"> • Reachable: The interface of the neighboring device is reachable. (The Switch has received a response to its neighbor solicitation.) • Stale: The last reachable time has expired or the Switch received an unrequested advertisement that updates the cached link-layer address from the neighboring interface. • Delay: A packet is being sent to the neighboring interface in Stale state. The Switch delays sending request packets for a short time to give upper-layer protocols a chance to determine reachability. If no reachability confirmation is received within the delay timer, the Switch sends a neighbor solicitation and changes the state to Probe. • Probe: The Switch is sending neighbor solicitations and waiting for the neighbor's response. • Invalid: The neighbor address is an invalid IPv6 address. • Unknown: The status of the neighboring interface can not be determined. • Incomplete: Address resolution is in progress and the link-layer address of the neighbor has not yet been determined (see RFC 4861). The interface of the neighboring device did not give a complete response. • R: The neighboring device is a router.

32.4 Example - Enabling IPv6 on Windows 7/10

By default, IPv6 is enabled on Windows 7/10. This example shows you how to enable IPv6 on Windows 7/10. This also displays how to use the `ipconfig` command to see auto-generated IP addresses.

- 1 Select **Control Panel > Network and Sharing Center > Change adapter settings**.
- 2 Right-click on **Local Area Connection**, and select **Properties**.
- 3 Select the **Internet Protocol Version 6 (TCP/IPv6)** check box to enable it.
- 4 Click **OK** to save the change.

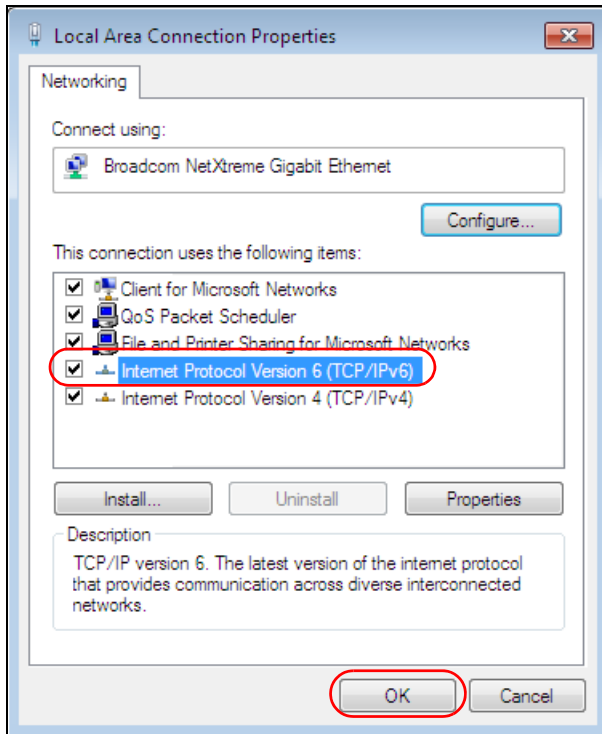

- 5 Click **Close** to exit the **Local Area Connection Status** screen.
- 6 Select **Start > All Programs > Accessories > Command Prompt**.
- 7 Use the `ipconfig` command to check your dynamic IPv6 address. This example shows a global address (2001:b021:2d::1000) obtained from a DHCP server.

```

C:\>ipconfig

Windows IP Configuration

Ethernet adapter Local Area Connection:

    Connection-specific DNS Suffix  . :
    IPv6 Address. . . . . : 2001:b021:2d::1000
    Link-local IPv6 Address . . . . . : fe80::25d8:dcab:c80a:5189%11
    IPv4 Address. . . . . : 172.16.100.61
    Subnet Mask . . . . . : 255.255.255.0
    Default Gateway . . . . . : fe80::213:49ff:feaa:7125%11
                                172.16.100.254
  
```

CHAPTER 33

IPv6 Commands

33.1 IPv6 Overview

IPv6 (Internet Protocol version 6), is designed to enhance IP address size and features. The increase in IPv6 address size to 128 bits (from the 32-bit IPv4 address) allows up to 3.4×10^{38} IP addresses. At the time of writing, the Switch supports the following features.

- Static address assignment (see [Section 32.1.1 on page 115](#)) and stateless autoconfiguration (see [Stateless Autoconfiguration on page 118](#))
- Neighbor Discovery Protocol (see [Neighbor Discovery Protocol \(NDP\) on page 119](#))
- Remote Management using SNMP, Telnet, HTTP and FTP services (see [Chapter 63 on page 233](#))
- ICMPv6 (see [ICMPv6 on page 119](#))
- IPv4/IPv6 dual stack; the Switch can run IPv4 and IPv6 at the same time.
- DHCPv6 client and relay (see [DHCPv6 on page 118](#))
- Multicast Listener Discovery (MLD) snooping and proxy (see [Multicast Listener Discovery on page 119](#))

For more information on IPv6 addresses, refer to RFC 2460 and RFC 4291.

33.1.1 IPv6 Addressing

The 128-bit IPv6 address is written as eight 16-bit hexadecimal blocks separated by colons (:). This is an example IPv6 address `2001:0db8:1a2b:0015:0000:0000:1a2f:0000`.

IPv6 addresses can be abbreviated in two ways:

- Leading zeros in a block can be omitted. So `2001:0db8:1a2b:0015:0000:0000:1a2f:0000` can be written as `2001:db8:1a2b:15:0:0:1a2f:0`.
- Any number of consecutive blocks of zeros can be replaced by a double colon. A double colon can only appear once in an IPv6 address. So `2001:0db8:0000:0000:1a2f:0000:0000:0015` can be written as `2001:0db8::1a2f:0000:0000:0015` or `2001:0db8:0000:0000:1a2f::0015`.

33.1.2 IPv6 Terms

IPv6 Prefix and Prefix Length

Similar to an IPv4 subnet mask, IPv6 uses an address prefix to represent the network address. An IPv6 prefix length specifies how many most significant bits (start from the left) in the address compose the network address. The prefix length is written as "/x" where x is a number. For example,

```
2001:db8:1a2b:15::1a2f:0/32
```

means that the first 32 bits (`2001:db8`) is the subnet prefix.

Interface ID

In IPv6, an interface ID is a 64-bit identifier. It identifies a physical interface (for example, an Ethernet port) or a virtual interface (for example, the management IP address for a VLAN). One interface should have a unique interface ID.

Link-local Address

A link-local address uniquely identifies a device on the local network (the LAN). It is similar to a "private IP address" in IPv4. You can have the same link-local address on multiple interfaces on a device. A link-local unicast address has a predefined prefix of fe80::/10. The link-local unicast address format is as follows.

Table 91 Link-local Unicast Address Format

1111 1110 10	0	Interface ID
10 bits	54 bits	64 bits

Global Address

A global address uniquely identifies a device on the Internet. It is similar to a "public IP address" in IPv4. The global address format as follows.

Table 92 Global Address Format

001	Global ID	Subnet ID	Interface ID
3 bits	45 bits	16 bits	64 bits

The global ID is the network identifier or prefix of the address and is used for routing. This may be assigned by service providers.

The subnet ID is a number that identifies the subnet of a site.

Multicast Addresses

In IPv6, multicast addresses provide the same functionality as IPv4 broadcast addresses. Broadcasting is not supported in IPv6. A multicast address allows a host to send packets to all hosts in a multicast group.

Multicast scope allows you to determine the size of the multicast group. A multicast address has a predefined prefix of ff00::/8. The following table describes some of the predefined multicast addresses.

Table 93 Predefined Multicast Address

MULTICAST ADDRESS	DESCRIPTION
FF01:0:0:0:0:0:0:1	All hosts on a local node.
FF01:0:0:0:0:0:0:2	All routers on a local node.
FF02:0:0:0:0:0:0:1	All hosts on a local connected link.
FF02:0:0:0:0:0:0:2	All routers on a local connected link.
FF05:0:0:0:0:0:0:2	All routers on a local site.
FF05:0:0:0:0:0:1:3	All DHCP servers on a local site.

The following table describes the multicast addresses which are reserved and can not be assigned to a multicast group.

Table 94 Reserved Multicast Address

MULTICAST ADDRESS
FF00:0:0:0:0:0:0:0
FF01:0:0:0:0:0:0:0
FF02:0:0:0:0:0:0:0
FF03:0:0:0:0:0:0:0
FF04:0:0:0:0:0:0:0
FF05:0:0:0:0:0:0:0
FF06:0:0:0:0:0:0:0
FF07:0:0:0:0:0:0:0
FF08:0:0:0:0:0:0:0
FF09:0:0:0:0:0:0:0
FF0A:0:0:0:0:0:0:0
FF0B:0:0:0:0:0:0:0
FF0C:0:0:0:0:0:0:0
FF0D:0:0:0:0:0:0:0
FF0E:0:0:0:0:0:0:0
FF0F:0:0:0:0:0:0:0

Loopback

A loopback address (0:0:0:0:0:0:1 or ::1) allows a host to send packets to itself. It is similar to "127.0.0.1" in IPv4.

Unspecified

An unspecified address (0:0:0:0:0:0:0 or ::) is used as the source address when a device does not have its own address. It is similar to "0.0.0.0" in IPv4.

EUI-64

The EUI-64 (Extended Unique Identifier) defined by the IEEE (Institute of Electrical and Electronics Engineers) is an interface ID format designed to adapt with IPv6. It is derived from the 48-bit (6-byte) Ethernet MAC address as shown next. EUI-64 inserts the hex digits fffe between the third and fourth bytes of the MAC address and complements the seventh bit of the first byte of the MAC address. See the following example.

Table 95

MAC	00	:	13	:	49	:	12	:	34	:	56
-----	----	---	----	---	----	---	----	---	----	---	----

Table 96

EUI-64	02	:	13	:	49	:	FF	:	FE	:	12	:	34	:	56
--------	----	---	----	---	----	---	----	---	----	---	----	---	----	---	----

Stateless Autoconfiguration

With stateless autoconfiguration in IPv6, addresses can be uniquely and automatically generated. Unlike DHCPv6 (Dynamic Host Configuration Protocol version six) which is used in IPv6 stateful autoconfiguration, the owner and status of addresses don't need to be maintained by a DHCP server. Every IPv6 device is able to generate its own and unique IP address automatically when IPv6 is initiated on its interface. It combines the prefix and the interface ID (generated from its own Ethernet MAC address, see [Interface ID](#) and [EUI-64](#)) to form a complete IPv6 address.

When IPv6 is enabled on a device, its interface automatically generates a link-local address (beginning with fe80).

When the interface is connected to a network with a router and the `ipv6 address autoconfig` command is issued on the Switch, it generates ²another address which combines its interface ID and global and subnet information advertised from the router. This is a routable global IP address.

DHCPv6


The Dynamic Host Configuration Protocol for IPv6 (DHCPv6, RFC 3315) is a server-client protocol that allows a DHCP server to assign and pass IPv6 network addresses, prefixes and other configuration information to DHCP clients. DHCPv6 servers and clients exchange DHCP messages using UDP.

Each DHCP client and server has a unique DHCP Unique Identifier (DUID), which is used for identification when they are exchanging DHCPv6 messages. The DUID is generated from the MAC address, time, vendor assigned ID and/or the vendor's private enterprise number registered with the IANA. It should not change over time even after you reboot the device.

Identity Association

An Identity Association (IA) is a collection of addresses assigned to a DHCP client, through which the server and client can manage a set of related IP addresses. Each IA must be associated with exactly one interface. The DHCP client uses the IA assigned to an interface to obtain configuration from a DHCP server for that interface. Each IA consists of a unique IAID and associated IP information.

The IA type is the type of address in the IA. Each IA holds one type of address. IA_NA means an identity association for non-temporary addresses and IA_TA is an identity association for temporary addresses. An IA_NA option contains the T1 and T2 fields, but an IA_TA option does not. The DHCPv6 server uses T1 and T2 to control the time at which the client contacts with the server to extend the lifetimes on any addresses in the IA_NA before the lifetimes expire. After T1, the client sends the server (S1) (from which the addresses in the IA_NA were obtained) a Renew message. If the time T2 is reached and the server does not respond, the client sends a Rebind message to any available server (S2). For an IA_TA, the client may send a Renew or Rebind message at the client's discretion.

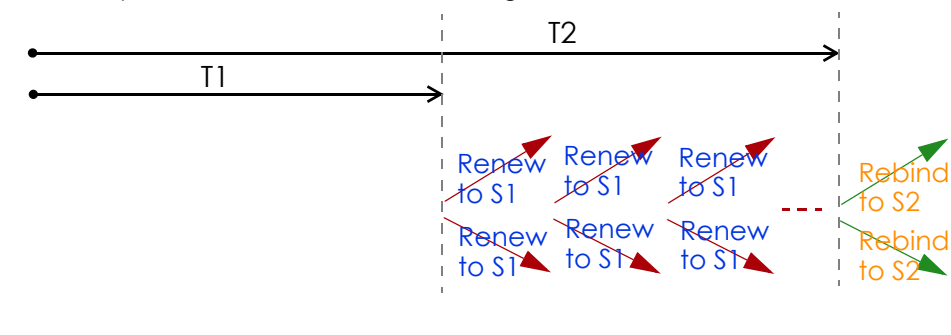

2. In IPv6, all network interfaces can be associated with several addresses.

DHCP Relay Agent

A DHCP relay agent is on the same network as the DHCP clients and helps forward messages between the DHCP server and clients. When a client cannot use its link-local address and a well-known multicast address to locate a DHCP server on its network, it then needs a DHCP relay agent to send a message to a DHCP server that is not attached to the same network.

The DHCP relay agent can add the remote identification (remote-ID) option and the interface-ID option to the Relay-Forward DHCPv6 messages. The remote-ID option carries a user-defined string, such as the system name. The interface-ID option provides slot number, port information and the VLAN ID to the DHCPv6 server. The remote-ID option (if any) is stripped from the Relay-Reply messages before the relay agent sends the packets to the clients. The DHCP server copies the interface-ID option from the Relay-Forward message into the Relay-Reply message and sends it to the relay agent. The interface-ID should not change even after the relay agent restarts.

ICMPv6

Internet Control Message Protocol for IPv6 (ICMPv6 or ICMP for IPv6) is defined in RFC 4443. ICMPv6 has a preceding Next Header value of 58, which is different from the value used to identify ICMP for IPv4. ICMPv6 is an integral part of IPv6. IPv6 nodes use ICMPv6 to report errors encountered in packet processing and perform other diagnostic functions, such as "ping".

Neighbor Discovery Protocol (NDP)

The Neighbor Discovery Protocol (NDP) is a protocol used to discover other IPv6 devices and track neighbor's reachability in a network.

An IPv6 device uses the following ICMPv6 messages types:

- Neighbor solicitation: A request from a host to determine a neighbor's link-layer address (MAC address) and detect if the neighbor is still reachable. A neighbor being "reachable" means it responds to a neighbor solicitation message (from the host) with a neighbor advertisement message.
- Neighbor advertisement: A response from a node to announce its link-layer address.
- Router solicitation: A request from a host to locate a router that can act as the default router and forward packets.
- Router advertisement: A response to a router solicitation or a periodical multicast advertisement from a router to advertise its presence and other parameters.

IPv6 Cache

An IPv6 host is required to have a neighbor cache, destination cache, prefix list and default router list. The Switch maintains and updates its IPv6 caches constantly using the information from response messages. In IPv6, the Switch configures a link-local address automatically, and then sends a neighbor solicitation message to check if the address is unique. If there is an address to be resolved or verified, the Switch also sends out a neighbor solicitation message. When the Switch receives a neighbor advertisement in response, it stores the neighbor's link-layer address in the neighbor cache. When the Switch uses a router solicitation message to query for a router and receives a router advertisement message, it adds the router's information to the neighbor cache, prefix list and destination cache. The Switch creates an entry in the default router list cache if the router can be used as a default router.

When the Switch needs to send a packet, it first consults the destination cache to determine the next hop. If there is no matching entry in the destination cache, the Switch uses the prefix list to determine

whether the destination address is on-link and can be reached directly without passing through a router. If the address is onlink, the address is considered as the next hop. Otherwise, the Switch determines the next-hop from the default router list or routing table. Once the next hop IP address is known, the Switch looks into the neighbor cache to get the link-layer address and sends the packet when the neighbor is reachable. If the Switch cannot find an entry in the neighbor cache or the state for the neighbor is not reachable, it starts the address resolution process. This helps reduce the number of IPv6 solicitation and advertisement messages.

Multicast Listener Discovery

The Multicast Listener Discovery (MLD) protocol (defined in RFC 2710) is derived from IPv4's Internet Group Management Protocol version 2 (IGMPv2). MLD uses ICMPv6 message types, rather than IGMP message types. MLDv1 is equivalent to IGMPv2 and MLDv2 is equivalent to IGMPv3.

MLD allows an IPv6 switch or router to discover the presence of MLD listeners who wish to receive multicast packets and the IP addresses of multicast groups the hosts want to join on its network.

MLD snooping and MLD proxy are analogous to IGMP snooping and IGMP proxy in IPv4.

MLD filtering controls which multicast groups a port can join.

MLD Messages


A multicast router or switch periodically sends general queries to MLD hosts to update the multicast forwarding table. When an MLD host wants to join a multicast group, it sends an MLD Report message for that address.

An MLD Done message is equivalent to an IGMP Leave message. When an MLD host wants to leave a multicast group, it can send a Done message to the router or switch. If the leave mode is not set to `immediate`, the router or switch sends a group-specific query to the port on which the Done message is received to determine if other devices connected to this port should remain in the group.

MLD Port Role

A port on the Switch can be either a downstream port or upstream port in MLD. A downstream port (**DSP** in the figure) connects to MLD hosts and acts as a multicast router to send MLD queries and listen to the MLD host's Report and Done messages. An upstream port (**USP** in the figure) connects to a multicast router and works as a host to send Report or Done messages when receiving queries from a multicast router.

Figure 3 MLD Port Role Example

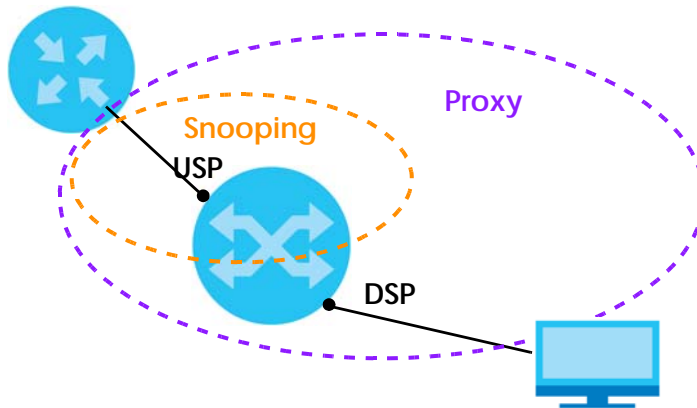


MLD Snooping-Proxy

MLD snooping-proxy is a Zyxel-proprietary feature. IPv6 MLD proxy allows only one upstream interface on a switch, while MLD snooping-proxy supports more than one upstream port on a switch. The upstream port in MLD snooping-proxy can report group changes to a connected multicast router and forward MLD messages to other upstream ports. This helps especially when you want to have a network that uses STP to provide backup links between switches and also performs MLD snooping and proxy functions. MLD snooping-proxy, like MLD proxy, can minimize MLD control messages and allow better network performance.

In MLD snooping-proxy, if one upstream port is learned via snooping, all other upstream ports on the same device will be added to the same group. If one upstream port requests to leave a group, all other upstream ports on the same device will also be removed from the group.

In the following MLD snooping-proxy example, all connected upstream ports (1 ~7) are treated as one interface. The connection between ports 8 and 9 is blocked by STP to break the loop. If there is one query from a router (X) or MLD Done or Report message from any upstream port, it will be broadcast to all connected upstream ports.

Figure 4 MLD Snooping-Proxy Example

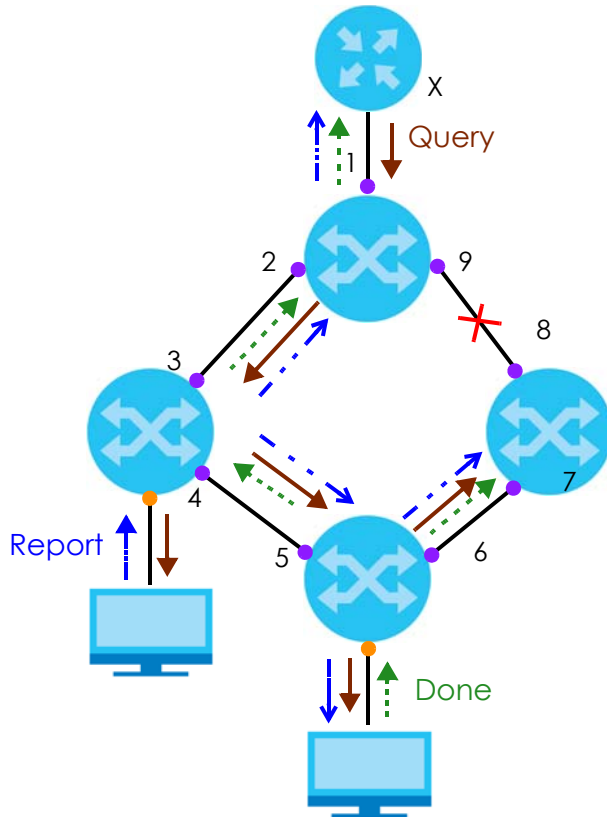

33.2 Command Summary

The following section lists the commands for this feature.

Table 97 ipv6 Command Summary

COMMAND	DESCRIPTION	M	P
<code>ipv6 <cr></code>	Globally enables IPv6 for the outband interface. The Switch then creates a link-local address automatically. Use "show ipv6" to see the generated address	C	13
<code>ipv6 address <ipv6-address>/<prefix-length> [eui-64]</code>	Manually configures a static IPv6 global address for the outband address. You can optionally generate an interface ID was generated using the EUI-64 format.	C	13
<code>ipv6 address <ipv6-address>/<prefix-length> <cr></code>	Manually configures a static IPv6 global address for the outband interface.	C	13
<code>ipv6 address <ipv6-address>/<prefix-length> link-local</code>	Manually configures a static IPv6 link-local address in this outband interface.	C	13
<code>ipv6 address autoconfig <cr></code>	Use the command to have the Switch generate an IPv6 global address automatically for this outband interface after the Switch obtains the outband interface network information from a router.	C	13

Table 97 ipv6 Command Summary (continued)

COMMAND	DESCRIPTION	M	P
<code>ipv6 address default-gateway <ipv6-address></code>	Sets the default gateway for the outband. When an interface cannot find a routing information for a frame's destination, it forwards the packet to the default gateway.	C	13
<code>ipv6 disable <cr></code>	Disables the IPv6 address on the outband interface.	C	13
<code>ipv6 global default-management <interface-name></code>	Sets the default IPv6 management interface <interface-name>.	C	13
<code>ipv6 nd dad-attempts <0-600></code>	Sets the number of consecutive neighbor solicitations the Switch sends for the outband interface. The Switch uses Duplicate Address Detection (DAD) with neighbor solicitation and advertisement messages to check whether an IPv6 address is already in use before assigning it to an interface, such as the link-local address it creates through stateless address autoconfiguration for the outband interface. To turn off the DAD for the outband interface, set the number of DAD attempts to 0.	C	13
<code>ipv6 nd ns-interval <1000-3600000></code>	Specifies the time interval (in milliseconds) at which neighbor solicitations are re-sent for the outband interface.	C	13
<code>ipv6 nd reachable-time <1000-2147483647></code>	Specifies how long (in milliseconds) a neighbor is considered reachable for the outband interface.	C	13
<code>ipv6 neighbor <vlan mgmt> <vlan-id mgmt-id> <ipv6-address> <mac-address></code>	Creates a static IPv6 neighbor entry in the IPv6 cache for a specified interface. <vlan>: The inband vlan interface. <mgmt>: The outband management interface. <vlan-id>: The VLAN ID to which the Ethernet device belongs. <mgmt-id>: The ID number of the outband management interface (0).	C	13
<code>no ipv6 <cr></code>	Removes IPv6 setting for the outband interface on the Switch.	C	13
<code>no ipv6 address <ipv6-address>/<prefix-length> eui-64</code>	Removes the specified static IPv6 global address whose interface ID was generated using the EUI-64 format.	C	13
<code>no ipv6 address <ipv6-address>/<prefix-length> <cr></code>	Removes the specified static IPv6 global address.	C	13
<code>no ipv6 address <ipv6-address>/<prefix-length> link-local</code>	Removes the specified static IPv6 link-local address.	C	13
<code>no ipv6 address autoconfig <cr></code>	Disables IPv6 address autoconfiguration in the outband interface.	C	13
<code>no ipv6 address default-gateway <cr></code>	Removes the default gateway for the outband interface.	C	13
<code>no ipv6 disable</code>	Enables the IPv6 setting for the outband interface on the Switch.	C	13
<code>no ipv6 nd dad-attempts</code>	Resets the number of the DAD attempts to the default settings (1).	C	13
<code>no ipv6 nd ns-interval</code>	Resets the time interval between retransmissions of neighbor solicitations to the default setting (1000 milliseconds).	C	13

Table 97 ipv6 Command Summary (continued)

COMMAND	DESCRIPTION	M	P
no ipv6 nd reachable-time	Resets the reachable time of a neighbor to the default setting (30000 milliseconds).	C	13
no ipv6 neighbor <vlan mgmt> <vlan-id mgmt-id> <ipv6- address>	Removes a static IPv6 neighbor entry from the IPv6 cache. <vlan>: The inband vlan interface. <mgmt>: The outband management interface. <vlan-id>: The VLAN ID to which the Ethernet device belongs. <mgmt-id>: The ID number of the outband management interface (0).	C	13
vlan <1-4094>	Enters config-vlan mode for the specified VLAN. Creates the VLAN, if necessary.	C	13
ipv6	Globally enables IPv6 in this VLAN. The Switch then creates a link-local address automatically. Use "show ipv6" to see the generated address.	C	13
ipv6 address <ipv6-address>/ <prefix-length>	Manually configures a static IPv6 global address for the VLAN.	C	13
ipv6 address <ipv6-address>/ <prefix-length> eui-64	Manually configures a static IPv6 global address for the VLAN and have the interface ID be generated automatically using the EUI-64 format.	C	13
ipv6 address <ipv6-address>/ <prefix-length> link-local	Manually configures a static IPv6 link-local address for the VLAN.	C	13
ipv6 address autoconfig	Use the command to have the Switch generate an IPv6 global address automatically in this VLAN after the Switch obtains the VLAN network information from a router. Note: Make sure an IPv6 router is available in the VLAN network before using this command on the Switch.	C	13
ipv6 address default-gateway <gateway-ipv6-address>	Sets the default gateway for the VLAN. When an interface cannot find a routing information for a frame's destination, it forwards the packet to the default gateway.	C	13
ipv6 disable <cr>	Disables the IPv6 address in this VLAN.	C	13
ipv6 nd dad-attempts <0-600>	Sets the number of consecutive neighbor solicitations the Switch sends for this VLAN. The Switch uses Duplicate Address Detection (DAD) with neighbor solicitation and advertisement messages to check whether an IPv6 address is already in use before assigning it to an interface, such as the link-local address it creates through stateless address autoconfiguration for this VLAN. To turn off the DAD for the outband interface, set the number of DAD attempts to 0.	C	13
ipv6 nd ns-interval <1000- 3600000>	Specifies the time interval (in milliseconds) at which neighbor solicitations are re-sent for this VLAN.	C	13
ipv6 nd reachable-time <1000- 2147483647>	Specifies how long (in milliseconds) a neighbor is considered reachable for this VLAN.	C	13
no ipv6 <cr>	Removes IPv6 setting for this VLAN.	C	13

Table 97 ipv6 Command Summary (continued)

COMMAND	DESCRIPTION	M	P
no ipv6 address <ipv6-address>/<prefix-length> eui-64	Removes the specified static IPv6 global address whose interface ID was generated using the EUI-64 format.	C	13
no ipv6 address <ipv6-address>/<prefix-length> <cr>	Removes the specified static IPv6 global address.	C	13
no ipv6 address <ipv6-address>/<prefix-length> link-local	Removes the specified static IPv6 link-local address.	C	13
no ipv6 address autoconfig <cr>	Disables IPv6 address autoconfiguration in the outband interface.	C	13
no ipv6 address default-gateway <cr>	Removes the default gateway for the outband interface.	C	13
no ipv6 disable	Enables the IPv6 setting for this VLAN on the Switch.	C	13
no ipv6 nd dad-attempts	Resets the number of the DAD attempts on this VLAN to the default settings (1).	C	13
no ipv6 nd ns-interval	Resets the time interval between retransmissions of neighbor solicitations on this VLAN to the default setting (1000 milliseconds).	C	13
no ipv6 nd reachable-time	Resets the reachable time of a neighbor on this VLAN to the default setting (30000 milliseconds).	C	13
clear ipv6 neighbor	Removes all IPv6 neighbor information on the Switch.	E	13
clear ipv6 neighbor <vlan mgmt> <vlan-id mgmt-id>	Removes IPv6 neighbor information for a specified interface on the Switch. <vlan>: The inband vlan interface. <mgmt>: The outband management interface. <vlan-id>: The VLAN ID to which the Ethernet device belongs. <mgmt-id>: The ID number of the outband management interface (0).	E	13
show ipv6	Displays IPv6 settings in all VLANs on the Switch.	E	3
show ipv6 <vlan mgmt> <vlan-id mgmt-id>	Displays IPv6 settings for the specified interface on the Switch. <vlan>: The inband vlan interface. <mgmt>: The outband management interface. <vlan-id>: The VLAN ID to which the Ethernet device belongs. <mgmt-id>: The ID number of the outband management interface (0).	E	3
show ipv6 mtu	Displays IPv6 path MTU information on the Switch. The Switch uses Path MTU Discovery to discover Path MTU (PMTU), that is, the minimum link MTU of all the links in a path to the destination. If the Switch receives an ICMPv6 Packet Too Big error message after sending a packet, it adjusts the next packet size according to the suggested MTU in the error message.	E	3

Table 97 ipv6 Command Summary (continued)

COMMAND	DESCRIPTION	M	P
show ipv6 neighbor	Displays IPv6 settings on the Switch and its neighbor devices.	E	3
show ipv6 neighbor <vlan mgmt> <vlan-id mgmt-id>	Displays IPv6 neighbor devices for a specified interface on the Switch. <vlan>: The inband vlan interface. <mgmt>: The outband management interface. <vlan-id>: The VLAN ID to which the Ethernet device belongs. <mgmt-id>: The ID number of the outband management interface (0).	E	3
show ipv6 router	Displays all IPv6 router advertisement information on the Switch.	E	3
show ipv6 router <vlan mgmt> <vlan-id mgmt-id>	Displays IPv6 router advertisement information for a specified interface on the Switch. <vlan>: The inband vlan interface. <mgmt>: The outband management interface. <vlan-id>: The VLAN ID to which the Ethernet device belongs. <mgmt-id>: The ID number of the outband management interface (0).	E	3
show ipv6 dhcp6	Displays the Switch's DHCPv6 DUID.	E	3
show ipv6 dhcp	Displays the Switch's DHCPv6 DUID.	E	3
show ipv6 dhcp6 vlan <1-4094>	Displays the DHCPv6 settings for the specified VLAN, including DHCPv6 mode, the IA type, and the IAID.	E	3
show ipv6 dhcp vlan <1-4094>	Displays the DHCPv6 settings for the specified VLAN, including DHCPv6 mode, the IA type, and the IAID.	E	3
show ipv6 vlan <1-4094>	Displays IPv6 settings in a specified VLAN on the Switch.	E	3
restart ipv6 dhcp client vlan <1-4094>	Sets the Switch to send a release message for the assigned IPv6 address to the DHCP server and start the DHCP message exchange again.	E	13
vlan <1-4094>	Enters config-vlan mode for the specified VLAN. Creates the VLAN, if necessary.	C	13
ipv6 address dhcp client <ia-na> [rapid-commit]	Sets the IA type for this VLAN. ia-na: Sets the Switch to get a non-temporary IP address from the DHCPv6 server for this interface. rapid-commit: Has the Switch send its DHCPv6 Solicit message with a Rapid Commit option to obtain information from the DHCPv6 server by a rapid two message exchange. The Switch discards any Reply messages that do not include a Rapid Commit option. The DHCPv6 server should also support the Rapid Commit option to have it work well.	C	13
no ipv6 address dhcp client [rapid-commit]	Disables the DHCP client feature in this VLAN. rapid-commit: Disables the rapid commit feature but not the DHCP client for this VLAN.	C	13

Table 97 ipv6 Command Summary (continued)

COMMAND	DESCRIPTION	M	P
<code>ipv6 address dhcp client option <[dns] [domain-list]></code>	Enables the specified DHCP option for the VLAN. Both can be enabled simultaneously. <code>dns</code> : The Switch obtains DNS server IPv6 addresses from the DHCPv6 server. <code>domain-list</code> : The Switch obtains a list of domain names from the DHCPv6 server.	C	13
<code>no ipv6 address dhcp client option <[dns] [domain-list]></code>	Disables obtaining DNS server IPv6 addresses and/or domain names from the DHCPv6 server for the VLAN. <code>dns</code> : The Switch no longer obtains DNS information from the DHCPv6 server. <code>domain-list</code> : The Switch no longer obtains a list of domain names from the DHCPv6 server.	C	13
<code>ipv6 address dhcp client information refresh minimum <600-4294967295></code>	Specifies the time interval (from 600 to 4294967295 seconds) after which the Switch exchanges other configuration information with a DHCPv6 server again.	C	13

Table 98 ipv6 dhcp relay Command Summary

COMMAND	DESCRIPTION	M	P
<code>ipv6 dhcp relay vlan <1-4094> helper-address <remote-dhcp-server></code>	Enables DHCPv6 relay agent and configures the remote DHCP server address for the specified VLAN.	C	13
<code>ipv6 dhcp relay vlan <1-4094> option interface-id</code>	Sets the Switch to add the interface-ID option in the DHCPv6 requests from the clients in the specified VLAN before the Switch forwards them to a DHCP server.	C	13
<code>ipv6 dhcp relay vlan <1-4094> option remote-id <remote-id></code>	Sets the Switch to add the remote-ID option in the DHCPv6 requests from the clients in the specified VLAN before the Switch forwards them to a DHCP server. This also specifies a string (up to 64 printable ASCII characters) to be carried in the remote-ID option.	C	13
<code>no ipv6 dhcp6 relay vlan <1-4094></code> <code>no ipv6 dhcp relay vlan <1-4094></code>	Disables DHCPv6 relay agent in the specified VLAN.	C	13
<code>no ipv6 dhcp6 relay vlan <1-4094> option interface-id</code> <code>no ipv6 dhcp relay vlan <1-4094> option interface-id</code>	Sets the Switch to not add the interface-ID option in the DHCPv6 requests from the clients in the specified VLAN before the Switch forwards them to a DHCP server.	C	13
<code>no ipv6 dhcp6 relay vlan <1-4094> option remote-id</code> <code>no ipv6 dhcp relay vlan <1-4094> option remote-id</code>	Sets the Switch to not add the remote-ID option in the DHCPv6 requests from the clients in the specified VLAN before the Switch forwards them to a DHCP server.	C	13

Table 99 ipv6 icmp and ping6 Command Summary

COMMAND	DESCRIPTION	M	P
<pre>ipv6 icmp error-interval <0-2147483647> [bucket-size <1-200>]</pre>	<p>Sets the average transmission rate of ICMPv6 error messages the Switch generates, such as Destination Unreachable message, Packet Too Big message, Time Exceeded message and Parameter Problem message.</p> <p><i>error-interval</i>: specifies a time period (in milliseconds) during which packets of up to the bucket size (10 by default) can be transmitted. 0 means no limit.</p> <p>Note: The Switch applies the time interval in increments of 10. For example, if you set a time interval from 1280 to 1289 milliseconds, the Switch uses the time interval of 1280 milliseconds.</p> <p><i>bucket-size</i>: Defines the maximum number of packets which are allowed to transmit in a given time interval. If the bucket is full, subsequent error messages are suppressed.</p>	C	13
<pre>ping6 <ipv6-address> vlan <1-4094> [-t] [size <1-1452>] [count <1~65535>]</pre>	<p>Sends IPv6 ping packets to the specified Ethernet device.</p> <p><i>vlan-id</i>: Specifies the VLAN ID to which the Ethernet device belongs.</p> <p><i>size <0-1452></i>: Specifies the size of the ping packet.</p> <p><i>-t</i>: Sends ping packets to the Ethernet device indefinitely. Press [CTRL]+C to terminate the Ping process.</p>	E	0
<pre>ping6 <ipv6-address> [-i <interface-type> <interface-number>] [-t] [-l <1-1452>] [-n <1-65535>] [-s <ipv6-address>]</pre>	<p>Sends IPv6 ping packets to the specified Ethernet device.</p> <p><i>interface-type</i>: the Switch supports only the VLAN interface type at the time of writing.</p> <p><i>interface-number</i>: The VLAN ID to which the Ethernet device belongs.</p> <p><i>-l <1-1452></i>: Specifies the size of the ping packet.</p> <p><i>-t</i>: Sends ping packets to the Ethernet device indefinitely. Press [CTRL]+C to terminate the Ping process.</p> <p><i>-n <1-65535></i>: Specifies how many times the Switch sends the ping packets.</p> <p><i>-s <ipv6-address></i>: Specifies the source IPv6 address of the pin packets.</p>	E	0
<pre>show ipv6 mtu</pre>	<p>The Switch uses Path MTU Discovery to discover Path MTU (PMTU), that is, the minimum link MTU of all the links in a path to the destination. If the Switch receives an ICMPv6 Packet Too Big error message after sending a packet, it adjusts the next packet size according to the suggested MTU in the error message.</p> <p>Displays IPv6 path MTU information on the Switch.</p>	E	3

Table 100 ipv6 mld snooping-proxy Command Summary

COMMAND	DESCRIPTION	M	P
<code>clear ipv6 mld snooping-proxy statistics all</code>	Removes all MLD snooping-proxy statistics of the Switch.	E	13
<code>clear ipv6 mld snooping-proxy statistics port</code>	Removes the MLD snooping-proxy statistics of the port(s).	E	13
<code>clear ipv6 mld snooping-proxy statistics system</code>	Removes the MLD snooping-proxy statistics of the Switch.	E	13
<code>clear ipv6 mld snooping-proxy statistics vlan</code>	Removes the MLD snooping-proxy statistics of the multicast VLAN(s).	E	13
<code>interface port-channel <port-list></code>	Enters config-interface mode for the specified port(s).	C	13
<code>ipv6 mld snooping-proxy filtering group-limited</code>	Enables multicast group limits for MLD snooping-proxy.	C	13
<code>ipv6 mld snooping-proxy filtering group-limited number <number></code>	Sets the maximum number of the multicast groups the port(s) is allowed to join. <i>number</i> : 0 - 255	C	13
<code>ipv6 mld snooping-proxy filtering profile <name></code>	Assigns the specified MLD filtering profile to the port(s). If MLD filtering is enabled on the Switch, the port(s) can only join the multicast groups in the specified profile.	C	13
<code>no ipv6 mld snooping-proxy filtering group-limited</code>	Disables multicast group limits for MLD snooping.	C	13
<code>no ipv6 mld snooping-proxy filtering profile</code>	Disables MLD filtering on the port(s) and allows the port(s) to join any group.	C	13
<code>ipv6 mld snooping-proxy</code>	Enables IPv6 MLD snooping-proxy on the Switch.	C	13
<code>ipv6 mld snooping-proxy 8021p-priority <0-7></code>	Sets the default IEEE 802.1p priority in the MLD messages.	C	13
<code>ipv6 mld snooping-proxy filtering</code>	Enables MLD filtering on the Switch.	C	13
<code>ipv6 mld snooping-proxy filtering profile <name> start-address <ip> end-address <ip></code>	Adds an MLD filtering profile and sets the range of the multicast address(es).	C	13
<code>ipv6 mld snooping-proxy vlan <vlan-id></code>	Enables MLD snooping-proxy on the specified VLAN.	C	13
<code>ipv6 mld snooping-proxy vlan <vlan-id> downstream interface port-channel <port-list></code>	Specifies the downstream port(s) on the Switch. The port(s) will work as a multicast router to send MLD queries and listen to the MLD host's join and leave messages.	C	13
<code>ipv6 mld snooping-proxy vlan <vlan-id> downstream interface port-channel <port-list> fast-leave-timeout <2-16775168></code>	Sets the fast leave timeout (in milliseconds) for the specified downstream port(s). This defines how many seconds the Switch waits for an MLD report before removing an MLD snooping membership entry (learned on a downstream port) when an MLD Done message is received on this port from a host.	C	13

Table 100 ipv6 mld snooping-proxy Command Summary (continued)

COMMAND	DESCRIPTION	M	P
<pre>ipv6 mld snooping-proxy vlan <vlan-id> downstream interface port-channel <port-list> leave- timeout <2-16775168></pre>	<p>Set the MLD snooping normal leave timeout (in milliseconds) the Switch uses to update the forwarding table for the specified downstream port(s).</p> <p>This defines how many seconds the Switch waits for an MLD report before removing an MLD snooping membership entry (learned on a downstream port) when an MLD Done message is received on this port from a host.</p>	C	13
<pre>ipv6 mld snooping-proxy vlan <vlan-id> downstream interface port-channel <port-list> mode <immediate normal fast></pre>	<p>Sets the leave mode for the specified downstream port(s) in a specified VLAN.</p> <p>This specifies whether Switch removes an MLD snooping membership entry (learned on a downstream port) immediately (<i>immediate</i>) or wait for an MLD report before the normal (<i>normal</i>) or fast (<i>fast</i>) leave timeout when an MLD leave message is received on this port from a host.</p>	C	13
<pre>ipv6 mld snooping-proxy vlan <vlan-id> downstream query- interval <1000-31744000></pre>	<p>Sets the amount of time (in milliseconds) between general query messages sent by the downstream port.</p>	C	13
<pre>ipv6 mld snooping-proxy vlan <vlan-id> downstream query-max- response-time <1000-25000></pre>	<p>Sets the maximum time (in milliseconds) that the Switch waits for a response to a general query message sent by the downstream port.</p>	C	13
<pre>ipv6 mld snooping-proxy vlan <vlan-id> upstream interface port- channel <port-list></pre>	<p>Specifies the upstream (host) port(s) on the Switch. The port(s) will work as an MLD host to send join or leave messages when receiving queries from the multicast router.</p>	C	13
<pre>ipv6 mld snooping-proxy vlan <vlan-id> upstream last-listener- query-interval <1-8387584></pre>	<p>Sets the amount of time (in milliseconds) between the MLD group-specific queries sent by an upstream port when an MLD Done message is received. This value should be exactly the same as what's configured in the connected multicast router.</p> <p>This value is used to calculate the amount of time an MLD snooping membership entry (learned only on the upstream port) can remain in the forwarding table after a Done message is received.</p> <p>When an MLD Done message is received, the Switch sets the entry's lifetime to be: <i>last-listener-query-interval</i> x <i>robustness-variable</i></p>	C	13
<pre>ipv6 mld snooping-proxy vlan <vlan-id> upstream query-interval <1000-31744000></pre>	<p>Sets the amount of time (in milliseconds) between general query messages sent by the router connected to the upstream port. This value should be exactly the same as what's configured in the connected multicast router.</p> <p>This value is used to calculate the amount of time an MLD snooping membership entry (learned only on the upstream port) can remain in the forwarding table.</p> <p>When an MLD Report message is received, the Switch sets the timeout period of the entry to be: <i>query-interval</i> x <i>robustness-variable</i> + <i>query-max-response-time</i></p>	C	13

Table 100 ipv6 mld snooping-proxy Command Summary (continued)

COMMAND	DESCRIPTION	M	P
<pre>ipv6 mld snooping-proxy vlan <vlan-id> upstream query-max- response-time <1000-25000></pre>	<p>Sets the amount of time (in milliseconds) the router connected to the upstream port waits for a response to an MLD general query message. This value should be exactly the same as what's configured in the connected multicast router.</p> <p>This value is used to calculate the amount of time an MLD snooping membership entry (learned only on the upstream port) can remain in the forwarding table.</p> <p>When an MLD Report message is received, the Switch sets the timeout period of the entry to be: $\text{query-interval} \times \text{robustness-variable} + \text{query-max-response-time}$</p> <p>When an MLD Done message is received, the Switch sets the entry's lifetime to be: $\text{last-listener-query-interval} \times \text{robustness-variable}$</p>	C	13
<pre>ipv6 mld snooping-proxy vlan <vlan-id> upstream robustness- variable <1-25></pre>	<p>Sets the number of queries. A multicast address entry (learned only on an upstream port by snooping) is removed from the forwarding table when there is no response to the configured number of queries sent by the router connected to the upstream port. This value should be exactly the same as what's configured in the connected multicast router.</p> <p>This value is used to calculate the amount of time an MLD snooping membership entry (learned only on the upstream port) can remain in the forwarding table.</p>	C	13
<pre>no ipv6 mld snooping-proxy</pre>	Disables IPv6 MLD snooping-proxy on the Switch.	C	13
<pre>no ipv6 mld snooping-proxy filtering</pre>	Disables IPv6 MLD filtering on the Switch.	C	13
<pre>no ipv6 mld snooping-proxy filtering profile <name></pre>	Removes the specified MLD filtering profile.	C	13
<pre>no ipv6 mld snooping-proxy filtering profile <name> start- address <ip> end-address <ip></pre>	Removes the range of multicast address(es) from the specified filtering profile.	C	13
<pre>no ipv6 mld snooping-proxy vlan <vlan-id></pre>	Disables MLD snooping-proxy on the specified VLAN.	C	13
<pre>no ipv6 mld snooping-proxy vlan <vlan-id> downstream interface port-channel <port-list></pre>	Sets the specified port(s) to not be a downstream port(s) for the specified VLAN.	C	13
<pre>no ipv6 mld snooping-proxy vlan <vlan-id> upstream interface port- channel <port-list></pre>	Sets the specified port(s) to not be an upstream port(s) for the specified VLAN.	C	13
<pre>show interfaces config <port-list> mld snooping-proxy filtering group-limited</pre>	Displays whether MLD filtering is enabled and the maximum MLD group number for the specified port(s).	E	3
<pre>show interfaces config <port-list> mld snooping-proxy filtering profile</pre>	Displays the name of the filtering profile for the specified port(s).	E	3
<pre>show ipv6 mld snooping-proxy</pre>	Displays whether MLD snooping-proxy is enabled on the Switch and on which VLAN(s).	E	3

Table 100 ipv6 mld snooping-proxy Command Summary (continued)

COMMAND	DESCRIPTION	M	P
show ipv6 mld snooping-proxy filtering profile	Displays whether MLD filtering is enabled on the Switch and the filtering profile settings.	E	3
show ipv6 mld snooping-proxy group	Displays the multicast group addresses learned on the Switch's ports.	E	3
show ipv6 mld snooping-proxy statistics interface port-channel <port-list>	Displays the MLD snooping-proxy statistics of the specified port(s).	E	3
show ipv6 mld snooping-proxy statistics system	Displays the MLD snooping-proxy statistics of the Switch.	E	3
show ipv6 mld snooping-proxy statistics vlan <vlan-list>	Displays the MLD snooping-proxy statistics of the specified multicast VLAN(s).	E	3
show ipv6 mld snooping-proxy vlan <vlan-id>	Displays MLD proxy settings for the specified VLAN.	E	3
show ipv6 multicast	Displays the multicast group addresses learned on the Switch's ports and the timeout values.	E	3

Table 101 ipv6 nd Command Summary

COMMAND	DESCRIPTION	M	P
interface vlan <1-4094>	Enters config-route-domain mode for the specified VLAN. Creates the VLAN, if necessary.	C	13
ipv6 nd dad-attempts <0-600>	Sets the number of consecutive neighbor solicitations the Switch sends for this VLAN. The Switch uses Duplicate Address Detection (DAD) with neighbor solicitation and advertisement messages to check whether an IPv6 address is already in use before assigning it to an interface, such as the link-local address it creates through stateless address autoconfiguration for this VLAN. To turn off the DAD for this VLAN, set the number of DAD attempts to 0.	C	13
ipv6 nd managed-config-flag	Configures the Switch to set the "managed address configuration" flag (the M flag) to 1 in IPv6 router advertisements, which means hosts use DHCPv6 to obtain IPv6 stateful addresses.	C	13
ipv6 nd ns-interval <1000-3600000>	Specifies the time interval (in milliseconds) at which neighbor solicitations are re-sent for this VLAN.	C	13
ipv6 nd other-config-flag	Configures the Switch to set the "Other stateful configuration" flag (the O flag) to 1 in IPv6 router advertisements, which means hosts use DHCPv6 to obtain additional configuration settings, such as DNS information.	C	13

Table 101 ipv6 nd Command Summary (continued)

COMMAND	DESCRIPTION	M	P
<pre>ipv6 nd prefix <ipv6-prefix>/ <prefix-length> <[valid- lifetime <0-4294967295>] [preferred-lifetime <0- 4294967295>] [no-autoconfig] [no-onlink] [no-advertise]></pre>	<p>Sets the Switch to include the specified IPv6 prefix, prefix length and optional parameters in router advertisements for this VLAN.</p> <p><i>valid-lifetime</i>: sets how long in seconds the prefix is valid for on-link determination.</p> <p><i>preferred-lifetime</i>: sets how long (in seconds) that addresses generated from the prefix via stateless address autoconfiguration remain preferred.</p> <p><i>no-autoconfig</i>: indicates the hosts can not use this prefix for stateless address autoconfiguration.</p> <p><i>no-onlink</i>: indicates this prefix can not be used for on-link determination.</p> <p><i>no-advertise</i>: sets the Switch to not include the specified IPv6 prefix, prefix length and optional parameters in router advertisements for this VLAN.</p>	C	13
<pre>ipv6 nd prefix <ipv6-prefix>/ <prefix-length></pre>	Sets the Switch to include the specified IPv6 prefix and prefix length in router advertisements for this VLAN.	C	13
<pre>ipv6 nd ra interval minimum <3-1350> maximum <4-1800></pre>	Specifies the minimum and maximum time intervals at which the Switch sends router advertisements for this VLAN.	C	13
<pre>ipv6 nd ra lifetime <0-9000></pre>	Sets how long (in seconds) the router in router advertisements can be used as a default router for this VLAN.	C	13
<pre>ipv6 nd ra suppress</pre>	Sets the Switch to not send router advertisements and responses to router solicitations for this VLAN.	C	13
<pre>ipv6 nd reachable-time <1000- 2147483647></pre>	Specifies how long (in milliseconds) a neighbor is considered reachable for this VLAN.	C	13
<pre>no ipv6 nd dad-attempts</pre>	Resets the number of the DAD attempts to the default settings (3).	C	13
<pre>no ipv6 nd managed-config- flag</pre>	Configures the Switch to set the "managed address configuration" flag (the M flag) to 0 in IPv6 router advertisements, which means hosts do not use DHCPv6 to obtain IPv6 stateful addresses.	C	13
<pre>no ipv6 nd ns-interval</pre>	Resets the time interval between retransmissions of neighbor solicitations to the default setting (3000 milliseconds).	C	13
<pre>no ipv6 nd other-config-flag</pre>	Configures the Switch to set the "Other stateful configuration" flag (the O flag) to 0 in IPv6 router advertisements, which means hosts do not use DHCPv6 to obtain additional configuration settings, such as DNS information.	C	13
<pre>no ipv6 nd prefix <ipv6- prefix>/<prefix-length></pre>	Sets the Switch to not include the specified IPv6 prefix and prefix length in router advertisements for this VLAN.	C	13
<pre>no ipv6 nd ra interval</pre>	Resets the minimum and maximum time intervals between retransmissions of router advertisements for this VLAN to the default settings.	C	13
<pre>no ipv6 nd ra lifetime</pre>	Resets the lifetime of a router in router advertisements to the default setting (9000 seconds).	C	13
<pre>no ipv6 nd ra suppress</pre>	Enables the sending of router advertisements and responses to router solicitations on this interface.	C	13

Table 101 ipv6 nd Command Summary (continued)

COMMAND	DESCRIPTION	M	P
no ipv6 nd reachable-time	Resets the reachable time of a neighbor to the default setting (60000 milliseconds).	C	13
ipv6 hop-limit <1-255>	Sets the maximum number of hops on which an IPv6 packet is allowed to transmit before it is discarded by an IPv6 router, which is similar to the TTL field in IPv4.	C	13
ipv6 route <ipv6-prefix>/<prefix-length> <next-hop>	Creates a static route to forward packets with the specified IPv6 prefix and prefix length to a specific gateway.	C	13
ipv6 route <ipv6-prefix>/<prefix-length> <next-hop> <interface-type> <interface-number>	Creates a static route to forward packets with the specified IPv6 prefix and prefix length to a specific gateway in a VLAN.	C	13
no ipv6 hop-limit	Resets the maximum number of hops in router advertisements to the default setting.	C	13
no ipv6 route <ipv6-prefix>/<prefix-length>	Removes an IPv6 static route.	C	13
show ipv6 route	Displays IPv6 routing information on the Switch.	E	3
show ipv6 route static	Displays static IPv6 routing information on the Switch.	E	3
show ipv6 prefix	Displays all IPv6 prefix information on the Switch.	E	3
show ipv6 prefix <interface-type> <interface-number>	Displays IPv6 prefix information for the specified interface (VLAN).	E	3

Table 102 ipv6 neighbor Command Summary

COMMAND	DESCRIPTION	M	P
clear ipv6 neighbor <interface-type> <interface-number>	Removes IPv6 neighbor information for a specified interface on the Switch.	E	13
ipv6 neighbor <interface-type> <interface-number> <ipv6-address> <mac-address>	Creates a static IPv6 neighbor entry in the IPv6 cache for this VLAN.	C	13
no ipv6 neighbor <interface-type> <interface-number> <ipv6-address>	Removes a static IPv6 neighbor entry from the IPv6 cache.	C	13

33.3 Command Examples

This example shows how to enable IPv6 in VLAN 1 and display the link-local address the Switch automatically generated for the VLAN.

```

sysname# config
sysname(config)# vlan 1
sysname(config-vlan)# ipv6
sysname(config-vlan)# exit
sysname(config)# exit
sysname# show ipv6

VLAN ID      : 1
IPv6 Status  : Enable

Origin      IP Address/PrefixLength      Status      Expire
-----
manual      fe80::219:cbff:fe00:1/64          preferred   permanent

```

The following table describes the labels in the `show ipv6` command output.

Table 103 show ipv6

LABEL	DESCRIPTION
VLAN ID	This field displays a configured VLAN identifier.
IPv6 Status	This field displays the current IPv6 status in a VLAN. You can use the command "ipv6" to enable IPv6 in a VLAN if it displays <code>Disable</code> .
Origin	This field displays the origin of an IPv6 address. The available options for this field are: <ul style="list-style-type: none"> <code>manual</code>: The IP address was automatically generated by the interface itself or configured manually. <code>linklayer</code>: The IP address was generated by stateless autoconfiguration. <code>other</code>: The IP address was assigned by a DHCP server.
IP Address / Prefix Length	This field displays the configured IPv6 address and prefix.
Status	This field displays the current status of an IPv6 address. The available options for this field are: <ul style="list-style-type: none"> <code>preferred</code>: This is a valid address and it can be used as a sender or receiver address. <code>deprecated</code>: This is a valid address but should not be used as a sender address in new session. <code>invalid</code>: This is not a valid address and it should not be used as a sender or receiver address. <code>inaccessible</code>: The address is not accessible because the interface to which this address is assigned is not operational. <code>unknown</code>: The status of the IP address can not be determined for some reason. <code>tentative</code>: The Switch is verifying the uniqueness of the IP address. <code>duplicate</code>: The address is not unique in your network and can not be used.
Expire	This displays how long (hh:mm:ss) an address can be used before it expires. When an address is manually configured, it displays <code>permanent</code> (never expires).

This example shows how to enable IPv6 in VLAN 1 and display the link-local address the Switch automatically generated and other IPv6 information for the VLAN.

```

sysname# config
sysname(config)# interface vlan 1
sysname(config-vlan)# ipv6
sysname(config-vlan)# exit
sysname(config)# exit
sysname# show ipv6 vlan 1
VLAN : 1 (VLAN1)
  IPv6 is enabled.
  MTU is 1500 bytes.
  ICMP error messages limited to 10 every 100 milliseconds.
  Stateless Address Autoconfiguration is disabled.
  Link-Local address is fe80::219:cbff:fe6f:9159 [preferred]
  Global unicast address(es):
  Joined group address(es):
    ff02::2
    ff01::1
    ff02::1
    ff02::1:ff6f:9159
  ND DAD is enabled, number of DAD attempts: 1
  ND NS-interval is 1000 milliseconds
  ND reachable time is 30000 milliseconds
  ND router advertised managed config flag is disable
  ND router advertised other config flag is disable
  ND router advertisements are sent every 200 to 600 seconds
  ND router advertisements lifetime 1800 seconds

```

This example shows how to manually configure two IPv6 addresses (one uses the EUI-64 format, one doesn't) in VLAN 1, and then display the result. Before using `ipv6 address` commands, you have to enable IPv6 in the VLAN and this has the Switch generate a link-local address for the interface.

There are three addresses created in total for VLAN 1. The address "2001:db8:c18:1:219:cbff:fe00:1/64" is created with the interface ID "219:cbff:fe00:1" generated using the EUI-64 format. The address "2001:db8:c18:1::12b/64" is created exactly the same as what you entered in the command.

```

sysname# config
sysname(config)# vlan 1
sysname(config-vlan)# ipv6
sysname(config-vlan)# ipv6 address 2001:db8:c18:1::127/64 eui-64
sysname(config-vlan)# ipv6 address 2001:db8:c18:1::12b/64
sysname(config-vlan)# exit
sysname(config)# exit
sysname# show ipv6

```

Origin	IP Address/PrefixLength	Status	Expire
manual	fe80::219:cbff:fe00:1/64	preferred	permanent
manual	2001:db8:c18:1:219:cbff:fe00:1/64	preferred	permanent
manual	2001:db8:c18:1::12b/64	preferred	permanent

```

sysname# config
sysname(config)# interface vlan 1
sysname(config-vlan)# ipv6
sysname(config-vlan)# ipv6 address 2001:db8:c18:1::127/64 eui-64
sysname(config-vlan)# ipv6 address 2001:db8:c18:1::12b/64
sysname(config-vlan)# exit
sysname(config)# exit
sysname# show ipv6
VLAN : 1 (VLAN1)
  IPv6 is enabled.
  MTU is 1500 bytes.
  ICMP error messages limited to 10 every 100 milliseconds.
  Stateless Address Autoconfiguration is disabled.
  Link-Local address is fe80::219:cbff:fe00:1 [preferred]
  Global unicast address(es):
    2001:db8:c18:1::12b/64 [preferred]
    2001:db8:c18:1:219:cbff:fe00:1/64 [preferred]
  Joined group address(es):
    ff02::1:ff00:12b
    ff02::2
    ff01::1
    ff02::1
    ff02::1:ff6f:9159
  ND DAD is enabled, number of DAD attempts: 1
  ND NS-interval is 1000 milliseconds
  ND reachable time is 30000 milliseconds
  ND router advertised managed config flag is disable
  ND router advertised other config flag is disable
  ND router advertisements are sent every 200 to 600 seconds
  ND router advertisements lifetime 1800 seconds

```

This example shows the Switch owns (L displays in the T field) two manually configured (permanent) IP addresses, 2001::1234 and fe80::219:cbff:fe00:1. It also displays a neighbor fe80::2d0:59ff:feb8:103c in VLAN 1 is reachable from the Switch.

```

sysname# show ipv6 neighbor
Address                               MAC                               VLAN S  T Expire
-----
--
2001::1234                            0:19:cb:0:0:1                   1    R  L permanent
fe80::219:cbff:fe00:1                 0:19:cb:0:0:1                   1    R  L permanent
fe80::2d0:59ff:feb8:103c              0:d0:59:b8:10:3c               1    R  D 23h53m34s

S:
reachable(R),stale(S),delay(D),probe(P),invalid(IV),incomplete(I),unknown(?)
)
T: local(L),dynamic(D),static(S),other(O)

```

```

sysname# show ipv6 neighbor
Address                               MAC                               S T Interface
-----
2001::1234                            00:19:cb:0:0:0:1 R L vlan 1
fe80::219:cbff:fe00:1                 00:19:cb:0:0:0:1 R L vlan 1
fe80::2d0:59ff:feb8:103c              00:d0:59:b8:10:3c R D vlan 1

S:
reachable (R) , stale (S) , delay (D) , probe (P) , invalid (IV) , incomplete (I) , unknown (?)
)
T: local (L) , dynamic (D) , static (S) , other (O)

```

The following table describes the labels in this screen.

Table 104 show ipv6 neighbor

LABEL	DESCRIPTION
Address	This is the IPv6 address of the Switch or a neighboring device.
MAC	This is the MAC address of the neighboring device or itself.
VLAN	This is the VLAN of which an IPv6 interface is a member.
S	<p>This field displays whether the neighbor IPv6 interface is reachable. In IPv6, "reachable" means an IPv6 packet can be correctly forwarded to a neighbor node (host or router) and the neighbor can successfully receive and handle the packet. The available options in this field are:</p> <ul style="list-style-type: none"> reachable (R) : The interface of the neighboring device is reachable. (The Switch has received a response to the initial request.) stale (S) : The last reachable time has expired and the Switch is waiting for a response to another initial request. The field displays this also when the Switch receives an unrequested response from the neighbor's interface. delay (D) : The neighboring interface is no longer known to be reachable, and traffic has been sent to the neighbor recently. The Switch delays sending request packets for a short to give upper-layer protocols a chance to determine reachability. probe (P) : The Switch is sending request packets and waiting for the neighbor's response. invalid (IV) : The neighbor address is with an invalid IPv6 address. unknown (?) : The status of the neighboring interface can not be determined for some reason. incomplete (I) : Address resolution is in progress and the link-layer address of the neighbor has not yet been determined (see RFC 2461). The interface of the neighboring device did not give a complete response.
T	<p>This field displays the type of an address mapping to a neighbor interface. The available options in this field are:</p> <ul style="list-style-type: none"> other (O) : none of the following type. dynamic (D) : The IP address to MAC address can be successfully resolved using IPv6 Neighbor Discovery protocol (See Neighbor Discovery Protocol (NDP)). Is it similar as IPv4 ARP (Address Resolution protocol). static (S) : The interface address is statically configured. local (L) : A Switch interface is using the address.
Interface	This field displays the IPv6 interface.
Expire	This displays how long (<i>hh:mm:ss</i>) an address can be used before it expires. If an address is manually configured, it displays permanent (never expires).

This example sends ping requests to an Ethernet device with IPv6 address fe80::2d0:59ff:feb8:103c in VLAN 1. The device also responds the pings.

```

sysname# ping6 fe80::2d0:59ff:feb8:103c vlan 1
PING6(56=40+8+8 bytes) fe80::219:cbff:fe00:1 --> fe80::2d0:59ff:feb8:103c
16 bytes from fe80::2d0:59ff:feb8:103c, icmp_seq=0 hlim=128 time=1.0 ms
16 bytes from fe80::2d0:59ff:feb8:103c, icmp_seq=1 hlim=128 time=1.0 ms
16 bytes from fe80::2d0:59ff:feb8:103c, icmp_seq=2 hlim=128 time=1.0 ms

--- fe80::2d0:59ff:feb8:103c ping6 statistics ---
3 packets transmitted, 3 packets received, 0.0 % packet loss
round-trip min/avg/max = 1.0 /1.0 /1.0 ms
sysname#

```

```

sysname# ping6 ffe80::2d0:59ff:feb8:103c -i vlan 1
PING6(56=40+8+8 bytes) fe80::219:cbff:fe00:1 --> fe80::2d0:59ff:feb8:103c
16 bytes from fe80::2d0:59ff:feb8:103c, icmp_seq=0 hlim=64 time=1.0 ms
16 bytes from fe80::2d0:59ff:feb8:103c, icmp_seq=1 hlim=64 time=1.0 ms
16 bytes from fe80::2d0:59ff:feb8:103c, icmp_seq=2 hlim=64 time=1.0 ms

--- fe80::2d0:59ff:feb8:103c ping6 statistics ---
3 packets transmitted, 3 packets received, 0.0 % packet loss
round-trip min/avg/max = 1.0 /1.0 /1.0 ms
sysname#

```

This example configures a static IPv6 route to forward packets with IPv6 prefix 2100:: and prefix length 64 to the gateway with IPv6 address fe80::219:cbff:fe01:101 in VLAN 1.

```

sysname# config
sysname(config)# ipv6 route 2100::/64 fe80::219:cbff:fe01:101 vlan 1
sysname(config)# exit
sysname# show ipv6 route
Terminology:
  C - Connected, S - Static
Destination/Prefix Length          Type
Next Hop                          Interface
-----
2001:db8:c18:1::/64                C
::                                  VLAN1
2100::/64                           S
fe80::219:cbff:fe01:101            VLAN1
sysname#

```

CHAPTER 34

IPQoS Commands

Use these commands to configure IPQoS (Quality of Service) profiles on the Switch. Configure IPQoS on the Switch to group and prioritize application traffic in queues for downstream direction (toward CPE devices) and fine-tune network performance.

34.1 Command Summary

The following section lists the commands for this feature.

Table 105 ipqos Command Summary

COMMAND	DESCRIPTION	M	P
<code>interface port-channel <port-list> ipqos-profilename <name></code>	Associates the specified port with an IPQoS profile. <i>name</i> : Enters a name of up to 31 English keyboard characters to identify the profile.	C	13
<code>ipqos-profile <name></code>	Enters config-ipqos mode to configure QoS (Quality of Service) profile setting for each queue. <i>name</i> : Enters a name of up to 31 English keyboard characters to identify the profile. At the time of writing, you can only configure the DEFVAL and Disable profiles.	C	13
<code>exit</code>	Exits config-ipqos mode.	C	13
<code>TrTCM-profile1 <name></code>	Associates queue 1 with a pre-configured TrTCM profile.	C	13
<code>TrTCM-profile2 <name></code>	Associates queue 2 with a pre-configured TrTCM profile.	C	13
<code>TrTCM-profile3 <name></code>	Associates queue 3 with a pre-configured TrTCM profile.	C	13
<code>TrTCM-profile4 <name></code>	Associates queue 4 with a pre-configured TrTCM profile.	C	13
<code>TrTCM-profile5 <name></code>	Associates queue 5 with a pre-configured TrTCM profile.	C	13
<code>TrTCM-profile6 <name></code>	Associates queue 6 with a pre-configured TrTCM profile.	C	13
<code>TrTCM-profile7 <name></code>	Associates queue 7 with a pre-configured TrTCM profile.	C	13
<code>TrTCM-profile8 <name></code>	Associates queue 8 with a pre-configured TrTCM profile.	C	13
<code>no ipqos-profile <name></code>	Deletes a IPQoS profile.	C	13
<code>no trtcm-profile <name></code>	Deletes a TrTCM profile.	C	13
<code>show ipqos-profile [name]</code>	Displays all IPQoS profiles or a specified IPQoS profile.	E	13
<code>show trtcm-profile [name]</code>	Displays all TrTCM (Two rate To Color Marker) profiles or a specified IPQoS profile.	E	13
<code>trtcm-profile <name></code>	Enters config-trtcmprofile mode to configure a TrTCM profile.	C	13
<code>CBS <256~512,000></code>	Sets the maximum packet size (in kilobytes)	C	13
<code>CIR <64~102,400></code>	Sets the maximum data rate (in kbps).	C	13
<code>exit</code>	Exits config-trtcmprofile mode.	C	13

Table 105 ipqos Command Summary (continued)

COMMAND	DESCRIPTION	M	P
PBS <256~512,000>	Sets the maximum packet size (in kilobytes).	C	13
PIR <64~102,400>	Sets the maximum data rate (in kbps).	C	13

34.2 Command Examples

This example sets a TrTCM profile "test12" and applies it to queue 1 in the IPQoS profile "DEFVAL".

```

sysname# configure
sysname(config)# trtcm-profile test12
sysname(config-trtcmprofile)# cbs 65536
sysname(config-trtcmprofile)# cir 131072
sysname(config-trtcmprofile)# pbs 65536
sysname(config-trtcmprofile)# pir 131072
sysname(config-trtcmprofile)# exit
sysname(config)# ipqos-profile DEFVAL
sysname(config-ipqos)# TrTCM-profile1 test12
sysname(config-ipqos)# exit

```

This example associates port 2 with the IPQoS profile "DEFVAL".

```

sysname# configure
sysname(config)# interface port-channel 2 ipqos-profilename DEFVAL

```

CHAPTER 35

IP Source Binding Commands

Use these commands to manage the bindings table for IP source guard.

35.1 Command Summary

The following section lists the commands for this feature.

Table 106 ip source binding Command Summary

COMMAND	DESCRIPTION	M	P
<code>show ip source binding [<mac-addr>] [...]</code>	Displays the bindings configured on the Switch, optionally based on the specified parameters.	E	3
<code>show ip source binding help</code>	Provides more information about the specified command.	E	3
<code>show ipv6 source binding [mac-addr] [<ipv6-addr> <ipv6-addr>/<prefix-length>] [dhcpv6-snooping static] [vlan <vlan-id>] [interface port-channel <interface-id>]</code>	Displays the IPv6 bindings configured on the Switch, optionally base on the specified parameters.	E	3
<code>show ipv6 source binding help</code>	Provides more information about the specified command.	E	3
<code>ip source binding <mac-addr> vlan <vlan-id> <ip> [interface port-channel <interface-id>]</code>	Creates a static binding for ARP inspection.	C	13
<code>ipv6 source binding <mac-addr> vlan <vlan-id> <ipv6-addr> <ipv6-addr>/<prefix-length></code>	Creates a static IPv6 binding for NDP inspection.	C	13
<code>ipv6 source binding <mac-addr> vlan <vlan-id> <ipv6-addr> <ipv6-addr>/<prefix-length> interface port-channel <interface-id></code>	Creates a static IPv6 binding for NDP inspection.	C	13
<code>no ip source binding <mac-addr> vlan <vlan-id></code>	Removes the specified static binding.	C	13
<code>no ipv6 source binding <mac-addr> vlan <vlan-id></code>	Removes the specified IPv6 static binding.	C	13

35.2 Command Examples

This example shows the current binding table.

```

sysname# show ip source binding
      MacAddress      IPAddress      Lease      Type  VLAN  Port
-----
Total number of bindings: 0

```

The following table describes the labels in this screen.

Table 107 show ip source binding

LABEL	DESCRIPTION
MacAddress	This field displays the source MAC address in the binding.
IpAddress	This field displays the IP address assigned to the MAC address in the binding.
Lease	This field displays how many days, hours, minutes, and seconds the binding is valid; for example, 2d3h4m5s means the binding is still valid for 2 days, 3 hours, 4 minutes, and 5 seconds. This field displays infinity if the binding is always valid (for example, a static binding).
Type	This field displays how the switch learned the binding. static: This binding was learned from information provided manually by an administrator.
VLAN	This field displays the source VLAN ID in the binding.
Port	This field displays the port number in the binding. If this field is blank, the binding applies to all ports.

CHAPTER 36

Layer 2 Protocol Tunnel (L2PT) Commands

36.1 Command Summary

The following section lists the commands for this feature.

Table 108 l2pt Command Summary

COMMAND	DESCRIPTION	M	P
<code>clear l2protocol-tunnel</code>	Removes all layer 2 protocol tunneling counters.	E	13
<code>interface port-channel <port-list></code>	Enters config-interface mode for configuring the specified port(s).	C	13
<code>l2protocol-tunnel</code>	Enables layer 2 protocol tunneling for CDP (Cisco Discovery Protocol), STP (Spanning Tree Protocol) and VTP (VLAN Trunking Protocol) packets on the specified port(s).	C	13
<code>l2protocol-tunnel cdp</code>	Enables layer 2 protocol tunneling for CDP packets on the specified port(s).	C	13
<code>l2protocol-tunnel mode <access tunnel></code>	<p>Sets the L2PT mode for the specified port(s)</p> <p>access: for ingress ports at the edge of the service provider's network. The Switch encapsulates the incoming layer 2 protocol packets and forward them to the tunnel port(s).</p> <p>Note: You can enable L2PT services for STP, LACP, VTP, CDP, UDLD, and PAGP on the access port(s) only.</p> <p>tunnel: for egress ports at the edge of the service provider's network. The Switch decapsulates the encapsulated layer 2 protocol packets received on a tunnel port by changing the destination MAC address to the original one, and then forward them to an access port. If the service(s) is not enabled on an access port, the protocol packets are dropped.</p>	C	13
<code>l2protocol-tunnel point-to-point</code>	Enables point-to-point layer 2 protocol tunneling for LACP (Link Aggregation Control Protocol), PAGP (Port Aggregation Protocol) and UDLD (UniDirectional Link Detection) packets on the specified port(s).	C	13
<code>l2protocol-tunnel point-to-point lacp</code>	Enables point-to-point layer 2 protocol tunneling for LACP packets on the specified port(s).	C	13
<code>l2protocol-tunnel point-to-point pagp</code>	Enables point-to-point layer 2 protocol tunneling for PAGP packets on the specified port(s).	C	13

Table 108 l2pt Command Summary (continued)

COMMAND	DESCRIPTION	M	P
l2protocol-tunnel point-to-point udlld	Enables point-to-point layer 2 protocol tunneling for UDLD packets on the specified port(s).	C	13
l2protocol-tunnel stp	Enables layer 2 protocol tunneling for STP packets on the specified port(s).	C	13
l2protocol-tunnel vtp	Enables layer 2 protocol tunneling for CDP packets on the specified port(s).	C	13
no l2protocol-tunnel	Disables layer 2 protocol tunneling for CDP, VTP and STP packets on the specified port(s).	C	13
no l2protocol-tunnel cdp	Disables layer 2 protocol tunneling for CDP packets on the specified port(s).	C	13
no l2protocol-tunnel point-to-point	Disables point-to-point layer 2 protocol tunneling for LACP, PAgP and UDLD packets on the specified port(s).	C	13
no l2protocol-tunnel point-to-point lacp	Disables point-to-point layer 2 protocol tunneling for LACP packets on the specified port(s).	C	13
no l2protocol-tunnel point-to-point pagp	Disables point-to-point layer 2 protocol tunneling for PAgP packets on the specified port(s).	C	13
no l2protocol-tunnel point-to-point udlld	Enables point-to-point layer 2 protocol tunneling for UDLD packets on the specified port(s).	C	13
no l2protocol-tunnel stp	Disables layer 2 protocol tunneling for STP packets on the specified port(s).	C	13
no l2protocol-tunnel vtp	Disables layer 2 protocol tunneling for VTP packets on the specified port(s).	C	13
l2protocol-tunnel	Enables layer 2 protocol tunneling on the Switch.	C	13
l2protocol-tunnel mac <mac-addr>	Sets the destination MAC address used for encapsulating layer 2 protocol packets received on an access port.	C	13
no l2protocol-tunnel	Disables layer 2 protocol tunneling on the Switch.	C	13
show l2protocol-tunnel	Displays layer 2 protocol tunneling settings and counters for all ports.	E	13
show l2protocol-tunnel interface port-channel <port-list>	Displays layer 2 protocol tunneling settings and counters for the specified port(s).	E	13

36.2 Command Examples

This example enables L2PT on the Switch and sets the destination MAC address for encapsulating layer 2 protocol packets received on an access port.

```

sysname# configure
sysname(config)# l2protocol-tunnel
sysname(config)# l2protocol-tunnel mac 00:10:23:45:67:8e
sysname(config)#

```

This example enables L2PT for STP, CDP and VTP packets on port 3. It also sets L2PT mode to **access** for this port.

```
sysname(config)# interface port-channel 3
sysname(config-interface)# l2protocol-tunnel
sysname(config-interface)# l2protocol-tunnel mode access
sysname(config-interface)# exit
sysname(config)# exit
```

This example sets L2PT mode to **tunnel** for port 4.

```
sysname(config)# interface port-channel 4
sysname(config-interface)# l2protocol-tunnel mode tunnel
sysname(config-interface)# exit
sysname(config)# exit
```

This example displays L2PT settings and status on port 3. You can also see how many CDP, STP, VTP, LACP, PAgP and UDLD packets received on this port are encapsulated, decapsulated or dropped.

```
sysname# show l2protocol-tunnel interface port-channel 3

Status : Running
Layer 2 Protocol Tunneling: Enable
Destination MAC Address: 00:10:23:45:67:8e

Port  Protocol  State  Encapsulation  Decapsulation  Drop
-----  -
          Counter          Counter          Counter
-----  -
   3    cdp  Enable          0             0             0
        stp  Enable        1280          2548          0
        vtp  Enable          0             0             0
        lacp  Disable         0             0             0
        pagp  Disable         0             0             0
        udld  Disable         0             0             0
```

CHAPTER 37

LACP Commands

Use these commands to configure Switch settings for LACP (Link Aggregate Control Protocol).

37.1 Command Summary

The following section lists the commands for this feature.

Table 109 lACP Command Summary

COMMAND	DESCRIPTION	M	P
<code>show lacp</code>	Displays LACP (Link Aggregation Control Protocol) settings.	E	13
<code>lacp</code>	Enables Link Aggregation Control Protocol (LACP).	C	13
<code>lacp daisy-chain</code>	Sets the Switch to process and copy all downstream traffic received on the uplink port to another Gigabit Ethernet port. All upstream traffic received on the Gigabit Ethernet port is also copied to the uplink port, but the Switch does not process the upstream traffic.	C	13
<code>lacp port-selection</code> <1:SA 2:DA 3:SA+DA 4:SIP 5:DIP 6:SIP+DIP>	Specify the way to choose a port in the trunk group (multiple ports) to transmit/receive packets for different type of traffic. Select one of the following criteria for the port selection. SA (source MAC address): Uses packets' source MAC address as the criteria. DA (destination MAC address): Uses packets' destination MAC address as the criteria. SA+DA (source+destination MAC address): Uses packets' both source and destination MAC address as the criteria. SIP (source IP address): Uses packets' source IP address as the criteria. This can be only used for IPv4 packets. DIP (destination IP address): Uses packets' destination IP address as the criteria. This can be only used for IPv4 packets. SIP+DIP (source+destination IP address): Uses packets' both source and destination IP address as the criteria.	C	13
<code>lacp system-priority <1-65535></code>	Sets the priority of an active port using LACP.	C	13
<code>no lacp</code>	Disables the link aggregation control protocol (dynamic trunking) on the Switch.	C	13
<code>no lacp daisy-chain</code>	Disables daisy-chain mode.	C	13

37.2 Command Examples

This example shows the current LACP settings.

```

sysname# show lacp
AGGREGATOR INFO:
ID: 1
  [(0000,00-00-00-00-00-00,0000,00,0000)] [(0000,00-00-00-00-00-00,
--> 0000,00,0000)]
LINKS :
SYNCS :
```

The following table describes the labels in this screen.

Table 110 show lacp

LABEL	DESCRIPTION
ID	This field displays the trunk ID to identify a trunk group, that is, one logical link containing multiple ports.
[(0000,00-00-00-00-00-00-00,0000,00,0000)]	This field displays the system priority, MAC address, key, port priority, and port number.
LINKS	These are the ports that are in the trunk group.
SYNCS	These are the ports that are currently transmitting data as one logical link in this trunk group.

This example sets to use packets' source IP address for the LACP port selection criteria.

```

sysname# config
sysname(config)# lacp port-selection ?
  <1:SA|2:DA|3:SA+DA|4:SIP|5:DIP|6:SIP+DIP>
sysname(config)# lacp port-selection 4
```

CHAPTER 38

LLDP Commands

This chapter describes the LLDP (Link Layer Discovery Protocol) commands.

38.1 LLDP Overview

LLDP (Link Layer Discovery Protocol) allows a network device to advertise its identity and capabilities on the local network. It also allows the device to maintain and store information from adjacent devices which are directly connected to the network device. This helps an administrator discover network changes and perform necessary network reconfiguration and management. The device information is encapsulated in the LLDPDUs (LLDP data units). LLDPDUs are formed of TLV (Type, Length, Value) data structures. Device information carried in the received LLDPDUs is stored in the standard MIB.

38.2 LLDP Commands

This table describes the commands.

Table 111 LLDP Commands

COMMAND	DESCRIPTION	M	P
<code>interface port-channel <port-list></code>	Enters the sub-commands for configuring settings for the specified port.	C	13
<code>lldp admin-status <disabled tx-only rx-only tx-rx></code>	Configures how the Switch uses LLDP on this port. <code>disabled</code> : Has the Switch not send local LLDP information through this port. <code>tx-only</code> : Has the Switch send local LLDP information through this port. <code>rx-only</code> : Has the Switch receive remote LLDP information through this port. <code>tx-rx</code> : Has the Switch send local LLDP information and receive remote LLDP information through this port.	C	13
<code>lldp notification</code>	Enables the sending of LLDP notifications about changes in the adjacent devices through this port.	C	13
<code>lldp basic-tlv management-address</code>	Enables encapsulating the management address in the LLDPDUs in TLV (Type, Length, Value) form.	C	13
<code>lldp basic-tlv port-description</code>	Enables encapsulating the port description in the LLDPDUs in TLV form.	C	13

Table 111 LLDP Commands (continued)

COMMAND	DESCRIPTION	M	P
<code>lldp basic-tlv system-capabilities</code>	Enables encapsulating the system capabilities in the LLDPDUs in TLV form.	C	13
<code>lldp basic-tlv system-description</code>	Enables encapsulating the system description in the LLDPDUs in TLV form.	C	13
<code>lldp basic-tlv system-name</code>	Enables encapsulating the system name in the LLDPDUs in TLV form.	C	13
<code>lldp org-specific-tlv dot1 port-protocol-vlan-id</code>	Enables encapsulating the IEEE 802.1 port protocol VLAN ID in the LLDPDUs in TLV form.	C	13
<code>lldp org-specific-tlv dot1 port-vlan-id</code>	Enables encapsulating the IEEE 802.1 port VLAN ID in the LLDPDUs in TLV form.	C	13
<code>lldp org-specific-tlv dot3 link-aggregation</code>	Enables encapsulating the IEEE 802.3 link aggregation (aggregation status and trunk ID of the port) in the LLDPDUs in TLV form.	C	13
<code>lldp org-specific-tlv dot3 mac-phy</code>	Enables encapsulating the IEEE 802.3 MAC/PHY configuration (capability of auto-negotiation and operational MAU type) in the LLDPDUs in TLV form.	C	13
<code>lldp org-specific-tlv dot3 max-frame-size</code>	Enables encapsulating the IEEE 802.3 maximum frame size in the LLDPDUs in TLV form.	C	13
<code>lldp org-specific-tlv med location</code>	Enables the sending of location TLVs on the ports.	C	13
<code>lldp med location civic</code> [country <country>] [state <state>] [county <county>] [city <city>] [division <division>] [neighbor <neighbor>] [street <street>] [leading-street-direction <value>] [trailing-street-suffix <value>] [street-suffix <value>] [house-number <num>] [house-number-suffix <value>] [landmark <landmark>] [additional-location <value>] [name <value>] [zip-code <value>] [building <value>] [unit <value>] [floor <value>] [room-number <value>] [place-type <value>] [postal-community-name <value>] [post-office-box <value>] [additional-code <value>]	Sets civic location information, such as street address and city name.	C	13

Table 111 LLDP Commands (continued)

COMMAND	DESCRIPTION	M	P
lldp med location coordinate [latitude <north south> <value>] [longitude <west east> <value>] [altitude <meters floor> <value>] [datum <WGS84 NAD83- NAVD88 NAD83-MLLW>]	Sets coordinate location information. Latitude <i>value</i> : -90° to 90° Longitude <i>value</i> : -180° to 180° Altitude <i>value</i> : -2097151 to 2097151 in meters or -2097151 to 2097151 in the number of floors	C	13
lldp med location elin <number>	Sets location information of a caller by their ELIN (Emergency Location Identifier Number). <i>number</i> : a ten-digit phone number	C	13
lldp med network-policy <voice voice-signaling guest- voice guest-voice- signaling softphone- voice video- conferencing streaming- video video-signaling> [tagged untagged] [vlan <vlan- id>] [priority <priority>] [dscp <dscp>]	Sets a network policy for the specified application.	C	13
lldp med topology-change- notification	Enables the sending of LLDP-MED topology change traps when devices are connected to or disconnected from the specified ports.	C	13
lldp org-specific-tlv med network-policy	Enables the sending of network policy TLVs on the ports.	C	13
no lldp admin-status	Disables LLDP on this port.	C	13
no lldp notification	Disables the sending of LLDP notifications about changes in the adjacent devices through this port.	C	13
no lldp basic-tlv management- address	Disables encapsulating the management address in the LLDPDUs in the form of TLV (Type, Length, Value).	C	13
no lldp basic-tlv port- description	Disables encapsulating the port description in the LLDPDUs in TLV form.	C	13
no lldp basic-tlv system- capabilities	Disables encapsulating the system capabilities in the LLDPDUs in TLV form.	C	13
no lldp basic-tlv system- description	Disables encapsulating the system description in the LLDPDUs in TLV form.	C	13
no lldp basic-tlv system-name	Disables encapsulating the system name in the LLDPDUs in TLV form.	C	13
no lldp med location	Deletes all location identification.	C	13
no lldp med location <civic coordinate elin>	Deletes location identification of the specified type.	C	13
no lldp med network-policy	Deletes network policies for all connected media endpoint devices.	C	13

Table 111 LLDP Commands (continued)

COMMAND	DESCRIPTION	M	P
no lldp med network-policy <voice voice-signaling guest-voice guest-voice-signaling softphone-voice video-conferencing streaming-video video-signaling>	Deletes network policies for the specified applications.	C	13
no lldp med topology-change-notification	Disables the sending of LLDP-MED topology change traps.	C	13
no lldp org-specific-tlv dot1 port-protocol-vlan-id	Disables encapsulating the IEEE 802.1 port protocol VLAN ID in the LLDPDUs in TLV form.	C	13
no lldp org-specific-tlv dot1 port-vlan-id	Disables encapsulating the IEEE 802.1 port VLAN ID in the LLDPDUs in TLV form.	C	13
no lldp org-specific-tlv dot3 link-aggregation	Disables encapsulating the IEEE 802.3 link aggregation (aggregation status and trunk ID of the port) in the LLDPDUs in TLV form.	C	13
no lldp org-specific-tlv dot3 mac-phy	Disables encapsulating the IEEE 802.3 MAC/PHY configuration (capability of auto-negotiation and operational MAU type) in the LLDPDUs in TLV form.	C	13
no lldp org-specific-tlv dot3 max-frame-size	Disables encapsulating the IEEE 802.3 maximum frame size in the LLDPDUs in TLV form.	C	13
no lldp org-specific-tlv med location	Deletes all location identification in TLV form in the LLDPDUs.	C	13
no lldp org-specific-tlv med network-policy	Deletes network policies in TLV form for all connected media endpoint devices in the LLDPDUs.	C	13
lldp	Enables LLDP so the Switch uses LLDP to send and get information about devices connected to its interfaces.	C	13
lldp reinitialize-delay <seconds>	Configures the number of seconds for LLDP to wait to re-initialize a port that was disabled. <i>seconds:</i> 1-10 seconds	C	13
no lldp	Disables LLDP so the Switch does not use LLDP to send and get information about devices connected to its interfaces.	C	13
lldp transmit-delay <seconds>	Configures the delay (in seconds) between the successive LLDP frame transmissions initiated by value or status changes in the local system. <i>seconds:</i> 1-8192 seconds	C	13

Table 111 LLDP Commands (continued)

COMMAND	DESCRIPTION	M	P
<code>lldp transmit-hold <value></code>	Configures the time-to-live (TTL) multiplier of the LLDP frames. The device information on the neighboring devices ages out and is discarded when its corresponding TTL expires. The TTL value is derived by multiplying the TTL multiplier by the LLDP frames' transmit interval. Note: Set the LLDP packet transmitting interval shorter than its TTL to update the Switch's device information in the neighboring devices before it ages out. <i>value</i> : 2-10, the interval multiplier to set the local LLDP data TTL.	C	13
<code>lldp transmit-interval <seconds></code>	Configures the transmit interval time for sending LLDP frames. <i>seconds</i> : 5-32768 seconds	C	13
<code>show lldp config</code>	Displays the global LLDP configuration.	E	3
<code>show lldp config interface port-channel <port-list></code>	Displays the LLDP configuration for the specified ports.	E	3
<code>show lldp info local</code>	Displays the LLDP local information (globally).	E	3
<code>show lldp info local interface port-channel <port-list></code>	Displays the LLDP local information for the specified ports.	E	3
<code>show lldp info remote</code>	Displays the LLDP remote information (globally).	E	3
<code>show lldp info remote interface port-channel <port-list></code>	Displays the LLDP remote information for the specified ports.	E	3
<code>show lldp info statistic</code>	Displays the LLDP statistics (globally).	E	3
<code>show lldp info statistic interface port-channel <port-list></code>	Displays the LLDP statistics for the specified ports.	E	3
<code>clear lldp remote-info</code>	Deletes all LLDP remote information.	E	13
<code>clear lldp remote-info interface port-channel <port-list></code>	Deletes the LLDP remote information for the specified ports.	E	13
<code>clear lldp statistic</code>	Resets the LLDP statistics to zero.	E	13

CHAPTER 39

Login Account Commands

Use these commands to configure login accounts on the Switch.

39.1 Command Summary

The following section lists the commands for this feature.

Table 112 logins Command Summary

COMMAND	DESCRIPTION	M	P
show logins	Displays login account information.	E	13
logins username <name> password <pwd>	Creates an account with the specified user name and sets the password. <name>: 1-32 alphanumeric characters <pwd>: 1-32 alphanumeric characters	C	14
logins username <name> password <pwd> index <1~4>	Creates an account with the specified user name and sets the password and priority (1~4). Set the index to 1 to have the highest priority than other accounts.	C	14
logins username <name> privilege <0~14>	Assigns a privilege level to the specified account. The privilege level is applied the next time the user logs in.	C	14
no logins username <name>	Removes specified account.	C	14

39.2 Command Examples

This example creates a new user user2 with privilege 13.

```
sysname# configure
sysname(config)# logins username user2 password 1234
sysname(config)# logins username user2 privilege 13
sysname(config)# exit
sysname# show logins
Login   Username      Privilege
0       user2         13
1
2
3
```

CHAPTER 40

Login Precedence Commands

Use these commands to configure the login precedence for the Switch.

40.1 Command Summary

The following section lists the commands for this feature.

Table 113 loginPrecedence Command Summary

COMMAND	DESCRIPTION	M	P
<code>show loginPrecedence</code>	Displays login precedence settings.	E	14
<code>loginPrecedence</code> <LocalOnly LocalRADIUS RADIUSOnly>	Sets the login precedence.	C	14

CHAPTER 41

Loopguard Commands

Use these commands to configure the Switch to guard against loops on the edge of your network. The Switch shuts down a port if the Switch detects that packets sent out on the port loop back to the Switch.

41.1 Command Summary

The following section lists the commands for this feature.

Table 114 loopguard Command Summary

COMMAND	DESCRIPTION	M	P
show loopguard	Displays whether loop guard is enabled or disabled and packet statistics on each ports.	E	13
loopguard	Enables loop guard on the Switch.	C	13
no loopguard	Disables loop guard on the Switch.	C	13
interface port-channel <port-list>	Enters config-interface mode for the specified port(s).	C	13
loopguard	Enables loop guard on the port(s). You have to enable loopguard on the Switch as well. The Switch shuts down a port if the Switch detects that packets sent out on the port loop back to the Switch. Note: The loop guard feature can not be enabled on the ports that have Spanning Tree Protocol (RSTP, MRSTP or MSTP) enabled.	C	13
loopguard mode <fix dynamic>	Sets the port mode for loop guard. fix : The Switch shuts down the port(s) if the Switch detects that packets sent out on the port(s) loop back to the Switch. To activate the port again, you need to manually enable the port(s) using the interface port-channel <port-list> no inactive command. dynamic : The Switch shuts down the port(s) if the Switch detects that packets sent out on the port(s) loop back to the Switch. The port(s) becomes active automatically after the time you set using the interface port-channel <port-list> loopguard recover-time <60~600> command.	C	13
loopguard recover-time <60~600>	Sets the time (in seconds) the port(s) in dynamic mode waits to become active again after shut down by the Switch.	C	13
no loopguard	Disables loop guard on the port(s).	C	13
no loopguard recover-time	Removes the loop guard recovery time setting.	C	13
clear loopguard	Clears loop guard counters. You can view the counters using the show loopguard command.	E	13

Table 114 loopguard Command Summary (continued)

COMMAND	DESCRIPTION	M	P
show loopguard port-mode	Displays the loop guard mode of each port on the Switch.	E	13
show loopguard port-recover-time	Displays the loop guard recovery time for each port on the Switch.	E	13

41.2 Command Example

This example shows how to enable Loop Guard on port 2 and display the loop guard status on all ports.

```

sysname# configure
sysname(config)# interface port 2
sysname(config-interface)# loopguard
sysname(config-interface)# exit
sysname(config)# exit
sysname# show loopguard
  LoopGuard Status: Disable

Port  Port      LoopGuard  Total    Total    Bad    Shutdown
No   Status     Status     TxPkts  RxPkts  Pkts   Time
-----
  1   Active     Disable    0        0        0    00:00:00 UTC Jan 1 1970
  2   Active     Enable    0        0        0    00:00:00 UTC Jan 1 1970
  3   Active     Disable    0        0        0    00:00:00 UTC Jan 1 1970
  4   Active     Disable    0        0        0    00:00:00 UTC Jan 1 1970
  5   Active     Disable    0        0        0    00:00:00 UTC Jan 1 1970
-----SNIP-----

```

CHAPTER 42

MAC Address Commands

Use these commands to look at the MAC address table and to configure MAC address learning. The Switch uses the MAC address table to determine how to forward frames.

42.1 Command Summary

The following section lists the commands for this feature.

Table 115 mac, mac-aging-time, and mac-flush Command Summary

COMMAND	DESCRIPTION	M	P
<code>show mac-aging-time</code>	Displays MAC learning aging time.	E	13
<code>mac-aging-time <10-3000></code>	Sets learned MAC aging time in seconds.	C	13
<code>show mac address-table all</code> [<sort>]	Displays MAC address table. You can sort by MAC address, vlan ID or port. <i>sort</i> : MAC, VID, or PORT.	E	13
<code>show mac address-table count</code>	Displays the total number of MAC addresses in the MAC address table.	E	13
<code>show mac address-table port</code> <port-list> [<sort>]	Displays the static MAC address table for the specified port(s). <i>sort</i> : MAC, VID, or PORT.	E	13
<code>show mac address-table static</code>	Displays the static MAC address table.	E	13
<code>show mac address-table vlan</code> <vlan-id> [<sort>]	Displays the static MAC address table for the specified VLAN. <i>sort</i> : MAC, VID, or PORT.	E	13
<code>mac-flush [port-num]</code>	Clears the MAC address table. Optionally, removes all learned MAC address on the specified port.	E	13

42.2 Command Examples

This example shows the current MAC address table.

```
sysname# show mac address-table all
Port      VLAN ID      MAC Address      Type
1         1           00:00:aa:10:05:87 Dynamic
1         1           00:00:aa:77:86:48 Dynamic
1         1           00:02:e3:57:ea:4f Dynamic
1         1           00:04:80:9b:78:00 Dynamic
1         1           00:0f:fe:ad:58:ab Dynamic
```


The following table describes the labels in this screen.

Table 116 show mac address-table

LABEL	DESCRIPTION
Port	This is the MAC address of the device from which this frame came.
VLAN ID	This is the VLAN group to which this frame belongs.
MAC Address	This is the port from which the above MAC address was learned.
Type	This shows whether the MAC address is <i>dynamic</i> (learned by the Switch) or <i>static</i> (manually entered using <code>mac-forward</code> commands, see Chapter 46 on page 175).

CHAPTER 43

MAC Authentication Commands

Use these commands to configure MAC authentication on the Switch.

43.1 MAC Authentication Overview

MAC authentication allows you to validate access to a port based on the MAC address and password of the client.

Note: You also need to configure a RADIUS server (see [Chapter 60 on page 208](#)).

See also [Chapter 26 on page 91](#) for IEEE 802.1x port authentication commands and [Chapter 56 on page 196](#) for port security commands.

43.2 Command Summary

The following section lists the commands for this feature.

Table 117 mac-authentication Command Summary

COMMAND	DESCRIPTION	M	P
<code>show mac-authentication</code>	Displays MAC authentication settings for the Switch.	E	13
<code>show mac-authentication config</code>	Displays MAC authentication settings on a port by port basis with authentication statistics for each port.	E	13
<code>mac-authentication</code>	Enables MAC authentication on the Switch.	C	13
<code>mac-authentication nameprefix <name-string></code>	Sets the prefix appended to the MAC address before it is sent to the RADIUS server for authentication. The prefix can be up to 32 printable ASCII characters.	C	13
<code>mac-authentication password <name-string></code>	Sets the password sent to the RADIUS server for clients using MAC authentication. The password can be up to 32 printable ASCII characters.	C	13
<code>mac-authentication timeout <1-3000></code>	Specifies the amount of time before the Switch allows a client MAC address that fails authentication to try and authenticate again. This settings is superseded by the <code>mac-aging-time</code> command.	C	13
<code>no mac-authentication</code>	Disables MAC authentication on the Switch.	C	13

Table 117 mac-authentication Command Summary (continued)

COMMAND	DESCRIPTION	M	P
no mac-authentication timeout	Sets the MAC address entries learned via MAC authentication to never age out.	C	13
interface port-channel <port-list>	Enables a port or a list of ports for configuration.	C	13
mac-authentication	Enables MAC authentication via a RADIUS server on the port(s).	C	13
no mac-authentication	Disables MAC authentication via a RADIUS server on the port(s).	C	13

43.3 Command Examples

This example enables MAC authentication on the Switch. Specifies the name prefix **clientName** and the MAC authentication password **Lech89**. Next, MAC authentication is activated on ports 1 - 5 and configuration details are displayed.

```

sysname(config)# mac-authentication
sysname(config)# mac-authentication nameprefix clientName
sysname(config)# mac-authentication password Lech89
sysname(config)# interface port-channel 1-5
sysname(config-interface)# mac-authentication
sysname(config-interface)# exit
sysname(config)# exit
sysname# show mac-authentication
NamePrefix:      clientName
Password:        Lech89
Update Time:     None
Deny Number:    0

```

CHAPTER 44

MAC-based VLAN

Commands

Use these commands to group traffic into logical VLANs based on a specified MAC address.

44.1 MAC-based VLAN Overview

MAC-based VLANs allow you to group traffic into logical VLANs based on the MAC address you specify. When a frame is received on a port, the Switch checks if a tag is added already and the MAC address it came from. The untagged packets from the same MAC address(es) are then placed in the same MAC-based VLAN. One advantage of using MAC-based VLANs is that priority can be assigned to traffic from the same MAC address(es).

Note: MAC-based VLAN applies to untagged packets and is applicable only when you use IEEE 802.1Q-tagged VLAN.

44.2 Command Summary

The following section lists the commands for this feature.

Table 118 mac-based-vlan Command Summary

COMMAND	DESCRIPTION	M	P
<code>show mac-vlan</code>	Displays MAC-based VLAN settings.	E	13
<code>mac-based-vlan name <name> mac-address <mac-address> vlan <vid> priority <0-7></code>	Creates a MAC-based VLAN. <i>name</i> : 1-32 alphanumeric characters.	C	13
<code>mac-based-vlan name <name> mac-address <mac-address> vlan <vid> priority <0-7> inactive</code>	Disables the specified MAC-based VLAN. <i>name</i> : 1-32 alphanumeric characters.	C	13
<code>no mac-based-vlan all</code>	Removes all MAC-based VLANs.	C	13
<code>no mac-based-vlan mac-address <mac-address></code>	Removes the specified MAC-based VLAN.	C	13

44.3 Command Examples

This example creates one MAC-based VLAN and displays the settings on the Switch.

```
sysname# configure
sysname(config)# mac-based-vlan name test mac-address 00:c5:01:23:45:67
vlan 1 priority 3
sysname(config)# exit
sysname# show mac-vlan
Name          MAC addr  Vlan  Priority  Entry Active
-----
test 00:c5:01:23:45:67    1      3          Yes
sysname#
```

CHAPTER 45

MAC Filter Commands

Use these commands to filter traffic going through the Switch based on the MAC addresses and VLAN group (ID).

Note: Use the running configuration commands to look at the current MAC filter settings. See [Chapter 64 on page 235](#).

45.1 Command Summary

The following table describes user-input values available in multiple commands for this feature.

Table 119 mac-filter User-input Values

COMMAND	DESCRIPTION
<i>name</i>	1-32 alphanumeric characters.

The following section lists the commands for this feature.

Table 120 mac-filter Command Summary

COMMAND	DESCRIPTION	M	P
mac-filter name <name> mac <mac-addr> vlan <vlan-id> drop <src dst both>	Configures a static MAC address port filtering rule.	C	13
no mac-filter mac <mac-addr> vlan <vlan-id>	Deletes the specified MAC filter rule.	C	13
mac-filter name <name> mac <mac-addr> vlan <vlan-id> drop <src dst both> inactive	Disables a static MAC address port filtering rule.	C	13
no mac-filter mac <mac-addr> vlan <vlan-id> inactive	Enables the specified MAC-filter rule.	C	13

45.2 Command Examples

This example creates a MAC filter called "filter1" that drops packets coming from or going to MAC address 00:12:00:12:00:12 on VLAN 1.

```
sysname# configure
sysname(config)# mac-filter name filter1 mac 00:12:00:12:00:12 vlan 1
```

CHAPTER 46

MAC Forward Commands

Use these commands to configure static MAC address forwarding.

Note: Use the MAC address commands to look at the current MAC forward settings. See [Chapter 42 on page 168](#).

46.1 Command Summary

The following table describes user-input values available in multiple commands for this feature.

Table 121 mac-forward User-input Values

COMMAND	DESCRIPTION
<i>name</i>	1-32 alphanumeric characters.

The following section lists the commands for this feature.

Table 122 mac-forward Command Summary

COMMAND	DESCRIPTION	M	P
<code>mac-forward name <name> mac <mac-addr> vlan <vlan-id> interface <interface-id></code>	Configures a static MAC address forwarding rule.	C	13
<code>no mac-forward mac <mac-addr> vlan <vlan-id> interface <interface-id></code>	Removes the specified MAC forwarding entry, belonging to a VLAN group forwarded through an interface.	C	13
<code>mac-forward name <name> mac <mac-addr> vlan <vlan-id> interface <interface-id> inactive</code>	Disables a static MAC address forwarding rule.	C	13
<code>no mac-forward mac <mac-addr> vlan <vlan-id> interface <interface-id> inactive</code>	Enables the specified MAC address, belonging to a VLAN group forwarded through an interface.	C	13

CHAPTER 47

Mirror Commands

Use these commands to copy a traffic flow for one or more ports to a monitor port so that you can examine the traffic on the monitor port without interference.

47.1 Command Summary

The following section lists the commands for this feature.

Table 123 mirror Command Summary

COMMAND	DESCRIPTION	M	P
<code>interface port-channel <port-list></code>	Enters config-interface mode for the specified port(s).	C	13
<code>mirror</code>	Enables port mirroring in the interface.	C	13
<code>mirror dir <ingress egress both></code>	Enables port mirroring for incoming (<code>ingress</code>), outgoing (<code>egress</code>) or both incoming and outgoing (<code>both</code>) traffic.	C	13
<code>no mirror</code>	Disables port mirroring on the port(s).	C	13
<code>mirror-port</code>	Enables port mirroring on the Switch.	C	13
<code>mirror-port <port-num></code>	Specifies the monitor port (the port to which traffic flow is copied) for port mirroring.	C	13
<code>mirror-port rspan-vid <vid></code>	Sets the VLAN ID that the Switch adds to the mirrored traffic before forwarding it out. This allows you to separate the mirrored traffic from the non-mirrored traffic on the monitor port. The tag will be added even the mirrored traffic is double-tagged.	C	13
<code>no mirror-port</code>	Disables port mirroring on the Switch.	C	13
<code>no mirror-port</code>	Disables port mirroring on the Switch.	C	13
<code>show mirror</code>	Displays the port mirror settings.	E	13

47.2 Command Examples

This example enables port mirroring and copies outgoing traffic from ports 1, 4, 5, and 6 to port 3.

```
sysname# configure
sysname(config)# mirror-port
sysname(config)# mirror-port 3
sysname(config)# interface port-channel 1,4-6
sysname(config-interface)# mirror
sysname(config-interface)# mirror dir egress
```


CHAPTER 48

MRSTP Commands

Use these commands to configure MRSTP on the Switch.

48.1 MRSTP Overview

The Switch allows you to configure multiple instances of Rapid Spanning Tree Protocol (RSTP) as defined in the following standard.

- IEEE 802.1w Rapid Spanning Tree Protocol

See [Chapter 71 on page 253](#) for information on RSTP commands and [Chapter 49 on page 179](#) for information on MSTP commands.

48.2 Command Summary

The following section lists the commands for this feature.

Table 124 Command Summary: mrstp

COMMAND	DESCRIPTION	M	P
<code>show mrstp <tree-index></code>	Displays multiple rapid spanning tree configuration for the specified tree. <i>tree-index</i> : this is a number identifying the RSTP tree configuration. Note: The number of RSTP tree configurations supported differs by model. Refer to your User's Guide for details.	E	3
<code>spanning-tree mode <RSTP MRSTP MSTP></code>	Specifies the STP mode you want to implement on the Switch.	C	13
<code>mrstp <tree-index></code>	Activates the specified RSTP configuration.	C	13
<code>mrstp <tree-index> priority < 0 4096 8192 12288 16384 20480 24576 28672 32768 36864 40960 45056 49152 53248 57344 61440 ></code>	Sets the bridge priority of the Switch for the specified RSTP configuration. The value must be a multiple of 4096.	C	13
<code>mrstp <tree-index> hello-time <1~10> maximum-age <6~40> forward-delay <4~30></code>	Sets the Hello Time, Maximum Age and Forward Delay values on the Switch for the specified RSTP configuration.		
<code>mrstp interface <port-list></code>	Activates RSTP on the specified ports.	C	13
<code>mrstp interface <port-list> path-cost <1~65535></code>	Sets a path cost to the specified ports.	C	13

Table 124 Command Summary: mrstp (continued)

COMMAND	DESCRIPTION	M	P
mrstp interface <port-list> priority <0~255>	Sets the priority value to the specified ports for RSTP.	C	13
mrstp interface <port-list> tree-index <1~2>	Assigns the specified port list to a specific RSTP configuration.	C	13
no mrstp <tree-index>	Disables the specified RSTP configuration.	C	13
no mrstp interface <port-list>	Disables the STP assignment from the specified port(s).	C	13

48.3 Command Examples

This example configures MRSTP in the following way:

- Enables MRSTP on the Switch.
- Activates tree 1 and sets the bridge priority, Hello Time, Maximum Age and Forward Values for this RSTP configuration.
- Activates MRSTP for ports 1-5 and sets path cost on these ports to 127.
- Adds ports 1-5 to tree index 1.

```

sysname# configure
sysname(config)# spanning-tree mode mrstp
sysname(config)# mrstp 1
sysname(config)# mrstp 1 priority 16384
sysname(config)# mrstp 1 hello-time 2 maximum-age 15 forward-delay 30
sysname(config)# mrstp interface 1-5
sysname(config)# mrstp interface 1-5 path-cost 127
sysname(config)# mrstp interface 1-5 tree-index 1
sysname(config)# exit

```

CHAPTER 49

MSTP Commands

Use these commands to configure Multiple Spanning Tree Protocol (MSTP) as defined in IEEE 802.1s.

49.1 Command Summary

The following section lists the commands for this feature.

Table 125 mstp Command Summary

COMMAND	DESCRIPTION	M	P
show mstp	Displays MSTP configuration for the Switch.	E	3
spanning-tree mode <RSTP MRSTP MSTP>	Specifies the STP mode you want to implement on the Switch.	C	13
mstp	Activates MSTP on the Switch. Note: You should switch the STP mode to MSTP first using the previous command.	C	13
no mstp	Disables MSTP on the Switch.	C	13
mstp configuration-name <name>	Sets a name for an MSTP region. <i>name</i> : 1-32 printable characters	C	13
mstp hello-time <1-10> maximum-age <6-40> forward-delay <4-30>	Sets Hello Time, Maximum Age and Forward Delay. <i>hello-time</i> : The time interval in seconds between BPDU (Bridge Protocol Data Units) configuration message generations by the root switch. <i>maximum-age</i> : The maximum time (in seconds) the Switch can wait without receiving a BPDU before attempting to reconfigure. <i>forward-delay</i> : The maximum time (in seconds) the Switch will wait before changing states.	C	13
mstp revision <0~65535>	Sets the revision number for this MST Region configuration.	C	13
mstp max-hop <1~255>	Sets the maximum hop value before BPDUs are discarded in the MST Region.	C	13

Table 126 mstp instance Command Summary

COMMAND	DESCRIPTION	M	P
show mstp instance <0~16>	Displays MSTP instance configuration.	E	3
no mstp instance <0~16>	Disables the specified MST instance on the Switch.	C	13
mstp instance <0~16> priority < 0 4096 8192 12288 16384 20480 24576 28672 32768 36864 40960 45056 49152 53248 57344 61440 >	Specifies the bridge priority of the instance. The priority must be a multiple of 4096.	C	13

Table 126 mstp instance Command Summary (continued)

COMMAND	DESCRIPTION	M	P
mstp instance <0~16> vlan <vlan-list>	Specifies the VLANs that belongs to the instance.	C	13
no mstp instance <0~16> vlan <1-4094>	Clears all VLAN assignments on an MST instance.	C	13
mstp instance <0~16> interface port-channel <port-list>	Specifies the ports you want to participate in this MST instance.	C	13
no mstp instance <0~16> interface port-channel <port-list>	Disables the assignment of specific ports from an MST instance.	C	13
mstp instance <0~16> interface port-channel <port-list> path-cost <1~65535>	Specifies the cost of transmitting a frame to a LAN through the port(s). It is recommended you assign it according to the speed of the bridge.	C	13
mstp instance <0~16> interface port-channel <port-list> priority <1~255>	Sets the priority for the specified ports. Priority decides which port should be disabled when more than one port forms a loop in a Switch. Ports with a higher priority numeric value are disabled first.	C	13

49.2 Command Examples

This example shows the current MSTP configuration.

```

sysname# show mstp
(a)BridgeMaxAge:           20      (seconds)
(b)BridgeHelloTime:       2       (seconds)
(c)BridgeForwardDelay:    15     (seconds)
(d)BridgeMaxHops:         128    (seconds)
(e)TransmissionLimit:     3
(f)ForceVersion:          3
(g)MST Configuration ID
  Format Selector:         0
  Configuration Name:     001349aefb7a
  Revision Number:        0
  Configuration Digest:   0xAC36177F50283CD4B83821D8AB26DE62
  msti      vlans mapped
  -----
  0         1-4094
  -----

```

The following table describes the labels in this screen.

Table 127 show mstp

LABEL	DESCRIPTION
BridgeMaxAge	This field displays the maximum time (in seconds) the Switch can wait without receiving a configuration message before attempting to reconfigure.
BridgeHelloTime	This field displays the time interval (in seconds) at which the Switch transmits a configuration message.
BridgeForwardDelay	This field displays the time (in seconds) the Switch will wait before changing states (that is, listening to learning to forwarding).
BridgeMaxHops	This field displays the number of hops (in seconds) in an MSTP region before the BPDU is discarded and the port information is aged.

Table 127 show mstp (continued)

LABEL	DESCRIPTION
TransmissionLimit	This field displays the maximum number of BPDUs that can be transmitted in the interval specified by BridgeHelloTime .
ForceVersion	This field indicates whether BPDUs are RSTP (a value less than 3) or MSTP (a value greater than or equal to 3).
MST Configuration ID	
Format Selector	This field displays zero, which indicates the use of the fields below.
Configuration Name	This field displays the configuration name for this MST region.
Revision Number	This field displays the revision number for this MST region.
Configuration Digest	A configuration digest is generated from the VLAN-MSTI mapping information. This field displays the 16-octet signature that is included in an MSTP BPDU. This field displays the digest when MSTP is activated on the system.
msti	This field displays the MSTI ID.
vlan mapped	This field displays which VLANs are mapped to an MSTI.

This example shows the current CIST configuration (MSTP instance 0).

```

sysname# show mstp instance 0
Bridge Info: MSTID: 0
  (a) BridgeID:                8000-001349aefb7a
  (b) TimeSinceTopoChange:    247
  (c) TopoChangeCount:        0
  (d) TopoChange:              0
  (e) DesignatedRoot:         8000-001349aefb7a
  (f) RootPathCost:           0
  (g) RootPort:                0x0000
  (h) RootMaxAge:              20      (seconds)
  (i) RootHelloTime:          2       (seconds)
  (j) RootForwardDelay:       15      (seconds)
  (k) BridgeMaxAge:           20      (seconds)
  (l) BridgeHelloTime:        2       (seconds)
  (m) BridgeForwardDelay:     15      (seconds)
  (n) ForceVersion:            mstp
  (o) TransmissionLimit:      3
                                     (seconds)

  (p) CIST_RRootID:           8000-001349aefb7a
  (q) CIST_RRootPathCost:     0

```

The following table describes the labels in this screen.

Table 128 show mstp instance

LABEL	DESCRIPTION
MSTID	This field displays the MSTI ID.
BridgeID	This field displays the unique identifier for this bridge, consisting of bridge priority plus MAC address.
TimeSinceTopoChange	This field displays the time since the spanning tree was last reconfigured.
TopoChangeCount	This field displays the number of times the spanning tree has been reconfigured.

Table 128 show mstp instance (continued)

LABEL	DESCRIPTION
TopoChange	This field indicates whether or not the current topology is stable. 0: The current topology is stable. 1: The current topology is changing.
DesignatedRoot	This field displays the unique identifier for the root bridge, consisting of bridge priority plus MAC address.
RootPathCost	This field displays the path cost from the root port on this Switch to the root switch.
RootPort	This field displays the priority and number of the port on the Switch through which this Switch must communicate with the root of the Spanning Tree.
RootMaxAge	This field displays the maximum time (in seconds) the root switch can wait without receiving a configuration message before attempting to reconfigure.
RootHelloTime	This field displays the time interval (in seconds) at which the root switch transmits a configuration message.
RootForwardDelay	This field displays the time (in seconds) the root switch will wait before changing states (that is, listening to learning to forwarding).
BridgeMaxAge	This field displays the maximum time (in seconds) the Switch can wait without receiving a configuration message before attempting to reconfigure.
BridgeHelloTime	This field displays the time interval (in seconds) at which the Switch transmits a configuration message.
BridgeForwardDelay	This field displays the time (in seconds) the Switch will wait before changing states (that is, listening to learning to forwarding).
ForceVersion	This field indicates whether BPDUs are RSTP (a value less than 3) or MSTP (a value greater than or equal to 3).
TransmissionLimit	This field displays the maximum number of BPDUs that can be transmitted in the interval specified by BridgeHelloTime .
CIST_RRootID	This field displays the unique identifier for the CIST regional root bridge, consisting of bridge priority plus MAC address.
CIST_RRootPathCost	This field displays the path cost from the root port on this Switch to the CIST regional root switch.

This example adds the Switch to the MST region **MSTRegionNorth**. **MSTRegionNorth** is on revision number 1. In **MSTRegionNorth**, VLAN 2 is in MST instance 1, and VLAN 3 is in MST instance 2.

```

sysname# configure
sysname(config)# mstp
sysname(config)# mstp configuration-name MSTRegionNorth
sysname(config)# mstp revision 1
sysname(config)# mstp instance 1 vlan 2
sysname(config)# mstp instance 2 vlan 3
sysname(config)# exit

```

CHAPTER 50

Multiple Login Commands

Use these commands to configure multiple administrator logins on the Switch.

50.1 Command Summary

The following section lists the commands for this feature.

Table 129 multi-login Command Summary

COMMAND	DESCRIPTION	M	P
show multi-login	Displays multi-login information.	E	13
multi-login	Enables multi-login.	C	14
no multi-login	Disables another administrator from logging into Telnet or SSH.	C	14

50.2 Command Examples

This example shows the current administrator logins.

```
sysname# show multi-login
[session info ('*' denotes your session)]
index session    remote ip
-----
   1 telnet-d    172.1.1.15
  * 2 telnet-d    172.1.1.15
```

The following table describes the labels in this screen.

Table 130 show multi-login

LABEL	DESCRIPTION
index	This field displays a sequential number for this entry. If there is an asterisk (*) next to the index number, this entry is your session.
session	This field displays the service the administrator used to log in.
remote ip	This field displays the IP address of the administrator's computer.

CHAPTER 51

MVR Commands

Use these commands to configure Multicast VLAN Registration (MVR).

51.1 Command Summary

The following section lists the commands for this feature.

Table 131 mvr Command Summary

COMMAND	DESCRIPTION	M	P
<code>show mvr</code>	Shows the MVR status.	E	13
<code>show mvr <vlan-id></code>	Shows the detailed MVR status and MVR group configuration for a VLAN.	E	13
<code>mvr behavior <0:IGMP Snooping 1:IGMP Proxy></code>	Set this to 0 to use IGMP snooping mechanism for multicast VLAN traffic in this MVR network. IGMP snooping enables the Switch to handle multicast traffic more efficiently and effectively. Set this to 1 to use IGMP proxy mechanism for multicast VLAN traffic in this MVR network. Select this to have the Switch reduce multicast traffic by sending IGMP host messages to a multicast router or server on behalf of all multicast hosts connected to the Switch.	C	13
<code>mvr <vlan-id></code>	Enters config-mvr mode for the specified MVR (multicast VLAN registration). Creates the MVR, if necessary.	C	13
<code>8021p-priority <0~7></code>	Sets the IEEE 802.1p priority of outgoing MVR packets.	C	13
<code>inactive</code>	Disables these MVR settings.	C	13
<code>no inactive</code>	Enables these MVR settings.	C	13
<code>mode <dynamic compatible></code>	Sets the MVR mode (dynamic or compatible).	C	13
<code>name <name-str></code>	Sets the MVR name for identification purposes. <name-str>: 1-32 English keyboard characters	C	13
<code>receiver-port <port-list></code>	Sets the receiver port(s). An MVR receiver port can only receive multicast traffic in a multicast VLAN. This is applicable for VDSL ports.	C	13
<code>no receiver-port <port-list></code>	Disables the receiver port(s). An MVR receiver port can only receive multicast traffic in a multicast VLAN.	C	13
<code>source-port <port-list></code>	Sets the source port(s). An MVR source port can send and receive multicast traffic in a multicast VLAN. This is applicable for Ethernet ports.	C	13
<code>no source-port <port-list></code>	Disables the source port(s). An MVR source port can send and receive multicast traffic in a multicast VLAN.	C	13
<code>tagged <port-list></code>	Sets the port(s) to tag VLAN tags.	C	13

Table 131 mvr Command Summary (continued)

COMMAND	DESCRIPTION	M	P
no tagged <port-list>	Sets the port(s) to untag VLAN tags.	C	13
group <name-str> start-address <ip-address> end-address <ip-address>	Sets the multicast group range for the MVR. <name-str>: 1-32 English keyboard characters	C	13
no group	Disables all MVR group settings.	C	13
no group <name-str>	Disables the specified MVR group setting.	C	13
no mvr <vlan-id>	Removes an MVR configuration of the specified VLAN from the Switch.	C	13

51.2 Command Examples

This example configures MVR in the following ways:

- 1 Enters MVR mode. This creates a multicast VLAN with the name `multivlan` (assigned in the next command) and the VLAN ID of 3.
- 2 Specifies source ports 2, 3, 5 for MVR VLAN 3.
- 3 Specifies receiver ports 6-8 for MVR VLAN 3.
- 4 Specifies dynamic mode for the multicast group.
- 5 Configures MVR multicast group addresses 224.0.0.1 through 224.0.0.255 by the name of `ipgroup`.
- 6 Exits MVR mode.

```

sysname(config)# mvr 3
sysname(config-mvr)# name multivlan
sysname(config-mvr)# source-port 2,3,5
sysname(config-mvr)# receiver-port 6-8
sysname(config-mvr)# mode dynamic
sysname(config-mvr)# group ipgroup start-address 224.0.0.1 end-address
--> 224.0.0.255
sysname(config-mvr)# exit

```

CHAPTER 52

NDP Inspection Commands

The Neighbor Discovery Protocol (NDP) is a protocol used to discover other IPv6 devices and track neighbor reachability in a network. Use the following commands to manage NDP inspection.

Table 132 NDP Inspection Commands

COMMAND	DESCRIPTION	M	P
<code>show ndp inspection</code>	Displays NDP inspection configuration details.	E	3
<code>show ndp inspection vlan <vlan-list></code>	Displays NDP inspection status for the specified VLANs.	E	3
<code>show ndp inspection interface port-channel <port-list></code>	Displays the NDP inspection settings for the specified ports.	E	3
<code>show ndp inspection filter</code>	Displays all NDP inspection filters.	E	3
<code>show ndp inspection filter [<mac-addr>] [vlan <vlan-id>]</code>	Displays the current list of MAC address filters that were created because the Switch identified an unauthorized NDP packet. Optionally, lists MAC address filters based on the MAC address or VLAN ID in the filter.	E	3
<code>show ndp inspection log</code>	Displays the log settings configured on the Switch. It also displays the log entries recorded on the Switch.	E	3
<code>show ndp inspection statistics</code>	Displays all NDP inspection statistics on the Switch.	E	3
<code>show ndp inspection statistics vlan <vlan-list></code>	Displays NDP inspection statistics for the specified VLANs.	E	3
<code>no ndp inspection vlan <vlan-list></code>	Disables NDP inspection settings for the specified VLANs.	C	13
<code>no ndp inspection vlan <vlan-list> logging</code>	Disables logging of messages generated by NDP inspection for the specified VLANs.	C	13
<code>no ndp inspection log-buffer entries</code>	Resets the maximum number of log messages that can be generated by NDP packets and not sent to the syslog server to the default value of 1024.	C	13
<code>no ndp inspection log-buffer logs</code>	Resets the maximum number of syslog messages the Switch can send to the syslog server in one batch to the default value.	C	13
<code>no ndp inspection filter-aging-time</code>	Resets how long the MAC address filter remains in the Switch after the Switch identifies an unauthorized NDP packet to the default value.	C	13
<code>no ndp inspection</code>	Disables NDP inspection on the Switch.	C	13
<code>interface port-channel <port-list></code>	Enters config-interface mode for the specified ports.	C	13
<code>ndp inspection trust</code>	Sets the port to be a trusted port for NDP inspection. The Switch does not discard NDP packets on trusted ports for any reason.	C	13

Table 132 NDP Inspection Commands (continued)

COMMAND	DESCRIPTION	M	P
<code>no ndp inspection trust</code>	Disables this port from being a trusted port for NDP inspection.	C	13
<code>ndp inspection limit rate <0-2048> [burst interval <1-15>]</code>	Configures the rate limit of NDP inspection. This is the maximum rate (1-2048 packets per second) at which the Switch receives NDP packets from each port. The Switch discards any additional NDP packets. Enter 0 to disable this limit. Optionally configure burst interval. The burst interval is the length of time over which the rate of NDP packets is monitored for each port. For example, if the rate is 15 pps and the burst interval is 1 second, then the Switch accepts a maximum of 15 NDP packets in every one-second interval. If the burst interval is 5 seconds, then the Switch accepts a maximum of 75 NDP packets in every five-second interval.	C	13
<code>no ndp inspection limit</code>	Disables the rate limit for NDP packets.	C	13
<code>ndp inspection vlan <vlan-list></code>	Enables NDP inspection on the specified VLANs.	C	13
<code>ndp inspection vlan <vlan-list> logging [all none permit deny]</code>	Enables logging of NDP inspection events on the specified VLANs. Optionally specifies which types of events to log.	C	13
<code>ndp inspection log-buffer entries <0-1024></code>	Specifies the maximum number (0-1024) of log messages that can be recorded about NDP packets and not sent to the syslog server. If the number of log messages in the Switch exceeds this number, the Switch stops recording log messages and simply starts counting the number of entries that were dropped due to the lack of available buffer.	C	13
<code>ndp inspection log-buffer logs <0-1024> [interval <0-86400>]</code>	Sets the NDP inspection log sending rate. Specify the number of syslog messages (0-1024) to send to the syslog server in one batch. When the NDP inspection filter reaches this many logs the Switch sends them to the syslog server. Optionally specify how often (0-86400 seconds) the Switch sends a batch of syslog messages to the syslog server using <code>interval</code> .	C	13
<code>ndp inspection filter-aging-time <1-2147483647></code>	Specifies for up to how long (1-2147483647 seconds) the Switch keeps NDP inspection filter records. The Switch automatically deletes records older than this.	C	13
<code>ndp inspection filter-aging-time none</code>	Has the Switch keep NDP inspection filter records indefinitely.	C	13
<code>ndp inspection</code>	Enables NDP inspection on the Switch. You still have to enable NDP inspection on specific VLAN and specify trusted ports.	C	13
<code>clear ndp inspection filter</code>	Deletes all of the Switch's NDP inspection filter records.	E	13
<code>clear ndp inspection log</code>	Deletes all of the Switch's NDP inspection log entries.	E	13
<code>clear ndp inspection statistics</code>	Removes all of the Switch's NDP inspection statistics.	E	13

Table 132 NDP Inspection Commands (continued)

COMMAND	DESCRIPTION	M	P
<code>clear ndp inspection statistics vlan <vlan-list></code>	Removes NDP inspection statistics for the specified VLAN.	E	13
<code>no ndp inspection filter <mac-addr> vlan <vlan-id></code>	Deletes the MAC address filter for the specified MAC address and VLAN ID.	E	13

CHAPTER 53

Packet Filter Commands

Use these commands to set which types of packets the Switch accepts or blocks on individual DSL PVCs when the Switch falls back to using ADSL.

53.1 Command Summary

The following table describes user-input values available in multiple commands for this feature.

Table 133 packet-filter User-input Values

COMMAND	DESCRIPTION
<i>interface-id</i>	VDSL port number.
vpi <0-255>	Virtual Path Identifier.
vci <32-65535>	Virtual Circuit Identifier.

The following section lists the commands for this feature.

Table 134 packet-filter Command Summary

COMMAND	DESCRIPTION	M	P
show packet-filter	Displays which types of packets the Switch accepts or blocks on individual DSL PVCs when the Switch falls back to using ADSL.	E	3
packet-filter interface port-channel <interface-id> vpi <0-255> vci <32-65535> accept-all	Sets the Switch to allow any type of traffic on the specified channel.	C	13
packet-filter interface port-channel <interface-id> vpi <0-255> vci <32-65535> accept-all inactive	Removes the setting that has the Switch allow any type of traffic on the specified channel.	C	13
packet-filter interface port-channel <interface-id> vpi <0-255> vci <32-65535> pppoe-only	Sets the Switch to allow only PPPoE traffic on the specified channel. The Switch will drop any non-PPPoE packets on the channel.	C	13
packet-filter interface port-channel <interface-id> vpi <0-255> vci <32-65535> pppoe-only inactive	Removes the setting that has the Switch allow only PPPoE traffic on the specified channel.	C	13

Table 134 packet-filter Command Summary (continued)

COMMAND	DESCRIPTION	M	P
<pre>packet-filter interface port- channel <interface-id> vpi <0- 255> vci <32-65535> custom <[pppoe] [ip] [arp] [dhcp] [netbios] [eapol] [igmp] [inactive]></pre>	<p>Sets the Switch to block a customized list of packet types on the specified channel.</p> <p>pppoe: Point-to-Point Protocol over Ethernet relies on PPP and Ethernet. It is a specification for connecting the users on an Ethernet to the Internet through a common broadband medium, such as a single DSL line, wireless device, or cable modem.</p> <p>ip: Internet Protocol. The underlying protocol for routing packets on the Internet and other TCP/IP-based networks.</p> <p>arp: Address Resolution Protocol for mapping an Internet Protocol address (IP address) to a physical computer address that is recognized in the local network.</p> <p>dhcp: Dynamic Host Configuration Protocol automatically assigns IP addresses to clients when they log on. DHCP centralizes IP address management on central computers that run the DHCP server program. DHCP leases addresses, for a period of time, which means that past addresses are "recycled" and made available for future reassignment to other systems.</p> <p>netbios: Network Basic Input/Output System is TCP or UDP packets that enable a computer to find other computers.</p> <p>eapol: Extensible Authentication Protocol, RFC 2486 over LAN. EAP is used with IEEE 802.1x to allow additional authentication methods (besides RADIUS) to be deployed with no changes to the access point or the wireless clients.</p> <p>igmp: Internet Group Management Protocol is used when sending packets to a specific group of hosts.</p> <p>inactive: Disables this packet filter.</p>	C	13
<pre>no packet-filter interface port-channel <interface-id> vpi <0-255> vci <32-65535></pre>	Removes the packet filter settings for the specified channel.	C	13

CHAPTER 54

Password Commands

Use these commands to configure passwords for specific privilege levels on the Switch.

54.1 Command Summary

The following table describes user-input values available in multiple commands for this feature.

Table 135 password User-input Values

COMMAND	DESCRIPTION
<i>password</i>	1-32 alphanumeric characters.

The following section lists the commands for this feature.

Table 136 password Command Summary

COMMAND	DESCRIPTION	M	P
<code>admin-username <admin-username> admin-password <pw-string> <confirm-string></code>	Changes the administrator username and password. <i>confirm-string</i> : Retype password to confirm.	C	14
<code>admin-password <password> <confirm-string></code>	Changes the administrator password.	C	14
<code>password <password></code>	Changes the password for enable mode.	C	14
<code>password <password> privilege <0~14></code>	Sets the access privilege level for the specified enable mode password. Each command has a privilege level. A user can only use commands with lower privilege levels than the password the user used entering enable mode.	C	14
<code>no password privilege <0~14></code>	Removes an enable mode password setting with the specified privilege level.	C	14

54.2 Command Example

This example shows how to change the administrator password to '987654'.

```
sysname# configure
sysname(config)# admin-password 987654 987654
sysname(config)# exit
sysname#
```

This example shows how to set the password to 'abcd' and the privilege to 14 for enable mode.

```
sysname# configure
sysname(config)# password abcd privilege 14
    Enable password level 14 set
sysname(config)# exit
sysname#
```


CHAPTER 55

Policy Commands

Use these commands to specify the treatment a traffic flow gets after you identify the traffic flow.

Note: You have to create a classification rule before configuring a policy rule. See [Chapter 11 on page 44](#) for classifier commands.

55.1 Command Summary

The following section lists the commands for this feature.

Table 137 policy Command Summary

COMMAND	DESCRIPTION	M	P
<code>show policy [name]</code>	Displays all policy-related information. Optionally, displays the specified policy.	E	13
<code>policy <name> classifier <classifier-list> [<vlan <vlan-id>] [egress-port <port-num>] [priority <0~7>] [dscp <0-63>] [tos <0~7>] [bandwidth <1-1023>] [outgoing-packet-format <tagged untagged>] [out-of-profile-dscp <0-63>] [forward-action <drop forward>] [queue-action <prio-set prio-queue prio-replace-tos>] [diffserv-action <diff-set-tos diff-replace-priority diff-set-dscp>] [outgoing-mirror] [outgoing-eport] [outgoing-non-unicast-eport] [outgoing-set-vlan] [metering] [out-of-profile-action [<change-dscp>] [drop] [forward] [set-drop-prec]>] [inactive]></code>	<p>Configures a policy. A classifier distinguishes traffic into flows based on the configured criteria. A policy rule ensures that a traffic flow gets the requested treatment in the network.</p> <p><i>name</i>: 1-32 English keyboard characters</p> <p>These settings are parameters. They have no effect by themselves unless the appropriate action is specified below.</p> <p><i>vlan</i>: Outgoing VLAN ID.</p> <p><i>egress-port</i>: Outgoing port.</p> <p><i>priority</i>: Outgoing IEEE 802.1p priority.</p> <p><i>dscp</i>: Outgoing DSCP value.</p> <p><i>tos</i>: Outgoing Type of Service (ToS) value.</p> <p><i>bandwidth</i>: Maximum rate (in Mbps) at which flow is forwarded through Switch.</p> <p><i>outgoing-packet-format</i>: VLAN tagging on the specified egress port.</p> <p><i>out-of-profile-dscp</i>: Outgoing DSCP value for out-of-profile traffic.</p> <p>These settings are actions, which define how a traffic flow is treated.</p> <p><i>forward-action</i>: Control packet forwarding.</p> <p><i>drop</i>: Drop the packet.</p> <p><i>forward</i>: Do not drop the packet.</p> <p><i>queue-action</i>: Change the IEEE 802.1p priority field.</p> <p><i>prio-set</i>: Replace the IEEE 802.1p priority field with the specified priority.</p> <p><i>prio-queue</i>: Put the packets in the designated queue.</p> <p><i>prio-replace-tos</i>: Replace the IEEE 802.1p priority field with the specified tos.</p> <p><i>diffserv-action</i>: Changes the ToS or DSCP value.</p> <p><i>diff-set-tos</i>: Replace the TOS field with the specified tos.</p> <p><i>diff-replace-priority</i>: Replace the TOS field with the specified priority.</p> <p><i>diff-set-dscp</i>: Replace the DSCP value with the specified dscp.</p> <p><i>outgoing-mirror</i>: Send packet to mirror port.</p> <p><i>outgoing-eport</i>: Send packet to the specified egress port.</p> <p><i>outgoing-non-unicast-eport</i>: Send broadcast, multicast, DLF, marked-to-drop, or CPU frames to egress port.</p> <p><i>outgoing-set-vlan</i>: Replace the VLAN ID with the specified vlan.</p> <p><i>metering</i>: Enables the specified bandwidth for traffic flow.</p> <p><i>out-of-profile-action</i>: Specifies the action for out-of-profile traffic (traffic above the specified bandwidth).</p> <p><i>change-dscp</i>: Replace the DSCP value with the specified out-of-profile-dscp.</p> <p><i>drop</i>: Drop out-of-profile traffic.</p> <p><i>forward</i>: Forward out-of-profile traffic to its destination.</p> <p><i>set-drop-prec</i>: Do not drop the matching frame previously marked for dropping.</p> <p><i>inactive</i>: Deactivates the policy.</p>	C	13
<code>no policy <name></code>	Deletes the specified policy. A policy sets actions for the classified traffic.	C	13
<code>policy <name> inactive</code>	Disables the specified policy.	C	13

Table 137 policy Command Summary (continued)

COMMAND	DESCRIPTION	M	P
no policy <name> inactive	Enables a policy.	C	13
policy help	Provides more information about the specified command.	C	13

55.2 Command Examples

This example limits the amount of bandwidth for traffic from MAC address 00:50:ba:ad:4f:81 on port 2 to 1000 Kbps. Any traffic above this limit should be discarded.

First, configure a classifier that identifies all traffic from MAC address 00:50:ba:ad:4f:81 on port 2. Then, configure a policy to limit the amount of bandwidth to 1000 Kbps and to discard traffic above the limit for traffic identified by this classifier.

```

sysname# configure
sysname(config)# classifier Example source-mac 00:50:ba:ad:4f:81
--> source-port 2
sysname(config)# policy Test classifier Example bandwidth 1000 metering
--> out-of-profile-action drop
sysname(config)# exit

```

See [Chapter 11 on page 44](#) for more information about classifier commands.

CHAPTER 56

Port Security Commands

Use these commands to allow only packets with dynamically learned MAC addresses and/or configured static MAC addresses to pass through a port on the Switch. For maximum port security, enable port security, disable MAC address learning and configure static MAC address(es) for a port.

Note: It is not recommended you disable both port security and MAC address learning because this will result in many broadcasts.

56.1 Command Summary

The following section lists the commands for this feature.

Table 138 port-security Command Summary

COMMAND	DESCRIPTION	M	P
<code>show port-security</code>	Displays all port security settings.	E	13
<code>show port-security <port-list></code>	Displays port security settings on the specified port(s).	E	13
<code>port-security</code>	Enables port security on the Switch.	C	13
<code>port-security <port-list></code>	Enables port security on the specified port(s).	C	13
<code>port-security <port-list> address-limit <number></code>	Limits the number of (dynamic) MAC addresses that may be learned on the specified ports. <number>: 0-16384.	C	13
<code>port-security <port-list> learn inactive</code>	Disables MAC address learning on the specified port(s).	C	13
<code>port-security <port-list> MAC- freeze</code>	Disables MAC address learning and enables port security. Note: All previously learned dynamic MAC addresses are saved to the static MAC address table.	C	13
<code>port-security <port-list> spoofing <cr></code>	Enables anti-MAC address spoofing protection on the specified ports.	C	13
<code>no port-security</code>	Disables port security on the device.	C	13
<code>no port-security <port-list></code>	Disables port security on the specified ports.	C	13
<code>no port-security <port-list> learn inactive</code>	Enables MAC address learning on the specified ports.	C	13
<code>no port-security <port-list> spoofing</code>	Disables anti-MAC address spoofing protection on the specified ports.	C	13

56.2 Command Examples

This example enables port security on port 1 and limits the number of learned MAC addresses to 5.

```
sysname# configure
sysname(config)# port-security
sysname(config)# port-security 1
sysname(config)# no port-security 1 learn inactive
sysname(config)# port-security 1 address-limit 5
sysname(config)# exit
sysname# show port-security 1
  Port Security Active : YES
  Port   Active   Address Learning   Limited Number of Learned MAC Address
  01     Y         Y                   5
```

CHAPTER 57

Port-based VLAN Commands

Use these commands to configure port-based VLAN.

Note: These commands have no effect unless port-based VLAN is enabled.

57.1 Command Summary

The following section lists the commands for this feature.

Table 139 egress Command Summary

COMMAND	DESCRIPTION	M	P
<code>show interfaces config <port-list> egress</code>	Displays outgoing port information. <i>port-list</i> example: 1-10 means for ports from 1 to 10.	E	13
<code>vlan-type <802.1q port-based></code>	Specifies the VLAN type.	C	13
<code>interface port-channel <port-list></code>	Enters config-interface mode for the specified port(s).	C	13
<code>egress set <port-list></code>	Sets the outgoing traffic port list for a port-based VLAN.	C	13
<code>no egress set <port-list></code>	Removes the specified ports from the outgoing traffic port list.	C	13

57.2 Command Examples

This example looks at the ports to which incoming traffic from ports 1 and 2 can be forwarded.

```
sysname# show interfaces config 1-2 egress
Port 1: Enabled egress ports cpu, eg1
Port 2: Enabled egress ports cpu, eg1-eg4
```

CHAPTER 58

PPPoE Intermediate Agent Commands

Use these commands if you want the Switch to add a vendor-specific tag to PADI (PPPoE Active Discovery Initiation) and PADR (PPPoE Active Discovery Request) packets from PPPoE clients. This tag gives a PPPoE termination server additional information (such as the port number, VLAN ID, and MAC address) that the server can use to identify and authenticate a PPPoE client.

58.1 Command Summary

The following section lists the commands for this feature.

Table 140 PPPoE Intermediate Agent Command Summary

COMMAND	DESCRIPTION	M	P
<code>show pppoe+</code>	Shows PPPoE intermediate agent global settings for the whole system.	E	13
<code>show pppoe+ vlan <vlan-id all></code>	Shows PPPoE intermediate agent settings for the specified VLAN or all VLANs.	E	13
<code>pppoe+ [circuit-id]</code>	Enables PPPoE intermediate agent on the Switch (global-based). This mode has the Switch add an Agent Circuit ID tag to client PPPoE requests. By default, the Agent Circuit ID includes the slot ID and port number of the PPPoE client and VLAN ID on the PPPoE request packets. <i>circuit-id</i> : Set this to have the Switch append the specified circuit ID information (using the <code>pppoe+ circuitID-information</code> command) to the default Agent Circuit ID on received client PPPoE requests. Note: You cannot enable both global-based and VLAN-based PPPoE intermediate agent at the same time.	C	13
<code>pppoe+ circuitID-information <string></code>	Sets the additional information that you want the Switch to append to the default Agent Circuit ID to client PPPoE requests. <i>string</i> : up to 59 printable characters. Spaces are allowed.	C	13
<code>pppoe+ circuitID-type <user-define system hostname></code>	Sets whether the Switch uses a string according to a user-defined format, the system name, or the host name for the circuit ID if you choose not to append your own circuit ID.	C	13

Table 140 PPPoE Intermediate Agent Command Summary (continued)

COMMAND	DESCRIPTION	M	P
pppoe+ circuitID-user-define <format>	Sets a string of up to 63 ASCII characters to set the format for the circuit ID the Switch adds to client DHCP requests. <format>: The circuit-ID user defined format can use the following components: % marks the start of the predefined runtime variable %=: equals character % %0x00-FF: represents byte value %pname: the name configured for the port %pid: port index %ptel: the telephone number configured for the port %chid: the UNI VLAN ID %slotid: slot index of the logic port %svlan: the SVLAN ID the DHCP client runs on %hname: the host device name %mac: the client's MAC address, represented as a Byte. For example: 00:00:00:01:11:11 %blank: blank character %ptype: Ethernet "eth"	C	13
pppoe+ delim <none # ; . comma / space>	Sets up delimiter in Circuit ID to separate slot or port or VLAN and appended information.	C	13
pppoe+ linechar	Enables PPPoE intermediate agent and includes additional option 82 information in the DHCP packets.	C	13
pppoe+ linechar mode <rate full>	Determines which information from the DHCP packet is received. rate: only receives the actual bit rate information of the DHCP packet. full: receives the full line characteristics information of the DHCP packet. This includes the circuit ID, remote ID, vendor specifications, actual data upstream/downstream, and access loop encapsulation.	C	13
no pppoe+	Disables PPPoE intermediate agent (global-based) on the Switch.	C	13
no pppoe+ circuit-id	Sets the Switch to not append the additional circuit ID information to received client PPPoE requests.	C	13
no pppoe+ circuitID-type	Removes the setting that defines the format of circuit ID the Switch adds to client PPPoE requests without a circuit ID.	C	13
no pppoe+ circuitID-user-define	Removes the user defined format of circuit ID for the Switch to add to client PPPoE requests without a circuit ID.	C	13
no pppoe+ linechar	Disables including additional option 82 information in the DHCP packets.	C	13
pppoe+ remote-id	Sets the Switch to append the Remote ID information to client PPPoE requests.	C	13
pppoe+ remoteID-information <string>	Sets the additional information that you want the Switch to insert to client PPPoE requests. string: up to 63 printable characters. Spaces are allowed.	C	13
pppoe+ remoteID-delimiter <character>	Sets up delimiter in Remote ID to separate portname or telephone or user string.	C	13
pppoe+ remoteID-type <system port all>	Sets the option that indicates what data will be used as remote-id; system=user configured information string; port=name of port; all=append Remote ID by user identifier + port name + port telephone number.	C	13

Table 140 PPPoE Intermediate Agent Command Summary (continued)

COMMAND	DESCRIPTION	M	P
pppoe+ remoteID-type <system port all user-define>	Selects what data the Switch adds as remote ID to the client DHCP requests it receives: <i>system</i> = user configured info string; <i>port</i> = port number; <i>all</i> = append remote ID by user identifier + port + port TEL; or <i>user-define</i> = a user-defined string.	C	13
pppoe+ remoteID-user-define <format>	Sets a string of up to 63 ASCII characters to set the format for the remote ID information. <format>: The remote-ID user defined format can use the following components: % marks the start of the predefined runtime variable %%: equals character % %0x00~FF: represents byte value %pname: the name configured for the port %pid: port index %ptel: the telephone number configured for the port %chid: the UNI VLAN ID %slotid: slot index of the logic port %svlan: the SVLAN ID the DHCP client runs on %hname: the host device name %cmac: the client's MAC address, represented as a Byte. For example: 00:00:00:01:11:11 %blank: blank character %phtype: Ethernet "eth"	C	13
pppoe+ spv-option <private sp pv sv spv>	Sets the Circuit ID format. <ul style="list-style-type: none">• <i>private</i>: slot-port-VLAN in binary format.• <i>sp</i>: slot-port in string format.• <i>pv</i>: port-VLAN in string format.• <i>sv</i>: slot-VLAN in string format.• <i>spv</i>: slot-port-VLAN in string format.	C	13
no pppoe+ remote-id	Sets the Switch to not append the additional Remote ID information you specified using the pppoe+ remoteID-information command.	C	13
no pppoe+ remoteID-type	Removes the setting that defines the format of remote ID the Switch adds to client PPPoE requests without a remote ID.	C	13
no pppoe+ remoteID-user-define	Removes the user defined format of remote ID for the Switch to add to client PPPoE requests without a remote ID.	C	13
pppoe+ vlan <vlan-id> [circuit-id]	Enables PPPoE intermediate agent on the specified VLAN. This mode has the Switch add an Agent Circuit ID tag to client PPPoE requests. By default, the Agent Circuit ID includes the slot ID and port number of the PPPoE client and VLAN ID on the PPPoE packet. <i>circuit-id</i> : Set this to append additional circuit ID information specified using the pppoe+ vlan <vlan-id> circuitID-information <string> to the default Agent Circuit ID. Note: You cannot enable both global-based and VLAN-based PPPoE intermediate agent at the same time. Note: You have to enter an existing VLAN ID. You can create VLAN IDs using the vlan <vlan-id> command.	C	13
pppoe+ vlan <vlan-id> circuitID-information <string>	Sets the additional information to add to client PPPoE requests on the specified VLAN. <i>string</i> : up to 59 printable characters. Spaces are allowed.	C	13

Table 140 PPPoE Intermediate Agent Command Summary (continued)

COMMAND	DESCRIPTION	M	P
<code>pppoe+ vlan <vlan-id> circuitID-type <user-define system hostname></code>	Sets whether the Switch uses a string according to a user-defined format, the system name, or the host name for the circuit ID to add to client PPPoE requests on the specified VLAN.	C	13
<code>pppoe+ vlan <vlan-id> circuitID-user-define <string></code>	Sets a string of up to 63 ASCII characters to set the format for the circuit ID the Switch adds to client PPPoE requests on the specified VLAN. <string>: The circuit-ID user defined format can use the following components: % marks the start of the predefined runtime variable %%: equals character % %0x00~FF: represents byte value %pname: the name configured for the port %pid: port index %ptel: the telephone number configured for the port %chid: the UNI VLAN ID %slotid: slot index of the logic port %svlan: the SVLAN ID the DHCP client runs on %hname: the host device name %cmac: the client's MAC address, represented as a Byte. For example: 00:00:00:01:11:11 %blank: blank character %phtype: Ethernet "eth"	C	13
<code>pppoe+ vlan <vlan-id> delim <none # ; . comma / space></code>	Sets up delimiter in Circuit ID to separate slot or port or VLAN and appended information.	C	13
<code>pppoe+ vlan <vlan-id> linechar</code>	Enables PPPoE intermediate agent and includes additional option 82 information in the DHCP packets for this VLAN.	C	13
<code>pppoe+ vlan <vlan-id> linechar mode <rate full></code>	Determines which information from the DHCP packet is received. rate: only receives the actual bit rate information of the DHCP packet. full: receives the full line characteristics information of the DHCP packet. This includes the circuit ID, remote ID, vendor specifications, actual data upstream/downstream, and access loop encapsulation.	C	13
<code>no pppoe+ vlan <vlan-id></code>	Disables PPPoE intermediate agent on the specified VLAN.	C	13
<code>no pppoe+ vlan <vlan-id> circuit-id</code>	Sets the Switch to not append the additional Circuit ID information you specified using the <code>pppoe+ circuitID-information</code> command to client PPPoE requests on the specified VLAN.	C	13
<code>no pppoe+ vlan <vlan-id> circuitID-type</code>	Removes the setting that defines the format of circuit ID the Switch adds to client PPPoE requests on the specified VLAN.	C	13
<code>no pppoe+ vlan <vlan-id> circuitID-user-define</code>	Removes the user defined format of circuit ID for the Switch to add to client PPPoE requests on the specified VLAN.	C	13
<code>no pppoe+ vlan <vlan-id> linechar</code>	Disables having PPPoE intermediate agent include additional option 82 information in the DHCP packets.	C	13
<code>pppoe+ vlan <vlan-id> remote- id</code>	Enables appending the Remote ID information to client PPPoE requests on the specified VLAN.	C	13
<code>pppoe+ vlan <vlan-id> remoteID-information <string></code>	Sets the additional information that you want the Switch to insert to client PPPoE requests on the specified VLAN. <i>string</i> : up to 63 printable characters. Spaces are allowed.	C	13
<code>pppoe+ vlan <vlan-id> remoteID-delimiter <character></code>	Sets up delimiter in Remote ID to separate portname or telephone or user string.	C	13

Table 140 PPPoE Intermediate Agent Command Summary (continued)

COMMAND	DESCRIPTION	M	P
pppoe+ vlan <vlan-id> remoteID-type <system port all>	Sets the option that indicates what data will be used as remote-id; system = user configured information string; port = name of port; all = append Remote ID by user identifier + port name + port telephone number.	C	13
pppoe+ vlan <vlan-id> remoteID-type <system port all user-define>	Sets what data will be used as remote-id; system=user configured information string; port = name of port; all = append remote ID by user identifier + port name + port telephone number; or user-define = a string according to a user-defined format.	C	13
pppoe+ vlan <vlan-id> remoteID-user-define <string>	Sets a string of up to 63 ASCII characters to set the format for the remote ID information the Switch adds to client PPPoE requests on the specified VLAN. <string>: The remote-ID user defined format can use the following components: % marks the start of the predefined runtime variable %: equals character % %0x00~FF: represents byte value %pname: the name configured for the port %pid: port index %ptel: the telephone number configured for the port %chid: the UNI VLAN ID %slotid: slot index of the logic port %svlan: the SVLAN ID the DHCP client runs on %hname: the host device name %cmac: the client's MAC address, represented as a Byte. For example: 00:00:00:01:11:11 %blank: blank character %phtype: Ethernet "eth"	C	13
pppoe+ vlan <vlan-id> spv- option <private sp pv sv spv>	Sets the Circuit ID format. <ul style="list-style-type: none"> private: slot-port-VLAN in binary format. sp: slot-port in string format. pv: port-VLAN in string format. sv: slot-VLAN in string format. spv: slot-port-VLAN in string format. 	C	13
no pppoe+ vlan <vlan-id> remote-id	Sets the Switch to not append the additional Remote ID information you specified using the pppoe+ remoteID-information command to client PPPoE requests on the specified VLAN.	C	13
no pppoe+ vlan <vlan-id> remoteID-type	Removes the setting that defines the format of remote ID the Switch adds to client PPPoE requests on the specified VLAN.	C	13
no pppoe+ vlan <vlan-id> remoteID-user-define	Removes the user defined format of remote ID for the Switch to add to client PPPoE requests on the specified VLAN.	C	13

58.1.1 Enable Global-based PPPoE Intermediate Agent Command Example

The following example activates the PPPoE intermediate agent (global-based), enables the circuit and remote IDs, and adds "testing" as circuit information and "remote-testing" as remote information to client PADI and PADR packets. At the end, this example shows the configuration result.

```
ras# configure terminal
ras(config)# pppoe+
ras(config)# pppoe+ circuit-id
ras(config)# pppoe+ circuitID-information testing
ras(config)# pppoe+ remote-id
ras(config)# pppoe+ remoteID-information remote-testing
ras(config)# exit
ras# show pppoe+
  PPPoE IA Configuration
  Active:   Yes
  Circuit-id: Enable
  Circuit-id Info: testing
  Remote-id: Enable
  Remote-id Info: remote-testing
```

58.1.2 Enable VLAN-based PPPoE Intermediate Agent Command Example

The following example activates the PPPoE intermediate agent for VLAN 2, enables the circuit and remote IDs, and adds "testing" as circuit information and "remote-testing" as remote information to client PADI and PADR packets on VLAN 2. At the end, this example shows the configuration result.

```
ras# configure terminal
ras(config)# pppoe+ vlan 2
ras(config)# pppoe+ vlan 2 circuit-id
ras(config)# pppoe+ vlan 2 circuitID-information testing
ras(config)# pppoe+ vlan 2 remote-id
ras(config)# pppoe+ vlan 2 remoteID-information remote-testing
ras(config)# exit
ras# show pppoe+ vlan 2
  PPPoE IA Configuration
  Vlan ID: 2
  Active:   Yes
  Circuit-id: Enable
  Circuit-id Info: testing
  Remote-id: Enable
  Remote-id Info: remote-testing
```

CHAPTER 59

Protocol-based VLAN Commands

Use these commands to group traffic into logical VLANs based on a specified protocol.

59.1 Protocol-based VLAN Overview

Protocol-based VLANs allow you to group traffic into logical VLANs based on the protocol you specify. When an upstream frame is received on a port (configured for a protocol-based VLAN), the Switch checks the protocol and if a tag is already added. Untagged packets of the specified protocol are then placed in the same protocol-based VLAN. One advantage of using protocol-based VLANs is that priority can be assigned to traffic of the same protocol.

Note: Protocol-based VLAN applies to untagged packets and is applicable only when you use IEEE 802.1Q-tagged VLAN.

59.2 Command Summary

The following table describes user-input values available in multiple commands for this feature.

Table 141 protocol-based-vlan User-input Values

COMMAND	DESCRIPTION
<i>name</i>	1-32 alphanumeric characters.
<i>ethernet-type</i>	ip, ipx, arp, rarp, appletalk, decnet, sna, netbios, dlc, or <i><ether-num></i> . <i><ether-num></i> : 32-bit Ethernet protocol number in hexadecimal format (FFFF).

The following section lists the commands for this feature.

Table 142 protocol-based-vlan Command Summary

COMMAND	DESCRIPTION	M	P
<code>show interfaces config <port-list> protocol-based-vlan</code>	Displays protocol-based VLAN settings for the specified port(s).	E	13
<code>interface port-channel <port-list></code>	Enters config-interface mode for the specified port(s).	C	13
<code>protocol-based-vlan name <name> ethernet-type <ethernet-type> vlan <vlan-id></code>	Creates a protocol-based VLAN with the protocol type and VLAN ID.	C	13

Table 142 protocol-based-vlan Command Summary (continued)

COMMAND	DESCRIPTION	M	P
protocol-based-vlan name <name> ethernet-type <ethernet-type> vlan <vlan-id> inactive	Disables the protocol-based VLAN.	C	13
no protocol-based-vlan ethernet-type <ethernet- type>	Disables protocol-based VLAN of the specified protocol on the port(s).	C	13
protocol-based-vlan name <name> packet-format <EtherII SNAP LLC> ethernet-type <ethernet- type> vlan <vlan-id> priority <0~7>	Creates a protocol-based VLAN with the packet format, VLAN ID and priority.	C	13
protocol-based-vlan name <name> packet-format <EtherII SNAP LLC> ethernet-type <ethernet- type> vlan <vlan-id> priority <0~7> inactive	Disables the protocol-based VLAN.	C	13
no protocol-based-vlan packet-format <EtherII SNAP LLC> ethernet-type <ethernet- type>	Disables protocol-based VLAN of the specified packet format and protocol on the port(s).	C	13

59.3 Command Examples

This example creates two protocol-based VLAN A and B.

- Protocol-based VLAN A is used for ARP traffic on ports 1-3.
- Protocol-based VLAN B is used for Apple Talk traffic on ports 6-7.

Ports 1-4 already belong to static VLAN 100; ports 5-8 already belong to static VLAN 120.

```
sysname# configure
sysname(config)# interface port-channel 1-3
sysname(config-interface)# protocol-based-vlan name A ethernet-type arp
--> vlan 1 inactive
sysname(config-interface)# exit
sysname(config)# interface port-channel 6-7
sysname(config-interface)# protocol-based-vlan name B ethernet-type
--> appletalk vlan 1 inactive
sysname(config-interface)# exit
sysname(config)# exit
sysname# show interfaces config 1-8 protocol-based-vlan
Name  Port  Packet type  Ethernet type  Vlan  Priority  Active
-----
  A    1    EtherII      arp            100    0        Yes
  A    2    EtherII      arp            100    0        Yes
  A    3    EtherII      arp            100    0        Yes
  B    6    EtherII      appletalk      120    0        Yes
  B    7    EtherII      appletalk      120    0        Yes
```

CHAPTER 60

RADIUS Commands

Use these commands to configure external RADIUS (Remote Authentication Dial-In User Service) servers.

60.1 Command Summary

The following section lists the commands for this feature.

Table 143 radius-server Command Summary

COMMAND	DESCRIPTION	M	P
<code>show radius-server</code>	Displays RADIUS server settings.	E	13
<code>radius-server mode <index-priority round-robin></code>	Specifies how the Switch decides which RADIUS server to select if you configure multiple servers. <i>index-priority</i> : The Switch tries to authenticate with the first configured RADIUS server. If the RADIUS server does not respond, then the Switch tries to authenticate with the second RADIUS server. <i>round-robin</i> : The Switch alternates between RADIUS servers that it sends authentication requests to.	C	13
<code>radius-server host <index> <ip-address></code>	Sets the specified RADIUS server's IP address. <i>index</i> : The index number of a RADIUS server.	C	13
<code>radius-server host <index> <ip-address> [acct-port <socket-number>] [key <key-string>]</code>	Specifies the IP address of the RADIUS authentication server. Optionally, sets the port number and shared secret. <i>key-string</i> : 1-32 alphanumeric characters.	C	13
<code>radius-server host <index> <ip-address> [acct-port <socket-number>] [key <key-string>]</code>	Specifies the IP address of the specified RADIUS authentication server. Optionally, sets the port number and shared secret. <i>index</i> : The index number of a RADIUS server. <i>key-string</i> : 1-32 alphanumeric characters.	C	13
<code>radius-server timeout <1-1000></code>	Specify the amount of time (in seconds) that the Switch waits for an authentication request response from the RADIUS server. In <i>index-priority</i> mode, the timeout is divided by the number of servers you configure. For example, if you configure two servers and the timeout is 30 seconds, then the Switch waits 15 seconds for a response from each server.	C	13
<code>no radius-server <index></code>	Resets the specified RADIUS server to its default values.	C	13

Table 144 radius-accounting Command Summary

COMMAND	DESCRIPTION	M	P
show radius-accounting	Displays RADIUS accounting server settings.	E	3
radius-accounting timeout <1-1000>	Specifies the RADIUS accounting server timeout value.	C	13
radius-accounting host <index> <ip> [acct-port <socket-number>] [key <key-string>]	Specifies the IP address of the RADIUS accounting server. Optionally, sets the port number and key of the external RADIUS accounting server. <i>index</i> : 1 or 2. <i>key-string</i> : 1-32 alphanumeric characters.	C	13
no radius-accounting <index>	Resets the specified RADIUS accounting server to its default values.	C	13

60.2 Command Examples

This example sets up one primary RADIUS server (172.16.10.10) and one secondary RADIUS server (172.16.10.11). The secondary RADIUS server is also the accounting server.

```

sysname# configure
sysname(config)# radius-server mode index-priority
sysname(config)# radius-server host 1 172.16.10.10
sysname(config)# radius-server host 2 172.16.10.11
sysname(config)# radius-accounting host 1 172.16.10.11
sysname(config)# exit

```

CHAPTER 61

Rate Limit Commands

Use these commands to configure the rate limit feature which defines incoming and outgoing data rate limits for VDSL port(s).

The ingress and egress total data rate limits should not be over the actual maximum port bandwidth. You cannot associate port(s) with a profile whose total data rate exceeds the actual maximum port bandwidth.

Note: A port can be associated to one and only one rate limit profile.

61.1 Command Summary

The following section lists the commands for this feature.

Table 145 Rate Limit Command Summary

COMMAND	DESCRIPTION	M	P
<code>show ratelimit-profile [profile-name]</code>	Displays all or the specified rate limit profile settings. In the output, 0 displayed in the incoming or outgoing field means no bandwidth limit. By default, the profile DEFVAL is available without any bandwidth limit.	E	13
<code>show ratelimit-profile per-queue [profile-name]</code>	Displays all or the specified per queue rate limit profile settings. In the output, 0 displayed in the incoming or outgoing field means no bandwidth limit. By default, the profile DEFVAL is available without any bandwidth limit.	E	13
<code>ratelimit-profile <profile-name></code>	Creates or modifies a rate limit profile and enters the config-ratelimitprofile mode for the profile.	C	13
<code>egress <0~1,000,000></code>	Sets the egress data rate limit in Kbps. 0 means no maximum bandwidth limit.	C	13
<code>egress active</code>	Activates the egress data rate limit you set using the command above.	C	13
<code>ingress <0~1,000,000></code>	Sets the ingress data rate limit in Kbps. 0 means no maximum bandwidth limit.	C	13
<code>ingressC <0~1,000,000></code>	Sets the ingress committed data rate limit in Kbps. 0 means no this bandwidth limit.	C	13
<code>ingressC active</code>	Activates the ingress committed data rate limit you set using the command above.	C	13
<code>ingressP <0~1,000,000></code>	Sets the ingress peak data rate limit in Kbps. 0 means no this bandwidth limit. Note: This ingress peak rate should be greater than the ingress committed rate.	C	13
<code>ingressP active</code>	Activates the ingress peak data rate limit you set using the command above.	C	13

Table 145 Rate Limit Command Summary (continued)

COMMAND	DESCRIPTION	M	P
no egress	Disables the egress data rate limit.	C	13
no ingressC	Disables the ingress committed rate limit.	C	13
no ingressP	Disables the ingress peak data rate limit.	C	13
ratelimit-profile per-queue <profile-name>	Creates or modifies a per queue rate limit profile and enters the config-ratelimitprofile mode for the profile.	C	13
queue0-cir <0~1,000,000>	Sets the guaranteed bandwidth in Kbps for the incoming traffic flow assigned to queue 0.	C	13
queue0-pir <0~1,000,000>	Sets the maximum bandwidth in Kbps for the incoming traffic flow assigned to queue 0.	C	13
queue1-cir <0~1,000,000>	Sets the guaranteed bandwidth in Kbps for the incoming traffic flow assigned to queue 1.	C	13
queue1-pir <0~1,000,000>	Sets the maximum bandwidth in Kbps for the incoming traffic flow assigned to queue 1.	C	13
queue2-cir <0~1,000,000>	Sets the guaranteed bandwidth in Kbps for the incoming traffic flow assigned to queue 2.	C	13
queue2-pir <0~1,000,000>	Sets the maximum bandwidth in Kbps for the incoming traffic flow assigned to queue 2.	C	13
queue3-cir <0~1,000,000>	Sets the guaranteed bandwidth in Kbps for the incoming traffic flow assigned to queue 3.	C	13
queue3-pir <0~1,000,000>	Sets the maximum bandwidth in Kbps for the incoming traffic flow assigned to queue 3.	C	13
queue4-cir <0~1,000,000>	Sets the guaranteed bandwidth in Kbps for the incoming traffic flow assigned to queue 4.	C	13
queue4-pir <0~1,000,000>	Sets the maximum bandwidth in Kbps for the incoming traffic flow assigned to queue 4.	C	13
queue5-cir <0~1,000,000>	Sets the guaranteed bandwidth in Kbps for the incoming traffic flow assigned to queue 5.	C	13
queue5-pir <0~1,000,000>	Sets the maximum bandwidth in Kbps for the incoming traffic flow assigned to queue 5.	C	13
queue6-cir <0~1,000,000>	Sets the guaranteed bandwidth in Kbps for the incoming traffic flow assigned to queue 6.	C	13
queue6-pir <0~1,000,000>	Sets the maximum bandwidth in Kbps for the incoming traffic flow assigned to queue 6.	C	13
queue7-cir <0~1,000,000>	Sets the guaranteed bandwidth in Kbps for the incoming traffic flow assigned to queue 7.	C	13
queue7-pir <0~1,000,000>	Sets the maximum bandwidth in Kbps for the incoming traffic flow assigned to queue 7.	C	13
interface port-channel <port-list>	Enters config-interface mode for the port(s).	C	13
ratelimit-profilename <profile-name>	Associates port(s) to the specified rate limit profile.	C	13
ratelimit-profilename per-queue <profile-name>	Associates port(s) to the specified per queue rate limit profile.	C	13
no ratelimit-profile <profile-name>	Unassociates port(s) to the specified rate limit profile.	C	13
no ratelimit-profile per-queue <profile-name>	Unassociates port(s) to the specified per queue rate limit profile.	C	13

Table 145 Rate Limit Command Summary (continued)

COMMAND	DESCRIPTION	M	P
no ratelimit-profile <profile-name>	Deletes the specified rate limit profile.	C	13
no ratelimit-profile per-queue <profile-name>	Deletes the specified per queue rate limit profile.	C	13
no ratelimit-profile per-queue all	Deletes all per queue rate limit profiles.	C	13

61.2 Command Examples

This example creates a rate limit profile that defines the incoming data rate limit (up to 1000 Kbps) and the egress data rate limit (up to 2000 Kbps).

```

sysname# config
sysname(config)# ratelimit-profile Test
sysname(config-ratelimitprofile)# ingress 1000
sysname(config-ratelimitprofile)# egress 2000
sysname(config-ratelimitprofile)# exit
sysname(config)# exit
sysname# write mem
sysname# show ratelimit-profile

```

Name	Ingress	Egress	Applied Ports
Test	1000	2000	
DEFVAL	0	0	1-17

This example associates ports 1, 2, 10, 11 and 12 to the rate limit profile. (Ports 3 to 9 and 13 to 17 use the default rate limit profile.)

```

sysname(config)# interface port-channel 1,2,10-12
sysname(config-interface)# ratelimit-profile Test
sysname(config-interface)# exit
sysname(config)# exit
sysname# write mem
sysname# show ratelimit-profile

```

Name	Ingress	Egress	Applied Ports
Test	1000	2000	1,2,10-12
DEFVAL	0	0	3-9,13-17

CHAPTER 62

Remote CPE Device Commands

Use these commands to configure remote (CPE) devices connected to the Switch.

Note: You have to use the `commit` command in each command group to save the settings in the command group to the CPE device.

62.1 Remote Firmware Upgrade

You can upgrade firmware on CPE devices that are connected to the Switch.

- 1 Get the latest CPE firmware file from www.zyxel.com, and save it on your computer.
- 2 Use FTP to upload the CPE firmware from your computer to the Switch, and rename the CPE firmware to "CPEImg". For example, enter "put 100AWxxx.bin CPEImg", where 100AWxxx.bin is the original name of the CPE firmware. At the same time, you can view the status of the upload process via the console port as following.

```
recvCPEImage, size = 0x39767b
writeCPEImage, CPEbuffer = 0x16b3210, CPELen = 0x39767b
```

Note: You must rename the CPE firmware to "CPEImg" on the Switch.

- 3 Use the `rmt-fw-upgrade port-channel <PORT-LIST>` command to transfer the CPE firmware from the Switch to the CPE device(s) connected to the specified port(s).

```
sysname# rmt-fw-upgrade port-channel 1
sysname# port 1:
      start ftp 128.0.2.201.....Success
      FWupgrade Done.
remote FW upgrade completed, free image.
```

- 4 After the remote CPE firmware upgrade, the Switch automatically deletes CPEImg, and the CPE device automatically restarts.

Note: The CPE device(s) automatically restart after the upgrade, which will disrupt network connectivity for end users.

Repeat steps 1-4 to upgrade firmware for each CPE model. The Switch automatically detects and upgrades firmware to the appropriate CPE model.

If you upload CPE firmware to the Switch and decide not to use it to upgrade any CPE devices, run the `rmt-fw-upgrade release` command to delete the CPE firmware on the Switch. This frees up system memory.

62.2 Command Summary

Note: The legal ranges of some input values depend on the CPE device that is connected to the Switch.

The following table describes user-input values available in multiple commands for this feature.

Table 146 rmt-vtur classification User-input Values (See [Table 150 on page 216](#))

COMMAND	DESCRIPTION
<code>index</code>	1~8, this is a classifier rule's index number.

Table 147 rmt-vtur port-config User-input Values (See [Table 156 on page 220](#))

COMMAND	DESCRIPTION
<code>index</code>	1~5, the CPE device port number. Ports 1~4 are the LAN ports, and port 5 is the VDSL port.

The following section lists the commands for this feature.

Table 148 rmt-fw-upgrade Command Summary

COMMAND	DESCRIPTION	M	P
<code>rmt-fw-upgrade Auto-detect</code>	Sets the Switch to check the CPE firmware version and upgrade firmware automatically when the connection to a CPE device is up. The Switch uses the firmware stored in CPEImg to upgrade the CPE device(s). Use FTP to load CPE firmware to CPEImg before you run this command.	E	13
<code>rmt-fw-upgrade FW-version <firmware-version></code>	Sets the CPE firmware version after using FTP to load CPE firmware to the Switch.	E	13
<code>rmt-fw-upgrade Image_info</code>	Displays the CPE firmware version and model name.	E	13
<code>rmt-fw-upgrade Model <model-name></code>	Sets the CPE firmware's model name after using FTP to load CPE firmware to the Switch.	E	13
<code>rmt-fw-upgrade port-channel <port-list></code>	Upgrades firmware on CPE device(s) connected to the specified port(s). The Switch uses the firmware stored in CPEImg to upgrade the CPE device(s). Use FTP to load CPE firmware to CPEImg before you run this command. After a successful upgrade, the Switch deletes CPEImg, and the CPE device automatically restarts. Note: The CPE device automatically restarts after the upgrade.	E	13
<code>rmt-fw-upgrade release</code>	Deletes CPEImg (the CPE firmware file) on the Switch. This frees up system memory.	E	13

Table 149 rmt-vtur cfm-setup Command Summary

COMMAND	DESCRIPTION	M	P
rmt-vtur port-channel <port>	Enters remote CPE configuration mode on the specified port. The following commands configure the CPE's CFM settings. Note: Make sure the link is up between the port and the connected CPE device before running this command.	E	13
cfm-setup action <0 3 5>	0: Stores CFM setting changes in the Switch. 3: Has the CPE initiate a loopback test to a CFM maintenance endpoint (MEP). 5: Has the CPE load its CFM default settings.	E	13
cfm-setup commit	Saves the settings for this command group to the CPE device. Unlike other remote CPE commit commands, the CPE device will then apply the settings without restarting the system itself.	E	13
cfm-setup destMac <mac-address>	Sets the destination MAC address for a CFM loopback test. A <i>mac-address</i> example: 00:13:49:00:00:0A	E	13
cfm-setup fetch-config	Fetches current CFM settings and loopback test status counter from the remote CPE device. Then you have to use "show cfm" to view the result.	E	13
cfm-setup lbcount <1~999>	Sets the number of CFM loopback messages (1~999) the CPE device sends in a loopback test.	E	13
cfm-setup ma-name <ma-name>	Sets the CFM MA name for the remote CPE device. See Section 10.1 on page 37 for CFM term definitions. Note: At the time of writing, P870 series doesn't support this command.	E	13
cfm-setup md-level <0~7>	Sets the CFM MD Level for the remote CPE device.	E	13
cfm-setup md-name <md-name>	Sets the CFM MD name for the remote CPE device.	E	13
cfm-setup mep-id <1~8191>	Sets the CFM MEP ID for the remote CPE device.	E	13
cfm-setup status	Checks the command status for this command group. OK: The Switch successfully applied commands in this command group to the CPE device. Fail: The Switch was unable to apply commands in this command group to the CPE device. Pending: The Switch is trying to apply commands in this command group to the CPE device.	E	13
cfm-setup vid <1~4094>	Sets the CFM VLAN ID for the remote CPE device.	E	13
show cfm	Displays CFM settings for the remote CPE device. You can also use this command to see the CFM loopback test report on the CPE device.	E	13
show cfm-setting	Displays CFM settings for the remote CPE device. You can also use this command to see the CFM loopback test report on the CPE device.	E	13

Table 150 rmt-vtur classification Command Summary

COMMAND	DESCRIPTION	M	P
rmt-vtur port-channel <port>	Enters remote CPE configuration mode on the specified port. The following commands configure the CPE's classifier settings. Note: Make sure the link is up between the port and the connected CPE device before running this command.	E	13
classification <index> 802.1p <0~7>	Sets a priority level (0~7) with which the CPE replaces the IEEE 802.1 priority field in the packets which match the specified classification rule. Note: 802.1Q VLAN tagging should be enabled before running this command.	E	13
classification <index> 802.1q <1~4094>	Sets a VLAN ID number (0~4095) with which the CPE replaces the VLAN ID of the frames which match the specified classification rule.	E	13
classification <index> Filter destIp <ip-address> mask <mask>	Classifies packets with the specified destination IP address and subnet mask.	E	13
classification <index> Filter destMAC <mac-address> mask <mask>	Classifies packets with the specified destination MAC address and the mask.	E	13
classification <index> Filter destPort start <port> end <port>	Classifies packets with the specified destination starting port and ending port.	E	13
classification <index> Filter lan <1~5 1~3>	Classifies packets sent from a specified CPE's LAN port. When the virtual port function is enabled on the CPE device, enter 1~5 (1~4: LAN Ethernet ports, 5: wireless interface). When the virtual port function is disabled on the CPE device, enter 1~3 (1~2: for LAN Ethernet ports, 3: wireless interface).	E	13
classification <index> Filter priority <0~7>	Classifies packets tagged with the specified 802.1p priority level.	E	13
classification <index> Filter protocol <TCP/UDP TCP UDP ICMP>	Classifies packets with the specified protocol.	E	13
classification <index> Filter prtcl-type <0600-FFFF>	Classifies packets with the specified protocol type.	E	13
classification <index> Filter srcIp <ip-address> mask <mask>	Classifies packets with the specified source IP address and subnet mask.	E	13
classification <index> Filter srcMAC <mac-address> mask <mask>	Classifies packets with the specified source MAC address and the mask.	E	13
classification <index> Filter srcPort start <port> end <port>	Classifies packets with the specified source starting port and ending port.	E	13

Table 150 rmt-vtur classification Command Summary (continued)

COMMAND	DESCRIPTION	M	P
classification <index> active <enable disable>	Activates or deactivates a classification rule.	E	13
classification <index> delete	Deletes an existing classification rule.	E	13
classification <index> gateway <ip-address>	Sets the gateway IP address for a WAN connection (in PPPoE or MER mode) for a classification rule.	E	13
classification <index> queue <1~4>	Assigns a CPE's queue (1~4) that applies to a classification rule.	E	13
classification <index> wan <1~4>	Assigns the CPE's WAN connection (1~4) through which to forward the traffic that matches this classification rule.	E	13
classification commit	Saves the settings for this command group to the CPE device. Then the CPE device will restart itself automatically to apply the settings.	E	13
classification status	Checks the command status for this command group. OK: The Switch successfully applied commands in this command group to the CPE device. Fail: The Switch was unable to apply commands in this command group to the CPE device. Pending: The Switch is trying to apply commands in this command group to the CPE device.	E	13
show classification	Displays classification rule settings for the remote CPE device.	E	13

Table 151 rmt-vtur lan-setting Command Summary

COMMAND	DESCRIPTION	M	P
rmt-vtur port-channel <port>	Enters remote CPE configuration mode on the specified port. The following commands configure the CPE's LAN settings. Note: Make sure the link is up between the port and the connected CPE device before running this command.	E	13
lan-setting DHCP disable	Disables DHCP server on the CPE device's LAN.	E	13
lan-setting DHCP enable <start-ip> <end-ip> <mask>	Enables DHCP server on the CPE device's LAN and configures the DHCP starting and ending IP addresses and subnet mask.	E	13
lan-setting DHCP relay ip <ip-address>	Enables DHCP relay to have the CPE device's LAN forward DHCP requests to the specified DHCP server.	E	13
lan-setting commit	Saves the settings for this command group to the CPE device. Then the CPE device will restart itself automatically to apply the settings.	E	13
lan-setting ip <ip-address> <mask>	Enters the IP address and subnet mask for the remote CPE's LAN.	E	13

Table 151 rmt-vtur lan-setting Command Summary (continued)

COMMAND	DESCRIPTION	M	P
lan-setting status	Checks the command status for this command group. OK: The Switch successfully applied commands in this command group to the CPE device. Fail: The Switch was unable to apply commands in this command group to the CPE device. Pending: The Switch is trying to apply commands in this command group to the CPE device.	E	13
show lan-setting	Displays remote CPE LAN configuration.	E	13

Table 152 rmt-vtur layer2-setting Command Summary

COMMAND	DESCRIPTION	M	P
rmt-vtur port-channel <port>	Enters remote CPE configuration mode on the specified port. The following commands configure the CPE's layer 2 settings. Note: Make sure the link is up between the port and the connected CPE device before running this command.	E	13
layer2-setting bcaststorm <0 1 2 3>	Sets the rate at which the CPE device can send broadcast packets to the Switch. 0: Disable 1: 1500 or 15000 pps (depending on the CPE device) 2: 3000 or 30000 pps (depending on the CPE device) 3: 6000 or 60000 pps (depending on the CPE device)	E	13
layer2-setting igmp-snooping <enable disable>	Activates or deactivates IGMP snooping on the CPE device.	E	13
layer2-setting unknown-mcast <0 1>	Specifies the action the CPE device performs when it receives an unknown multicast frame. 0: Drop unknown multicast frames. 1: Forward unknown multicast frames.	E	13
layer2-setting vlan-type <802.1q port-based>	Specifies what type of VLAN the CPE device uses. 802.1q: The CPE device uses IEEE 802.1Q tagged VLAN. port-based: The CPE device uses port-based VLAN.	E	13
layer2-setting commit	Saves the settings for this command group to the CPE device. Then the CPE device will restart itself automatically to apply the settings.	E	13
layer2-setting status	Checks the command status for this command group. OK: The Switch successfully applied commands in this command group to the CPE device. Fail: The Switch was unable to apply commands in this command group to the CPE device. Pending: The Switch is trying to apply commands in this command group to the CPE device.	E	13
show layer2-setting	Displays remote CPE layer2 configuration.	E	13

Table 153 rmt-vtur loopback Command Summary

COMMAND	DESCRIPTION	M	P
rmt-vtur port-channel <port>	Enters remote CPE configuration mode on the specified port. The following commands perform actions for the CPE device maintenance. Note: Make sure the link is up between the port and the connected CPE device before running this command.	E	13
loopback count <count> size <size>	Performs a loopback test. You can also define the packet size (from 64 to 1518 bytes) and how many times the Switch sends the loopback messages in a test.	E	13
show loopback	Displays the loopback test results.	E	13

Table 154 rmt-vtur mnt Command Summary

COMMAND	DESCRIPTION	M	P
rmt-vtur port-channel <port>	Enters remote CPE configuration mode on the specified port. The following commands perform actions for the CPE device maintenance. Note: Make sure the link is up between the port and the connected CPE device before running this command.	E	13
mnt clear-counter	Removes all counters for the CPE device.	E	13
mnt commit	Saves the settings for this command group to the CPE device. Then the CPE device will restart itself automatically to apply the settings.	E	13
mnt console active	Enables multiple user login (using the admin and user accounts) through the CPE device's console port.	E	13
mnt console admin <password>	Sets a new admin password (up to 16 ASCII characters) for the CPE device.	E	13
mnt console user <password>	Sets a new user password (up to 16 ASCII characters) for the CPE device.	E	13
mnt load-default	Resets the CPE device to the factory defaults.	E	13
mnt reinit	Reloads the configuration from the Switch to the CPE device.	E	13
mnt reset	Resets the CPE device to the factory defaults and reboots the CPE device. This is equivalent to pushing the RESET button.	E	13
mnt status	Checks the command status for this command group. OK: The Switch successfully applied commands in this command group to the CPE device. Fail: The Switch was unable to apply commands in this command group to the CPE device. Pending: The Switch is trying to apply commands in this command group to the CPE device.	E	13

Table 155 rmt-vtur port-based Command Summary

COMMAND	DESCRIPTION	M	P
show port-based	These settings have no effect unless the layer2-setting vlan-type is port-based. Displays the port-based VLAN settings on the CPE device.	E	13
rmt-vtur port-channel <port>	Enters remote CPE configuration mode on the specified port. The following commands configure the CPE's port-based VLAN settings. Note: Make sure the link is up between the port and the connected CPE device before running this command.	E	13
port-based port-index <1-4> member <port-list>	Assigns the specified member ports to the specified port-based VLAN.	E	13
port-based commit	Saves the settings for this command group to the CPE device. Then the CPE device will restart itself automatically to apply the settings.	E	13
port-based status	Checks the command status for this command group. OK: The Switch successfully applied commands in this command group to the CPE device. Fail: The Switch was unable to apply commands in this command group to the CPE device. Pending: The Switch is trying to apply commands in this command group to the CPE device.	E	13

Table 156 rmt-vtur port-config Command Summary

COMMAND	DESCRIPTION	M	P
rmt-vtur port-channel <port>	Enters remote CPE configuration mode on the specified port. The following commands configure the CPE's port settings. Note: Make sure the link is up between the port and the connected CPE device before running this command.	E	13
port-config <index> adminstate <up down>	Enables (up) or disables (down) the specified CPE device port.	E	13
port-config <index> defpri <0~7>	Sets the default IEEE 802.1p priority for outgoing traffic on the specified CPE device port.	E	13
port-config <index> flowctrl <enable disable>	Activates or deactivates flow control on the specified CPE device port.	E	13
port-config <index> pvid <1~4094>	Sets the default VLAN ID for outgoing traffic on the specified CPE device port.	E	13
port-config <index> speed <auto 10H 10F 100H 100F>	Sets the speed and duplex of the specified CPE device port.	E	13

Table 156 rmt-vtur port-config Command Summary (continued)

COMMAND	DESCRIPTION	M	P
<code>port-config commit</code>	Saves the settings for this command group to the CPE device. Then the CPE device will restart itself automatically to apply the settings.	E	13
<code>port-config status</code>	Checks the command status for this command group. OK: The Switch successfully applied commands in this command group to the CPE device. Fail: The Switch was unable to apply commands in this command group to the CPE device. Pending: The Switch is trying to apply commands in this command group to the CPE device.	E	13

Table 157 rmt-vtur queuemapping Command Summary

COMMAND	DESCRIPTION	M	P
<code>show queuemapping</code>	Displays the priority queue mapping on the CPE device.	E	13
<code>rmt-vtur port-channel <port></code>	Enters remote CPE configuration mode on the specified port. The following commands configure the CPE's queue settings. Note: Make sure the link is up between the port and the connected CPE device before running this command.	E	13
<code>queuemapping level <0~7></code> <code>queue <0~3></code>	Sets the specified priority queue for the specified IEEE 802.1p priority level. The number of priority queues depends on the CPE device.	E	13
<code>queuemapping commit</code>	Saves the settings for this command group to the CPE device. Then the CPE device will restart itself automatically to apply the settings.	E	13
<code>queuemapping status</code>	Checks the command status for this command group. OK: The Switch successfully applied commands in this command group to the CPE device. Fail: The Switch was unable to apply commands in this command group to the CPE device. Pending: The Switch is trying to apply commands in this command group to the CPE device.	E	13

Table 158 rmt-vtur remotefunc Command Summary

COMMAND	DESCRIPTION	M	P
rmt-vtur port-channel <port>	Enters remote CPE configuration mode on the specified port. The following commands configure the CPE's remote management settings. Note: Make sure the link is up between the port and the connected CPE device before running this command.	E	13
remotefunc <snmp ssh tftp telnet web> active <0:Off 1:ALL On 2:LAN On 3:WAN On>	Sets Remote SNMP, SSH, TFTP, Telnet or Web settings for the remote CPE device. Set 0 (ALL OFF) to disallow any access to the device through a specific protocol. Set 1 (ALL On) to allow access to the device from both the CPE device's LAN and WAN networks through a specific protocol. Set 2 (LAN On) to allow access to the device from the CPE device's LAN network through a specific protocol. Set 3 (WAN On) to allow access to the device from the CPE device's WAN network through a specific protocol.	E	13
remotefunc Wireless active <0:Off 1:On>	Enables or disables the wireless LAN on the CPE device.	E	13
remotefunc commit	Saves the settings for this command group to the CPE device. Then the CPE device will restart itself automatically to apply the settings.	E	13
remotefunc status	Checks the command status for this command group. OK: The Switch successfully applied commands in this command group to the CPE device. Fail: The Switch was unable to apply commands in this command group to the CPE device. Pending: The Switch is trying to apply commands in this command group to the CPE device.	E	13
show RemoteFunc	Displays the remote management settings for the CPE device.	E	13

Table 159 rmt-vtur show Command Summary

COMMAND	DESCRIPTION	M	P
rmt-vtur port-channel <port>	Enters remote CPE configuration mode on the specified port. The following commands display CPE device status. Note: Make sure the link is up between the port and the connected CPE device before running this command.	E	13
show consoleSetting	Displays the console port settings for the CPE device.	E	13
show general	Displays packet statistics for the CPE device.	E	13

Table 159 rmt-vtur show Command Summary (continued)

COMMAND	DESCRIPTION	M	P
show linkInitStatus	Displays whether or not the link with the CPE device has been initialized. Success: The Switch has a link to the CPE device. In-Progress: The Switch is initializing the connection to the CPE device. Fail: The Switch was unable to establish a link to the CPE device.	E	13
show MacTable	Displays the MAC table on the CPE device.	E	13
show portstatus	Displays the status of the port on the CPE device.	E	13

Table 160 rmt-vtur vlan1q Command Summary

COMMAND	DESCRIPTION	M	P
show vlan1q	These settings have no effect unless the layer2-setting vlan-type is 802.1q. Displays IEEE 802.1Q settings on the CPE device.	E	13
rmt-vtur port-channel <port>	Enters remote CPE configuration mode on the specified port. The following commands configure the CPE's 802.1Q VLAN settings. Note: Make sure the link is up between the port and the connected CPE device before running this command.	E	13
vlan1q vid <1~4094> egress <port-list>	Sets the VLAN ID for outgoing traffic from the specified CPE device port(s).	E	13
vlan1q vid <1~4094> untag <port-list>	Removes the VLAN tag for outgoing traffic from the specified CPE device port(s).	E	13
no vlan1q vid <1~4094>	Removes the specified VLAN on the CPE device. Any CPE device ports that were adding this VLAN ID to outgoing traffic become untagged ports.	E	13
vlan1q commit	Saves the settings for this command group to the CPE device. Then the CPE device will restart itself automatically to apply the settings.	E	13
no vlan1q commit	Does not apply the settings for this command group to the CPE device.	E	13
vlan1q status	Checks the command status for this command group. OK: The Switch successfully applied commands in this command group to the CPE device. Fail: The Switch was unable to apply commands in this command group to the CPE device. Pending: The Switch is trying to apply commands in this command group to the CPE device.	E	13

Table 161 rmt-vtur wan-common Command Summary

COMMAND	DESCRIPTION	M	P
rmt-vtur port-channel <port>	Enters remote CPE configuration mode on the specified port. The following commands configure the CPE's WAN common settings. Note: Make sure the link is up between the port and the connected CPE device before running this command.	E	13
wan-common QoS <enable disable>	Enables or disables QoS on the CPE's WAN.	E	13
wan-common autoGateway <enable disable>	Enables or disables the automatic obtaining of a gateway IP address from the CPE's ISP.	E	13
wan-common commit	Saves the settings for this command group to the CPE device. Then the CPE device will restart itself automatically to apply the settings.	E	13
wan-common defaultGateway <ip-address>	Sets the default gateway IP address for the CPE's WAN.	E	13
wan-common status	Checks the command status for this command group. OK: The Switch successfully applied commands in this command group to the CPE device. Fail: The Switch was unable to apply commands in this command group to the CPE device. Pending: The Switch is trying to apply commands in this command group to the CPE device.	E	13
wan-common virtual-port <enable disable>	Enables or disables virtual port on the CPE's WAN.	E	13

Table 162 rmt-vtur wan-entry Command Summary

COMMAND	DESCRIPTION	M	P
rmt-vtur port-channel <port>	Enters remote CPE configuration mode on the specified port. The following commands configure the CPE's WAN settings. Note: Make sure the link is up between the port and the connected CPE device before running this command.	E	13
wan-entry <1~4> Firewall <enable disable>	Enables or disables the firewall on a remote WAN connection. Note: The WAN connection should be in PPPoE or MER (MAC Encapsulated Routing) mode before running this command.	E	13
wan-entry <1~4> IGMP <enable disable>	Enables or disables IGMP on a remote WAN connection. Note: The WAN connection should be in PPPoE or MER mode before running this command.	E	13

Table 162 rmt-vtur wan-entry Command Summary (continued)

COMMAND	DESCRIPTION	M	P
wan-entry <1~4> MER <enable disable>	Enables or disables MER settings on a remote WAN connection. MAC Encapsulated Routing (MER) is an encapsulation protocol that formats IP packets so that they can be understood in a bridge network. For instance, it encapsulates routed Ethernet frames into bridged Ethernet cells. MER requires that you specify a gateway IP address.	E	13
wan-entry <1~4> MER DHCP <enable disable>	Sets the WAN connection as a DHCP client or turn it off.	E	13
wan-entry <1~4> MER ip <address> mask <mask>	Sets the IP address and subnet mask for the WAN connection if you disable the DHCP client feature.	E	13
wan-entry <1~4> PPPoE <enable disable>	Enables or disables PPPoE settings on a remote WAN connection.	E	13
wan-entry <1~4> PPPoE Password <password>	Sets the password (up to 16 ASCII characters) for PPPoE authentication.	E	13
wan-entry <1~4> PPPoE UserName <username>	Sets the user name (up to 32 ASCII characters) for PPPoE authentication.	E	13
wan-entry <1~4> active <enable disable>	Enables or disables a WAN connection on the remote CPE device.	E	13
wan-entry <1~4> delete	Deletes a remote WAN connection.	E	13
wan-entry <1~4> nat <enable disable>	Enables or disables NAT on a remote WAN connection. Note: The WAN connection should be in PPPoE or MER mode before running this command.	E	13
wan-entry <1~4> vlantagging autovlan	Enables auto VLAN on a remote WAN connection. Auto VLAN has the CPE device use its QoS classification rules to automatically assign traffic a VLAN ID number and priority level.	E	13
wan-entry <1~4> vlantagging disable	Disables 802.1Q VLAN tagging on a remote WAN connection.	E	13
wan-entry <1~4> vlantagging vlanmux vid <1~4094> 802.1p <0~7>	Enables VLAN Mux on a remote WAN connection. VLAN Mux allows multiplexing of multiple protocols over a single ATM virtual circuit and add the specified VLAN ID and 802.1p priority level to traffic flowing through this WAN connection.	E	13
wan-entry <1~4> wan- protocol <PPPoE MER bridge>	Sets the protocol type on a remote WAN connection.	E	13
wan-entry commit	Saves the settings for this command group to the CPE device. Then the CPE device will restart itself automatically to apply the settings.	E	13
wan-entry status	Checks the command status for this command group. OK: The Switch successfully applied commands in this command group to the CPE device. Fail: The Switch was unable to apply commands in this command group to the CPE device. Pending: The Switch is trying to apply commands in this command group to the CPE device.	E	13

62.3 Command Examples

This example looks at the current status of the ports on the CPE device.

Note: The command output may vary depending on the switch models.

```

sysname(config-RmtVtur)# show portstatus
  Port      1 status:
N/A        N/A      Queue 0   Pvid 1
  Port      2 status:
N/A        N/A      Queue 0   Pvid 1
  Port      3 status:
100M/Full Disable Queue 0   Pvid 1
  Port      4 status:
N/A        N/A      Queue 0   Pvid 1

```

The following table describes the labels in this screen.

Table 163 rmt-vtur port-channel <port-list> show portstatus

LABEL	DESCRIPTION
Speed-Duplex	This field displays the speed and duplex setting on this port.
Flow Control	This field displays whether or not flow control is enabled on this port.
Queue	This field displays the priority queue used by traffic on this port.
Pvid	This field displays the PVID of this port.

This example looks at the current status of the ports on the CPE device.

Note: This example is for the VES16XX-FA series only.

```

sysname# enable
sysname# rmt-vtur port-channel 2
sysname(config-RmtVtur)# show portstatus
  Port  status  curspeed  AdminStatus  SpeedDuplex
  1     DOWN   -----  Enable       AUTO
  2     DOWN   -----  Enable       AUTO
  3     DOWN   -----  Enable       AUTO
  4     UP     100M/FULL  Enable       AUTO
  6     VDSL   VDSL      Enable       AUTO

```

The following table describes the labels in this screen.

Table 164 rmt-vtur port-channel <port> show portstatus

LABEL	DESCRIPTION
Port	This field displays the CPE's port numbers.
status	This field displays the port status (UP or DOWN).
curspeed	This field displays the speed and duplex setting on Ethernet ports. It also displays the port type (for example, VDSL) for non-Ethernet ports.
AdminStatus	This field displays whether a port is enabled or not.
SpeedDuplex	This field displays whether the speed and duplex modes on a port are set through auto-negotiate (AUTO) or not.

62.4 Command Example - Remote CPE's CFM Set Up

This example shows the procedure to configure the CFM settings and initialize a CFM loopback test for a remote CPE device.

- 1 Fetch and display the current CFM settings on the remote CPE device which is connecting to VDSL port 2.

```

sysname# enable
sysname# rmt-vtur port-channel 2
sysname(config-RmtVtur)# cfm-setup fetch-config
sysname(config-RmtVtur)# show cfm
  CFM Action      :0
  Loopback Count  :0
  MD Name         :
  MD level        :
  MA Name         :
  MEP id          :
  Vlan id         :0
  Dest MAC        :00:00:00:00:00:00
  Inorder LBR     :0
  Outorder LBR    :0
  Sent LBM        :0

```

The following table describes the labels in this screen.

Table 165 show https session

LABEL	DESCRIPTION
CFM Action	This field displays the CFM action configured for the remote CPE device.
Loopback Count	This field displays number of loopback test messages will be sent in a test configured for the remote CPE device.
MD Name	This field displays the maintenance domain name configured for or fetched from the remote CPE device.
MA Name	This field displays the maintenance domain name configured for the remote CPE device.
MEP id	This field displays the maintenance endpoint ID configured for or fetched from the remote CPE device.
Vlan id	This field displays the CFM VLAN ID configured for or fetched from the remote CPE device.
Dest MAC	This field displays the destination MAC address for the CFM loopback test configured for the remote CPE device.
Inorder LBR	This field displays the number of in-order loopback response (LBR) messages the remote CPE device received in the last loopback test.
Outorder LBR	This field displays the number of out-of-order loopback response (LBR) messages the remote CPE device received in the last loopback test. A higher number in this field might be the result of connection faults between the CPE device and the destination host.
Sent LBM	This field displays the number of accumulated loopback messages (LBMs) the remote CPE device sent in loopback tests since it last started up.

- 2 Check the command status for the cfm-setup commands first. Make sure the Switch can successfully apply cfm-setup commands to the CPE device (should reply "OK").

```

sysname(config-RmtVtur)# cfm-setup status
MaintenanceSetup          status: OK

```

- 3 Configure the following CFM settings and then save the settings into the Switch's flash (`action 0`).

- Maintenance domain (MD) name: MD1
- MD level: 1
- Maintenance Association (MA) name: MA1
- MA VLAN ID: 1
- MEP ID: 100

```

sysname(config-RmtVtur)# cfm-setup md-name MD1
sysname(config-RmtVtur)# cfm-setup md-level 1
sysname(config-RmtVtur)# cfm-setup ma-name MA1
sysname(config-RmtVtur)# cfm-setup vid 1
sysname(config-RmtVtur)# cfm-setup mep-id 100
sysname(config-RmtVtur)# cfm-setup action 0

```

- 4 Configure the following CFM loopback test settings, display what you have configured, and then have the CPE device initiate the test.

- Number of loopback test messages sent in a loopback test: 500
- Destination MAC address: 00:13:49:00:00:0A
- CFM action: loopback test (`action 3`)

```

sysname(config-RmtVtur)# cfm-setup lbcount 500
sysname(config-RmtVtur)# cfm-setup destMac 00:13:49:00:00:0A
sysname(config-RmtVtur)# cfm-setup action 3
sysname(config-RmtVtur)# show cfm
CFM Action      :3
Loopback Count  :500
MD Name         :MD1
MD level        :1
MA Name         :MA1
MEP id         :100
Vlan id         :1
Dest MAC        :00:13:49:00:00:0A
Inorder LBR     :0
Outorder LBR    :0
Sent LBM        :0
sysname(config-RmtVtur)# cfm-setup commit

```

- 5 Wait until the CPE completes the loopback test (around 2 minutes), fetch the CPE status and you can view the test report by using the “`show cfm`” command.

```

sysname(config-RmtVtur)# cfm-setup fetch-config
sysname(config-RmtVtur)# show cfm
CFM Action      :0
Loopback Count  :0
MD Name         :MD1
MD level        :1
MA Name         :0
MEP id          :100
Vlan id         :1
Dest MAC        :00:00:00:00:00:00
Inorder LBR     :499
Outorder LBR    :1
Sent LBM        :500

```

62.5 Command Example - Set VLAN Mux for 4 WANs on a CPE device

This example shows the procedure to set VLAN Mux on 4 WAN connections on a remote CPE device which is connecting to the Switch's port 2.

This example classifies traffic flowing through different incoming LANs to determine which WAN connection goes through. Then the CPE device applies the corresponding VLAN ID, priority level, and classification rule to the traffic. See the settings used in this example.

Table 166 VLAN Mux for 4 WANs Example Settings

WAN CONNECTION	VLAN ID	PRIORITY LEVEL	CLASSIFICATION RULE	CLASSIFICATION CRITERIA
1	10	1	1	classify traffic flowing through LAN1
2	20	2	2	classify traffic flowing through LAN2
3	30	3	3	classify traffic flowing through LAN3
4	40	4	4	classify traffic flowing through LAN4

- 1 Display current WAN information. By default, only WAN 1 is enabled. It is set to bridge mode.

```

sysname# enable
sysname# rmt-vtur port-channel 2
sysname(config-RmtVtur)# show wan-entry
 1 wan interfaces
  index          :1
  service        :ENABLE
  vlan tagging   :DISABLE
  vlan Id        :-1
  802.1p         :0
  protocol       :Bridge

```

- 2 Globally enable QoS on the CPE device's WAN.

```

sysname(config-RmtVtur)# wan-common QoS enable

```

- 3 Globally enable virtual port on the CPE device's WAN.

```
sysname(config-RmtVtur)# wan-common virtual-port enable
```

- 4 Add WAN connections 2~3 and set them all to bridge mode. Then display the results.

```
sysname(config-RmtVtur)# wan-entry 2 wan-protocol bridge
sysname(config-RmtVtur)# wan-entry 3 wan-protocol bridge
sysname(config-RmtVtur)# wan-entry 4 wan-protocol bridge
sysname(config-RmtVtur)# show wan-entry
 4 wan interfaces
  index          :1
  service        :ENABLE
  vlan tagging   :DISABLE
    vlan Id      :-1
    802.1p       :0
  protocol       :Bridge

  index          :2
  service        :DISABLE
  vlan tagging   :DISABLE
    vlan Id      :-1
    802.1p       :-1
  protocol       :Bridge

  index          :3
  service        :DISABLE
  vlan tagging   :DISABLE
    vlan Id      :-1
    802.1p       :-1
  protocol       :Bridge

  index          :4
  service        :DISABLE
  vlan tagging   :DISABLE
    vlan Id      :-1
    802.1p       :-1
  protocol       :Bridge
```

- 5 Enable VLAN Mux and set the VLAN ID and priority level for each WAN connection.

```
sysname(config-RmtVtur)# wan-entry 1 vlantagging vlanmux vid 10 802.1p 1
sysname(config-RmtVtur)# wan-entry 2 vlantagging vlanmux vid 20 802.1p 2
sysname(config-RmtVtur)# wan-entry 3 vlantagging vlanmux vid 30 802.1p 3
sysname(config-RmtVtur)# wan-entry 4 vlantagging vlanmux vid 40 802.1p 4
```

- 6 Enable classification rules.

```
sysname(config-RmtVtur)# classification 1 active enable
sysname(config-RmtVtur)# classification 2 active enable
sysname(config-RmtVtur)# classification 3 active enable
sysname(config-RmtVtur)# classification 4 active enable
```

- 7 Assign a WAN connection for each classification rule.

```

sysname(config-RmtVtur)# classification 1 wan 1
sysname(config-RmtVtur)# classification 2 wan 2
sysname(config-RmtVtur)# classification 3 wan 3
sysname(config-RmtVtur)# classification 4 wan 4

```

- 8 Assign a queue for each classification rule.

```

sysname(config-RmtVtur)# classification 1 queue 1
sysname(config-RmtVtur)# classification 2 queue 2
sysname(config-RmtVtur)# classification 3 queue 3
sysname(config-RmtVtur)# classification 4 queue 4

```

- 9 Define classification criteria (traffic flowing through which LAN port) for each classification rule. For example, traffic flowing through the CPE device's LAN 1 will be classified to use classification rule 1.

```

sysname(config-RmtVtur)# classification 1 Filter lan 1
    current filter set to be IP level, IEEE 802.1p related filter
cleared for rule 1
sysname(config-RmtVtur)# classification 2 Filter lan 2
    current filter set to be IP level, IEEE 802.1p related filter
cleared for rule 2
sysname(config-RmtVtur)# classification 3 Filter lan 3
    current filter set to be IP level, IEEE 802.1p related filter
cleared for rule 3
sysname(config-RmtVtur)# classification 4 Filter lan 4
    current filter set to be IP level, IEEE 802.1p related filter
cleared for rule 4

```

- 10 Save the classification settings to the remote CPE device.

```

sysname(config-RmtVtur)# classification commit

```

62.6 Command Example - Set Auto VLAN for 1 WAN on a CPE device

This example shows the procedure to set auto VLAN on the WAN 1 connection on a remote CPE device which is connected to the Switch's port 2.

In this example, we want to add different VLAN and priority tags to traffic depending on the WAN connection through which the traffic flows. See the settings used in this example.

Table 167 Auto VLAN for 1 WAN Example Settings

WAN CONNECTIONS	VLAN ID	PRIORITY LEVEL	CLASSIFICATION RULE	CLASSIFICATION CRITERIA
1	10	1	1	classify traffic flowing through LAN1
1	20	2	2	classify traffic flowing through LAN2
1	30	3	3	classify traffic flowing through LAN3
1	40	4	4	classify traffic flowing through LAN4

See the similar procedures in the [Section 62.4 on page 227](#). Use the following command to globally enable auto VLAN tagging instead of adding WANs and enabling VLAN Mux in the example's steps 4 and 5).

```
sysname(config-RmtVtur)# wan-entry 1 vlantagging autovlan
```


CHAPTER 63

Remote Management Commands

Use these commands to specify a group of one or more “trusted computers” from which an administrator may use one or more services to manage the Switch.

63.1 Command Summary

The following table describes user-input values available in multiple commands for this feature.

Table 168 remote-management User-input Values

COMMAND	DESCRIPTION
<i>index</i>	1-4.

The following section lists the commands for this feature.

Table 169 remote-management Command Summary

COMMAND	DESCRIPTION	M	P
<code>show remote-management [<i>index</i>]</code>	Displays all secured client information or, optionally, a specific group of secured clients.	E	13
<code>remote-management <<i>index</i>></code>	Enables the specified group of trusted computers.	C	13
<code>no remote-management ALL</code>	Disables all groups of trusted computers.	C	13
<code>no remote-management <<i>index</i>></code>	Disables the specified group of trusted computers.	C	13
<code>remote-management <<i>index</i>> start-addr <<i>ip-address</i>> end- addr <<i>ip-address</i>> service <[telnet] [ftp] [http] [icmp] [snmp] [ssh] [https]></code>	Specifies a group of trusted computer(s) from which an administrator may use the specified service(s) to manage the Switch. Group 0.0.0.0 - 0.0.0.0 refers to every computer.	C	13
<code>no remote-management <<i>index</i>> service <[telnet] [ftp] [http] [icmp] [snmp] [ssh] [https]></code>	Disables the specified service(s) for the specified group of trusted computes.	C	13

63.2 Command Examples

This example allows computers in subnet 172.1.1.0/24 to access the Switch through any service except SNMP, allows the computer at 192.168.10.1 to access the Switch only through SNMP, and prevents other

computers from accessing the Switch at all. The last one is accomplished by overwriting the default entry (index 1).

```
sysname# configure
sysname(config)# remote-management 1 start-addr 172.1.1.0 end-addr
--> 172.1.1.255 service telnet ftp http icmp ssh https
sysname(config)# remote-management 2 start-addr 192.168.10.1 end-addr
--> 192.168.10.1 service snmp
sysname(config)# exit
```

CHAPTER 64

Running Configuration Commands

Use these commands to back up and restore configuration and firmware.

64.1 Switch Configuration File

When you configure the Switch using either the CLI (Command Line Interface) or Web Configurator, the settings are saved as a series of commands in a configuration file on the Switch called `running-config`. You can perform the following with a configuration file:

- Back up Switch configuration once the Switch is set up to work in your network.
- Restore a previously-saved Switch configuration.
- Use the same configuration file to set all switches (of the same model) in your network to the same settings.

You may also edit a configuration file using a text editor. Make sure you use valid commands.

Note: The Switch rejects configuration files with invalid or incomplete commands.

64.2 Command Summary

The following section lists the commands for this feature.

Table 170 running-config Command Summary

COMMAND	DESCRIPTION	M	P
<code>copy logging <level> sftp <ip> <port> <username> <password> <remote-file></code>	Backs up the specified severity of logs (0: all, 1: emergency, 2: alert, 3: critical, 4: error 5: warning, 6: notice, 7: info, 8: debug) to the SFTP server at the specified IP address and service port using the specified user name, password, and file name.	E	13
<code>copy logging <level> tftp <ip> <remote-file></code>	Backs up the specified severity of logs (0: all, 1: emergency, 2: alert, 3: critical, 4: error 5: warning, 6: notice, 7: info, 8: debug) to the TFTP server at the specified IP address with the specified file name.	E	13
<code>copy running-config interface port-channel <port> <port-list> [<attribute> [<...>]]</code>	Clones (copies) the attributes from the specified port to other ports. Optionally, copies the specified attributes from one port to other ports.	E	13

Table 170 running-config Command Summary (continued)

COMMAND	DESCRIPTION	M	P
<code>copy running-config sftp <ip> <port> <username> <password> <remote-file></code>	Backs up running configuration to the SFTP server at the specified IP address and service port using the specified user name, password, and file name.	E	13
<code>copy sftp config <index> <ip> <port> <username> <password> <remote-file></code>	Backs up the specified Switch configuration (1 or 2) to the specified SFTP server with the specified file name (<i>remote-file</i>).	E	13
<code>copy sftp flash <ip> <port> <username> <password> <remote- file> [index]</code>	Restores firmware from the SFTP server at the specified IP address and service port. You have the option to specify the configuration index that you want to restore it to (1 or 2).	E	13
<code>erase running-config</code>	Resets the Switch to the factory default settings.	E	13
<code>erase running-config ext pwd</code>	Resets the Switch's running configuration to the factory default settings except the management IP address and password.	E	13
<code>erase running-config interface port-channel <port-list> [<attribute> [<...>]]</code>	Resets to the factory default settings on a per-port basis and optionally on a per-feature configuration basis.	E	13
<code>erase running-config help</code>	Provides more information about the specified command.	E	13
<code>show user</code>	Displays information about the logged in users.	E	0
<code>show running-config [page]</code>	Displays the current configuration file. This file contains the commands that change the Switch's configuration from the default settings to the current configuration. Optionally, displays current operating configuration page by page.	E	13
<code>show running-config help</code>	Provides more information about the specified command.	E	3
<code>show running-config interface port-channel <port-list> [<attribute> [<...>]]</code>	Displays current configuration on a port-by-port basis.	E	3

64.3 Command Examples

This example resets the Switch to the factory default settings.

```
sysname# erase running-config
sysname# write memory
```

This example copies all attributes of port 1 to port 2 and copies selected attributes (active, bandwidth limit and STP settings) from port 1 to ports 5-8

```
sysname# copy running-config interface port-channel 1 2
sysname# copy running-config interface port-channel 1 5-8 active
bandwidth-limit spanning-tree
```

See [Section 3.6 on page 18](#) for an example of `show running-config`.

CHAPTER 65

Service Control Commands

Use these commands to decide what services you may use to access the Switch.

65.1 Command Summary

The following section lists the commands for this feature.

Table 171 service-control Command Summary

COMMAND	DESCRIPTION	M	P
<code>https key-regeneration dh generator <2 5 dsa> length <512 1024 2048></code>	Re-generates a key using the specified Diffie-Hellman (DH) generator and length.	C	13
<code>show service-control</code>	Displays service control settings.	E	13
<code>service-control ftp <socket-number></code>	Allows FTP access on the specified service port.	C	13
<code>service-control ftp <socket-number> inactive</code>	Disables FTP access through the specified service port.	C	13
<code>no service-control ftp</code>	Disables FTP access to the Switch.	C	13
<code>service-control http <socket-number></code>	Allows HTTP access on the specified service port.	C	13
<code>service-control http <socket-number> <timeout></code>	Allows HTTP access on the specified service port and sets the number of seconds the Switch waits before disconnecting an inactive HTTP connection.	C	13
<code>service-control http <socket-number> <timeout> inactive</code>	Disables HTTP access through the specified service port.	C	13
<code>no service-control http</code>	Disables HTTPS access to the Switch.	C	13
<code>service-control https <socket-number></code>	Allows HTTPS access on the specified service port.	C	13
<code>service-control https <socket-number> inactive</code>	Disables HTTPS access through the specified service port.	C	13
<code>no service-control https</code>	Disables HTTPS access to the Switch.	C	13
<code>service-control icmp</code>	Allows ICMP management packets.	C	13
<code>no service-control icmp</code>	Disables ICMP access to the Switch.	C	13
<code>service-control snmp</code>	Allows SNMP management.	C	13
<code>no service-control snmp</code>	Disables SNMP access to the Switch.	C	13
<code>service-control ssh <socket-number></code>	Allows SSH access on the specified service port.	C	13
<code>service-control ssh <socket-number> inactive</code>	Disables SSH access through the specified service port.	C	13

Table 171 service-control Command Summary (continued)

COMMAND	DESCRIPTION	M	P
no service-control ssh	Disables SSH access to the Switch.	C	13
service-control telnet <socket-number>	Allows Telnet access on the specified service port.	C	13
service-control telnet <socket-number> inactive	Disables Telnet access through the specified service port.	C	13
no service-control telnet	Disables Telnet access to the Switch.	C	13

65.2 Command Examples

This example disables all SNMP and ICMP access to the Switch.

```
sysname# configure
sysname(config)# no service-control snmp
sysname(config)# no service-control icmp
sysname(config)# exit
```

CHAPTER 66

SFP Thresholds

Use these commands to configure thresholds for the Small Form-factor Pluggable (SFP) module, the mini-GBIC transceiver installed in the SFP slot of the Switch. A trap is sent when one of the Switch operating parameters (such as transceiver temperature, laser bias current, transmitted optical power, received optical power and transceiver supply voltage) is above or below a pre-set threshold.

The Switch allows you to configure four SFP thresholds for each operating parameter:

- high alarm threshold
- high warning threshold
- low warning threshold
- low alarm threshold

Their relationship is high alarm threshold > high warning threshold > low warning threshold > low alarm threshold.

66.1 Command Summary

The following section lists the commands for this feature.

Table 172 sfp Command Summary

COMMAND	DESCRIPTION	M	P
<code>show sfp</code>	Displays all SFP user-defined threshold settings.	E	13
<code>sfp user-input-enable</code>	Enables SFP user-defined thresholds. The Switch checks the thresholds below and sends the corresponding traps after you use this command to enable it.	C	13
<code>sfp <port-number> temperature high-alarm-threshold <threshold></code>	Sets the transceiver temperature's high alarm threshold. The Switch sends an alarm trap if the temperature exceeds this value.	C	13
<code>sfp <port-number> temperature high-warning-threshold <threshold></code>	Sets the transceiver temperature's high warning threshold. The Switch sends a warning trap when the temperature goes over this value but below the high alarm threshold.	C	13
<code>sfp <port-number> temperature low-warning-threshold <threshold></code>	Sets low warning threshold for transceiver temperature. The Switch sends a warning trap when the temperature falls below this value but over the low alarm threshold.	C	13
<code>sfp <port-number> temperature low-alarm-threshold <threshold></code>	Sets low alarm threshold for transceiver temperature. The Switch sends an alarm trap when the temperature falls below this value.	C	13
<code>sfp <port-number> voltage high-alarm-threshold</code>	Sets high alarm threshold for transceiver supply voltage. The Switch sends an alarm trap when the value is exceeded.	C	13

Table 172 sfp Command Summary (continued)

COMMAND	DESCRIPTION	M	P
sfp <port-number> voltage high-warning-threshold	Sets high warning threshold for transceiver supply voltage. The Switch sends a warning trap when the voltage goes over this value but below the high alarm threshold.	C	13
sfp <port-number> voltage low-alarm-threshold	Sets low alarm threshold for transceiver supply voltage. The Switch sends an alarm trap when the voltage falls below this value.	C	13
sfp <port-number> voltage low-warning-threshold	Sets low warning threshold for transceiver supply voltage. The Switch sends a warning trap when the voltage falls below this value but over the low alarm threshold.	C	13
sfp <port-number> tx-bias high-alarm-threshold	Sets high alarm threshold for laser bias current. The Switch sends an alarm trap when the value is exceeded.	C	13
sfp <port-number> tx-bias high-warning-threshold	Sets high warning threshold for laser bias current. The Switch sends a warning trap when the laser bias current goes over this value but below the high alarm threshold.	C	13
sfp <port-number> tx-bias low-alarm-threshold	Sets low alarm threshold for laser bias current. The Switch sends an alarm trap when the laser bias current falls below this value.	C	13
sfp <port-number> tx-bias low-warning-threshold	Sets low warning threshold for laser bias current. The Switch sends a warning trap when the laser bias current falls below this value but over the low alarm threshold.	C	13
sfp <port-number> tx-power high-alarm-threshold	Sets high alarm threshold for transmitted optical power. The Switch sends an alarm trap when the value is exceeded.	C	13
sfp <port-number> tx-power high-warning-threshold	Sets high warning threshold for transmitted optical power. The Switch sends a warning trap when the transmitted optical power goes over this value but below the high alarm threshold.	C	13
sfp <port-number> tx-power low-alarm-threshold	Sets low alarm threshold for transmitted optical power. The Switch sends an alarm trap when the transmitted optical power falls below this value.	C	13
sfp <port-number> tx-power low-warning-threshold	Sets low warning threshold for transmitted optical power. The Switch sends a warning trap when the transmitted optical power falls below this value but over the low alarm threshold.	C	13
sfp <port-number> rx-power high-alarm-threshold	Sets high alarm threshold for received optical power. The Switch sends an alarm trap when the value is exceeded.	C	13
sfp <port-number> rx-power high-warning-threshold	Sets high warning threshold for received optical power. The Switch sends a warning trap when the received optical power goes over this value but below the high alarm threshold.	C	13
sfp <port-number> rx-power low-alarm-threshold	Sets low alarm threshold for received optical power. The Switch sends an alarm trap when the received optical power falls below this value.	C	13
sfp <port-number> rx-power low-warning-threshold	Sets low warning threshold for received optical power. The Switch sends a warning trap when the received optical power falls below this value but over the low alarm threshold.	C	13
sfp <port-list> load-default-value	Sets the specified SFP transceiver to its default settings.	C	13
no sfp <port-number>	Clears all SFP user-defined thresholds for the specified port.	C	13
no sfp user-input-enable	Disables SFP user-defined thresholds.	C	13

Table 172 sfp Command Summary (continued)

COMMAND	DESCRIPTION	M	P
no sfp <port-number> temperature	Clears transceiver temperature thresholds for the specified port.	C	13
no sfp <port-number> voltage	Clears transceiver supply voltage thresholds for the specified port.	C	13
no sfp <port-number> tx-bias	Clears laser bias current thresholds for the specified port.	C	13
no sfp <port-number> tx-power	Clears transmitted optical power thresholds for the specified port.	C	13
no sfp <port-number> rx-power	Clears received optical power thresholds for the specified port.	C	13

66.2 Command Examples

This example enables SFP user-defined thresholds and configures the following thresholds for SFP port 25 and then displays all SFP threshold settings.

- 1 Transceiver temperate high alarm, high warning, low warning and low alarm thresholds are 87, 82, 3, -2
- 2 Transceiver supply voltage high alarm, high warning, low warning and low alarm thresholds are 3.60, 3.55, 3.05, 3.00.

```

sysname# configure
sysname(config)# sfp 25 temperature high-alarm-threshold 87
sysname(config)# sfp 25 temperature high-warn-threshold 82
sysname(config)# sfp 25 temperature low-warn-threshold 3
sysname(config)# sfp 25 temperature low-alarm-threshold -2
sysname(config)# sfp 25 voltage high-alarm-threshold 3.60
sysname(config)# sfp 25 voltage high-warn-threshold 3.55
sysname(config)# sfp 25 voltage low-warn-threshold 3.05
sysname(config)# sfp 25 voltage low-alarm-threshold 3.00
sysname(config)# exit
sysname# show sfp

User Input: Active

Port      : 25

          Current  High Alarm  High Warn  Low Warn  Low Alarm
          Threshold Threshold  Threshold Threshold Threshold
-----
--
Temperature(C)      24.80      87.00      82.00      3.00      -2.00
Voltage(V)           3.39       3.60       3.55       3.05       3.00
Tx Bias(mA)         11.27       0.00       0.00       0.00       0.00
Tx Power(dBm)       -10.37       0.00       0.00       0.00       0.00
Rx Power(dBm)       -40.00       0.00       0.00       0.00       0.00
-----
-----SNAP!-----

```

This example clears the temperature thresholds for SFP port 25 and then displays the result.

```
sysname# configure
sysname(config)# no sfp 25 temperature
sysname(config)# exit
sysname# show sfp

User Input: Active

Port      : 25

          Current  High Alarm  High Warn  Low Warn  Low Alarm
          Threshold Threshold  Threshold Threshold
-----
--
Temperature(C)      24.80      0.00      0.00      0.00      0.00
Voltage(V)           3.39      3.60      3.55      3.05      3.00
Tx Bias(mA)         11.27      0.00      0.00      0.00      0.00
Tx Power(dBm)       -10.37      0.00      0.00      0.00      0.00
Rx Power(dBm)       -40.00      0.00      0.00      0.00      0.00
-----SNAP!-----
```

CHAPTER 67

SNMP Server Commands

Use these commands to configure SNMP on the Switch.

67.1 Command Summary

The following table describes user-input values available in multiple commands for this feature.

Table 173 snmp-server User-input Values

COMMAND	DESCRIPTION
<i>property</i>	1-32 alphanumeric characters
<i>options</i>	authentication: auth, radius. interface: linkup, linkdown, autonegotiation. ip: ping, traceroute. switch: stp, mactable, rmon. system: coldstart, warmstart, reset, timesync, externalalarm. vdsi: alarmprofile.

The following section lists the commands for this feature.

Table 174 snmp-server Command Summary

COMMAND	DESCRIPTION	M	P
show snmp-server	Displays SNMP settings.	E	13
snmp-server [contact <system-contact>] [location <system-location>]	Sets the geographic location and the name of the person in charge of this Switch. <i>system-contact</i> : 1-32 English keyboard characters; spaces are allowed. <i>system-location</i> : 1-32 English keyboard characters; spaces are allowed.	C	13
snmp-server get-community <property>	Sets the get community. Only for SNMPv2c or lower.	C	13
snmp-server set-community <property>	Sets the set community. Only for SNMPv2c or lower.	C	13
snmp-server trap-community <property>	Sets the trap community. Only for SNMPv2c or lower.	C	13

Table 174 snmp-server Command Summary (continued)

COMMAND	DESCRIPTION	M	P
snmp-server username <name> sec-level <noauth auth priv> [auth <md5 sha>] [priv <des aes>]	Sets the authentication level for SNMP v3 user authentication. Optionally, specifies the authentication and encryption methods for communication with the SNMP manager. <i>name</i> : Must match an existing account on the Switch. <i>noauth</i> : Use the username as the password string sent to the SNMP manager. This is equivalent to the Get, Set and Trap Community in SNMP v2c. This is the lowest security level. <i>auth</i> : Implement an authentication algorithm for SNMP messages sent by this user. <i>priv</i> : Implement authentication and encryption for SNMP messages sent by this user. This is the highest security level. Note: The settings on the SNMP manager must be set at the same security level or higher than the security level settings on the Switch.	C	13
snmp-server version <v2c v3 v3v2c>	Sets the SNMP version to use for communication with the SNMP manager.	C	13

Table 175 snmp-server trap-destination Command Summary

COMMAND	DESCRIPTION	M	P
snmp-server trap-destination <ip-address>	Sets the IP addresses of up to four SNMP managers (stations to send your SNMP traps to). You can configure up to four managers.	C	13
no snmp-server trap-destination <ip-address>	Deletes the specified SNMP manager.	C	13
snmp-server trap-destination <ip-address> enable traps	Enables sending SNMP traps to a manager.	C	13
no snmp-server trap-destination <ip-address> enable traps	Disables sending SNMP traps to a manager.	C	13
snmp-server trap-destination <ip-address> enable traps authentication	Sends all authentication traps to the specified manager.	C	13
snmp-server trap-destination <ip-address> enable traps aaa	Sends all authentication traps to the specified manager.	C	13
no snmp-server trap-destination <ip-address> enable traps authentication	Prevents the Switch from sending any authentication traps to the specified manager.	C	13
no snmp-server trap-destination <ip-address> enable traps aaa	Prevents the Switch from sending any authentication traps to the specified manager.	C	13
snmp-server trap-destination <ip-address> enable traps authentication <options>	Sends the specified authentication traps to the specified manager.	C	13
snmp-server trap-destination <ip-address> enable traps aaa <options>	Sends the specified authentication traps to the specified manager.	C	13

Table 175 snmp-server trap-destination Command Summary (continued)

COMMAND	DESCRIPTION	M	P
no snmp-server trap-destination <ip-address> enable traps authentication <options>	Prevents the Switch from sending the specified authentication traps to the specified manager.	C	13
no snmp-server trap-destination <ip-address> enable traps aaa <options>	Prevents the Switch from sending the specified authentication traps to the specified manager.	C	13
snmp-server trap-destination <ip-address> enable traps interface	Sends all interface traps to the specified manager.	C	13
no snmp-server trap-destination <ip-address> enable traps interface	Prevents the Switch from sending any interface traps to the specified manager.	C	13
snmp-server trap-destination <ip-address> enable traps interface <options>	Sends the specified interface traps to the specified manager.	C	13
no snmp-server trap-destination <ip-address> enable traps interface <options>	Prevents the Switch from sending the specified interface traps to the specified manager.	C	13
snmp-server trap-destination <ip-address> enable traps ip	Sends all IP traps to the specified manager.	C	13
no snmp-server trap-destination <ip-address> enable traps ip	Prevents the Switch from sending any IP traps to the specified manager.	C	13
snmp-server trap-destination <ip-address> enable traps ip <options>	Sends the specified IP traps to the specified manager.	C	13
no snmp-server trap-destination <ip-address> enable traps ip <options>	Prevents the Switch from sending the specified IP traps to the specified manager.	C	13
snmp-server trap-destination <ip-address> enable traps switch	Sends all switch traps to the specified manager.	C	13
no snmp-server trap-destination <ip-address> enable traps switch	Prevents the Switch from sending any switch traps to the specified manager.	C	13
snmp-server trap-destination <ip-address> enable traps switch <options>	Sends the specified switch traps to the specified manager.	C	13
no snmp-server trap-destination <ip-address> enable traps switch <options>	Prevents the Switch from sending the specified switch traps to the specified manager.	C	13
snmp-server trap-destination <ip-address> enable traps system	Sends all system traps to the specified manager.	C	13
no snmp-server trap-destination <ip-address> enable traps system	Prevents the Switch from sending any system traps to the specified manager.	C	13

Table 175 snmp-server trap-destination Command Summary (continued)

COMMAND	DESCRIPTION	M	P
snmp-server trap-destination <ip-address> enable traps system <options>	Sends the specified system traps to the specified manager.	C	13
no snmp-server trap- destination <ip-address> enable traps system <options>	Prevents the Switch from sending the specified system traps to the specified manager.	C	13
snmp-server trap-destination <ip-address> enable traps vdsl	Sends all VDSL traps to the specified manager.	C	13
no snmp-server trap- destination <ip-address> enable traps vdsl	Prevents the Switch from sending any VDSL traps to the specified manager.	C	13
snmp-server trap-destination <ip-address> enable traps vdsl <options>	Sends the specified VDSL traps to the specified manager.	C	13
no snmp-server trap- destination <ip-address> enable traps vdsl <options>	Prevents the Switch from sending the specified VDSL traps to the specified manager.	C	13
snmp-server trap-destination <ip-address> enable traps help	Provides more information about the specified command.	C	13

CHAPTER 68

SSH Commands

Use these commands to configure SSH on the Switch.

68.1 Command Summary

The following section lists the commands for this feature.

Table 176 ssh Command Summary

COMMAND	DESCRIPTION	M	P
<code>show ssh</code>	Displays general SSH settings.	E	13
<code>show ssh known-hosts</code>	Displays known SSH hosts information.	E	13
<code>show ssh key <rsa1 rsa dsa></code>	Displays internal SSH public and private key information.	E	13
<code>show ssh session</code>	Displays current SSH session(s).	E	13
<code>no ssh key <rsa1 rsa dsa></code>	Disables the secure shell server encryption key. Your Switch supports SSH versions 1 and 2 using RSA and DSA authentication.	C	13
<code>ssh known-hosts <host-ip> <1024 ssh-rsa ssh-dsa> <key></code>	Adds a remote host to which the Switch can access using SSH service.	C	13
<code>no ssh known-hosts <host-ip></code>	Removes the specified remote hosts from the list of all known hosts.	C	13
<code>no ssh known-hosts <host-ip> <1024 ssh-rsa ssh-dsa></code>	Removes the specified remote hosts with the specified public key (1024-bit RSA1, RSA or DSA).	C	13
<code>ssh <1 2> <[user@]dest-ip> [command </>]</code>	Connects to an SSH server with the specified SSH version and, optionally, addition commands to be executed on the server.	E	0

68.2 Command Examples

This example disables the secure shell RSA1 encryption key and removes remote hosts 172.165.1.8 and 172.165.1.9 (with an SSH-RSA encryption key) from the list of known hosts.

```
sysname(config)# no ssh key rsa1
sysname(config)# no ssh known-hosts 172.165.1.8
sysname(config)# no ssh known-hosts 172.165.1.9 ssh-rsa
```

This example shows the general SSH settings.

```

sysname# show ssh
Configuration
  Version          : SSH-1 & SSH-2 (server & client), SFTP (server)
  Server           : Enabled
  Port             : 22
  Host key bits    : 1024
  Server key bits  : 768
  Support authentication: Password
  Support ciphers  : AES, 3DES, RC4, Blowfish, CAST
  Support MACs     : MD5, SHA1
  Compression levels : 1~9

Sessions:
  Proto Serv Remote IP      Port Local IP      Port  Bytes In Bytes
Out

```

The following table describes the labels in this screen.

Table 177 show ssh

LABEL	DESCRIPTION
Configuration	
Version	This field displays the SSH versions and related protocols the Switch supports.
Server	This field indicates whether or not the SSH server is enabled.
Port	This field displays the port number the SSH server uses.
Host key bits	This field displays the number of bits in the Switch's host key.
Server key bits	This field displays the number of bits in the SSH server's public key.
Support authentication	This field displays the authentication methods the SSH server supports.
Support ciphers	This field displays the encryption methods the SSH server supports.
Support MACs	This field displays the message digest algorithms the SSH server supports.
Compression levels	This field displays the compression levels the SSH server supports.
Sessions	This section displays the current SSH sessions.
Proto	This field displays the SSH protocol (SSH-1 or SSH-2) used in this session.
Serv	This field displays the type of SSH state machine (SFTP or SSH) in this session.
Remote IP	This field displays the IP address of the SSH client.
Port	This field displays the port number the SSH client is using.
Local IP	This field displays the IP address of the SSH server.
Port	This field displays the port number the SSH server is using.
Bytes In	This field displays the number of bytes the SSH server has received from the SSH client.
Bytes Out	This field displays the number of bytes the SSH server has sent to the SSH client.

CHAPTER 69

Static Multicast Commands

Use these commands to tell the Switch how to forward specific multicast frames to specific port(s).

69.1 Command Summary

The following section lists the commands for this feature.

Table 178 multicast-forward Command Summary

COMMAND	DESCRIPTION	M	P
<code>show mac address-table multicast</code>	Displays the multicast MAC address table.	E	3
<code>multicast-forward name <name> mac <multicast-mac-address> vlan <vlan-id> inactive</code>	Creates a new static multicast forwarding rule. The rule name can be up to 32 printable ASCII characters. <i>multicast-mac-address</i> : Enter a multicast MAC address which identifies the multicast group. The last binary bit of the first octet pair in a multicast MAC address must be 1. For example, the first octet pair 00000001 is 01 and 00000011 is 03 in hexadecimal, so 01:00:5e:00:00:0A and 03:00:5e:00:00:27 are valid multicast MAC addresses. <i>vlan-id</i> : A VLAN identification number. Note: Static multicast addresses do not age out.	C	13
<code>multicast-forward name <name> mac <mac-address> vlan <vlan-id> interface port-channel <port-list></code>	Associates a static multicast forwarding rule with specified port(s) within a specified VLAN.	C	13
<code>no multicast-forward mac <mac-address> vlan <vlan-id></code>	Removes a specified static multicast rule.	C	13
<code>no multicast-forward mac <mac-address> vlan <vlan-id> inactive</code>	Activates a specified static multicast rule.	C	13

69.2 Command Examples

This example shows the current multicast table. The **Type** field displays **User** for rules that were manually added through static multicast forwarding or displays **System** for rules the Switch has automatically learned through IGMP snooping.

```
sysname# show mac address-table multicast
  MAC Address      VLAN ID  Type      Port
01:02:03:04:05:06  1        User      1-2
01:02:03:04:05:07  2        User      2-3
01:02:03:04:05:08  3        User      1-12
01:02:03:04:05:09  4        User      9-12
01:a0:c5:aa:aa:aa  1        System    1-12
```

This example removes a static multicast forwarding rule with multicast MAC address (01:00:5e:06:01:46) which belongs to VLAN 1.

```
sysname# no multicast-forward mac 01:00:5e:06:01:46 vlan 1
```

This example creates a static multicast forwarding rule. The rule forwards frames with destination MAC address 01:00:5e:00:00:06 to ports 10~12 in VLAN 1.

```
sysname# configure
sysname(config)# multicast-forward name AAA mac 01:00:5e:00:00:06 vlan 1
interface port-channel 10-12
```

CHAPTER 70

Static Route Commands

Use these commands to tell the Switch how to forward IP traffic.

70.1 Command Summary

The following section lists the commands for this feature.

Table 179 ip route Command Summary

COMMAND	DESCRIPTION	M	P
show ip route	Displays the IP routing table.	E	13
show ip route static	Displays the static routes.	E	13
ip route <ip-address> <mask> <next-hop-ip> [metric <metric>] [name <name>] [inactive]	Creates a static route. If the <ip-address> <mask> already exists, the Switch deletes the existing route first. Optionally, also sets the metric, sets the name, and/or deactivates the static route. <metric>: 1-15 <name>: 1-32 English keyboard characters Note: If the <next-hop-ip> is not directly connected to the Switch, you must make the static route inactive.	C	13
no ip route <ip-address> <mask>	Removes a specified static route.	C	13
no ip route <ip-address> <mask> inactive	Enables a specified static route.	C	13

70.2 Command Examples

This example shows the current routing table.

```
sysname# show ip route
```

Dest	FF Len	Device	Gateway	Metric	stat	Timer	Use
192.168.0.0	00 24	enet0	192.168.0.1	1	041b	0	0
172.1.1.0	00 24	swp00	172.1.1.204	1	041b	0	829
127.0.0.0	00 16	swp00	127.0.0.1	1	041b	0	0
0.0.0.0	00 0	swp00	172.1.1.254	2	801b	0	3708

The following table describes the labels in this screen.

Table 180 show ip route

LABEL	DESCRIPTION
Dest	This field displays the destination network number. Along with Len , this field defines the range of destination IP addresses to which this entry applies.
FF	This field is reserved.
Len	This field displays the destination subnet mask. Along with Dest , this field defines the range of destination IP addresses to which this entry applies.
Device	This field is reserved.
Gateway	This field displays the IP address to which the Switch forwards packets whose destination IP address is in the range defined by Dest and Len .
Metric	This field displays the cost associated with this entry.
stat	This field is reserved.
Timer	This field displays the number of remaining seconds this entry remains valid. It displays 0 if the entry is always valid.
Use	This field displays the number of times this entry has been used to forward packets.

In this routing table, you can create an active static route if the <next-hop-ip> is in 172.1.1.0/24 or 172.0.0.0/16. You cannot create an active static route to other IP addresses.

For example, you cannot create an active static route that routes traffic for 192.168.10.1/24 to 192.168.1.1.

```
sysname# configure
sysname(config)# ip route 192.168.10.1 255.255.255.0 192.168.1.1
Error : The Action is failed. Please re-configure setting.
```

You can create this static route if it is inactive, however.

```
sysname# configure
sysname(config)# ip route 192.168.10.1 255.255.255.0 192.168.1.1 inactive
```

You can create an active static route that routes traffic for 192.168.10.1/24 to 172.1.1.254.

```
sysname# configure
sysname(config)# ip route 192.168.10.1 255.255.255.0 172.1.1.254
sysname(config)# exit
sysname# show ip route static
  Idx Active  Name           Dest. Addr.    Subnet Mask    Gateway Addr.
Metric
  01   Y      static        192.168.10.1  255.255.255.0  172.1.1.254    1
```

CHAPTER 71

STP and RSTP Commands

Use these commands to configure Spanning Tree Protocol (STP) and Rapid Spanning Tree Protocol (RSTP) as defined in the following standards.

- IEEE 802.1D Spanning Tree Protocol
- IEEE 802.1w Rapid Spanning Tree Protocol

71.1 Command Summary

The following section lists the commands for this feature.

Table 181 spanning-tree Command Summary

COMMAND	DESCRIPTION	M	P
<code>no spanning-tree</code>	Disables STP on the Switch.	C	13
<code>no spanning-tree <port-list></code>	Disables STP on listed ports.	C	13
<code>show spanning-tree config</code>	Displays Spanning Tree Protocol (STP) settings.	E	13
<code>spanning-tree</code>	Enables STP on the Switch.	C	13
<code>spanning-tree <port-list></code>	Enables STP on a specified ports.	C	13
<code>spanning-tree <port-list> path-cost <1-65535></code>	Specifies the cost of transmitting a frame to a LAN through the port(s). It is assigned according to the speed of the bridge.	C	13
<code>spanning-tree <port-list> priority <0-255></code>	Sets the priority for the specified ports. Priority decides which port should be disabled when more than one port forms a loop in a Switch. Ports with a higher priority numeric value are disabled first.	C	13
<code>spanning-tree hello-time <1-10> maximum-age <6-40> forward-delay <4-30></code>	Sets Hello Time, Maximum Age and Forward Delay. hello-time: The time interval in seconds between BPDU (Bridge Protocol Data Units) configuration message generations by the root switch. maximum-age: The maximum time (in seconds) the Switch can wait without receiving a BPDU before attempting to reconfigure. forward-delay: The maximum time (in seconds) the Switch will wait before changing states.	C	13
<code>spanning-tree mode <RSTP MSTP></code>	Specifies the STP mode you want to implement on the Switch.	C	13

Table 181 spanning-tree Command Summary (continued)

COMMAND	DESCRIPTION	M	P
spanning-tree priority < 0 4096 8192 12288 16384 20480 24576 28672 32768 36864 40960 45056 49152 53248 57344 61440>	Sets the bridge priority of the Switch. The lower the numeric value you assign, the higher the priority for this bridge. The priority must be a multiple of 4096.	C	13
spanning-tree help	Provides more information about the specified command.	C	13

71.2 Command Examples

This example shows the current STP settings.

```

sysname# show spanning-tree config
Bridge Info:
  (a) BridgeID:                8000-001349aefb7a
  (b) TimeSinceTopoChange:     9
  (c) TopoChangeCount:        0
  (d) TopoChange:              0
  (e) DesignatedRoot:         8000-001349aefb7a
  (f) RootPathCost:           0
  (g) RootPort:                0x0000
  (h) MaxAge:                  20      (seconds)
  (i) HelloTime:               2       (seconds)
  (j) ForwardDelay:           15      (seconds)
  (k) BridgeMaxAge:            20      (seconds)
  (l) BridgeHelloTime:        2       (seconds)
  (m) BridgeForwardDelay:     15      (seconds)
  (n) TransmissionLimit:      3
  (o) ForceVersion:           2

```

The following table describes the labels in this screen.

Table 182 show spanning-tree config

LABEL	DESCRIPTION
BridgeID	This field displays the unique identifier for this bridge, consisting of bridge priority plus MAC address.
TimeSinceTopoChange	This field displays the time since the spanning tree was last reconfigured.
TopoChangeCount	This field displays the number of times the spanning tree has been reconfigured.
TopoChange	This field indicates whether or not the current topology is stable. 0: The current topology is stable. 1: The current topology is changing.
DesignatedRoot	This field displays the unique identifier for the root bridge, consisting of bridge priority plus MAC address.
RootPathCost	This field displays the path cost from the root port on this Switch to the root switch.
RootPort	This field displays the priority and number of the port on the Switch through which this Switch must communicate with the root of the Spanning Tree.
MaxAge	This field displays the maximum time (in seconds) the root switch can wait without receiving a configuration message before attempting to reconfigure.

Table 182 show spanning-tree config (continued)

LABEL	DESCRIPTION
HelloTime	This field displays the time interval (in seconds) at which the root switch transmits a configuration message.
ForwardDelay	This field displays the time (in seconds) the root switch will wait before changing states (that is, listening to learning to forwarding).
BridgeMaxAge	This field displays the maximum time (in seconds) the Switch can wait without receiving a configuration message before attempting to reconfigure.
BridgeHelloTime	This field displays the time interval (in seconds) at which the Switch transmits a configuration message.
BridgeForwardDelay	This field displays the time (in seconds) the Switch will wait before changing states (that is, listening to learning to forwarding).
TransmissionLimit	This field displays the maximum number of BPDUs that can be transmitted in the interval specified by BridgeHelloTime .
ForceVersion	This field indicates whether BPDUs are RSTP (a value less than 3) or MSTP (a value greater than or equal to 3).

This example configures STP in the following ways:

- 1 Enables STP on the Switch.
- 2 Sets the bridge priority of the Switch to 0.
- 3 Sets the Hello Time to 4, Maximum Age to 20 and Forward Delay to 15.
- 4 Enables STP on port 5 with a path cost of 150.
- 5 Sets the priority for port 5 to 20.

```

sysname(config)# spanning-tree
sysname(config)# spanning-tree priority 0
sysname(config)# spanning-tree hello-time 4 maximum-age 20 forward-delay
--> 15
sysname(config)# spanning-tree 5 path-cost 150
sysname(config)# spanning-tree 5 priority 20

```

CHAPTER 72

Subnet-based VLAN

Commands

Use these commands to configure subnet-based VLANs on the Switch.

72.1 Subnet-based VLAN Overview

Subnet-based VLANs allow you to group traffic based on the source IP subnet you specify. This allows you to assign priority to traffic from the same IP subnet.

See also [Chapter 59 on page 205](#) for protocol-based VLAN commands and [Chapter 82 on page 301](#) for VLAN commands.

72.2 Command Summary

The following section lists the commands for this feature.

Table 183 subnet-based-vlan Command Summary

COMMAND	DESCRIPTION	M	P
<code>show subnet-vlan</code>	Displays subnet based VLAN settings on the Switch.	E	13
<code>subnet-based-vlan</code>	Enables subnet based VLAN on the Switch.	C	13
<code>subnet-based-vlan dhcp-vlan-override</code>	Sets the Switch to force the DHCP clients to obtain their IP addresses through the DHCP VLAN.	C	13
<code>subnet-based-vlan ipv6 name <name> source-ip <ipv6-address> mask-bits <mask-bits> vlan <vlan-id> priority <0-7></code>	Specifies the name, IPv6 address, subnet mask, VLAN ID of the subnet based VLAN you want to configure along with the priority you want to assign to the outgoing frames for this VLAN. <i>mask-bits</i> : prefix length 1 ~ 64	C	13
<code>subnet-based-vlan ipv6 name <name> source-ip <ipv6-address> mask-bits <mask-bits> vlan <vlan-id> priority <0-7> inactive</code>	Disables the specified IPv6 subnet-based VLAN.	C	13
<code>subnet-based-vlan name <name> source-ip <ip> mask-bits <mask-bits> vlan <vlan-id> priority <0-7></code>	Specifies the name, IP address, subnet mask, VLAN ID of the subnet based VLAN you want to configure along with the priority you want to assign to the outgoing frames for this VLAN.	C	13

Table 183 subnet-based-vlan Command Summary (continued)

COMMAND	DESCRIPTION	M	P
subnet-based-vlan name <name> source-ip <ip> mask-bits <mask-bits> vlan <vlan-id> priority <0-7> inactive	Disables the specified subnet-based VLAN.	C	13
no subnet-based-vlan	Disables subnet-based VLAN on the Switch.	C	13
no subnet-based-vlan ipv6 source-ip <ipv6-address> mask- bits <mask-bits>	Removes the specified IPv6 subnet from the subnet-based VLAN configuration.	C	13
no subnet-based-vlan source-ip <ip> mask-bits <mask-bits>	Removes the specified subnet from the subnet-based VLAN configuration.	C	13
no subnet-based-vlan dhcp- vlan-override	Disables the DHCP VLAN override setting for subnet-based VLAN(s).	C	13

72.3 Command Examples

This example configures a subnet-based VLAN (**subnet1VLAN**) with priority **6** and a VID of **200** for traffic received from IP subnet **172.16.37.1/24**.

```

sysname# subnet-based-vlan name subnet1VLAN source-ip 172.16.37.1 mask-bits
--> 24 vlan 200 priority 6
sysname(config)# exit
sysname# show subnet-vlan

Global Active :Yes
      Name          Src IP   Mask-Bits  Vlan  Priority  Entry Active
-----
subnet1VLAN  172.16.37.1      24    200      6         1

```

CHAPTER 73

Syslog Commands

Use these commands to configure the device's system logging settings and to configure the external syslog servers.

73.1 Command Summary

The following table describes user-input values available in multiple commands for this feature.

Table 184 syslog User-input Values

COMMAND	DESCRIPTION
<code>type</code>	Possible values: <code>system</code> , <code>interface</code> , <code>switch</code> , <code>authentication</code> , <code>ip</code> .

The following section lists the commands for this feature.

Table 185 syslog Command Summary

COMMAND	DESCRIPTION	M	P
<code>syslog</code>	Enables syslog logging.	C	13
<code>no syslog</code>	Disables syslog logging.	C	13

Table 186 syslog server Command Summary

COMMAND	DESCRIPTION	M	P
<code>syslog server <ip-address> level <level></code>	Sets the IP address of the syslog server and the severity level. <level>: 0~7.	C	13
<code>no syslog server <ip-address></code>	Deletes the specified syslog server.	C	13
<code>syslog server <ip-address> inactive</code>	Disables syslog logging to the specified syslog server.	C	13
<code>no syslog server <ip-address> inactive</code>	Enables syslog logging to the specified syslog server.	C	13
<code>show syslog server</code>	Displays the syslog server settings.	E	3

Table 187 syslog type Command Summary

COMMAND	DESCRIPTION	M	P
<code>syslog type <type></code>	Enables syslog logging for the specified log type.	C	13
<code>syslog type <type> facility <0~7></code>	Sets the file location for the specified log type.	C	13
<code>no syslog type <type></code>	Disables syslog logging for the specified log type.	C	13
<code>show syslog type</code>	Displays the syslog logging configuration for the different types of logs.	E	3

CHAPTER 74

TACACS+ Commands

Use these commands to configure external TACACS+ (Terminal Access Controller Access-Control System Plus) servers.

74.1 Command Summary

The following section lists the commands for this feature.

Table 188 tacacs-server Command Summary

COMMAND	DESCRIPTION	M	P
<code>show tacacs-server</code>	Displays TACACS+ server settings.	E	13
<code>tacacs-server timeout <1~1000></code>	Specifies the TACACS+ server timeout value.	C	13
<code>tacacs-server mode <index-priority round-robin></code>	Specifies the mode for TACACS+ server selection.	C	13
<code>tacacs-server host <index> <ip> [auth-port <socket-number>] [key <key-string>]</code>	Specifies the IP address of the specified TACACS+ server. Optionally, sets the port number and key of the TACACS+ server. <i>index</i> : 1 or 2. <i>key-string</i> : 1-32 alphanumeric characters	C	13
<code>no tacacs-server <index></code>	Disables TACACS+ authentication on the specified server.	C	13

Table 189 tacacs-accounting Command Summary

COMMAND	DESCRIPTION	M	P
<code>show tacacs-accounting</code>	Displays TACACS+ accounting server settings.	E	3
<code>tacacs-accounting timeout <1-1000></code>	Specifies the TACACS+ accounting server timeout value.	C	13
<code>tacacs-accounting host <index> <ip> [acct-port <socket-number>] [key <key-string>]</code>	Specifies the IP address of the specified TACACS+ accounting server. Optionally, sets the port number and key of the external TACACS+ accounting server. <i>index</i> : 1 or 2. <i>key-string</i> : 1-32 alphanumeric characters	C	13
<code>no tacacs-accounting <index></code>	Disables TACACS+ accounting on the specified server.	C	13

CHAPTER 75

Trunk Commands

Use these commands to logically aggregate physical links to form one logical, higher-bandwidth link. The Switch adheres to the IEEE 802.3ad standard for static and dynamic (Link Aggregate Control Protocol, LACP) port trunking.

75.1 Command Summary

The following section lists the commands for this feature.

Note: The available trunk (T1, T2, ...) and interfaces it can use may vary depending on the Switch model.

Table 190 trunk Command Summary

COMMAND	DESCRIPTION	M	P
<code>show trunk</code>	Displays link aggregation information.	E	13
<code>trunk <T1 T2></code>	Activates a trunk group.	C	13
<code>no trunk <T1 T2></code>	Disables the specified trunk group.	C	13
<code>trunk <T1 T2> interface <port-list></code>	Adds a port(s) to the specified trunk group.	C	13
<code>no trunk <T1 T2> interface <port-list></code>	Removes ports from the specified trunk group.	C	13
<code>trunk <T1 T2> lacp</code>	Enables LACP for a trunk group.	C	13
<code>no trunk <T1 T2> lacp</code>	Disables LACP in the specified trunk group.	C	13
<code>trunk interface <port-list> timeout <lacp-timeout></code>	Defines LACP timeout period (in seconds) for the specified port(s). <lacp-timeout>: 1 or 30.	C	13

75.2 Command Examples

This example activates trunk 1, places ports 5-8 in the trunk, and enables dynamic link aggregation (LACP) in the trunk.

```
sysname(config)# trunk T1
sysname(config)# trunk T1 interface 5-8
sysname(config)# trunk T1 lacp
```

CHAPTER 76

trTCM Commands

This chapter explains how to use commands to configure the Two Rate Three Color Marker (trTCM) feature on the Switch.

76.1 trTCM Overview

Two Rate Three Color Marker (trTCM, defined in RFC 2698) is a type of traffic policing that identifies packets by comparing them to two user-defined rates: the Committed Information Rate (CIR) and the Peak Information Rate (PIR). trTCM then tags the packets:

- red - if the packet exceeds the PIR
- yellow - if the packet is below the PIR, but exceeds the CIR
- green - if the packet is below the CIR

The colors reflect the packet's loss priority and the Switch changes the packet's DiffServ Code Point (DSCP) value based on the color.

76.2 Command Summary

The following section lists the commands for this feature.

Table 191 trtcm Command Summary

COMMAND	DESCRIPTION	M	P
trtcm	Enables trTCM on the Switch.	C	13
trtcm mode <color-aware color-blind>	Sets the mode for trTCM on the Switch.	C	13
no trtcm	Disables trTCM on the Switch.	C	13
interface port-channel <port-list>	Enters subcommand mode for configuring the specified ports.	C	13
trtcm	Enables trTCM on the specified port(s).	C	13
no trtcm	Disables trTCM on the port(s).	C	13
trtcm cir <rate>	Sets the Commit Information Rate in kbps on the port(s).	C	13
trtcm pir <rate>	Sets the Peak Information Rate in kbps on the port(s).	C	13
trtcm dscp green <0-63>	Specifies the DSCP value to use for packets with low packet loss priority.	C	13

Table 191 trtcm Command Summary (continued)

COMMAND	DESCRIPTION	M	P
trtcm dscp yellow <0~63>	Specifies the DSCP value to use for packets with medium packet loss priority.	C	13
trtcm dscp red <0~63>	Specifies the DSCP value to use for packets with high packet loss priority.	C	13

76.3 Command Examples

This example activates trTCM on the Switch with the following settings:

- Sets the Switch to inspect the DSCP value of the packets (color-aware mode).
- Enables trTCM on ports 1-5.
- Sets the Committed Information Rate (CIR) to 4000 Kbps.
- Sets the Peak Information Rate (PIR) to 4500 Kbps.
- Specifies DSCP value 7 for green packets, 22 for yellow packets and 44 for red packets.

```

sysname(config)# trtcm
sysname(config)# trtcm mode color-aware
sysname(config)# interface port-channel 1-5
sysname(config-interface)# trtcm
sysname(config-interface)# trtcm cir 4000
sysname(config-interface)# trtcm pir 4500
sysname(config-interface)# trtcm dscp green 7
sysname(config-interface)# trtcm dscp yellow 22
sysname(config-interface)# trtcm dscp red 44
sysname(config-interface)# exit
sysname(config)# exit
sysname# show running-config interface port-channel 1 trtcm
Building configuration...

Current configuration:

interface port-channel 1
 trtcm
 trtcm cir 4000
 trtcm pir 4500
 trtcm dscp green 7
 trtcm dscp yellow 22
 trtcm dscp red 44
exit

```

CHAPTER 77

VDSL Alarm Profile

Commands

Use these commands to configure VDSL alarm profiles that you can assign to ports.

77.1 Command Summary

The following table describes user-input values available in multiple commands for this feature.

Table 192 vdsl-alarmprofile User-input Values

COMMAND	DESCRIPTION
<i>threshold</i>	0~900.

The following section lists the commands for this feature.

Table 193 vdsl-alarmprofile Command Summary

COMMAND	DESCRIPTION	M	P
<code>show vdsl-alarmprofile [profile-name]</code>	Displays a summary list of VDSL alarm profiles. It does not display the DEFVAL profile. Optionally, displays the settings of the specified VDSL alarm profile.	E	13
<code>vdsl-port <port-list> alarm-profilename <name></code>	Associates the VDSL port(s) to use the specified VDSL alarm profile.	C	13
<code>vdsl-alarmprofile <profile-name></code>	Enters config- <code>vdsl-alarmprofile</code> mode for the specified VDSL alarm profile. Creates the profile, if necessary. <i><profile-name></i> : 1-31 English keyboard characters	C	13
<code>15minsESs <threshold></code>	Sets the number of Errored Seconds (ES) allowed in any 15-minute period. An alarm is triggered if this number is exceeded.	C	13
<code>15minsLofs <threshold></code>	Sets the number of Lost of Framing (LoF) errors allowed in any 15-minute period. An alarm is triggered if this number is exceeded.	C	13
<code>15minsLols <threshold></code>	Sets the number of Lost of Link (LoL) errors allowed in any 15-minute period. An alarm is triggered if this number is exceeded.	C	13
<code>15minsLoss <threshold></code>	Sets the number of Lost of Signal (Los) errors allowed in any 15-minute period. An alarm is triggered if this number is exceeded.	C	13
<code>15minsLprs <threshold></code>	Sets the number of Loss of PowerR (LPR) errors allowed in any 15-minute period. An alarm is triggered if this number is exceeded.	C	13

Table 193 vdsl-alarmprofile Command Summary (continued)

COMMAND	DESCRIPTION	M	P
15minsSEs <i><threshold></i>	Sets the number of Severely Errored Seconds (SES) errors allowed in any 15-minute period. An alarm is triggered if this number is exceeded.	C	13
15minsUASs <i><threshold></i>	Sets the number of UnAvailable Seconds (UAS) errors allowed in any 15-minute period. An alarm is triggered if this number is exceeded.	C	13
initFailure <i><on off></i>	Sets whether the device is to send an initialization failure trap or not.	C	13
no vdsl-alarmprofile <i><profile-name></i>	Disables the specified VDSL alarm profile.	C	13

Table 194 vdsl-alarm-template Command Summary

COMMAND	DESCRIPTION	M	P
show vdsl-alarm-template	Displays all configured VDSL alarm templates, their line/channel alarm profile settings, and applied ports.	E	13
vdsl-alarm-template <i><template-name></i>	Enters config- <i>vdsl-alarm-template</i> mode for the specified VDSL alarm template. Creates the template, if a new name is entered. <i>template-name</i> : 1-32 characters	C	13
alarm-chan1-profile <i><channel-alarm-profile-name></i>	Specifies a channel alarm profile for this VDSL alarm template. You can configure channel alarm profiles using <i>vdsl-chan-alarm-profile</i> commands.	C	13
alarm-line-profile <i><line-alarm-profile-name></i>	Specifies a line alarm profile for this VDSL alarm template. You can configure line alarm profiles using <i>vdsl-line-alarm-profile</i> commands.	C	13
exit	Exits the VDSL alarm template setting mode.	C	13
no vdsl-alarm-template <i><template-name></i>	Deletes the specified VDSL alarm template.	C	13

Table 195 vdsl-line-alarm-profile Command Summary

COMMAND	DESCRIPTION	M	P
show vdsl-line-alarm-profile [<i>profile-name</i>]	Displays all configured VDSL line alarm profiles, their threshold settings, and applied ports. With specifying a profile, you can view the detailed alarm profile settings.	E	13
vdsl-line-alarm-profile <i><profile-name></i>	Enters config- <i>vdsl-line-alarm-profile</i> mode for the specified VDSL line alarm profile. Creates the profile, if a new name is entered. Configures the thresholds below in this mode. An alarm is triggered if a threshold is exceeded. <i>profile-name</i> : 1-32 English keyboard characters	E	13
exit	Exits the VDSL line alarm profile setting mode.	C	13
fullInits <i><0~900></i>	Enters the number of times a full initialization is allowed to fail within 15 minutes.	C	13
xtucEs <i><0~900></i>	Sets the number of Errored Seconds (ES) allowed on the Switch (<i>xtuc</i>) within 15 minutes.	C	13
xtucFecs <i><0~900></i>	Sets the number of Forward Error Correction Seconds (FECS) allowed on the Switch (<i>xtuc</i>) within 15 minutes.	C	13

Table 195 vdsl-line-alarm-profile Command Summary (continued)

COMMAND	DESCRIPTION	M	P
<code>xtucLofs <0..900></code>	Sets the number of Loss of Framing Seconds (LoFS) allowed on the Switch (<code>xtuc</code>) within 15 minutes.	C	13
<code>xtucLoss <0~900></code>	Sets the number of Loss of Signal Seconds (LoSS) allowed on the Switch (<code>xtuc</code>) within 15 minutes.	C	13
<code>xtucSes <0~900></code>	Sets the number of Severely Errored Seconds (SES) errors allowed on the Switch (<code>xtuc</code>) within 15 minutes.	C	13
<code>xtucUas <0~900></code>	Sets the number of UnAvailable Seconds (UAS) errors allowed on the Switch (<code>xtuc</code>) within 15 minutes.	C	13
<code>xturEs <0~900></code>	Sets the number of Errored Seconds (ES) allowed on CPE devices (<code>xtur</code>) within 15 minutes.	C	13
<code>xturFecs <0~900></code>	Enter the number of Forward Error Correction Seconds (FECS) allowed on CPE devices (<code>xtur</code>) within 15 minutes.	C	13
<code>xturLofs <0~900></code>	Sets the number of Lost of Framing (LoF) errors allowed on CPE devices (<code>xtur</code>) within 15 minutes.	C	13
<code>xturLoss <0~900></code>	Sets the number of Lost of Signal (Los) errors allowed on CPE devices (<code>xtur</code>) within 15 minutes.	C	13
<code>xturLprs <0~900></code>	Sets the number of Loss of PowerR (LPR) errors allowed on CPE devices (<code>xtur</code>) within 15 minutes.	C	13
<code>xturSes <0~900></code>	Sets the number of Severely Errored Seconds (SES) errors allowed on CPE devices (<code>xtur</code>) within 15 minutes.	C	13
<code>xturUas <0~900></code>	Sets the number of UnAvailable Seconds (UAS) errors allowed on CPE devices (<code>xtur</code>) within 15 minutes.	C	13
<code>no vdsl-line-alarm-profile <profile-name></code>	Deletes the specified VDSL line alarm profile.	C	13

Table 196 vdsl-chan-alarm-profile Command Summary

COMMAND	DESCRIPTION	M	P
<code>show vdsl-chan-alarm-profile [profile-name]</code>	Displays all configured VDSL channel alarm profiles, threshold settings, and applied ports. With specifying a profile, you can view the detailed profile settings.	E	13
<code>vdsl-chan-alarm-profile <profile-name></code>	Enters config- <code>vdsl-chan-alarm-profile</code> mode for the specified VDSL channel alarm profile. Creates the profile, if a new name is entered. Configures the thresholds below in this mode. An alarm is triggered if a threshold is exceeded. <i>profile-name</i> : 1-32 English keyboard characters	C	13
<code>correctedThresXtuc <0~4294967295></code>	Sets the number of error blocks allowed to be corrected on the Switch (<code>xtuc</code>) within 15 minutes.	C	13
<code>correctedThresXtur <0~4294967295></code>	Sets the number of error blocks that can be allowed to be corrected on CPE devices (<code>xtur</code>) within 15 minutes.	C	13
<code>cvThresXtuc <0~4294967295></code>	Sets the number of Code Violation (incorrect cyclic redundancy check) allowed on the Switch (<code>xtuc</code>) within 15 minutes.	C	13
<code>cvThresXtur <0~4294967295></code>	Sets the number of Code Violation (incorrect cyclic redundancy check) allowed on CPE devices (<code>xtur</code>) within 15 minutes.	C	13
<code>LeftrsThresXtuc <0-900></code>	Enter the threshold of Low Error Free Rate (LEFTRs) permitted to occur on the Switch (<code>xtuc</code>) within 15 minutes.	C	13

Table 196 vdsl-chan-alarm-profile Command Summary (continued)

COMMAND	DESCRIPTION	M	P
LefttrsThresXtur <0-900>	Enter the threshold of Low Error Free Rate (LEFTRs) permitted to occur on CPE devices (xtur) within 15 minutes.	C	13
exit	Exits the VDSL channel alarm profile setting mode.	C	13
no vdsl-chan-alarm-profile <profile-name>	Deletes the specified VDSL channel alarm profile.	C	13

77.2 Command Examples

This example shows the current list of VDSL alarm profiles.

```
sysname# show vdsl-alarmprofile

Name                               LOSSs   ESs     SESs    InitFailure   Applied Ps
=====
test                               15      10      5       On
```

This example shows the settings of the VDSL alarm profile "test".

```
sysname# show vdsl-alarmprofile test

Profile Name                        : test
15Mins LOFs Threshold              : 10
15Mins LOSSs Threshold              : 15
15Mins LPRs Threshold               : 15
15Mins LOLs Threshold               : 15
15Mins ESs Threshold                : 10
15Mins SESs Threshold               : 5
15Mins UASs Threshold               : 5
Initialization Failure              : On
```

CHAPTER 78

VDSL Counters Commands

Use these commands to look at VDSL packet statistics.

78.1 Command Summary

The following section lists the commands for this feature.

Table 197 vdsl-counters Command Summary

COMMAND	DESCRIPTION	M	P
<code>vdsl clrnt <all <port-number>></code>	Clears all VDSL statistics for all ports or a specified port.	E	13
<code>show vdsl-counters <port-number> channel-counters 15mins-counters <1-96></code>	Displays VDSL statistics for a specified port in the specified 15-minute interval (1 ~ 96). Intervals are numbered sequentially in reverse chronological order; for example, interval 1 is the most recent 15-minute interval, interval 96 is the 15-minute interval 24 hours ago.	E	13
<code>show vdsl-counters <port-number> channel-counters 1day-counters</code>	Displays VDSL statistics for a specified port in the past one day.	E	13
<code>show vdsl-counters <port-number> inm 15M-history <1-96></code>	Displays INM (Impulse Noise Monitor) statistics for a specified port in the specified 15-minute interval (1~ 96). Intervals are numbered sequentially in reverse chronological order; for example, interval 1 is the most recent 15-minute interval, interval 96 is the 15-minute interval 24 hours ago.	E	13
<code>show vdsl-counters <port-number> inm 1day-history <1-7></code>	Displays INM (Impulse Noise Monitor) statistics for a specified port in the specified 1-day interval (1~ 7). Intervals are numbered sequentially in reverse chronological order; for example, interval 1 is the most recent 1-day interval, interval 7 is the 1-day interval 7 days ago.	E	13
<code>show vdsl-counters <port-number> inm current</code>	Displays INM (Impulse Noise Monitor) statistics recorded since the link was last up and in the current 15-minute and 24-hour periods for a specified port.	E	13
<code>show vdsl-counters <port-number> channel-counters persistence</code>	Displays VDSL statistics for a specified port since the port's link last came up.	E	13
<code>show vdsl-counters <port-number> performance-data 15M-history <1-96></code>	Displays VDSL performance statistics for a specified port in the specified 15-minute interval (1~ 96). Intervals are numbered sequentially in reverse chronological order; for example, interval 1 is the most recent 15-minute interval, interval 96 is the 15-minute interval 24 hours ago.	E	13

Table 197 vdsl-counters Command Summary (continued)

COMMAND	DESCRIPTION	M	P
<code>show vdsl-counters <port-number> performance-data 15mins-counters <1~96></code>	Displays VDSL performance statistics for a specified port in the specified 15-minute interval (1~ 96). Intervals are numbered sequentially in reverse chronological order; for example, interval 1 is the most recent 15-minute interval, interval 96 is the 15-minute interval 24 hours ago.	E	13
<code>show vdsl-counters <port-number> performance-data 1day-history <1-7></code>	Displays VDSL performance statistics for a specified port in the specified 1-day interval (1~ 7). Intervals are numbered sequentially in reverse chronological order; for example, interval 1 is the most recent 1-day interval, interval 7 is the 1-day interval 7 days ago.	E	13
<code>show vdsl-counters <port-number> performance-data 1day-counters</code>	Displays VDSL performance statistics for a specified port in the past one day.	E	13
<code>show vdsl-counters <port-number> performance-data current</code>	Displays VDSL performance statistics for a specified port currently, in this 15-minute or in this one day time segment.	E	13
<code>show vdsl-counters <port-number> sub-carrier hlog</code>	Displays the Hlog parameter for the VDSL line (connected to the specified port). Hlog is one parameter of the Channel Transfer Function in mathematics. The Hlog can be used to see a line's capability against interference and attenuation.	E	13
<code>show vdsl-counters <port-number> sub-carrier qln</code>	Displays the QLN (Quiet Line Noise) parameter for the VDSL line (connected to the specified port). This is to see the line's noise level. The Quiet Line Noise for a DMT tone is the rms (root mean square) level of the noise present on the line, when no ADSL signals are present. It is measured in dBm/Hz. The QLN can be used in analyzing crosstalk.	E	13
<code>show vdsl-counters <port-number> sub-carrier snr</code>	Displays the SNR (Signal to Noise Ratio) parameter for the VDSL line (connected to the specified port). This is to see the line's signal strength.	E	13
<code>show vdsl-status band-status <port-number></code>	Displays the status of upstream bands 0, 1, 2, 3, 4 (U0, U1, U2, U3, U4) and downstream bands 1, 2, 3, 4 (D1, D2, D3, D4) for the VDSL line connected to the specified port.	E	13
<code>show vdsl-status line-status <port-number></code>	Displays the status of the VDSL line connected to the specified port.	E	13
<code>show vdsl-status medley-psd <port-number></code>	Displays the final PSD the Switch proposes to the connected CPE during line initialization for the VDSL line connected to the specified port.	E	13
<code>show vdsl-status subcarrier bitAlloc <port-number> <1 2></code>	Displays the number of bits allocated to each tone for the VDSL line (connected to the specified port). The higher the bit allocated, the higher the data transmission rate. 1: upstream 2: downstream	E	13

Table 197 vdsl-counters Command Summary (continued)

COMMAND	DESCRIPTION	M	P
<code>show vdsl-status subcarrier gainAlloc <port-number> <1 2></code>	Displays the gain allocated to each tone for the VDSL line (connected to the specified port). Normally, each tone gets a different gain value allocated to avoid interference. 1: upstream 2: downstream	E	13
<code>show vdsl-status subcarrier hlog <port-number> <1 2></code>	Displays the Hlog parameter for the VDSL line (connected to the specified port). Hlog is one parameter of the Channel Transfer Function in mathematics. The Hlog can be used to see a line's capability against interference and attenuation. 1: upstream 2: downstream	E	13
<code>show vdsl-status subcarrier qln <port-number> <1 2></code>	Displays theQLN (Quiet Line Noise) parameter for the VDSL line (connected to the specified port). This is to see the line's noise level. The Quiet Line Noise for a DMT tone is the rms (root mean square) level of the noise present on the line, when no ADSL signals are present. It is measured in dBm/Hz. TheQLN can be used in analyzing crosstalk. 1: upstream 2: downstream	E	13
<code>show vdsl-status subcarrier snr <port-number> <1 2></code>	Displays the SNR (Signal to Noise Ratio) parameter for the VDSL line (connected to the specified port). This is to see the line's signal strength. 1: upstream 2: downstream	E	13
<code>show vdsl-vectoring US-Fext-Cancel-Priority <LineId></code>	Displays the upstream far end cross (X) talk (FEXT) noise cancellation priority of the selected port. A higher priority means faster data rates.	E	13
<code>show vdsl-vectoring DS-Fext-Cancel-Priority <LineId></code>	Displays the downstream FEXT cancellation priority of the selected port. A higher priority means faster data rates.	E	13
<code>show vdsl-vectoring US-Xlin-Req <xtalkId> <LineId></code>	Displays the port's crosstalk coupling among pairs (XLIN) data for the upstream (CPEs-to-Switch) direction.	E	13
<code>show vdsl-vectoring DS-Xlin-Req <xtalkId> <LineId></code>	Displays the port's XLIN data for the downstream (Switch-to-CPEs) direction.	E	13

78.2 Command Examples

This example looks at the VDSL channel counters for port 2 in the most recent 15-minute interval.

```

sysname# show vdsl-counters 2 channel-counters 15mins-counters 1
VDSL performance 15Mins counters
Port NO.          :2          Interval          :1
DS FixedOctets:    0          US FixedOctets:    0
DS BadBlocks:     0          US BadBlocks:     0

```

The following table describes the labels in this screen.

Table 198 show vdsl-counters <port-number> channel-counters 15mins-counters

LABEL	DESCRIPTION
Port NO.	This field displays the port number.
Interval	This field displays the interval number. Intervals are numbered sequentially in reverse chronological order; for example, interval 1 is the last 15-minute interval, interval 2 is the 15-minute interval before that one, and so on.
DS FixedOctets	This field displays the number of downstream corrected octets in this interval as reported by the VDSL modem.
US FixedOctets	This field displays the number of upstream corrected octets in this interval as reported by the Switch.
DS BadBlocks	This field displays the number of downstream corrupt blocks in this interval as reported by the VDSL modem.
US BadBlocks	This field displays the number of upstream corrupt blocks in this interval as reported by the Switch.

This example looks at the VDSL performance counters for port 2 since the port's link last came up.

```

sysname# show vdsl-counters 2 performance-data current
VDSL performance counters
Port NO.      :2
Current initialization
DS LOFs:      0          US LOFs:      0
DS LOSSs:     0          US LOSSs:     0
DS LPRs/LPR:  0 / 0     US LPRs/LPR: 0 / 0
DS LOLs/LOL:  0 / 0     US LOLs/LOL: 0 / 0
DS ESs:       0          US ESs:       0
DS SESs:      0          US SESs:      0
DS CodeViolation: 0      US CodeViolation: 0
DS UASs:      0          US UASs:      0
DS Inits:     0          US Inits:     0
Current 15 min interval
DS LOFs:      0          US LOFs:      0
DS LOSSs:     0          US LOSSs:     0
DS LPRs/LPR:  0 / 0     US LPRs/LPR: 0 / 0
DS LOLs/LOL:  0 / 0     US LOLs/LOL: 0 / 0
DS ESs:       0          US ESs:       0
DS SESs:      0          US SESs:      0
DS UASs:      0          US UASs:      0
DS Inits:     0          US Inits:     0
Current 1 day interval
DS LOFs:      0          US LOFs:      0
DS LOSSs:     0          US LOSSs:     0
DS LPRs/LPR:  0 / 0     US LPRs/LPR: 0 / 0
DS LOLs/LOL:  0 / 0     US LOLs/LOL: 0 / 0
DS ESs:       0          US ESs:       0
DS SESs:      0          US SESs:      0
DS UASs:      0          US UASs:      0
DS Inits:     0          US Inits:     1

```

The following table describes the labels in this screen.

Table 199 show vdsl-counters <port-number> performance-data persistence

LABEL	DESCRIPTION
Current initialization	This section displays current VDSL performance measured at CO side (ds) and CPE side (us).
Current 15 min interval	This section displays the VDSL performance measured at CO side (ds) and CPE side (us) in this 15-minute (900 seconds) time segment..
Current 1 day interval	This section displays the VDSL performance measured at CO side (ds) and CPE side (us) in this 1-day (86400 seconds) time segment.
Port NO.	This field displays the port number.
DS LOFs	This field displays the count of 1-second intervals containing one or more Loss of Framing (LOF) failures reported by the CPE device.
US LOFs	This field displays the count of 1-second intervals containing one or more Loss of Framing (LOF) failures reported by the Switch.
DS LOSSs	This field displays the count of 1-second intervals containing one or more Loss of Signal (LOS) failures reported by the CPE device.
US LOSSs	This field displays the count of 1-second intervals containing one or more Loss of Signal (LOS) failures reported by the Switch.

Table 199 show vdsl-counters <port-number> performance-data persistence (continued)

LABEL	DESCRIPTION
DS LPRs/LPR	This field displays the count of 1-second intervals containing more than one (the first number) and a single (the second number) Loss of PowerR (LPR) failure(s) reported by the CPE device.
US LPRs/LPR	This field displays the count of 1-second intervals containing more than one (the first number) and a single (the second number) Loss of PowerR (LPR) failure(s) reported by the Switch.
DS LOLs/LOL	This field displays the count of 1-second intervals containing more than one (the first number) and a single (the second number) Loss Of Link (LOL) failure(s) reported by the CPE device.
US LOLs/LOL	This field displays the count of 1-second intervals containing more than one (the first number) and a single (the second number) Loss Of Link (LOL) failure(s) reported by the Switch.
DS ESs	This field displays the count of 1-second intervals containing one or more Errored Seconds (ES) reported by the CPE device.
US ESs	This field displays the count of 1-second intervals containing one or more Errored Seconds (ES) reported by the Switch.
DS SESs	This field displays the count of 1-second intervals containing one or more Severely Errored Seconds (SES) reported by the CPE device.
US SESs	This field displays the count of 1-second intervals containing one or more Severely Errored Seconds (SES) reported by the Switch.
DS CodeViolation	This field displays the number of Code Violation (incorrect cyclic redundancy check) reported by the CPE device.
US CodeViolation	This field displays the number of Code Violation (incorrect cyclic redundancy check) reported by the Switch.
DS UASs	This field displays the count of 1-second intervals containing one or more Unavailable Seconds (UAS) reported by the CPE device.
US UASs	This field displays the count of 1-second intervals containing one or more Unavailable Seconds (UAS) reported by the Switch.
DS Inits	This field displays the count of 1-second intervals containing one or more initialization failures reported by the CPE device.
US Inits	This field displays the count of 1-second intervals containing one or more initialization failures reported by the Switch.

CHAPTER 79

VDSL Loop Diagnostic Commands

Use these commands to do the Dual-End Loop Test (DELT) or Single-End Loop Test (SELT) and see the testing report then.

Note: Use `vdsl <port-list> loop-diagnostic delt start` to perform a Dual-End Loop Test or `vdsl <port-list> loop-diagnostic sel start` to perform a Single-End Loop Test before using other commands to check the testing result.

79.1 Command Summary

The following section lists the commands for this feature.

Table 200 Command Summary: vdsl loop diagnostic

COMMAND	DESCRIPTION	M	P
<code>vdsl <port-list> loop-diagnostic delt start</code>	Starts to perform a DELT for a line. Note: Make sure the line is at "ShowTime" status to perform this test.	E	13
<code>vdsl <port-number> loop-diagnostic delt status</code>	Displays a DELT result for a VDSL line (connected to a specified port).	E	13
<code>vdsl <port-number> loop-diagnostic delt actatp</code>	Displays the actual aggregate transmission power for a VDSL line (connected to a specified port).	E	13
<code>vdsl <port-number> loop-diagnostic delt attndr</code>	Displays the attainable net data rate for a VDSL line (connected to a specified port).	E	13
<code>vdsl <port-number> loop-diagnostic delt hlin-ps</code>	Displays the Hlin-ps (Channel Transfer Function per sub-carrier group) for a VDSL line (connected to a specified port). You can use this to see the line's capability against attenuation.	E	13
<code>vdsl <port-number> loop-diagnostic delt hlog-ps</code>	Displays the Hlog-ps (Channel Transfer Function per sub-carrier group) for a VDSL line (connected to a specified port). You can use this to see the line's capability against attenuation. Both Hlin and Hlog are parameters of Channel Transfer Function. However, Hlin is the linear, complex, representation of the loop response. Hlog(f) is the logarithmic representation of the loop magnitude response in dB.	E	13
<code>vdsl <port-number> loop-diagnostic delt latn-pb</code>	Displays the LATN-pb (Line ATteNuation per band) for a VDSL line (connected to a specified port)	E	13

Table 200 Command Summary: vdsl loop diagnostic (continued)

COMMAND	DESCRIPTION	M	P
<code>vdsl <port-number> loop-diagnostic delt qln-ps</code>	Displays the QLN-ps (Quiet Line Noise per sub-carrier group) for a VDSL line (connected to a specified port). You can use this to see the line's noise level.	E	13
<code>vdsl <port-number> loop-diagnostic delt satn-pb</code>	Displays the SATN-pb (Signal ATteNuation per band) for a VDSL line (connected to a specified port)	E	13
<code>vdsl <port-number> loop-diagnostic delt snr-ps</code>	Displays the SNR-ps (Signal-to-Noise-Ratio per sub-carrier per second) to see the line's signal strength level by calculating the ratio between the received signal power and the received noise margin for that sub-carrier.	E	13
<code>vdsl <port-number> loop-diagnostic delt snrm-pb</code>	Displays the SNRM-pb (Signal-to-Noise Ratio Margin per band) for a VDSL line (connected to a specified port)	E	13
<code>vdsl <port-number> loop-diagnostic delt clear</code>	Clears the last DELT result for a VDSL line (connected to a specified port)	E	13
<code>vdsl <port-number> loop-diagnostic delt abort</code>	Aborts the current DELT for a VDSL line (connected to a specified port)	E	13
<code>vdsl <port-list> loop-diagnostic selt calibration show</code>	Displays the SELT calibration result for the specified port(s).	E	13
<code>vdsl <port-list> loop-diagnostic selt calibration test</code>	Performs SELT calibration for the specified port(s). This allows you to reset the SELT parameters on the Switch to achieve high SELT accuracy.	E	13
<code>vdsl <port-list> loop-diagnostic selt start</code>	Starts to perform a SELT for a line.	E	13
<code>vdsl <port-list> loop-diagnostic selt report</code>	Displays the SELT testing result.	E	13
<code>vdsl <port-list> loop-diagnostic selt startSeltQln <duration> <measure-tones></code>	Measures the Quite Line Noise by measurement time. Measure time is $2^{\wedge}duration$ DMT symbols and measure-tone = <1024/2048/3072/4096> tones.	E	13
<code>vdsl <port-list> loop-diagnostic selt getSeltQln</code>	Queries the results of the QLN measurement.	E	13
<code>vdsl <port-list> loop-diagnostic selt start-vdslecho4096 <duration> <agc setting> <measure-tones></code>	Performs a SELT where the Switch sends a wideband signal and calculates the loop information from the signal echoes (reflections). Specify for how many seconds to send the signal (1-255), the decibels of automatic gain control to use (0-32), and the tones to measure <1024/2048/3072/4096>.	E	13
<code>vdsl <port-list> loop-diagnostic selt get-vdslecho4096</code>	Queries the results of the VDSL echo measurement.	E	13

79.2 Command Examples

This example checks that the line connected to the port 1 is connected ("ShowTime" status) and then it starts a dual-end loop test.

```

sysname# vdsl 1 loop-diagnostic delt status

Port 1
Status:ShowTime
Last test:
Elapsed time: 00:00:00
sysname# vdsl 1 loop-diagnostic delt start
Perform loopdiagnostic for port 1

```

This example aborts the dual-end loop test.

```

sysname# vdsl 1 loop delt abort

Port 1 test aborted

```

This example checks whether the line completes a dual-end loop testing and back to "ShowTime" status. Then checks the actual aggregate transmit power, attainable net data rate, LATN-ps and SNR-pb from the test result.

```

sysname# vdsl 1 loop-diagnostic status

Port 1
Status:Showtime
Last test: 06:12:15 1970-01-02
Elapsed time: 00:02:45
sysname# vdsl 1 loop-diagnostic actatp

Port 1
Actual aggregate transmit power (NE/FE): 4294966784 /      88 dBm
sysname# vdsl 1 loop-diagnostic attndr

Port 1
Attainable Net Data Rate (NE/FE): 12920 / 74760 kbps
sysname# vdsl 1 loop-diagnostic satn-pb

Port 1
SATN per band (dB) :
Band      U0      U1      U2      U3      D1      D2      D3
SATN      2.2     1.2    102.3   102.3    0.6     1.2    102.3
sysname# vdsl 1 loop-diagnostic snrm-pb

Port 1
SNR Margin per band (dB) :
Band      U0      U1      U2      U3      D1      D2      D3
SNRM      6.0     6.0   6502.4  6502.4    6.0     6.0   6502.4

```

CHAPTER 80

VDSL Profile Commands

Use these commands to configure VDSL profiles that you can assign to ports.

80.1 Command Summary

The following table describes user-input values available in multiple commands for this feature.

Table 201 vdsl-profile User-input Values

COMMAND	DESCRIPTION
<code>rate</code>	dspayloadrate: 64 ~ 104960 or 64 ~ 100332 Kbps. uspayloadrate: 64 ~ 104960 or 64 ~ 45440 Kbps.

The following section lists the commands for this feature.

Table 202 vdsl-profile Command Summary

COMMAND	DESCRIPTION	M	P
<code>show vdsl-profile [profile-name]</code>	Displays a summary list of VDSL profiles if you don't specify a profile name. Otherwise, displays settings of a specified VDSL profile.	E	13
<code>vdsl-port <port-list> profilename <name></code>	Associates the VDSL port(s) to use the specified VDSL profile.	C	13
<code>no vdsl-profile <profile-name></code>	Deletes the specified VDSL profile.	C	13
<code>vdsl-profile <profile-name></code>	Enters config- <code>vdsl-profile</code> mode for the specified VDSL profile. Creates the profile, if a new name is entered. <i>profile-name</i> : 1-31 English keyboard characters.	C	13
<code>applicablestandard <2:etsi></code>	Specifies the VDSL standard used on the line.	C	13
<code>compatiblemode <1~4></code>	Sets the starting band of the frequency range used by VDSL services. 1: none 2: 640 kHz 3: 1100 kHz 4: 2200 kHz	C	13
<code>bitswap <ds us> <1:on 2:off></code>	Enables or disables the bitswap for downstream or upstream. Bitswap allows on-line bits and power (for example, margin) reallocated among the allowed sub-carriers without service interruption or errors.	C	13
<code>dpbo <1:enable 2:disable></code>	Enables or disables the DPBO (Downstream Power Back Off) on this Switch.	C	13

Table 202 vdsl-profile Command Summary (continued)

COMMAND	DESCRIPTION	M	P
dpbo epsd level <break-point> <0~255>	Sets the DPBOEPSD PSD levels. <i>break-point</i> : 01~32 0~255: Each number represents an increase of 0.5 dBm/Hz.	C	13
dpbo epsd shape <1:CO 2:Flat 3:CAB_ANSI 4:CAB_ETSI 5:EXCH_ANSI 6:EXCH_ETSI 7:custom>	Sets the DPBOEPSD PSD shape. Set "7" if you want to customize breakpoints and PSD level for the PSD mask. Otherwise, use a pre-defined PSD mask (from 1 to 6).	C	13
dpbo epsd tone <break-point> <0~4096>	Sets the DPBOEPSD frequency tones. DPBOEPSD (DPBO assumed Exchange PSD mask) defines the PSD mask that is assumed to be exchanged at CO (central office). <i>break-point</i> : 01~32 0~4096: Each number represents an increase of 4.3125 kHz.	C	13
dpbo <escma escmb escmc> <0~640>	Sets the DPBOESCMA, DPBOESCMB and DPBOESCMC. These three parameters define a cable model that is used to describe the frequency dependent loss of exchange-side cables. 0~640: Each number represents an increase of 2 ⁻⁸ .	C	13
dpbo esel <0~511>	Sets the DPBOESEL which is the electrical length of the cable between CO and Cabinet. 0~511: Each number represents an increase of 0.5 dB.	C	13
dpbo fmax <32~6956>	Sets the DPBOFMAX. DPBOFMAX defines the maximum frequency at which DPBO may be applied. 32~6956: Each number represents an increase of 4.3125 kHz.	C	13
dpbo fmin <0~2048>	Sets the DPBOFMIN. DPBOFMIN defines the minimum frequency from which the DPBO shall be applied. 0~2048: Each number represents an increase of 4.3125 kHz	C	13
dpbo mus <0~255>	Sets the DPBOMUS. DPBOMUS defines the assumed minimum usable receives PSD mask (in dBm/Hz) for exchange based services, used to modify parameter DPBOFMAX defined above. 0~255: Each number represents an increase of 0.5 dB.	C	13
dsinterdelay <0~4,8>	Sets the downstream interleave delay (in milliseconds).	C	13
usinterdelay <0~4,8>	Sets the upstream interleave delay.	C	13
dspayloadrate max <rate>	Sets the maximum downstream data rate.	C	13
dspayloadrate min <rate>	Sets the minimum downstream data rate.	C	13
hamband mask <0000000-1111111>	Sets the Ham (Handheld Amateur Radio) bands mask to not transmit data in the pre-defined bands to avoid radio frequency interference (RFI). See Section 80.2 on page 293 for more information.	C	13
hamband <notch1start notch1stop> <0~30000>	Sets start and stop frequency bands to not transmit data in the first band range to avoid radio frequency interference (RFI).	C	13
hamband <notch2start notch2stop> <0~30000>	Sets start and stop frequency bands to not transmit data in the second band range to avoid radio frequency interference (RFI).	C	13

Table 202 vdsl-profile Command Summary (continued)

COMMAND	DESCRIPTION	M	P
<code>interleavedelay ds <0~255></code>	Sets the downstream interleave delay.	C	13
<code>interleavedelay us <0~255></code>	Sets the upstream interleave delay.	C	13
<code>limitpsdmask <psdmask-id></code>	Sets the limit PSD mask. <i>psdmask-id</i> : The following lists the available PSD mask ID. a_nus0_d32 - ANNEX_A_NUS0_D-32 [BandPlan:RegionA] a_eu32_d32 - ANNEX_A_EU-32_D-32 [BandPlan:RegionA] a_eu36_d48 - ANNEX_A_EU-36_D-48 [BandPlan:RegionA] a_eu40_d48 - ANNEX_A_EU-40_D-48 [BandPlan:RegionA] a_eu44_d48 - ANNEX_A_EU-44_D-48 [BandPlan:RegionA] a_eu48_d48 - ANNEX_A_EU-48_D-48 [BandPlan:RegionA] a_eu52_d64 - ANNEX_A_EU-52_D-64 [BandPlan:RegionA] a_eu56_d64 - ANNEX_A_EU-56_D-64 [BandPlan:RegionA] a_eu60_d64 - ANNEX_A_EU-60_D-64 [BandPlan:RegionA] a_eu64_d64 - ANNEX_A_EU-64_D-64 [BandPlan:RegionA]	C	13
<code>maxpower ds <range></code>	Specify the maximum aggregate power level for downstream transmission. <i>range</i> : 0~5 or 0~58	C	13
<code>maxpower us <range></code>	Specify the maximum aggregate power level for upstream transmission. <i>range</i> : 0~5 or 0~58	C	13
<code>minINP <ds us> <5~160></code>	Sets the downstream or upstream minimum INP (impulse Noise Protection). 5-160: Each number represents an increase of 0.1 symbol.	C	13
<code>optusage <1~2></code>	Sets the use of optional channel for the upstream or downstream traffic. 1: unused 2: upstream	C	13
<code>payloadrate <maxds minds maxus minus> <64~110000></code>	Sets the actual data rate (in kbps) including maximum/minimum downstream data rate and maximum/minimum upstream data rate. Note: Maximum data rate must be larger than minimum data rate.	C	13
<code>payloadrate <maxdsfast maxdsslow> <64~104960></code>	Specifies the maximum downstream fast/slow channel data rate in bits/second.	C	13
<code>payloadrate <maxusfast maxusslow> <64~104960></code>	Specifies the maximum upstream fast/slow channel data rate in bits/second.	C	13
<code>payloadrate <mindsfast mindsdslow> <64~104960></code>	Specifies the minimum downstream fast/slow channel data rate in bits/second.	C	13

Table 202 vdsl-profile Command Summary (continued)

COMMAND	DESCRIPTION	M	P
payloadrate <minusfast minusslow> <64~104960>	Specifies the minimum upstream fast/slow channel data rate in bits/second.	C	13
pbo uscontrol <1~3>	Sets the upstream PBO control. 1: Disable 2: Auto 3: Manual	C	13
pbo uslevel <0~120>	Sets the upstream PBO level.	C	13
psdtemplate ds <1~2>	Sets a PSD mask for the downstream traffic.	C	13
psdtemplate us <1~2>	Sets a PSD mask for the upstream traffic.	C	13
phyR <1:enable 2:disable>	Enables or disables phyR which enables VDSL physical layer re-transmit data when impulse noise occurs. Enable this to improve link performance.	C	13
ratemode <ds us> <1:manual 2:adaptAtInit>	Sets the rate adaptive mode for downstream or upstream.	C	13
rateratio ds <0~100>	Specifies the downstream data rate allocated for the fast and slow channels. 0: slow channel 100: fast channel	C	13
rateratio us <0~100>	Specifies the upstream data rate allocated for the fast and slow channels. 0: slow channel 100: fast channel	C	13
rate-adaption <fix adaption>	Sets the rate adaption mode.	C	13
rfi <disable annex_f etsi t1e1>	Sets the RFI (Radio Frequency Interference) band.	C	13
snr <dsmx usmax> <0~310 disable>	Sets the maximum SNR (signal-to-noise ratio) margin for downstream or upstream. Each unit represents 0.1 dB. When the actual SNR margin is going to reach this specified value, this mechanism forces connected CPE device(s) to lower its transmission power level and maintains the actual SNR margin equal to or less than this value. Set disable to turn this mechanism off.	C	13
snr <dsmn dstarget usmin ustar get> <0~310>	Sets the minimum and target SNR (signal-to-noise ratio) margin for downstream or upstream. Each unit represents 0.1 dB.	C	13
snr dsmax <0~127>	Sets the maximum downstream SNR (Signal to Noise Ratio).	C	13
snr dsmin <0~127>	Sets the minimum downstream SNR (Signal to Noise Ratio).	C	13
snr dstarget <0~127>	Sets the target downstream SNR (Signal to Noise Ratio).	C	13
snr usmax <0~127>	Sets the maximum upstream SNR (Signal to Noise Ratio).	C	13
snr usmin <0~127>	Sets the minimum upstream SNR (Signal to Noise Ratio).	C	13
snr ustarget <0~127>	Sets the target upstream SNR (Signal to Noise Ratio).	C	13

Table 202 vdsl-profile Command Summary (continued)

COMMAND	DESCRIPTION	M	P
targetslowburst ds <0~1275>	Sets the target burst rate for the downstream slow channel.	C	13
targetslowburst us <0~1275>	Sets the target burst rate for the upstream slow channel.	C	13
upbo <1:Auto 2:Manual 3:Disable >	Enables UPBO (Upstream Power Back Off) in auto or manual mode or disables UPBO. When a line is in UPBO auto mode, the connected CPE devices adjust their PSD levels when transmitting data based on the negotiation result with the Switch. When a line is in UPBO manual mode, the connected CPE devices adjust their PSD levels when transmitting data based on the UPBO's electrical distance you set using the upbo upboKL <0~1270> command below.	C	13
upbo <band1a band2a> <4000~8095>	Sets the UPBO band 1 or band 2 parameter A. Each unit represents 0.01 Hz.	C	13
upbo <band1b band2b> <0~4095>	Sets the UPBO band 1 or band 2 parameter B. Each unit represents 0.01 Hz.	C	13
upbo upboKL <0~1270>	Sets UPBO electrical length (0~1270) in 0.1 dB. See Section 80.3 on page 294 for more information.	C	13
uspayloadrate max <rate>	Sets the maximum upstream payload rate.	C	13
uspayloadrate min <rate>	Sets the minimum upstream payload rate.	C	13
vdsl2frequencyplan <index>	Sets the VDSL2 frequency profile used by the Switch. <i>index</i> : 1~2 or 1~3 (depending on the Switch model) <ul style="list-style-type: none"> 1: 30A Annex A 2: 30A Annex C TTC 3: 30A ADE30 	C	13
vdsl2Profile enable <vdsl2-profile-type> <30a 17a 12a 12b 8a 8b 8c 8d>	Enables the specified VDSL2 profile(s) support in this VDSL profile. <i>vdsl2-profile-type</i> : The available VDSL2 profile types include 30a, 17a, 12a, 12b, 8a, 8b, 8c and 8d. You can specify multiple profile types by using comma (,) in between. Note: The available VDSL2 profiles support may vary on your Switch. See the product specification chapter in your Switch's User's Guide.	C	13
vdsl-port <port-list> psd-profilename <profile-name>	Associates a specified VDSL PSD profile with specified port(s). <i>profile-name</i> : 1-31 English keyboard characters.	C	13
vdsl-psd profile	Displays a summary list of VDSL PSD profiles.	C	13
vdsl-psd profile <profile-name>	Displays settings of the specified VDSL PSD profile.	C	13
no vdsl-psd profile <name>	Removes a VDSL PSD profile. You cannot delete a default profile (DEFVAL).	C	13

Table 202 vdsl-profile Command Summary (continued)

COMMAND	DESCRIPTION	M	P
<code>vdsl-psd profile <profile-name> physide <1 2> frequency <0~30000> level <125~1400></code>	Sets a VDSL PSD profile. 1: DownStream 2: UpStream	C	13
<code>no vdsl-psd profile <profile-name> physide <1 2> frequency <0~3000></code>	Removes the specified breakpoint in a VDSL PSD profile.	C	13

Table 203 vdsl-line-template Command Summary

COMMAND	DESCRIPTION	M	P
<code>show vdsl-line-template</code>	Displays all configured VDSL line templates, their line and channel profiles, channel rate ratio, and applied ports.	E	13
<code>vdsl-line-template <profile-name></code>	Enters config- <code>vdsl-line-template</code> mode for the specified VDSL line template. Creates the line template, if a new name is entered. One VDSL line template should contain one VDSL line profile and one VDSL channel profile. <i>profile-name</i> : 1-31 English keyboard characters.	C	13
<code>chan1-profile <channel-profile-name></code>	Specifies the channel profile for the VDSL line template. See Table 204 on page 281 for VDSL channel profile commands.	C	13
<code>exit</code>	Exits from the VDSL line template setting mode.	C	13
<code>inm-profile <inm-profile-name></code>	Specifies the INM profile for the VDSL line template. See Table 205 on page 284 for VDSL INM profile commands.	C	13
<code>line-profile <line-profile-name></code>	Specifies the line profile for the VDSL line template. See Table 206 on page 286 for VDSL line profile commands.	C	13
<code>no vdsl-line-template <template-name></code>	Deletes the specified VDSL line template.	C	13

Table 204 vdsl-chan-profile Command Summary

COMMAND	DESCRIPTION	M	P
<code>show vdsl-chan-profile [profile-name]</code>	Displays all configured VDSL channel profiles, their data rate setting, applied ports, minimum INP, and maximum delay settings. With specifying a profile, you can view the detailed profile settings.	E	13
<code>vdsl-chan-profile <profile-name></code>	Enters config- <code>vdsl-chan-profile</code> mode for the specified VDSL channel profile. Creates the channel profile, if a new name is entered. <i>profile-name</i> : 1-32 English keyboard characters.	C	13
<code>exit</code>	Exits from the VDSL channel profile setting mode.	C	13
<code>Ginp ETRmaxDs <0-100032></code>	Specifies the maximum downstream transmission rate in kbps allowed for the ETR (Effective Throughput Rate).	C	13
<code>Ginp ETRmaxUs <0-100032></code>	Specifies the maximum upstream transmission rate in kbps allowed for the ETR (Effective Throughput Rate).	C	13
<code>Ginp ETRminDs <0-100032></code>	Specifies the minimum downstream transmission rate in kbps allowed for the ETR (Effective Throughput Rate).	C	13
<code>Ginp ETRminUs <0-100032></code>	Specifies the minimum upstream transmission rate in kbps allowed for the ETR (Effective Throughput Rate).	C	13

Table 204 vdsl-chan-profile Command Summary (continued)

COMMAND	DESCRIPTION	M	P
Ginp INPminDs <0-31>	Specifies the minimum downstream impulse noise protection (INP) in DMT symbols at a 4 kHz symbol rate.	C	13
Ginp INPminUs <0-31>	Specifies the minimum upstream impulse noise protection (INP) in DMT symbols at a 4 kHz symbol rate.	C	13
Ginp NDRmaxDs <424-100032>	Specifies the maximum downstream net data rate in kbps.	C	13
Ginp NDRmaxUs <424-100032>	Specifies the maximum upstream net data rate in kbps.	C	13
Ginp leftrThresholdDs <0-99>	Specifies the downstream lower rate limit (fraction of net data rate). A Low Error Free Rate (LEFTR) defect is declared when the rate falls below the threshold. The unit is 0.01 of net data rate (NDR).	C	13
Ginp leftrThresholdUs <0-99>	Specifies the upstream lower rate limit (fraction of net data rate). A Low Error Free Rate (LEFTR) defect is declared when the rate falls below the threshold. The unit is 0.01 of net data rate (NDR).	C	13
Ginp maxDelayDs <1-63>	Specifies the maximum downstream delay (from 1 to 63 in milliseconds) that is added to the retransmission delay caused by retransmissions.	C	13
Ginp maxDelayUs <1-63>	Specifies the maximum upstream delay (from 1 to 63 in milliseconds) that is added to the retransmission delay caused by retransmissions.	C	13
Ginp minDelayDs <0-63>	Specifies the minimum downstream delay (from 0 to 63 in milliseconds) that is added to the retransmission delay caused by retransmissions.	C	13
Ginp minDelayUs <0-63>	Specifies the minimum upstream delay (from 0 to 63 in milliseconds) that is added to the retransmission delay caused by retransmissions.	C	13
Ginp reinCfgDs <0-7> <100 120>	Specify the major REIN (Repetitive Electrical Impulse Noise) with how many consecutive downstream DMT symbols long (0-7) at a 4 kHz symbol rate and the operating frequency (100 or 120 Hz) in your territory. The Switch can completely correct the impulse noise by using the retransmission function.	C	13
Ginp reinCfgUs <0-7> <100 120>	Specify the major REIN (Repetitive Electrical Impulse Noise) with how many consecutive upstream DMT symbols long (0-7) at a 4 kHz symbol rate and the operating frequency (100 or 120 Hz) in your territory. The Switch can completely correct the impulse noise by using the retransmission function.	C	13
Ginp rtxModeDs <0 1 2 3>	Specifies downstream retransmission mode. 0: Forbidden mode. G.INP is disabled on the Switch. 1: Preferred mode. G.INP is enabled if the far-end (CPE device) supports it. 2: Forced mode. The VDSL connection can be established only if the far-end supports G.INP mode. 3: Test mode. G.INP is enabled only in test mode.	C	13
Ginp rtxModeUs <0 1 2 3>	Specifies upstream retransmission mode. See more description in the previous field above.	C	13
Ginp shineRatioDs <0-100>	Specifies the loss of downstream data rate you predict to occur within 1 second due to SHINEs (Single High Impulse Noise Events). The unit is 0.001 of net data rate (NDR).	C	13

Table 204 vdsl-chan-profile Command Summary (continued)

COMMAND	DESCRIPTION	M	P
Ginp shineRatioUs <0-100>	Specifies the loss of upstream data rate you predict to occur within 1 second due to SHINEs. The unit is 0.001 of net data rate (NDR).	C	13
maxDelayUs <0~63>	Types the number of milliseconds of interleave delays used for upstream transmission.	C	13
maxDelayDs <0~63>	Types the number of milliseconds of interleave delays used for downstream transmission. It is recommended that you configure same latency delays for both upstream and downstream.	C	13
maxRateDs <64~100032>	Types the maximum downstream transmission rates for this profile.	C	13
maxRateUs <64~100032>	Types the maximum upstream transmission rates for this profile. Note: This maximum upstream transmission rate should be less than the maximum downstream transmission rate.	C	13
minInp8Ds <0..16>	Sets the level of impulse noise (burst) protection for a slow (or interleaved) downstream channel in the 30a VDSL2 profile.	C	13
minInp8Us <0..16>	Sets the level of impulse noise (burst) protection for a slow (or interleaved) upstream channel in the 30a VDSL2 profile.	C	13
minInpDs <0 0.5 1~16>	Specifies the level of impulse noise (burst) protection for a slow (or interleaved) downstream channel. This parameter is defined as the number of consecutive DMT symbols or fractions thereof. The number of symbols decides how long in one period errors can be completely corrected. A higher symbol value provides higher error correction capability, but it causes overhead and higher delay which may impact multimedia data receiving quality.	C	13
minInpUs <0 0.5 1~16>	Specifies the level of impulse noise (burst) protection for a slow (or interleaved) upstream channel.	C	13
minRateDs <64~100032>	Types the minimum downstream transmission rates for this profile.	C	13
minRateUs <64~100032>	Types minimum upstream transmission rates for this profile.	C	13
phyRDs <disable enable auto>	Types Enable to use the VDSL physical layer for data re-transmission when impulse noise occurs on downstream traffic. This helps to get better link condition. Types Disable to turn this feature off. Types Auto to have the Switch enable this feature when there is no impact to the data rate.	C	13
phyRUs <disable enable auto>	Types Enable to use the VDSL physical layer for data re-transmission when impulse noise occurs on upstream traffic. This helps to get better link condition. Types Disable to turn this feature off. Types Auto to have the Switch enable this feature when there is no impact to the data rate.	C	13
sosMinBitRateL0Ds <8-100032>	Specifies the minimum downstream data rates (guaranteed data rates) if you set the Switch to use SOS for immediate rate adjustment. The Switch drops the line if the downstream data rate goes down below the set data rate.	C	13

Table 204 vdsl-chan-profile Command Summary (continued)

COMMAND	DESCRIPTION	M	P
<code>sosMinBitRateLOUs <8-100032></code>	Specifies the minimum upstream data rates (guaranteed data rates) if you set the Switch to use SOS for immediate rate adjustment. The Switch drops the line if the upstream data rate goes down below the set data rate.	C	13
<code>no vdsl-chan-profile <profile-name></code>	Deletes the specified VDSL channel profile.	C	13

Table 205 vdsl-inm-profile Command Summary

COMMAND	DESCRIPTION	M	P
<code>show vdsl-inm-profile [profile-name]</code>	Displays all configured VDSL INM profiles, their INM control parameters and applied ports. With specifying a profile, you can view the detailed profile settings. See Section 80.4 on page 294 for more information about INM.	E	13
<code>vdsl-inm-profile <profile-name></code>	Enters config- <code>vdsl-inm-profile</code> mode for the specified VDSL INM profile. Creates the channel profile, if a new name is entered. <i>profile-name</i> : 1-32 English keyboard characters.	C	13
<code>exit</code>	Exits from the VDSL INM profile setting mode.	C	13
<code>fe-iat-offset <3..511></code>	Specifies the far-end IAT offset from 3 to 511 DMT symbols. This is to determine in which bin (category) of the IAT histogram the IAT is reported. There are eight bins (0 to 7) in an IAT histogram. An IAT is logged in bin <i>y</i> (where <i>y</i> can be from 1 to 6) if the reported IAT value is in the range from $(\text{IAT Offset} + (y - 1) \times 2^{\text{IATStep}})$ to $((\text{IAT Offset} - 1) + (y) \times 2^{\text{IATStep}})$. If an impulse event occurs at an interval less than the specified IAT offset, the IAT will be logged in bin 0 of the IAT histogram. Any IAT greater than or equal to $(\text{IAT Offset} + 6 \times 2^{\text{IATStep}})$ will be recorded in bin 7.	C	13
<code>fe-iat-step <0..7></code>	Specifies the far-end IAT step from 0 to 7. This is to determine in which bin (category) of the IAT histogram the IAT is reported.	C	13
<code>fe-inmcc <0..64></code>	Specifies the far-end cluster continuation value (0 to 64 DMT symbols) used for INM cluster indication.	C	13

Table 205 vdsl-inm-profile Command Summary (continued)

COMMAND	DESCRIPTION	M	P
<code>fe-inpEqMode <0..3></code>	<p>Specifies the way of computing equivalent INP at the far-end in this profile. See ITU-T G.993.2 for more information.</p> <p>0: In this mode, the INMCC value is 0 and the cluster length (the number of data symbols from the first to the last severely degraded data symbols in a cluster) is used to generate the histogram. Each set of consecutive severely degraded data symbols is considered as a separate impulse noise event.</p> <p>1: In this mode, the specified INMCC value and cluster length are used to generate the histogram. This provides an upper bound on the level of the required INP.</p> <p>2: In this mode, the specified INMCC value and the number of the severely degraded data symbols in a cluster are used to generate the histogram. This provides a lower bound on the level of the required INP.</p> <p>3: In this mode, the specified INMCC value, cluster length, the number of the severely degraded data symbols in a cluster and the number of gaps in a cluster are used to generate the histogram. This provides the best estimate of the required INP level.</p>	C	13
<code>ne-iat-offset <3..511></code>	<p>Specifies the near-end IAT offset from 3 to 511 DMT symbols. This is to determine in which bin (category) of the IAT histogram the IAT is reported.</p> <p>There are eight bins (0 to 7) in an IAT histogram. An IAT is logged in bin y (where y can be from 1 to 6) if the reported IAT value is in the range from $(\text{IAT Offset} + (y - 1) \times 2^{\text{IATStep}})$ to $((\text{IAT Offset} - 1) + (y) \times 2^{\text{IATStep}})$. If an impulse event occurs at an interval less than the specified IAT offset, the IAT will be logged in bin 0 of the IAT histogram. Any IAT greater than or equal to $(\text{IAT Offset} + 6 \times 2^{\text{IATStep}})$ will be recorded in bin 7.</p>	C	13
<code>ne-iat-step <0..7></code>	Specifies the near-end IAT step from 0 to 7. This is to determine in which bin (category) of the IAT histogram the IAT is reported.	C	13
<code>ne-inmcc <0..64></code>	Specifies the near-end cluster continuation value (0 to 64 DMT symbols) used for INM cluster indication.	C	13
<code>ne-inpEqMode <0..3></code>	<p>Specifies the way of computing equivalent INP at the near-end in this profile. See ITU-T G.993.2 for more information.</p> <p>0: In this mode, the INMCC value is 0 and the cluster length (the number of data symbols from the first to the last severely degraded data symbols in a cluster) is used to generate the histogram. Each set of consecutive severely degraded data symbols is considered as a separate impulse noise event.</p> <p>1: In this mode, the specified INMCC value and cluster length are used to generate the histogram. This provides an upper bound on the level of the required INP.</p> <p>2: In this mode, the specified INMCC value and the number of the severely degraded data symbols in a cluster are used to generate the histogram. This provides a lower bound on the level of the required INP.</p> <p>3: In this mode, the specified INMCC value, cluster length, the number of the severely degraded data symbols in a cluster and the number of gaps in a cluster are used to generate the histogram. This provides the best estimate of the required INP level.</p>	C	13

Table 205 vdsl-inm-profile Command Summary (continued)

COMMAND	DESCRIPTION	M	P
ne-isdd-sensitivityDB <-12.8 ~ 12.7>	<p>Sets the near-end Indication of Severely Degraded Data (ISDD) sensitivity; a Broadcom proprietary parameter that provides an extension to the standard to allow you to adjust the Impulse Noise Sensor sensitivity.</p> <ul style="list-style-type: none"> The ISDD range is -12.8 dB to 12.7 dB in 0.1 dB steps. Use the nominal 0 dB value to use the same threshold used to declare a degraded symbol, that is a symbol marked as erased. Use a positive value to indicate by how many dB to increase the nominal threshold. This makes the sensor less sensitive and means fewer symbols will be considered degraded. Use a negative value to indicate by how many dB to decrease the nominal threshold. This makes the sensor more sensitive and means more symbols will be considered degraded. 	C	13
no vdsl-inm-profile <profile-name>	Deletes the specified VDSL INM profile.	C	13

Table 206 vdsl-line-profile Command Summary

COMMAND	DESCRIPTION	M	P
show vdsl-line-profile [profile-name]	Displays all configured VDSL line profiles, their VDSL2 profile setting, applied ports and SNR margins. With specifying a profile, you can view the detailed profile settings.	E	13
vdsl-line-profile <profile-name>	<p>Enters config-<i>vdsl-line-profile</i> mode for the specified VDSL line profile. Creates the line profile, if a new name is entered.</p> <p><i>profile-name</i>: 1-31 English keyboard characters.</p>	C	13
bitSwapDs <enable disable>	Enables or disables bit swap for downstream traffic.	C	13
bitSwapUs <enable disable>	Enables or disables bit swap for upstream traffic.	C	13
classMask <a998ORb997M1cORc998B>	<p>Specifies a class mask for the profile. A class mask is a combination of several PSD masks according to the PSD mask types.</p> <p>a998ORb997M1cORc998B:</p> <ul style="list-style-type: none"> When you set the transmission mode to g9932AnnexA, this option represents one option, 998. When you set the transmission mode to g9932AnnexB, this option represents seven options, 997M1c~HpeM1. When you set the transmission mode to g9932AnnexC, this option represents two options, 998B and 998co. <p>You can configure the transmission mode using the <code>vdsl-line-profile <profile-name> xds12Mode <g9932AnnexA></code> command.</p> <p>The options vary depending on your model.</p>	C	13
classMask <998or997-M1c 997-M1x 997-M2x 998-M1x 998-M2x 998ADE-M2x HPE-M1>	<p>Specifies a class mask for the profile. A class mask is a combination of several PSD masks according to the PSD mask types.</p> <p>You can configure the transmission mode using the <code>vdsl-line-profile <profile-name> xds12Mode <g9932AnnexA g9932AnnexB></code> command.</p> <p>The options vary depending on your model.</p>	C	13

Table 206 vdsl-line-profile Command Summary (continued)

COMMAND	DESCRIPTION	M	P
compatibleMode <none ads12 ads12+>	Avoids interference with bundled DSL lines. none: Use if neither ADSL2 nor ADSL2+ lines are bundled with this port. ads12: Makes the ports' PSD compatible with bundled ADSL2 lines. ads12+: Makes the ports' PSD compatible with bundled ADSL2+ lines.	C	13
dpboEPsd <tone-index1> <psd-level> [<tone-index2> <psd-level>] ...	Adjusts the PSD level on tones on VDSL switch(es) at street cabinets. VDSL signal may interfere with other services (such as ISDN, ADSL or ADSL2 provided by other devices) on the same bundle of lines due to downstream far-end crosstalk. DPBO (Downstream Power Back Off) can reduce performance degradation by changing the PSD level on tones on the VDSL switch(es) at street cabinet level. <i>tone-index</i> : Enter a number from 0 to 4096. A tone is a sub-channel of VDSL band. DMT divides VDSL bands into many 4.3125 kHz tones. <i>psd-level</i> : Enter from 0 (0 dBm/Hz) to 255 (-127.5 dBm/Hz) in steps of 0.5 dBm/Hz.	C	13
dpboESCMA <0~640>	Sets the DPBOESCMA parameter which defines a cable model that is used to describe the frequency dependent loss of exchange-side cables. 0~640: Each number represents an increase of 2 ⁻⁸ .	C	13
dpboESCMB <0~640>	Sets the DPBOESCMB parameter which defines a cable model that is used to describe the frequency dependent loss of exchange-side cables. 0~640: Each number represents an increase of 2 ⁻⁸ .	C	13
dpboESCMC <0~640>	Sets the DPBOESCMC parameter which defines a cable model that is used to describe the frequency dependent loss of exchange-side cables. 0~640: Each number represents an increase of 2 ⁻⁸ .	C	13
dpboEsel <0~511>	Sets the DPBOESEL parameter which specifies the electrical length of the cable between CO and Cabinet. 0~511: Each number represents an increase of 0.5 dB.	C	13
dpboFmax <32~6956>	Sets the DPBOFMAX parameter which defines the maximum frequency at which the DPBO may be applied. 32~6956: Each number represents an increase of 4.3125 kHz.	C	13
dpboFmin <0~2048>	Sets the DPBOFMIN parameter which defines the minimum frequency from which the DPBO shall be applied. 0~2048: Each number represents an increase of 4.3125 kHz.	C	13
dpboMus <0~255>	Sets the DPBOMUS parameter which defines the assumed minimum usable signal deployed from the Switch. 0~255: Each number represents an increase of 0.5 dB.	C	13

Table 206 vdsl-line-profile Command Summary (continued)

COMMAND	DESCRIPTION	M	P
dpboType <G9971 TCOM>	Sets a DPBO standard. G9971 follows the ITUT G.997.1 to calculate and apply the downstream power back off. TCOM follows a modified DPBO procedure taking TCOM requirements into account.	C	13
dpboEselMin <0 - 511>	Defines the minimal electric length of DPBO (ESELMIN) from which the DPBO shall be applied and can only be used with dpboType TCOM. Enter a value between 0 dB and 511 dB in steps of 0.5 dB.	C	13
sDs <enable disable>	Enables or disables dynamic interleaving depth for downstream traffic. Enabling this feature allows the Switch dynamically change the lower and upper boundaries of downstream net data rate and improve the ability of SRA (Seamless Rate Adaptation).	C	13
dynamicDepthUs <enable disable>	Enables or disables dynamic interleaving depth for upstream traffic. Enabling this feature lets the Switch dynamically change the lower and upper boundaries of the upstream net data rate and improve the ability of SRA (Seamless Rate Adaptation).	C	13
hsTxPsd <value1> <value2>... <value6>	Defines the PSD level of the G.hs carrier sets PSD1 (A43), PSD2 (B43), PSD3 (A43c/B43c), PSD4 (V43/tone 257) previously represented V43 PSD for all 3 carriers, PSD5 (V43 tone 383), and PSD6 (V43, tone 511). The allowed range is -128 dBm to -32 dBm. -128 is a special value indicating the corresponding carrier set shall not be transmitted.	C	13
exit	Exits from the VDSL line profile setting mode.	C	13
limitMask <d32 d48 d64 d128 b7-1 .. b7-10 b8-1 .. b8-16>	Sets the downstream limit mask you want the Switch to use. d32: ANNEX A downstream band 32 d48: ANNEX A downstream band 48 d64: ANNEX A downstream band 64 d128: ANNEX A downstream band 128 The options vary depending on your model.	C	13
limitMask <d32 d48 d64 d128 b7-1 ... b7-10 b8-1 ... b8-12>	Sets the downstream limit mask the Switch uses. The limit masks vary depending on your selection in the Transmission Mode field. For G.993.2 Annex A , the limit masks available are D-32 , D-48 , D-64 , and D-128 . For G.993.5 Annex B , the possible limit masks are B7-1~B7-10 and B8-1~ B8-12 . Which ones are available also depends on the class mask setting. d32: ANNEX A downstream band 32 d48: ANNEX A downstream band 48 d64: ANNEX A downstream band 64 d128: ANNEX A downstream band 128	C	13
limitMaskGvector <enable disable>	Enables or disables limit mask G vector. Once this is applied to one port it is also applied to all ports with the same transmission mode, class mask, limit mask, and us0 mask.	C	13
maxAggRxPwrUs <-255~255 disable>	Sets the maximum upstream aggregate receiving power level or disables it.	C	13

Table 206 vdsl-line-profile Command Summary (continued)

COMMAND	DESCRIPTION	M	P
maxNomAtpDs <0~255>	Sets the maximum downstream aggregate transmitting power level.	C	13
maxNomAtpUs <0~255>	The maximum upstream aggregate transmitting power level.	C	13
maxSnrmDs <0~310 disable>	Sets the maximum SNR (Signal to Noise Ratio) margin allowed on the downstream channel. Alternatively, set this to <code>Disable</code> to turn this off.	C	13
maxSnrmUs <0~310 disable>	Sets the maximum SNR (Signal to Noise Ratio) margin allowed on the upstream channel. Alternatively, set this to <code>Disable</code> to turn this off.	C	13
mibPsdMaskDs <tone-index1> <psd-level> [<tone-index2> <psd-level>] ...	Adjusts the MIB PSD level on downstream tones. <i>tone-index</i> : Enter a number from 0 to 4096. A tone is a sub-channel of VDSL band. DMT divides VDSL bands into many 4.3125 kHz tones. <i>psd-level</i> : Enter from 0 (0 dBm/Hz) to 255 (-127.5 dBm/Hz) in steps of 0.5 dBm/Hz.	C	13
mibPsdMaskUs <tone-index1> <psd-level> [<tone-index2> <psd-level>] ...	Adjusts the MIB PSD level on upstream tones.	C	13
minSnrmDs <0~310>	Sets the minimum downstream SNR (Signal to Noise Ratio) margin accepted on the channel.	C	13
minSnrmUs <0~310>	Sets the minimum upstream SNR (Signal to Noise Ratio) margin accepted on the channel.	C	13
msgMinDs <4~248>	Sets the minimum transmission rate (4~248 kbps) reserved for a line's downstream overhead channel. The Switch uses the channel of a line to send VDSL transmission statistics to its CPE device(s).	C	13
msgMinUs <4~248>	Sets the minimum transmission rate (4~248 kbps) reserved for a line's upstream overhead channel. The CPE device(s) use the channel of a line to send VDSL transmission statistics to the Switch.	C	13
pmMode <allowTransitionsToIdle no tAllowTransitionsToIdle>	Specifies whether to allow the Switch and CPE devices autonomously enter an idle state for power management (<code>allowTransitionsToIdle</code>) or not (<code>notAllowTransitionsToIdle</code>).	C	13
raDsNrmDs <0~310>	Sets the number of decibels (dB) for the line's down-shift SNR margin threshold for downstream transmission. When the line's signal-to-noise margin goes below this number, the Switch attempts to use a lower downstream transmission rate.	C	13
raDsNrmUs <0~310>	Sets the number of decibels (dB) for the line's down-shift SNR margin threshold for upstream transmission. When the line's signal-to-noise margin goes below this number, the Switch attempts to use a lower upstream transmission rate.	C	13
raDsTimeDs <0~16383>	Sets the number of seconds the Switch has to wait before using a lower downstream transmission rate when the line's SNR margin is less the down-shift SNR margin threshold.	C	13
raDsTimeUs <0~16383>	Sets the number of seconds the Switch has to wait before using a lower upstream transmission rate when the line's SNR margin is less the down-shift SNR margin threshold.	C	13

Table 206 vdsl-line-profile Command Summary (continued)

COMMAND	DESCRIPTION	M	P
<pre>raModeDs <manual raInit dynamicRa d ynamicSos></pre>	<p>Sets the downstream rate adaptive setting.</p> <p>Manual: Set this to have the Switch fix the transmission rate as configured minimum net data rate and disable transmission rate adjustment. If the attainable speeds cannot match configured speeds, then the VDSL link may go down or link communications may be sporadic due to line errors and consequent retransmissions.</p> <p>AdaptAtInit: Set this to have the Switch keep the transmission rate negotiated when the line is initialized. It ranges from the configured minimum to the maximum net data rate based on the initial line condition.</p> <p>Dynamic: Set this to have the Switch dynamically change the transmission rate negotiated during initialization as well as during SHOWTIME status.</p> <p>dynamicSos: Set this to have the Switch use the emergency rate adjustment system for immediate rate adjustment to avoid crosstalk noise.</p>	C	13
<pre>raModeUs <manual raInit dynamicRa d ynamicSos></pre>	<p>Sets the upstream rate adaptive setting.</p> <p>See more description in the previous field above.</p>	C	13
<pre>raUsNrmDs <0~310></pre>	<p>Sets the number of decibels (dB) for the line's up-shift SNR margin threshold for downstream transmission. When the line's signal-to-noise margin goes above this number, the Switch attempts to use a higher downstream transmission rate.</p>	C	13
<pre>raUsNrmUs <0~310></pre>	<p>Sets the number of decibels (dB) for the line's up-shift SNR margin threshold for upstream transmission. When the line's signal-to-noise margin goes above this number, the Switch attempts to use a higher upstream transmission rate.</p>	C	13
<pre>raUsTimeDs <0~16383></pre>	<p>Sets the number of seconds the Switch has to wait before using a higher downstream transmission rate when the line's SNR margin is over the up-shift SNR margin threshold.</p>	C	13
<pre>raUsTimeUs <0~16383></pre>	<p>Sets the number of seconds the Switch has to wait before using a higher upstream transmission rate when the line's SNR margin is over the up-shift SNR margin threshold.</p>	C	13
<pre>refVnDs <tone-index1> <noise-level> [<tone- index2> <noise-level>] ...</pre>	<p>Adds virtual noise levels on downstream tones where actual noise may occur.</p> <p>If there is too much noise on a line, the allowed line speed may be reduced or the line may not initialized. Virtual noise is the noise allowed before adjustment occurs. Switch then uses lower data rate on tones which you added a noise level for the line initialization. Lower data rate increases a line's stability and avoid the line to be easily dropped when actual noise occurs. The Switch adds pre-configured virtual noise on specified set of breakpoints. used to avoid a VDSL line assigning an overly optimistic number of bits to a sub-carrier. When the actual noise increased, the actual SNR margin is enough to maintain the bit-loading, and not leads to line drop. That is, the virtual noise adding can increase the line's stability.</p>	C	13
<pre>refVnUs <tone-index1> <psd-level> [<tone-index2> <psd-level>] ...</pre>	<p>Adds virtual noise levels on upstream tones where actual noise may occur.</p>	C	13

Table 206 vdsl-line-profile Command Summary (continued)

COMMAND	DESCRIPTION	M	P
<code>rfiBand <start-tone-index1> <stop-tone-index1> [<i><start-tone-index2></i> <stop-tone-index2>] ...</code>	Specifies the starting and ending tones for each RFI band according to your location. RFI (Radio Frequency Interference) is induced noise on the lines by surrounding radio frequency electromagnetic radiation from sources such as AM and HAM radio stations. Since VDSL uses a much larger frequency range that overlaps with other radio frequency systems, signals from VDSL lines and other radio systems interfere with each other. To avoid performance degradation due to RFI, set the Switch to not transmit VDSL signals in the RFI band.	C	13
<code>rocEnableDs <enable disable></code>	Enables or disables downstream ROC. A ROC (Robust Overhead Channel) is a latency path that carries only overhead data. Use <code>enable</code> to use a ROC to transmit SOS information to ensure that the message can be received correctly. Otherwise, select <code>Disable</code> .	C	13
<code>rocEnableUs <enable disable></code>	Enables or disables upstream ROC.	C	13
<code>rocMinInpDs <0..16></code>	Downstream actual impulse noise protection of the ROC. Enter a level of impulse noise (burst) protection for a robust overhead channel. Select a number between 0 and 16.	C	13
<code>rocMinInpUs <0..16></code>	Upstream actual impulse noise protection of the ROC. Specify the level of impulse noise (burst) protection for a robust overhead channel. Select a number between 0 and 16.	C	13
<code>rocSnrMarginDs <0..310></code>	Downstream Signal-to-noise ratio margin for the ROC. Specify the (Signal to Noise Ratio) margin allowed for a robust overhead channel. When the actual SNR margin is going to reach this specified value, a robust overhead channel is negotiated for reliable transmission.	C	13
<code>rocSnrMarginUs <0..310></code>	Use upstream signal-to-noise ratio margin for the ROC.	C	13
<code>snrModeDs <virtualNoiseEnabled virtualNoiseDisabled></code>	Enables or disables the downstream transmitter referred virtual noise.	C	13
<code>snrModeUs <virtualNoiseEnabled virtualNoiseDisabled></code>	Enables or disables the upstream transmitter referred virtual noise.	C	13
<code>sosCrcDs <0-65535></code>	Specifies the maximum number of downstream CRC errors which are allowed during the specified SOS time interval before the Switch initiates an SOS request.	C	13
<code>sosCrcUs <0-65535></code>	Specifies the maximum number of upstream CRC errors which are allowed during the specified SOS time interval before the Switch initiates an SOS request.	C	13
<code>sosMaxDs <0-15></code>	Specifies the maximum number of successful downstream SOS processes which are allowed within 120 seconds before the Switch goes to the L3 link state. An SOS process is considered successful when the Switch receives a synchronous signal (SyncFlag).	C	13

Table 206 vdsl-line-profile Command Summary (continued)

COMMAND	DESCRIPTION	M	P
<code>sosMaxUs <0-15></code>	Specifies the maximum number of successful upstream SOS processes which are allowed within 120 seconds before the Switch goes to the L3 link state. An SOS process is considered successful when the Switch receives a synchronous signal (SyncFlag).	C	13
<code>sosMultiStepMaxTonesDs <all 256 512 1024></code>	Specifies for all tones or a certain number of tones (256, 512 or 1024) that you want the Switch to adjust bits in a downstream SOS request. Note: At the time of writing, the Switch supports the <code>all</code> option only.	C	13
<code>sosMultiStepMaxTonesUs <all 256 512 1024></code>	Specifies for all tones or a certain number of tones (256, 512 or 1024) that you want the Switch to adjust bits in an upstream SOS request. Note: At the time of writing, the Switch supports the <code>all</code> option only.	C	13
<code>sosNTonesDs <0-100></code>	Specifies the maximum percentage (from 0 to 100) of persistently degraded tones in the downstream MEDLEY set which are allowed during the specified SOS time interval before the Switch initiates an SOS request.	C	13
<code>sosNTonesUs <0-100></code>	Specifies the maximum percentage of persistently degraded tones in the upstream MEDLEY set which are allowed during the specified SOS time interval before the Switch initiates an SOS request.	C	13
<code>sosTimeDs <64-16320></code>	Specifies the time interval (from 64 to 16320 milliseconds) at which the Switch initiates a downstream SOS request.	C	13
<code>sosTimeUs <64-16320></code>	Specifies the time interval (from 64 to 16320 milliseconds) at which the Switch initiates an upstream SOS request.	C	13
<code>targetSnrmDs <0~310></code>	Sets the target downstream SNR (Signal to Noise Ratio) margin.	C	13
<code>targetSnrmUs <0~310></code>	Sets the target upstream SNR (Signal to Noise Ratio) margin.	C	13
<code>upboKL <0~1280></code>	Sets the electrical length of the cable between Switch and cabinet in a step of 0.1 dB.	C	13
<code>upboKLF <auto override disableUpbo ></code>	UPBO (Upstream Power Back-Off) mitigates far-end crosstalk (FEXT) caused by upstream transmission on shorter loops to longer loops. Set this to <code>auto</code> to enable UPBO and CPE devices' PSD adjustment based on the negotiation result with the Switch. Set this to <code>manual</code> to enable UPBO and CPE device's PSD adjustment based on the electrical distance you configured for the UPBOKL setting. Set this to <code>override</code> to force CPE devices to use the electrical length defined by the Switch (for the UPBOKL setting above) to compute their UPBO. Set this to <code>disable</code> to turn UPBO off.	C	13
<code>upboPsdA <value-for-us1> [value-for-us2] ...</code>	Specifies parameter A value(s) for each upstream band. The parameter A defines the original band shape. <i>value-for-usx</i> : 4000~8095, in a step of 0.01 dBm/Hz.	C	13

Table 206 vdsl-line-profile Command Summary (continued)

COMMAND	DESCRIPTION	M	P
upboPsdB <value-for-us1> [<value-for-us2>] ...	Specifies parameter B value(s) for each upstream band. The parameter B defines the power back-off degree. value-for-usx: 0~4095, in a step of 0.01 dBm/Hz.	C	13
us0disable <allow disable>	Specifies whether you want the Switch to automatically activate the upstream band 0 (allow) or not (disable) when necessary. Set the to allow to have CPE and the Switch use the upstream band 0 for upstream traffic transmission in a long distance. If you set this to disable, the CPE device may not able to transmit data in a long distance.	C	13
us0Mask <eu32 eu36 eu40 eu44 eu48 eu52 eu56 eu60 eu64 eu128>	Specifies a PSD mask used for upstream band 0. See ITU-T G.993.2 Annex A for more information.	C	13
vdsl2Profile <vdsl2- profile-type>	Specifies the VDSL2 profile(s) used for this VDSL line profile. vdsl2-profile-type: The available VDSL2 profile types include 17a, 12a, 12b, 8a, 8b, 8c and 8d. You can specify multiple profile types by using a comma (,) in between.	C	13
vectoring <enable disable>	Enables or disables the vectoring function for this VDSL line profile.	C	13
xdsl2Mode <g9932AnnexA>	Sets the VDSL2 transmission mode. Set this with an appropriate transmission standard (according to your territory) you want to apply for this profile. At the time of writing, the Switch only supports G.993.2 Annex A mode for American area and countries which follow American VDSL2 standard.	C	13
xdsl2Mode <g9932AnnexA g9932AnnexB>	Sets the VDSL2 transmission mode. Set this with an appropriate transmission standard (according to your territory) you want to apply for this profile. At the time of writing, the Switch only supports G.993.2 Annex A mode for American area and countries which follow American VDSL2 standard and G.993.2 Annex B mode for countries which follow the Europe VDSL2 standard.	C	13
no vdsl-line-profile <profile- name>	Deletes the specified VDSL line profile.	C	13

80.2 Ham Band Mask Bits

You can type 7 digits for the Ham band mask settings in the `vdsl-profile <profile-name> hamband mask <0000000-1111111>` command. The following describes each digit meaning.

Table 207 Ham Band Mask Bits

BITS	BANDPLAN	START FREQUENCY	STOP FREQUENCY	DESCRIPTION
Bit0	CustomNotch1	notch1start	notch1stop	Enter the start and stop values for the frequency range you wish to block.
Bit1	CustomNotch2	notch2start	notch2stop	Enter the start and stop values for the frequency range you wish to block.
Bit2	AmateurBand160m	1800 kHz	2000 kHz	Enable this to block the frequency range 1800-2000 kHz.

An INM profile defines the control parameters used to generate the Equivalent INP (Eq INP or INP_Eq) and Inter-Arrival Time (IAT) histograms. The IAT represents the number of data symbols from the start of one cluster to the start of the next cluster. The Eq_INP histogram shows the level of INP required to prevent data errors and the IAT histogram shows time intervals between the impulse noise events.

80.5 Command Examples

This example shows the current list of VDSL profiles.

```
sysname# show vdsl-profile
```

Name	Payload Rate	SNR Margin	Applied Ports
test	45M/9M	20dB/6dB	14-16
Default	45M/100M	6dB/6dB	1-13

```
sysname#
```

This example shows the settings of the VDSL profile "test".

```
sysname# show vdsl-profile test
```

```
Profile Name                : test
Downstream Payload Rate     : MAX: 9984 MIN: 4992
Upstream Payload Rate       : MAX: 45440 MIN: 64
Rate Adaptive                : Fixed Mode
Target Upstream SNR Margin  : 20dB
Target Downstream SNR Margin : 6dB
MIN SNR Margin              : 5dB
RFI Band                    : ETSI
Downstream Interleave Delay : 2ms
Upstream Interleave Delay   : 4ms
sysname#
```

This example configures ports 1-5 to use the VDSL profile "test".

```
sysname(config)# vdsl-port 1-5 profilename test
```

This example displays all configured VDSL line and channel profiles.

```

sysname# show vdsl-line-profile

Profile Name          VDSL2 profile          SNR Margin
Applied Ports
=====
DEFVAL                17a                    6/6
                     1-24
L-profile1            17a                    6/6

sysname# show vdsl-chan-profile

Profile Name          Data Rate              minINP                maxDelay
Applied Ports
=====
DEFVAL                100032/45056          2/2                   8/8
                     1-24
-----
C-profile1            1000/800              2/2                   8/8

```

This example displays how to create a VDSL template, specify one line and one channel profile to it, and display all VDSL templates again to view the result.

```

sysname# configure
sysname(config)# vdsl-line-template
sysname(config-vdsl-line-template)# line-profile L-profile1
sysname(config-vdsl-line-template)# chan1-profile C-profile1
sysname(config-vdsl-line-template)# exit
sysname(config)# exit
sysname# show vdsl-line-template

Template Name          Line Profile Name
Channel#1 Profile Name  Rate Ratio
Applied Ports
=====
DEFVAL                DEFVAL
                     DEFVAL                100%/100%
                     1-24
-----
L-templatel           L-profile1
                     C-profile1            100%/100%

```


CHAPTER 81

VDSL Settings Commands

Use these commands to configure general VDSL settings.

81.1 Command Summary

The following tables list the commands for this feature.

Table 209 vdsl Settings Commands Summary

COMMAND	DESCRIPTION	M	P
<code>show vdsl-common</code>	Displays general VDSL settings.	E	13
<code>show vdsl-opstatus</code>	Shows whether the VDSL port is connected (Showtime), not connected (Idle), is searching for any CPE device (Handshake), is negotiating a connection with a CPE device (Training), is under loop diagnostic testing (LD_TEST), or has completed the loop diagnostic testing (LD_DONE).	E	13
<code>vdsl <port-list> remote-reset</code>	Resets the connection information and settings on the remote CPE device(s).	E	13
<code>vdsl <port-list> remote-test</code>	Sets the port(s) to test the connection to the remote CPE device(s).	E	13
<code>vdsl <port-list> reset</code>	Clears port statistics and connection information. This re-initializes the connection.	E	13
<code>vdsl <port-list> retrain</code>	Sets the port(s) to establish the connection again.	E	13
<code>vdsl-common bandplan <0></code>	Sets the VDSL bandplan. 0: 998_5-Band	C	13
<code>vdsl-common latency <0 1></code>	Sets the latency mode. 0: Interleave 1: Fast	C	13
<code>vdsl-common pbo <1 2></code>	Sets the PBO option. 1: Disable 2: Auto	C	13
<code>vdsl PINtransform <index></code>	Lets you reverse the order of the VDSL ports: 0 for normal or 1 to reverse the pin assignments.	E	13
<code>vdsl-common psdmask <1 2 3 4></code>	Sets the VDSL PSD mask. 1: ANSI M1 CAB 2: ANSI M2 CAB 3: ANSI M1 EX 4: ANSI M2 EX	C	13

Table 209 vdsl Settings Commands Summary (continued)

COMMAND	DESCRIPTION	M	P
<code>vdsl-port <port-list> <enable disable></code>	Enables or disables the specified VDSL port(s).	C	13
<code>vdsl-port <port-list> line- template <vdsl-template-name></code>	Specifies a VDSL template for VDSL port(s). The template is used when the line is first initiated.	C	13
<code>vdsl-port <port-list> line- fallback-template <vdsl- template-name></code>	Specifies a VDSL template for VDSL port(s). This template is used when the line failed to be initialized using the primary template configured using the command above.	C	13
<code>vdsl-port <port-list> alarm- template <vdsl-alarm-template- name></code>	Specifies a VDSL alarm template for VDSL port(s). The Switch sends an SNMP trap (alarm) when a parameter value is over one of the pre-defined thresholds on the line.	C	13

Table 210 gbond Command Summary

COMMAND	DESCRIPTION	M	P
<code>gbond <group-id></code>	Enters a sub-command mode to create or modify the specified VDSL (G.bond) bonding group. <code><group-id>: b1 b2 ... b12</code>	C	13
<code>active</code>	Turns on the VDSL bonding group.	C	13
<code>adsl_vdslProtocol <0 1></code>	Sets the ADSL and VDSL protocol the VDSL bonding group uses. Use 0 for ATM or 1 for PTM.	C	13
<code>exit</code>	Leaves the VDSL bonding configuration.	C	13
<code>GroupName <group-name></code>	Sets the VDSL bonding group name.	C	13
<code>LineTemplate <template- name></code>	Sets the line template the VDSL bonding group uses for the first port.	C	13
<code>LineTemplate_2 <template- name></code>	Sets the line template the VDSL bonding group uses for the second port. This only applies when you set the VDSL bonding group's template mode to 1.	C	13
<code>LineTemplateMode <0 1></code>	Use 0 to have both ports in the VDSL bonding group use the line template profile set for the first port. This uses the one line template profile to set a total data rate for the entire bonding group. The total data rate is divided equally for each port. Use 1 to use a separate template profile for each individual port in the bonding group to set each port's data rate independently.	C	13
<code>logout</code>	Logs out of the CLI.	C	13
<code>no active</code>	Turns off the VDSL bonding group.	C	13
<code>PortList <port-list></code>	Specify the VDSL bonding group's port members. For example: port-list 1,2 or 3,5.... You can only specify ports not already configured as part of another bonding group.	C	13
<code>no gbond <group-id></code>	Deletes the specified VDSL bonding group. <code>Group-id: <b1 b2 ... b12></code>	C	13
<code>no gbond all</code>	Deletes all the VDSL bonding groups.	C	13
<code>show gbond <cr></code>	Displays all the VDSL bonding groups and their basic settings.	E	0

Table 210 gbond Command Summary (continued)

COMMAND	DESCRIPTION	M	P
show gbond config <cr>	Displays all the VDSL bonding groups and their detailed settings.	E	0
show gbond config <group-id>	Displays the specified VDSL bonding groups and their detailed settings. <group-id>: B1 B1,B2 ... B1,B2,...,B12 B1-B12	E	0
show gbond counters ptm <group-id>	Displays the PTM counters for the specified VDSL bonding groups. <group-id>: B1 B1,B2 ... B1,B2,...,B12 B1-B12	E	0
show gbond status <cr>	Displays the status of all the VDSL bonding groups.	E	0
show gbond status <group-id>	Displays the status of the specified VDSL bonding groups. <group-id>: B1 B1,B2 ... B1,B2,...,B12 B1-B12	E	0

81.2 Command Examples

This example sets the Switch to use fast VDSL latency mode, automatic PBO, and ANSI M2 CAB PSD mask on the VDSL lines.

```
sysname(config)# vdsl-common latency 1
sysname(config)# vdsl-common pbo 2
sysname(config)# vdsl-common psdmask 2
```

This example looks at general VDSL settings.

```
sysname# show vdsl-common

Band Plan                : 998 5Band
UPBO                     : Disable
Latency                  : Interleaved
PSD Mask                 : ANSI M2 CAB
sysname#
```

This example displays how to

- 1 display all configured VDSL templates
- 2 display all configured VDSL alarm templates
- 3 apply a VDSL template, L-template1, for the primary VDSL template to ports 2~6 and 10
- 4 apply a VDSL template, DEFVAL, for the fall back VDSL template to ports 2~6 and 10
- 5 apply a VDSL alarm template, ALARM1, to ports 2~6 and 10

See [Table 203 on page 281](#) and [Table 194 on page 264](#) for `vdsl-line-template` and `vdsl-alarm-template` commands.

```

sysname# show vdsl-line-template

  Template Name                Line Profile Name
                                Channel#1 Profile Name      Rate Ratio
                                Applied Ports
=====
DEFVAL                        DEFVAL
                                DEFVAL                        100%/100%
                                1-24
-----
L-template1                   L-profile1
                                C-profile1                    100%/100%

sysname# show vdsl-alarm-template

  Template Name                Alarm Line Profile Name
                                Alarm Channel#1 Profile Name
                                Applied Ports
=====
DEFVAL                        DEFVAL
                                DEFVAL                        1-24
-----
ALARM1                        DEFVAL
                                DEFVAL

sysname# configure
sysname(config)# vdsl-port 2-6,10 line-template L-template1
sysname(config)# vdsl-port 2-6,10 line-fallback-template DEFVAL
sysname(config)# vdsl-port 2-6,10 alarm-template ALARM1
sysname(config)# exit
sysname#

```

CHAPTER 82

VLAN Commands

Use these commands to configure IEEE 802.1Q VLAN.

82.1 VLAN Overview

A VLAN (Virtual Local Area Network) allows a physical network to be partitioned into multiple logical networks. Devices on a logical network belong to one group. A device can belong to more than one group. With VLAN, a device cannot directly talk to or hear from devices that are not in the same group(s); the traffic must first go through a router.

Note: VLAN is unidirectional; it only governs outgoing traffic.

82.2 VLAN Configuration Overview

- 1 Use the `vlan <vlan-id>` command to configure or create a VLAN on the Switch. The Switch automatically enters `config-vlan` mode. Use the `exit` command when you are finished configuring the VLAN.
- 2 Use the `interface port-channel <port-list>` command to set the VLAN settings on a port. The Switch automatically enters `config-interface` mode. Use the `pvid <vlan-id>` command to set the VLAN ID you created for the `port-list` in the PVID table. Use the `exit` command when you are finished configuring the ports.

```
sysname (config)# vlan 2000
sysname (config-vlan)# name up1
sysname (config-vlan)# fixed 5-8
sysname (config-vlan)# no untagged 5-8
sysname (config-vlan)# exit
sysname (config)# interface port-channel 5-8
sysname (config-interface)# pvid 2000
sysname (config-interface)# exit
```

Note: See [Chapter 30 on page 102](#) for `interface port-channel` commands.

82.3 Command Summary

The following section lists the commands for this feature.

Table 211 vlan Command Summary

COMMAND	DESCRIPTION	M	P
show vlan	Displays the status of all VLANs.	E	13
show vlan <vlan-id>	Displays the status of the specified VLAN.	E	13
show vlan counters <vlan-id> <port-number>	Displays concurrent incoming and outgoing packet statistics of the specified port in the specified VLAN and refreshes in every 10 seconds until you press the [ESC] button.	E	13
vlan-type <802.1q port-based>	Specifies the VLAN type.	C	13
vlan <vlan-id>	Enters config-vlan mode for the specified VLAN. Creates the VLAN, if necessary.	C	13
fixed <port-list>	Specifies the port(s) to be a permanent member of this VLAN group.	C	13
no fixed <port-list>	Sets fixed port(s) to normal port(s).	C	13
forbidden <port-list>	Specifies the port(s) you want to prohibit from joining this VLAN group.	C	13
no forbidden <port-list>	Sets forbidden port(s) to normal port(s).	C	13
inactive	Disables the specified VLAN.	C	13
no inactive	Enables the specified VLAN.	C	13
name <name-str>	Specifies a name for identification purposes. <name-str>: 1-64 English keyboard characters	C	13
normal <port-list>	Specifies the port(s) to dynamically join this VLAN group using GVRP	C	13
untagged <port-list>	Specifies the port(s) you don't want to tag all outgoing frames transmitted with this VLAN Group ID.	C	13
no untagged <port-list>	Specifies the port(s) you want to tag all outgoing frames transmitted with this VLAN Group ID.	C	13
isolation	Allows each port (in the specified VLAN) to communicate only with the CPU management port and the Gigabit uplink ports but not communicate with each other.	C	13
no isolation	Disables port isolation on the specified VLAN.	C	13
protovlan	Enables this protocol based VLAN.	C	13
no protovlan	Disables this protocol based VLAN.	C	13
limitMAC <numbers>	Limits the number of (dynamic) MAC addresses learned in the same VLAN. <i>numbers</i> : 1~4000 or 1~16384. This varies by device model.	C	13
help	Provides more information about the specified command.	C	13
ip address <ip-address> <mask> [manageable]	Sets the IP address and subnet mask of the Switch in the specified VLAN. manageable: add this option to have the Switch allow not only ICMP but also FTP, HTTP, SNMP and Telnet access to the IP address for management purposes. Without adding this, the Switch denies management traffic except ICMP packets accessing the IP address.	C	13

Table 211 vlan Command Summary (continued)

COMMAND	DESCRIPTION	M	P
<code>ip address default-gateway <ip-address></code>	Sets a default gateway IP address for this VLAN.	C	13
<code>ip address inband-default <ip-address> <mask></code>	Sets and enables the in-band management IP address and subnet mask.	C	13
<code>ip address inband-default dhcp-bootp</code>	Configures the Switch to get the in-band management IP address from a DHCP server.	C	13
<code>ip address inband-default dhcp-bootp release</code>	Releases the in-band management IP address provided by a DHCP server.	C	13
<code>ip address inband-default dhcp-bootp renew</code>	Updates the in-band management IP address provided by a DHCP server.	C	13
<code>no ip address <ip-address> <mask></code>	Deletes the IP address and subnet mask from this VLAN.	C	13
<code>no ip address default-gateway</code>	Deletes the default gateway from this VLAN.	C	13
<code>no ip address inband-default dhcp-bootp</code>	Configures the Switch to use the static in-band management IP address. The Switch uses the default IP address of 192.168.1.1 if you do not configure a static IP address.	C	13
<code>no vlan <vlan-id></code>	Deletes a VLAN.	C	13

82.4 Command Examples

This example configures ports 1 to 5 as fixed and untagged ports in VLAN 2000.

```
sysname (config)# vlan 2000
sysname (config-vlan)# fixed 1-5
sysname (config-vlan)# untagged 1-5
```

This example deletes entry 2 in the static VLAN table.

```
sysname (config)# no vlan 2
```

This example shows the VLAN table.

```

sysname# show vlan
The Number of VLAN:    3
Idx.  VID   Status   Elap-Time   TagCtl
-----
  1    1     Static   0:12:13     Untagged :1-2
                               Tagged   :
  2   100     Static   0:00:17     Untagged :
                               Tagged   :1-4
  3   200     Static   0:00:07     Untagged :1-2
                               Tagged   :3-8

```

The following table describes the labels in this screen.

Table 212 show vlan

LABEL	DESCRIPTION
The Number of VLAN	This field displays the number of VLANs on the Switch.
Idx.	This field displays an entry number for each VLAN.
VID	This field displays the VLAN identification number.
Status	This field displays how this VLAN was added to the Switch. <i>Dynamic:</i> The VLAN was added via GVRP. <i>Static:</i> The VLAN was added as a permanent entry <i>Other:</i> The VLAN was added in another way, such as Multicast VLAN Registration (MVR).
Elap-Time	This field displays how long it has been since a dynamic VLAN was registered or a static VLAN was set up.
TagCtl	This field displays untagged and tagged ports. Untagged: These ports do not tag outgoing frames with the VLAN ID. Tagged: These ports tag outgoing frames with the VLAN ID.

CHAPTER 83

VLAN Mapping Commands

Use these commands to configure VLAN mapping on the Switch. With VLAN mapping enabled, the Switch can map the VLAN ID and priority level of packets received from a private network to those used in the service provider's network. The Switch discards the tagged packets that do not match an entry in the VLAN mapping table.

Note: You can not enable VLAN mapping and VLAN stacking at the same time.

83.1 Command Summary

The following section lists the commands for this feature.

Table 213 vlan mapping Command Summary

COMMAND	DESCRIPTION	M	P
<code>no vlan-mapping</code>	Disables VLAN mapping on the Switch.	C	13
<code>no vlan-mapping interface port-channel <port> vlan <1-4094></code>	Removes the specified VLAN mapping rule.	C	13
<code>no vlan-mapping interface port-channel <port> vlan <1-4094> inactive</code>	Enables the specified VLAN mapping rule.	C	13
<code>vlan-mapping</code>	Enables VLAN mapping on the Switch.	C	13
<code>vlan-mapping name <name> interface port-channel <port> vlan <1-4094> translated-vlan <1-4094> priority <0-7> replace <0:Don't replace 1:Replace original prio></code>	Creates a VLAN mapping rule. replace: Enter 0 to not change the priority in the customer VLAN tag, or enter 1 to replace the customer priority with what you configured for priority.	C	13
<code>vlan-mapping name <name> interface port-channel <port> vlan <1-4094> translated-vlan <1-4094> priority <0-7> replace <0:Don't replace 1:Replace original prio> inactive</code>	Disables the specified VLAN mapping rule. replace: Enter 0 to not change the priority in the customer VLAN tag, or enter 1 to replace the customer priority with what you configured for priority.	C	13
<code>interface port-channel <port-list></code>	Enters config-interface mode for the specified port(s).	C	13
<code>no vlan-mapping</code>	Disables VLAN mapping on the port(s).	C	13
<code>no vlan-mapping miss-drop</code>	Forwards the incoming packets that do not match any VLAN mapping rules without replacing the VLAN tag.	C	13
<code>vlan-mapping</code>	Enables VLAN mapping on the port(s).	C	13

Table 213 vlan mapping Command Summary (continued)

COMMAND	DESCRIPTION	M	P
vlan-mapping miss-drop	Discards the incoming packets that do not match any VLAN mapping rules.	C	13
show vlan-mapping <cr>	Displays the VLAN mapping and per port settings.	E	0
show vlan-mapping entry	Displays the VLAN mapping rules.	E	0

83.2 Command Examples

This example enables VLAN mapping on the Switch and creates a VLAN mapping rule (named **test**) to translate the VLAN ID from 123 to 234 and change the priority value to 3 in the packets received on port 4.

```
sysname# configure
sysname(config)# vlan-mapping
sysname(config)# vlan-mapping name test interface port-channel 4 vlan 123
translated-vlan 234 priority 3 replace 1
sysname(config)#
```

This example enables VLAN mapping on port 4.

```
sysname# configure
sysname(config)# interface port-channel 4
sysname(config-interface)# vlan-mapping
sysname(config-interface)# exit
sysname(config)#
```

CHAPTER 84

VLAN Port Isolation

Commands

Use these commands to specify which ports are allowed to communicate with which port(s) in the same VLAN.

84.1 Command Summary

The following section lists the commands for this feature.

Table 214 `vlan1q port-isolation` Command Summary

COMMAND	DESCRIPTION	M	P
<code>show vlan1q port-isolation</code>	Displays port isolation settings.	E	13
<code>vlan1q port-isolation</code>	Enables VLAN port isolation.	C	13
<code>vlan1q port-isolation</code> <Normal Enhanced>	Enables VLAN port isolation on all VDSL ports and allows the VDSL ports to transmit traffic through only the uplink port (Enhanced) or through all the Gigabit ports (Normal). Note: In enhanced mode, STP should be enabled on the Switch to define the uplink port which may vary when the topology changes.	C	13
<code>vlan1q port-isolation</code> <Normal Enhanced>	Enables VLAN port isolation on all VDSL ports for the specified slot (0 by default) and allows the VDSL ports to transmit traffic through only the uplink port (Enhanced) or through all the Gigabit ports (Normal). Note: In enhanced mode, STP should be enabled on the Switch to define the uplink port which may vary when the topology changes.	C	13
<code>no vlan1q port-isolation</code>	Disables VLAN port isolation.	C	13
<code>vlan1q port-isolation <port-list></code>	Enters config-port mode to configure VLAN port isolation for the specified port(s).	C	13
<code>egress set <port-list></code>	Enables egress port isolation on the specified port(s).	C	13
<code>no egress set <port-list></code>	Disables egress port isolation on the specified port(s).	C	13

84.2 Command Examples

This example isolates port 1 from the other VDSL ports in a 16-port Switch. Port 1 is allowed to communicate with the Ethernet ports, and it can still be used to manage the Switch.

```

sysname# configure
sysname(config)# vlan1q port-isolation 1
sysname(config-port)# no egress set 2-16
sysname(config-port)# exit
sysname(config)# vlan1q port-isolation 2-16
sysname(config-port)# no egress set 1
sysname(config-port)# exit
sysname(config)# exit
sysname# show vlan1q port-isolation

```

Port Isolation Support

	Incoming																	
	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18
1	v																	v v
2		v	v	v	v	v	v	v	v	v	v	v	v	v	v	v	v	v v
3			v	v	v	v	v	v	v	v	v	v	v	v	v	v	v	v v
4			v	v	v	v	v	v	v	v	v	v	v	v	v	v	v	v v
5				v	v	v	v	v	v	v	v	v	v	v	v	v	v	v v
6				v	v	v	v	v	v	v	v	v	v	v	v	v	v	v v
7				v	v	v	v	v	v	v	v	v	v	v	v	v	v	v v
8				v	v	v	v	v	v	v	v	v	v	v	v	v	v	v v
Outgoing																		
9		v	v	v	v	v	v	v	v	v	v	v	v	v	v	v	v	v v
10		v	v	v	v	v	v	v	v	v	v	v	v	v	v	v	v	v v
11		v	v	v	v	v	v	v	v	v	v	v	v	v	v	v	v	v v
12		v	v	v	v	v	v	v	v	v	v	v	v	v	v	v	v	v v
13			v	v	v	v	v	v	v	v	v	v	v	v	v	v	v	v v
14			v	v	v	v	v	v	v	v	v	v	v	v	v	v	v	v v
15			v	v	v	v	v	v	v	v	v	v	v	v	v	v	v	v v
16			v	v	v	v	v	v	v	v	v	v	v	v	v	v	v	v v
17	v	v	v	v	v	v	v	v	v	v	v	v	v	v	v	v	v	v v
18	v	v	v	v	v	v	v	v	v	v	v	v	v	v	v	v	v	v v
CPU	v	v	v	v	v	v	v	v	v	v	v	v	v	v	v	v	v	v v

CHAPTER 85

VLAN-Profile Commands

Use these commands to configure the VLAN profiles in which you can specify the action the Switch takes on incoming unknown multicast frames and whether to enable MAC address learning for this VLAN.

85.1 Command Summary

The following section lists the commands for this feature.

Table 215 vlan-profile Command Summary

COMMAND	DESCRIPTION	M	P
no vlan-profile <name-str>	Removes the specified VLAN profile.	C	13
no vlan-profile all	Removes all VLAN profiles on the Switch.	C	13
show vlan-profile	Displays all VLAN profiles settings on the Switch.	E	13
show vlan-profile <name-str>	Displays the specified VLAN profile settings.	E	13
vlan <1-4094>	Enters config-vlan mode for the specified VLAN.	C	13
profile <name-str>	Specifies the VLAN profile for this VLAN group.	C	13
vlan-profile <name-str>	Enters config-vlan-profile mode to create or edit the specified VLAN profile.	C	13
Drop-unknown-multicast	Discards unknown multicast frames for the VLAN to which this profile applies.	C	13
help	Provides more information about the specified command.	C	13
mac-learning	Enables MAC address learning in the VLAN to which this profile applies.	C	13
unknown-multicast flooding	Enables flooding of unknown multicast traffic in the VLAN to which this profile applies.	C	13
no Drop-unknown-multicast	Sends the unknown multicast frame(s) to all ports in the VLAN to which this profile applies.	C	13
no mac-learning	Disables MAC address learning in the VLAN to which this profile applies.	C	13
no unknown-multicast flooding	Disables flooding of unknown multicast traffic in the VLAN to which this profile applies.	C	13

85.2 Command Examples

This example creates a VLAN profile (**test**) that enables MAC address learning and discards unknown multicast frames in a VLAN, and applies the profile to VLAN **11**. This example also displays the setting result and VLAN information on the Switch.

```

sysname# configure
sysname(config)# vlan-profile test
sysname(config-vlan-profile)# mac-learning
sysname(config-vlan-profile)# Drop-unknown-multicast
sysname(config-vlan-profile)# exit
sysname(config)# vlan 11
sysname(config-vlan)# profile test
sysname(config-vlan)# exit
sysname(config)# exit
sysname# write memory
sysname# show vlan-profile
  name  Mac Learning  unknown_multicast
  -----
DEFVAL          Yes          Forward
test           Yes          Drop
sysname# show vlan
The Number of VLAN :      2
  Idx.  VID  Status  Elap-Time  TagCtl  Vlan-profile
  ----  ---  -
      1   1   Static   27:54:55  Untagged : 1-18  DEFVAL
                        Tagged   :
      2  11   Static   0:01:40  Untagged : 1-18  test
                        Tagged   :
sysname#

```

CHAPTER 86

VLAN-Security Commands

Use these commands to allow only packets with dynamically learned MAC addresses and/or configured static MAC addresses to pass through a VLAN network on the Switch. For maximum VLAN security, enable VLAN security.

86.1 Command Summary

The following section lists the commands for this feature.

Table 216 vlan-security Command Summary

COMMAND	DESCRIPTION	M	P
show vlan-security	Displays all VLAN security settings.	E	13
vlan-security	Enables VLAN security on the Switch.	C	13
no vlan-security	Disables VLAN security on the Switch.	C	13
vlan <1~4094>	Enters config-vlan mode for the specified VLAN.	C	13
limitMAC <1~16384>	Specifies the maximum number(s) of the learned MAC addresses is allowed for this VLAN group.	C	13

86.2 Command Examples

This example enables port security on port 1 and limits the number of learned MAC addresses to 100. Then displays the setting result.

```
sysname# configure
sysname(config)# vlan-security
sysname(config)# vlan 1
sysname(config-vlan)# limitMAC 100
sysname(config-vlan)# exit
sysname(config)# exit
sysname# write memory
sysname# show vlan-security
Vlan Security Active : YES
Vlan   Number of Learned MAC Address   Limited Number of MAC Address
  1             3                       100
```

CHAPTER 87

VLAN Stacking Commands

Use these commands to add an outer VLAN tag to the inner IEEE 802.1Q tagged frames that enter the network. A service provider can use this to distinguish multiple customers VLANs, even those with the same (customer-assigned) VLAN ID, within its network.

87.1 Command Summary

The following section lists the commands for this feature.

Table 217 vlan-stacking Command Summary

COMMAND	DESCRIPTION	M	P
<code>interface port-channel <port-list></code>	Enters config-interface mode for the specified port(s).	C	13
<code>vlan-stacking active-copyctagprio <1 0></code>	Enables or disables setting the same priority in the service provider (outer) VLAN tag as the priority in the customer (inner) VLAN tag for frames received on the port(s). 1: Enable 0: Disable	C	13
<code>vlan-stacking active-innertag <1 0></code>	Enables or disables adding a customer VLAN tag to untagged incoming traffic on the port whose VLAN stacking port role is set to <code>access</code> . 1: Enable 0: Disable	C	13
<code>vlan-stacking cpriority <0-7></code>	Sets the priority level in the customer VLAN tag that the Switch adds to frames received on the port(s).	C	13
<code>vlan-stacking CPVID <1-4094></code>	Sets the customer port VLAN ID (the inner VLAN tag) for frames received on the port(s).	C	13
<code>vlan-stacking innerQ-txuntag <1 0></code>	Enables or disables removing the customer VLAN tag from outgoing traffic on the port whose VLAN stacking port role is set to <code>access</code> . 1: Enable 0: Disable	C	13
<code>vlan-stacking priority <0~7></code>	Sets the priority of the specified port(s) in VLAN stacking.	C	13

Table 217 vlan-stacking Command Summary (continued)

COMMAND	DESCRIPTION	M	P
<pre> vlan-stacking role <normal access tunnel> </pre>	<p>Sets the VLAN stacking port roles of the specified port(s).</p> <p>Note: You must enable or disable static VLAN tagging according to the port role.</p> <p><i>normal</i>: The Switch ignores frames received or transmitted on this port with VLAN-stacking tags. The <i>SPVID</i> and <i>priority</i> are ignored. Static VLAN tagging must be disabled.</p> <p><i>access</i>: The Switch adds the specified <i>SPVID</i> tag to all incoming frames received on this port. Use this for ingress ports at the edge of the service provider's network. Static VLAN tagging must be disabled.</p> <p><i>tunnel</i> (Gigabit ports only): Use this for egress ports at the edge of the service provider's network. Static VLAN tagging must be enabled.</p> <p>In order to support VLAN stacking on a port, the port must be able to allow frames of 1526 Bytes (1522 Bytes + 4 Bytes for the second tag) to pass through it.</p>	C	13
<pre> vlan-stacking SPVID <1~4094> </pre>	Sets the service provider VID of the specified port(s). You must create the service provider VLAN first.	C	13
<pre> vlan-stacking tunnel-tpid <tpid> </pre>	Sets a four-digit hexadecimal number from 0000 to FFFF that the Switch adds in the outer VLAN tag of the outgoing frames sent on the tunnel port(s).	C	13
<pre>no vlan-stacking</pre>	Disables VLAN stacking.	C	13
<pre> no vlan-stacking selective- qinq interface port-channel <port> cvid <vlan-id> </pre>	Removes the specified selective VLAN stacking rule.	C	13
<pre> no vlan-stacking selective- qinq interface port-channel <port> cvid <vlan-id> inactive </pre>	Enables the specified selective VLAN stacking rule.	C	13
<pre>show vlan-stacking</pre>	Displays VLAN stacking settings.	E	13
<pre>vlan-stacking</pre>	Enables VLAN stacking on the device.	C	13
<pre>vlan-stacking <sptpid></pre>	Sets the service provider's TP (Tagged Protocol) ID. This is a standard Ethernet type code identifying the frame and indicating whether or not the frame carries IEEE 802.1Q tag information. 8100 and 9100 are typical values, but you can enter any four-digit hexadecimal number from 0000 to FFFF.	C	13
<pre> vlan-stacking selective-qinq name <name> interface port- channel <port> cvid <cvid> spvid <spvid> priority <0-7> activeprio <0 1> </pre>	<p>Creates a selective VLAN stacking rule.</p> <p><i>cvid</i>: 1 - 4094. This is the VLAN tag carried in the packets from the subscribers.</p> <p><i>spvid</i>: 1 - 4094: This is the service provider's VLAN ID (the outer VLAN tag).</p> <p><i>activeprio</i> <0 1>: Enter 0 to use the priority in the customer VLAN tag or enter 1 to use the priority you configured in this command.</p>	C	13


Table 217 vlan-stacking Command Summary (continued)

COMMAND	DESCRIPTION	M	P
<code>vlan-stacking selective-qinq name <name> interface port-channel <port> cvid <cvid> spvid <spvid> priority <0-7> activeprio <0 1> inactive</code>	Disables the specified selective VLAN stacking rule.	C	13
<code>show vlan-stacking selective-qinq</code>	Displays the selective VLAN stacking rules.	E	13

87.2 Command Examples

The service provider network (SPN) has two customers A and B. These customers both have VPN tunnels between their head offices and branch offices, and the traffic for both customers uses the same VLAN ID 24. The service provider distinguishes between these two customers by adding tag 37 to customer A's traffic and tag 48 to customer B's traffic when their traffic enters the SPN (and removing this tag when it leaves the SPN).

Figure 6 VLAN Stacking Example

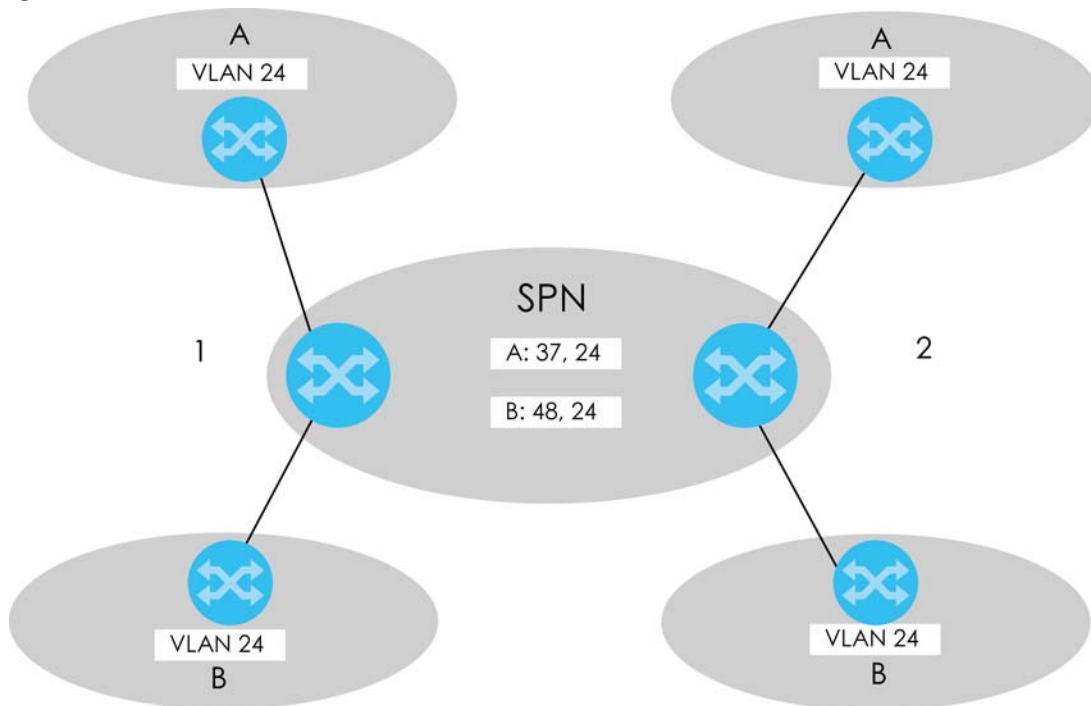

This example shows how to set up switch 1. Customer A is connected to port 5, and customer B is connected to port 6. Ports 5 and 6 already belong to VLAN 24, and their PVID is 24.

```

sysname# configure
sysname(config)# vlan 24
sysname(config-vlan)# untagged 5-6
sysname(config-vlan)# exit
sysname(config)# vlan 37
sysname(config-vlan)# fixed 5
sysname(config-vlan)# untagged 5
sysname(config-vlan)# exit
sysname(config)# interface port-channel 5
sysname(config-interface)# vlan-stacking role access
sysname(config-interface)# vlan-stacking SPVID 37
sysname(config-interface)# exit
sysname(config)# vlan 48
sysname(config-vlan)# fixed 6
sysname(config-vlan)# untagged 6
sysname(config-vlan)# exit
sysname(config)# interface port-channel 6
sysname(config-interface)# vlan-stacking role access
sysname(config-interface)# vlan-stacking SPVID 48
sysname(config-interface)# exit
sysname(config)# exit
sysname# show vlan-stacking
Switch Vlan Stacking Configuration
Operation: active
STPID: 0x8100

Port          Role          SPVID          Priority
01            normal        1              0
02            normal        1              0
03            normal        1              0
04            normal        1              0
05            access        37             0
06            access        48             0
07            normal        1              0
08            normal        1              0
----- SNIP -----

```

This example shows how to set up switch 2, which is connected to switch 1 on Ethernet port 18. Customer A is connected to port 7, and customer B is connected to port 8. Ports 7 and 8 already belong to VLAN 24, and their PVID is 24.

```

sysname# configure
sysname(config)# vlan 37
sysname(config-vlan)# fixed 7,18
sysname(config-vlan)# no untagged 18
sysname(config-vlan)# exit
sysname(config)# vlan 48
sysname(config-vlan)# fixed 8,18
sysname(config-vlan)# no untagged 18
sysname(config-vlan)# exit
sysname(config)# interface port-channel 18
sysname(config-interface)# vlan-stacking role tunnel
sysname(config-interface)# exit
sysname(config)# exit
sysname# show vlan-stacking
Switch Vlan Stacking Configuration
Operation: inactive
STPID: 0x8100

Port          Role          SPVID      Priority
01            normal        1           0
02            normal        1           0
03            normal        1           0
04            normal        1           0
05            normal        1           0
06            normal        1           0
07            normal        1           0
08            normal        1           0
----- SNIP -----
18            tunnel        1           0

```

CHAPTER 88

VLAN Translation

Use these commands to view or add a rule in the VTT (VLAN Translation Table).

88.1 Command Summary

The following table describes user-input values available in multiple commands for this feature.

Table 218 vlan-translation User-input Values

COMMAND	DESCRIPTION
<i>port-num</i>	This is the number of the VDSL port.
<i>seq-num</i>	This is the sequence number of the VTT entry for the same VDSL port.
<i>cvid</i>	Enter the CVID (Customer VLAN ID) from 1 to 4094. This is the VLAN tag carried in the packets and will be translated into a SVID.
<i>svid</i>	Enter the SVID (Subscriber VLAN ID) from 1 to 4094. This is the outer tag into which the ETI or CVID will be translated. This can be the ingress port VID, the static VLAN ID or the protocol-based VLAN ID.
<i>spri</i>	Enter the SPri (Subscriber Priority) from 0 to 7 into which the CPri will be translated.
<i>cpri</i>	Enter the CPri (Customer Priority) from 0 to 7. This is the VLAN tag carried in the packets and will be translated into a SPri. Leave this field blank for untagged incoming packets.
<i>eti</i>	Specify an ETI (Ethernet Type Identifier) by typing the protocol number in hexadecimal notation. For example the IP protocol in hexadecimal notation is 0800, and Novell IPX protocol is 8137.
<i>cvids</i>	Enter the inner VLAN tag from 1 to 4095 for all incoming packets. If you enter 4095, this tag will be removed before the Switch forwards the packets.

The following section lists the commands for this feature.

Table 219 vlan-translation Command Summary

COMMAND	DESCRIPTION	M	P
<code>no vlan-translation <port-num></code>	Deletes VLAN translation rules for a port.	C	13
<code>no vlan-translation <port-num> <seq-num></code>	Deletes a specified VLAN translation rule for a port.	C	13
<code>show vlan-translation</code>	Displays the VLAN translation table.	E	13
<code>show vlan-translation <port-num></code>	Displays the VLAN translation rules for a specified port.	E	13
<code>vlan-translation <port-num> single-tag <active> <cvid> <svid> <cvids></code>	Creates a VTT entry for single-tagged packets received on the specified port.	C	13

Table 219 vlan-translation Command Summary (continued)

COMMAND	DESCRIPTION	M	P
vlan-translation <port-num> single-tag <active> <cvid> <svid> <cvids> seq <seq-num>	Creates or edits a specified VTT entry for single-tagged packets received on the specified port.	C	13
vlan-translation <port-num> tls <active> <svid> <spri>	Creates a VTT entry for VLAN stacking packets received on the specified port.	C	13
vlan-translation <port-num> tls <active> <svid> <spri> seq <seq-num>	Creates or edits a specified VTT entry for VLAN stacking packets received on the specified port.	C	13
vlan-translation <port-num> untag-ethernet <active> <eti> <svid> <cvids> <spri> <cpri>	Creates a VTT entry for protocol-based VLAN tagged packets received on the specified port.	C	13
vlan-translation <port-num> untag-ethernet <active> <ETI> <sVid> <cVidS> <sPri> <cPri> seq <seq-num>	Creates or edits a specified VTT entry for protocol-based VLAN tagged packets received on the specified port.	C	13
vlan-translation <port-num> untag-normal <active> <sVid> <cVidS> <sPri> <cPri>	Creates a VTT entry for untagged packets received on the specified port.	C	13
vlan-translation <port-num> untag-normal <active> <sVid> <cVidS> <sPri> <cPri> seq <seq-num>	Creates or edits a specified VTT entry for untagged packets received on the specified port.	C	13

88.2 Command Examples

This example displays the VLAN translation table on the Switch.

```

sysname# # show vlan-translation
  Port Seq  Active      Type          ETI    cVid  sPri  sVid  cPri  cVid_S
-----
   1    1   Yes    Untag-normal    -      -     0     1     0    4095
   2    1   Yes    Untag-normal    -      -     0     1     0    4095
   3    1   Yes    Untag-normal    -      -     0     1     0    4095
   3    2   Yes    Single-tag      -      123   -     123   -     4095
   3    3   Yes    Untag-ethernet  0x0800 -     0     123   0     4095
   4    1   Yes    Untag-normal    -      -     0     1     0    4095
   5    1   Yes    Untag-normal    -      -     0     1     0    4095
   6    1   Yes    Untag-normal    -      -     0     1     0    4095
   7    1   Yes    Untag-normal    -      -     0     1     0    4095
   8    1   Yes    Untag-normal    -      -     0     1     0    4095
   9    1   Yes    Untag-normal    -      -     0     1     0    4095
  10    1   Yes    Untag-normal    -      -     0     1     0    4095
  11    1   Yes    Untag-normal    -      -     0     1     0    4095
  12    1   Yes    Untag-normal    -      -     0     1     0    4095
  13    1   Yes    Untag-normal    -      -     0     1     0    4095
  14    1   Yes    Untag-normal    -      -     0     1     0    4095
  15    1   Yes    Untag-normal    -      -     0     1     0    4095
  16    1   Yes    Untag-normal    -      -     0     1     0    4095
sysname#

```

This example creates a VTT entry for incoming untagged packets to allow the Switch to forward them with double tags.

```
sysname(config)# vlan-translation 5 untag-normal 1 123 1 0 0
sysname(config)# exit
sysname# show vlan-translation 5
```

Port	Seq	Active	Type	ETI	cVid	sPri	sVid	cPri	cVid_S
5	1	Yes	Untag-normal	-	-	0	1	0	4095
5	2	Yes	Untag-normal	-	-	0	123	0	1

```
sysname#
```

CHAPTER 89

VLAN Trunking Commands

Use these commands to decide what the Switch should do with frames that belong to unknown VLAN groups.

89.1 Command Summary

The following section lists the commands for this feature.

Table 220 vlan-trunking Command Summary

COMMAND	DESCRIPTION	M	P
<code>interface port-channel <port-list></code>	Enters config-interface mode for the specified port(s).	C	13
<code>vlan-trunking</code>	Enables VLAN trunking on ports connected to other switches or routers (but not ports directly connected to end users) to allow frames belonging to unknown VLAN groups to pass through the Switch.	C	13
<code>no vlan-trunking</code>	Disables VLAN trunking on the port(s).	C	13

CHAPTER 90

Additional Commands

Use these commands to configure or perform additional features on the Switch. There is more information for some commands in the Web Configurator section.

90.1 Command Summary

The following section lists the commands for this feature.

Table 221 Command Summary: Changing Modes or Privileges

COMMAND	DESCRIPTION	M	P
enable	Changes the session's privilege level to 14 and puts the session in enable mode (if necessary). The user has to provide the enable password. See Section 2.1.3.1 on page 13 .	E	0
enable <0-14>	Raises the session's privilege level to the specified level and puts the session in enable mode if the specified level is 13 or 14. The user has to provide the password for the specified privilege level. See Section 2.1.3.2 on page 13 .	E	0
disable	Changes the session's priority level to 0 and changes the mode to user mode. See Section 2.1.3.3 on page 14 .	E	13
rmt-vtur port-channel <port-list>	Enters remote CPE configuration mode.	E	13
configure	Changes the mode to config mode.	E	13
interface port-channel <port-list>	Enters config-interface mode for the specified port(s).	C	13
mode zynos	Changes the mode to ZyNOS mode. ZyNOS mode commands are reserved.	C	13
mvr <vlan-id>	Enters config-mvr mode for the specified MVR (multicast VLAN registration). Creates the MVR, if necessary.	C	13
protocol-stack <ipv4-only ipv6-only dual-stack>	Sets the Switch to run IPv4, IPv6, or both at the same time (dual-stack).	C	13
vdsl-alarmprofile <profile-name>	Enters config-vdsl-alarmprofile mode for the specified VDSL alarm profile. Creates the profile, if necessary.	C	13
vdsl-profile <profile-name>	Enters config-vdsl-profile mode for the specified VDSL profile. Creates the profile, if necessary.	C	13
vlan <vlan-id>	Enters config-vlan mode for the specified VLAN. Creates the VLAN, if necessary.	C	13
vlanlq port-isolation <port-list>	Enters config-port mode to configure VLAN port isolation for the specified port(s).	C	13
exit	Returns to the previous mode.	C	13
logout	Logs out of the CLI.	E	0

Table 222 Command Summary: Additional Enable Mode

COMMAND	DESCRIPTION	M	P
<code>baudrate</code> <1:38400 2:19200 3:9600 4:5760 0 5:115200>	Changes the console port baud rate (in bps).	E	0
<code>boot config</code>	Restarts the Switch (cold reboot) with the specified configuration file.	E	13
<code>boot image <1 2></code>	Restarts the system with the specified firmware image (1: ras-0, 2: ras-1).	E	13
<code>cable-diagnostics <port-list></code>	Perform a physical wire-pair test of the Ethernet connections on the specified port(s). Ok: The physical connection between the wire-pair is okay. Open: There is no physical connection between the wire-pair.	E	13
<code>ping <ip host-name> [in-band out-of-band vlan <vlan-id>] [size <0-1472>] [-t]</code>	Sends Ping packets to the specified Ethernet device. <i>vlan-id</i> : Specifies the VLAN ID to which the Ethernet device belongs. <i>size <0-1472></i> : Specifies the size of the Ping packet. <i>-t</i> : Sends Ping packets to the Ethernet device indefinitely. Press [CTRL]+C to terminate the Ping process.	E	0
<code>ping6 <ipv6-addr> [-i <vlan mgmt> <vlan-id mgmt-id>][..]</code>	Sends IPv6 ping packets to the specified Ethernet device. <i><vlan></i> : The inband vlan interface. <i><mgmt></i> : The outband management interface. <i><vlan-id></i> : The VLAN ID to which the Ethernet device belongs. <i><mgmt-id></i> : The ID number of the outband management interface (0). <i>size <0-1472></i> : Specifies the size of the Ping packet. <i>-l <1-1452></i> : Specifies the size of the ping packet. <i>-t</i> : Sends ping packets to the Ethernet device indefinitely. Press [CTRL]+C to terminate the Ping process. <i>-n <1-65535></i> : Specifies how many times the Switch sends the ping packets. <i>-s <ipv6-address></i> : Specifies the source IPv6 address of the ping packets.	E	0
<code>ping6 <ipv6-addr> <cr></code>	Send IPv6 ping packets to the specified IPv6 address.	E	0
<code>ping6 <ipv6-address/host-name> <[-i <vlan mgmt> <vlan id mgmt id>] [-t] [-l <1-1452>] [-n <1-65535>] [-s <ipv6-address>]</code>	Sends IPv6 ping packets to the specified IPv6 address or host name. <i>-l <1-1452></i> : Specifies the size of the ping packet. <i>-t</i> : Sends ping packets to the Ethernet device indefinitely. Press [CTRL]+C to terminate the Ping process. <i>-n <1-65535></i> : Specifies how many times the Switch sends the ping packets. <i>-s <ipv6-address></i> : Specifies the source IPv6 address of the ping packets.	E	2
<code>ping6 help</code>	Displays information about how to use the ping6 command.	E	0

Table 222 Command Summary: Additional Enable Mode (continued)

COMMAND	DESCRIPTION	M	P
reload config [1 2]	Restarts the system (warm reboot) with the specified configuration file. 1: config-1 2: config-2	E	13
show auto-save config	Displays auto-save settings for Switch configuration.	E	3
show auto-save logging	Displays auto-save settings for Switch logs.	E	3
show boot-image	Displays the firmware image file the Switch currently uses.	E	13
show alarm-status	Displays alarm status.	E	0
show cpe-port-status <port-list>	Displays the VDSL profile, state, and speed of the specified VDSL ports.	E	0
show cpe-port-status info <cr>	Displays the remote CPE configuration mode status of the specified VDSL ports.	E	0
show cpe-port-status info <port-list>	Displays the remote CPE configuration mode status of the specified VDSL ports.	E	0
show cpu-utilization	Displays CPU usage on the Switch.	E	3
show hardware-alarm-setting	Shows the alarm thresholds (%) for CPU utilization, packet buffer, and memory usage.	E	3
show packet-buffer	Displays how many bytes of the Switch's total packet buffer are currently in use.	E	3
show hardware-monitor <cr>	Displays current hardware monitor information.	E	0
show hardware-monitor <C F>	This command is not available in all models. Displays current hardware monitor information with the specified temperature unit (Celsius C or Fahrenheit F).	E	0
show interfaces transceiver <port-list>	Displays real-time SFP (Small Form Factor Pluggable) transceiver information and operating parameters on the specified SFP ports. The parameters include, for example, module temperature, module voltage, transmitting and receiving power.	E	3
show logging	Displays system logs.	E	13
show loginMessage	Displays the message that users see when logging in to the CLI.	E	13
show memory-usage	Displays the memory utilization statistics on the Switch.	E	3
show multicast	Displays multicast status, including the port number, VLAN ID and multicast group members on the Switch.	E	13
show multicast [vlan]	Displays multicast status, including the port number, VLAN ID and multicast group members on the Switch. Optionally, displays the type of each multicast VLAN.	E	13
show multicast counter	Displays multicast traffic statistics per port.	E	13
clear multicast port <port-list>	Clear multicast counter info by port.	E	0
clear multicast port all	Clear multicast counter info for all ports.	E	0
clear multicast vlan <vid>	Clear multicast counter info by VLAN.	E	0
clear multicast vlan all	Clear multicast counter info for all VLANs.	E	0
show multicast counter query <port-list>	Display the IGMP query in/out and drop counter for the specified port.	E	0

Table 222 Command Summary: Additional Enable Mode (continued)

COMMAND	DESCRIPTION	M	P
show multicast counter receive <port-list>	Display the IGMP counter info received on the specified port.	E	0
show multicast counter report <port-list>	Display the IGMP report counter for the specified port.	E	0
show multicast counter specific <port-list>	Display the multicast counter by port including join/leave/groupnum.. and so on.	E	0
show multicast counter transmit <port-list>	Display the IGMP transmit counter on the specified port.	E	0
show multicast mode-querier	Display the IGMP Querier Mode setting.	E	0
show multicast port <cr>	Display all multicast port counters.	E	0
show multicast port <port-list>	Display the multicast counter for the specified port.	E	0
show multicast port query <port-list>	Display the multicast query packet counter for the specified port.	E	0
show multicast port receive <port-list>	Display the multicast receive packet counter for the specified port.	E	0
show multicast port report <port-list>	Display the multicast report packet counter for the specified port.	E	0
show multicast port specific <port-list>	Display (Join/Leave/GroupNum/..) multicast counters for the specified port.	E	0
show multicast port transmit <port-list>	Display the multicast transmit packet counter for the specified port.	E	0
show multicast snooping-vlan	Display the IGMP snooping VLAN settings.	E	0
show multicast vlan <cr>	Display the multicast per VLAN counter.	E	0
show multicast vlan <vid>	Display the multicast per VLAN counter for the specified VLAN.	E	0
show multicast vlan receive	Display all multicast VLAN receive packet counters.	E	0
show multicast vlan specific	Display all multicast counters (Join/Leave/GroupNum/..) for the specified VLAN.	E	0
show multicast vlan transmit	Show all VLAN Transmit packet counter	E	0
show multicast join-port	Displays multicast group member information.	E	13
show slotID	Displays the current slot ID.	E	3
show protocol-stack	Displays whether the Switch runs IPv4, IPv6, or both at the same time (dual stack).	E	3
show system-information	Displays general system information.	E	0
show version [flash]	Display the version of the currently running firmware on the Switch. Optionally, display the versions of the currently installed firmware images on the flash memory.	E	0
test interface port-channel <port-list>	Performs an internal loopback test on the specified ports.	E	13
test interface port-channel <port-list> F5-loopback <vpi> <vci> <cnt>	Performs an F5 loopback test on the specified virtual circuit. cnt: Specifies how many F5 loopback packets to send (1-1000).	E	13

Table 222 Command Summary: Additional Enable Mode (continued)

COMMAND	DESCRIPTION	M	P
test interface port-channel <port-list> <internal external>	Performs an internal or external loopback test on the specified ports. The test returns Passed! or Failed!.	E	13
traceroute <ip host-name> [in-band out-of-band vlan <vlan-id>] [ttl <1-255>] [wait <1-60>] [queries <1-10>]	Determines the path a packet takes to the specified Ethernet device. vlan <vlan-id>: Specifies the VLAN ID to which the Ethernet device belongs. ttl <1-255>: Specifies the Time To Live (TTL) period. wait <1-60>: Specifies the time period to wait. queries <1-10>: Specifies how many times the Switch performs the traceroute function.	E	0
traceroute help	Provides more information about the specified command.	E	0
traceroute6 <ip host-name> [-i <vlan mgmt> <vlan id mgmt id>] [-m <1-255>] [-w <1-60>] [-q <1-10>]	Determines the path an IPv6 packet takes to the specified Ethernet device. -m <1-255>: Specifies the Time To Live (TTL) period. -w <1-60>: Specifies the time period to wait. -q <1-10>: Specifies how many times the Switch performs the traceroute function.	E	0
traceroute6 help	Provides more information about the specified command.	E	0
write memory [<index>]	Saves current configuration in volatile memory to the configuration file the Switch is currently using or the specified configuration file.	E	13

Table 223 Command Summary: Additional Configure Mode

COMMAND	DESCRIPTION	M	P
auto-save config <0, 5-600>	Specifies how often (in minutes) the Switch automatically saves its configuration to its flash memory. Enter 0 to disable auto-save.	C	13
auto-save logging <0-72>	Specifies how often (in hours) the Switch automatically saves its logs to its flash memory. Enter 0 to disable auto-save.	C	13
hardware-alarm-setting cpu-utilization <percentage>	Sets CPU utilization threshold for hardware alarm. For example, set 80 to have the Switch send a hardware alarm when the CPU usage over 80%. percentage: 0~99 or 0~100. This range may vary depending on the Switch model.	C	13
default-management <in-band out-of-band>	Sets which traffic flow (in-band or out-of-band) the Switch sends packets originating from itself (such as SNMP traps) or packets with unknown source.	C	13
no hardware-alarm-setting cpu-utilization	Removes CPU utilization threshold for hardware alarm.	C	13
hardware-alarm-setting memory-usage <percentage>	Sets memory usage threshold for hardware alarm. percentage: 0~99 or 0~100. This range may vary depending on the Switch model.	C	13

Table 223 Command Summary: Additional Configure Mode (continued)

COMMAND	DESCRIPTION	M	P
hardware-alarm-setting temperature <index> <centigrade>	Sets the threshold for specified hardware temperature alarm. <i>index</i> : Specify the sensor <CPU DSP ADT>. <i>centigrade</i> : 0~99 or 0~100. This range may vary depending on the Switch model.	C	13
no hardware-alarm-setting memory-usage	Removes memory usage threshold for hardware alarm.	C	13
no hardware-alarm-setting temperature <index>	Removes the threshold for specified hardware temperature alarm. <i>index</i> : Specify the sensor <CPU DSP ADT>.	C	13
hardware-alarm-setting packet- buffer <percentage>	Sets packet buffer threshold for hardware alarm. <i>percentage</i> : 0~99 or 0~100. This range may vary depending on the Switch model.	C	13
no hardware-alarm-setting packet-buffer	Removes packet buffer threshold for hardware alarm.	C	13
loginMessage <string>	Specifies the message users see when logging in to the CLI. Set the <string> to "" to remove the message.	C	13
no loginMessage	Removes the message that users see when logging in to the CLI.	C	13
hostname <hostname>	Sets the Switch's name for identification purpose. <i>hostname</i> : 1-64 printable characters; spaces are allowed.	C	13
bcp-transparency	Enables Bridge Control Protocol transparency.	C	13
no bcp-transparency	Disables Bridge Control Protocol transparency.	C	13
queue level <0~7> priority <0~7>	Sets the priority level-to-physical queue mapping.	C	13
queue priority <0-7> level <0- 7>	Sets the IEEE 802.1p priority level-to-physical queue mapping. <i>priority <0-7></i> : IEEE 802.1p defines up to eight separate traffic types by inserting a tag into a MAC-layer frame that contains bits to define class of service. Frames without an explicit priority tag are given the default priority of the ingress port. <i>level <0-7></i> : The Switch has up to 8 physical queues that you can map to the 8 priority levels. On the Switch, traffic assigned to higher index queues gets through faster while traffic in lower index queues is dropped if the network is congested.		
fe-spq <Q0~Q7>	Enables Strict Priority Queuing and specifies a queue on the fast Ethernet (10/100 Mbps) ports.	C	13
no fe-spq	Disables Strict Priority Queuing on the fast Ethernet ports.	C	13

Table 223 Command Summary: Additional Configure Mode (continued)

COMMAND	DESCRIPTION	M	P
<code>sp_wrr</code>	Sets the Switch to use both Strict Priority (SP) and Weighted Round Robin (WRR) methods to service queues. When you configure queues with weight 0, they use the SP method. Otherwise, queues use the WRR method. Weighted Round Robin services queues on a rotating basis based on their queue weight (the number you configure in the interface weight command, see Table 77 on page 102). Queues with larger weights get more service than queues with smaller weights.	C	13
<code>spq</code>	Sets the Switch to use Strict Priority (SP) queuing method. SPQ services queues based on priority only. When the highest priority queue empties, traffic on the next highest-priority queue begins. Q7 has the highest priority and Q0 the lowest.	C	13
<code>wfq</code>	Sets the Switch to use Weighted Fair Scheduling (WFS) queuing method. WFS is used to guarantee each queue's minimum bandwidth based on their bandwidth portion (weight) (the number you configure in the interface weight command, see Table 77 on page 102). Queues with larger weights get more guaranteed bandwidth than queues with smaller weights.	C	13
<code>wfq fe-spq <Q0~Q7></code>	Sets the Switch to use WFQ to service all queues for the Ethernet port.	C	13
<code>no wfq fe-spq</code>	Disables Strict Priority Queuing on the fast Ethernet (10/100 Mbps) ports.	C	13
<code>wrr</code>	Sets the Switch to use Weighted Round Robin (WRR) methods to service queues. Weighted Round Robin services queues on a rotating basis based on their queue weight (the number you configure in the interface weight command, see Table 77 on page 102). Queues with larger weights get more service than queues with smaller weights.	C	13
<code>wrr <wt1> <wt2> ... <wt8></code>	Sets the queue weighting for weighted round robin (WRR) and weighted fair scheduling (WFS) on the specified port(s). <i>wt1, wt2, ..., wt8: 1~15</i>	C	13

90.2 Command Examples

This example changes the console port baud rate to 115200 bps..

```
sysname# baud 5

Saving to ROM. Please wait...
Change Console Speed to 115200. Then hit any key to continue
```

This example sends Ping requests to an Ethernet device with IP address 172.1.1.254.

```

sysname# ping 172.1.1.254
Resolving 172.1.1.254... 172.1.1.254
  sent      rcvd  rate   rtt    avg    mdev    max    min
    1         1  100     0     0      0      0      0
    2         2  100     0     0      0      0      0
    3         3  100     0     0      0      0      0

```

The following table describes the labels in this screen.

Table 224 ping

LABEL	DESCRIPTION
sent	This field displays the sequence number of the ICMP request the Switch sent.
rcvd	This field displays the sequence number of the ICMP response the Switch received.
rate	This field displays the percentage of ICMP responses for ICMP requests.
rtt	This field displays the round trip time of the ping.
avg	This field displays the average round trip time to ping the specified IP address.
mdev	This field displays the standard deviation in the round trip time to ping the specified IP address.
max	This field displays the maximum round trip time to ping the specified IP address.
min	This field displays the minimum round trip time to ping the specified IP address.

This example shows the current status of the various alarms in the Switch.

```

sysname# show alarm-status
      name  status  suppressAlarm  alarmLED
-----  -
      VOLTAGE Normal      No             Off
      TEMPERATURE Normal      No             Off
      FAN Normal      No             Off
      POE OVER LOAD Normal      Yes            Off
      POE SHORT CIRCUIT Normal      Yes            Off
      POE POWERBOX Normal      Yes            Off

```

The following table describes the labels in this screen.

Table 225 show alarm-status

LABEL	DESCRIPTION
name	This field displays the name or type of the alarm.
status	This field displays the status of the alarm. Normal: The alarm is off. Error: The alarm is on.
suppressAlarm	This field displays whether or not the alarm is inactive.
alarmLED	This field displays whether or not the LED for this alarm is on.

This example looks at the current sensor readings from various places in the hardware.

```

sysname# show hardware-monitor C

Temperature Unit : (C)
Temperature(%c)  Current      Max      Min  Threshold  Status
-----
          VDSL      49.0     49.0   34.0     85.0  Normal
          Switch    39.0     39.0   32.0     85.0  Normal
          ADT7463   38.0     39.0   35.0     85.0  Normal

FAN Speed(RPM)  Current      Max      Min  Threshold  Status
-----
          FAN1      2748    4847   2667     1000  Normal
          FAN2      2708    4817   2666     1000  Normal
          FAN3      2789    4851   2645     1000  Normal

Voltage(V)      Current      Max      Min  Threshold  Status
-----
          2.5VIN    2.519    2.519   2.506     +-6%  Normal
          1.2VIN    1.271    1.271   1.271     +-10% Normal
          3.3VAIN   3.394    3.394   3.394     +-6%  Normal
          3.3VBIN   3.398    3.398   3.372     +-6%  Normal
          12.0VIN  12.531   12.531  12.531     +-10% Normal

```

The following table describes the labels in this screen.

Table 226 show hardware-monitor

LABEL	DESCRIPTION
Temperature Unit	This field displays the unit of measure for temperatures in this screen.
Temperature	This field displays the location of the temperature sensors.
Current	This field displays the current temperature at this sensor.
Max	This field displays the maximum temperature measured at this sensor.
Min	This field displays the minimum temperature measured at this sensor.
Threshold	This field displays the upper temperature limit at this sensor.
Status	Normal: The current temperature is below the threshold. Error: The current temperature is above the threshold.
FAN Speed(RPM)	This field displays the fans in the Switch. Each fan has a sensor that is capable of detecting and reporting when the fan speed falls below the threshold.
Current	This field displays the current speed of the fan at this sensor.
Max	This field displays the maximum speed of the fan measured at this sensor.
Min	This field displays the minimum speed of the fan measured at this sensor. It displays "<41" for speeds too small to measure. (See the User's Guide to find out what speeds are too small to measure in your Switch.)
Threshold	This field displays the minimum speed at which the fan should work.
Status	Normal: This fan is running above the minimum speed. Error: This fan is running below the minimum speed.
Voltage(V)	This field displays the various power supplies in the Switch. Each power supply has a sensor that is capable of detecting and reporting when the voltage is outside tolerance.
Current	This field displays the current voltage at this power supply.

Table 226 show hardware-monitor (continued)

LABEL	DESCRIPTION
Max	This field displays the maximum voltage measured at this power supply.
Min	This field displays the minimum voltage measured at this power supply.
Threshold	This field displays the percentage tolerance within which the Switch still works.
Status	Normal: The current voltage is within tolerance. Error: The current voltage is outside tolerance.

This example shows the ARP table.

```

sysname# show ip arp
received 127492 badtype 0 bogus addr 0 reqst in 25 replies 8 reqst out 22
bad VID 0
cache hit 101039 (61%), cache miss 63813 (38%)
IP-addr      Type      Time  Addr      stat iface channel
172.1.1.43   Ethernet  250   00:0f:fe:0a:2d:3b 41   swif0 swp24
172.1.1.33   Ethernet  170   00:0f:fe:ad:58:ab 41   swif0 swp24
172.1.1.202  Ethernet  10    00:00:aa:10:05:87 41   swif0 swp24
172.1.1.203  Ethernet  10    00:13:49:00:00:02 41   swif0 swp24
172.1.1.254  Ethernet  300   00:04:80:9b:78:00 41   swif0 swp24
172.1.1.255  Ethernet  0     ff:ff:ff:ff:ff:ff 43   NULL  NULL
num of arp entries= 6

```

The following table describes the labels in this screen.

Table 227 show ip arp

LABEL	DESCRIPTION
received	This field displays the number of ARP packets received by the Switch.
badtype	This field displays the number of ARP packets with an invalid type.
bogus addr	This field displays the number of ARP packets with invalid IP addresses.
reqst in	This field displays the number of ARP requests received by the Switch.
replies	This field displays the number of ARP responses to ARP requests sent by the Switch.
reqst out	This field displays the number of ARP requests sent by the Switch.
bad VID	This field displays the number of ARP requests with an invalid VLAN ID.
cache hit	This field displays the number of times the Switch looked up an IP address in the ARP table and found an entry for it.
cache miss	This field displays the number of times the Switch looked up an IP address in the ARP table and did not find an entry for it.
IP-addr	This field displays the learned IP address of the device.
Type	This field displays the type of interface from which this ARP entry was learned.
Time	This field displays how long (in seconds) the entry remains valid. Zero means the entry is always valid.
Addr	This field displays the MAC address of the device.
stat	This field is reserved.
iface	This field is reserved.
channel	This field is reserved.
num of arp entries	This field displays the total number of ARP entries.

This example displays the system logs.

```

sysname# show logging
 0 Sun Jan  4 08:26:20 1970 PP0c  ERROR Port 18 link down
 1 Sun Jan  4 08:26:22 1970 PP0c -WARN SNMP TRAP 3: port 18 link up
 2 Sun Jan  4 08:26:22 1970 PP0c  ERROR Port 18 link up
 3 Sun Jan  4 08:26:27 1970 PP0c -WARN SNMP TRAP 2: port 18 link down
 4 Sun Jan  4 08:26:27 1970 PP0c  ERROR Port 18 link down
 5 Sun Jan  4 08:26:29 1970 PP0c -WARN SNMP TRAP 3: port 18 link up
 6 Sun Jan  4 08:26:29 1970 PP0c  ERROR Port 18 link up
 7 Sun Jan  4 08:38:28 1970 PP0c -WARN SNMP TRAP 2: port 18 link down
 8 Sun Jan  4 08:38:28 1970 PP0c  ERROR Port 18 link down
 9 Sun Jan  4 08:38:31 1970 PP20 -WARN SNMP TRAP 26: Event On Trap
10 Sun Jan  4 08:38:44 1970 PP0c -WARN SNMP TRAP 3: port 18 link up
11 Sun Jan  4 08:38:44 1970 PP0c  ERROR Port 18 link up
12 Sun Jan  4 08:38:44 1970 PP20 -WARN SNMP TRAP 27: Event Cleared Trap
13 Sun Jan  4 08:40:58 1970 PP0c -WARN SNMP TRAP 2: port 18 link down
14 Sun Jan  4 08:40:58 1970 PP0c  ERROR Port 18 link down
15 Sun Jan  4 08:41:01 1970 PP20 -WARN SNMP TRAP 26: Event On Trap
16 Sun Jan  4 08:46:37 1970 PSSV  WARN Fan alarm clear
17 Sun Jan  4 08:47:10 1970 PSSV  WARN Fan alarm
18 Sun Jan  4 09:22:40 1970 PSSV  WARN Fan alarm clear
Clear Error Log (y/n):

```

This example shows the current multicast groups on the Switch.

```

sysname# show multicast
Multicast Status

Index   VID   Port   Multicast Group
-----  ----  ---

```

The following table describes the labels in this screen.

Table 228 show multicast

LABEL	DESCRIPTION
Index	This field displays an entry number for the VLAN.
VID	This field displays the multicast VLAN ID.
Port	This field displays the port number that belongs to the multicast group.
Multicast Group	This field displays the IP multicast group addresses.

This example shows the current multicast VLAN on the Switch.

```

sysname# show multicast vlan
Multicast Vlan Status

Index   VID   Type
-----  ----  -----
      1   3     MVR

```

The following table describes the labels in this screen.

Table 229 show multicast vlan

LABEL	DESCRIPTION
Index	This field displays an entry number for the multicast VLAN.
VID	This field displays the multicast VLAN ID.
Type	This field displays what type of multicast VLAN this is. MVR: This VLAN is a Multicast VLAN Registration (MVR). Static: This VLAN is configured via IGMP snooping VLAN in fixed mode. Dynamic: This VLAN is learned dynamically in auto mode. See Chapter 27 on page 93 for more information about IGMP snooping VLAN and IGMP modes.

This example looks at general system information about the Switch

```

sysname# show system-information

Product Model       : VES1724-55C
System Name        : VES1724-55C
System Serial Number : xxxxxxxxxxxxxxxxx
System Contact      :
System Location     :
System up Time      : 0:02:51 (4312 ticks)
Ethernet Address    : cc:5d:4e:11:22:12
Bootbase Version    : V0.2 | 05/12/2014
ZyNOS F/W Version   : V1.00 (AATL.11)C0 | 05/29/2020
Config Boot Image   : 1
Current Boot Image  : 1
Current Config      : 1
Power Module        : AC
1st F/W Version     : V1.00 (AATL.11)C0 | 05/29/2020
2nd F/W Version     : V1.00 (AATL.1)C0 | 01/12/2015
Config Port Reverse : Normal

```

The following table describes the labels in this screen.

Table 230 show system-information

LABEL	DESCRIPTION
Product Model	This field displays the model name.
System Name	This field displays the system name (or hostname) of the Switch.
System Serial Number	This field displays the hardware serial number.
System Contact	This field displays the name of the person in charge of this Switch. Use the <code>snmp-server</code> command to configure this. See Chapter 67 on page 243 .
System Location	This field displays the geographic location of this Switch. Use the <code>snmp-server</code> command to configure this. See Chapter 67 on page 243 .
System up Time	This field displays how long the Switch has been running since it last started up.
Ethernet Address	This field displays the MAC address of the Switch.
Bootbase Version	This field displays the bootbase version the Switch is using.
ZyNOS F/W Version	This field displays the firmware version the Switch is running.
Config Boot Image	This field displays which firmware file (1 or 2) the Switch is to use the next time it starts up.
Current Boot Image	This field displays which firmware file (1 or 2) the Switch is currently using.

Table 230 show system-information (continued)

LABEL	DESCRIPTION
Current Config	This field displays which configuration file (1 or 2) the Switch is currently using.
Power Module	This field displays the type of power module (AC/Dc/Dual) on your Switch.
1st F/W Version	The Switch has two firmware sets residing in its flash. This shows the first one's version number (and model code) and MM/DD/YYYY creation date.
2nd F/W Version	The Switch has two firmware sets residing in its flash. This shows the second one's version number (and model code) and MM/DD/YYYY creation date.
Config Port Reverse	This field displays whether the VDSL ports are in normal or reverse order.

This example displays the firmware version the Switch is currently using.

```
sysname# show version
Current ZyNOS version: V3.80(BPC.0)b4 | 04/02/2009
```

This example displays the firmware versions of the dual firmware images.

```
sysname# show version flash
Flash 1 ZyNOS version : V3.80(BPC.0)b4 | 04/02/2009
Flash 2 ZyNOS version : V3.80(BPC.0)b1 | 03/01/2009
```

This example displays route information to an Ethernet device with IP address 192.168.1.100.

```
sysname> traceroute 192.168.1.100
traceroute to 192.168.1.100, 30 hops max, 40 byte packet
 1:192.168.1.100 (10 ms) (10 ms) (0 ms)
traceroute done:
sysname>
```

PART III

Appendices and Index of Commands

APPENDIX A

Default Values

Some commands, particularly `no` commands, reset settings to their default values. The following table identifies the default values for these settings.

Table 231 Default Values for Reset Commands

COMMAND	DEFAULT VALUE
<code>no https timeout</code>	300 seconds
<code>no ip inband</code>	IP address: 192.168.1.1 Subnet mask: 255.255.255.0
<code>no ip outband</code>	IP address: 192.168.0.1 Subnet mask: 255.255.255.0
<code>no radius-server</code>	IP address: 0.0.0.0 Port number: 1812 Key: blank

APPENDIX B

Legal Information

Copyright

Copyright © 2021 by Zyxel Communications Corporation.

The contents of this publication may not be reproduced in any part or as a whole, transcribed, stored in a retrieval system, translated into any language, or transmitted in any form or by any means, electronic, mechanical, magnetic, optical, chemical, photocopying, manual, or otherwise, without the prior written permission of Zyxel Communications Corporation.

Published by Zyxel Communications Corporation. All rights reserved.

Disclaimer

Zyxel does not assume any liability arising out of the application or use of any products, or software described herein. Neither does it convey any license under its patent rights nor the patent rights of others. Zyxel further reserves the right to make changes in any products described herein without notice. This publication is subject to change without notice.

Viewing Certifications

Go to <http://www.zyxel.com> to view this product's documentation and certifications.

Zyxel Limited Warranty

Zyxel warrants to the original end user (purchaser) that this product is free from any defects in material or workmanship for a specific period (the Warranty Period) from the date of purchase. The Warranty Period varies by region. Check with your vendor and/or the authorized Zyxel local distributor for details about the Warranty Period of this product. During the warranty period, and upon proof of purchase, should the product have indications of failure due to faulty workmanship and/or materials, Zyxel will, at its discretion, repair or replace the defective products or components without charge for either parts or labor, and to whatever extent it shall deem necessary to restore the product or components to proper operating condition. Any replacement will consist of a new or re-manufactured functionally equivalent product of equal or higher value, and will be solely at the discretion of Zyxel. This warranty shall not apply if the product has been modified, misused, tampered with, damaged by an act of God, or subjected to abnormal working conditions.

Note

Repair or replacement, as provided under this warranty, is the exclusive remedy of the purchaser. This warranty is in lieu of all other warranties, express or implied, including any implied warranty of merchantability or fitness for a particular use or purpose. Zyxel shall in no event be held liable for indirect or consequential damages of any kind to the purchaser.

To obtain the services of this warranty, contact your vendor. You may also refer to the warranty policy for the region in which you bought the device at http://www.zyxel.com/web/support_warranty_info.php.

Registration

Register your product online to receive e-mail notices of firmware upgrades and information at www.zyxel.com for global products, or at www.us.zyxel.com for North American products.

Trademarks

ZyNOS (Zyxel Network Operating System) and ZON (Zyxel One Network) are registered trademarks of Zyxel Communications, Inc. Other trademarks mentioned in this publication are used for identification purposes only and may be properties of their respective owners.

Index of Commands

This section lists the commands and sub-commands in alphabetical order. Commands and subcommands appear at the same level.

15minsESs <threshold>	263
15minsLofs <threshold>	263
15minsLols <threshold>	263
15minsLoss <threshold>	263
15minsLprs <threshold>	263
15minsSEs <threshold>	264
15minsUAs <threshold>	264
8021p-priority <0~7>	184
aaa accounting commands <privilege> stop-only tacacs+ [broadcast]	22
aaa accounting dot1x <start-stop stop-only> <radius tacacs+> [broadcast]	22
aaa accounting exec <start-stop stop-only> <radius tacacs+> [broadcast]	22
aaa accounting system <radius tacacs+> [broadcast]	22
aaa accounting update periodic <1-2147483647>	21
aaa authentication enable <method1> [<method2> ...]	21
aaa authentication enable try-cont <enable disable>	21
aaa authentication login <method1> [<method2> ...]	21
aaa authentication login try-cont <enable disable>	21
aaa authorization exec <method1> [<method2> ...]	22
aaa authorization exec try-cont <enable disable>	22
active	298
admin-password <password> <confirm-string>	191
admin-username <admin-username> admin-password <pw-string> <confirm-string>	191
adsl_vdslProtocol <0 1>	298
alarm-chan1-profile <channel-alarm-profile-name>	264
alarm-line-profile <line-alarm-profile-name>	264
applicablestandard <2:etsi>	276
arp inspection	28
arp inspection filter-aging-time <1-2147483647>	28
arp inspection filter-aging-time none	28
arp inspection limit rate <0-2048> [burst interval <1-15>]	29
arp inspection limit rate <pps> [burst interval <seconds>]	29
arp inspection log-buffer entries <0-1024>	29
arp inspection log-buffer logs <0-1024> interval <0-86400>	29
arp inspection trust	29
arp inspection vlan <vlan-list>	30
arp inspection vlan <vlan-list> logging [all none permit deny]	30
auto-save config <0, 5-600>	325
auto-save logging <0-72>	325
bandwidth-control	33
bandwidth-limit	33
bandwidth-limit cir <rate>	33
bandwidth-limit egress <rate>	34
bandwidth-limit ingress <rate>	33
bandwidth-limit pir <rate>	34
baudrate <1:38400 2:19200 3:9600 4:57600 5:115200>	322
bcp-transparency	326
bitswap <ds us> <1:on 2:off>	276
bitSwapDs <enable disable>	286
bitSwapUs <enable disable>	286
boot config	322

boot image <1 2>	322
bpdu-control <peer tunnel discard network>	102
broadcast-limit	35
broadcast-limit <pkt/s>	35
cable-diagnostics <port-list>	322
CBS <256~512,000>	150
cfm debug <0:disable 1:enable>	38
cfm domain <domain-name> level <0~7>	38
cfm-action cc level <0~7> vlan <1~4094>	38
cfm-action enable	38
cfm-action linktrace level <0~7> vlan <1~4094> mepid <1~8191> destination <dest-mac- address>	39
cfm-action linktrace level <0~7> vlan <1~4094> mepid <1~8191> target-mepid <1~8191>	39
cfm-action loopback interval <interval>	39
cfm-action loopback level <0~7> vlan <1~4094> mepid <1~8191> destination <dest-mac- address> count <count>	38
cfm-action loopback level <0~7> vlan <1~4094> mepid <1~8191> target-mepid <1~8191> count <count>	38
cfm-action loopback print	38
chan1-profile <channel-profile-name>	281
CIR <64~102,400>	150
classification commit	217
classification status	217
classifier <name> <[packet-format <802.3untag 802.3tag EtherIIuntag EtherIItag>] [priority <0~7>] [vlan <vlan-id>] [ethernet-type <ether- num ip ipv6 ipx arp rarp appletalk decnet sna netbios dlc>] [source-mac <src-mac- addr>] [source-port <port-num>] [destination-mac <dest-mac-addr>] [dscp <0-63>] [ip-protocol <protocol-num tcp udp icmp egp ospf rsvp igmp igp pim ipsec> [establish- only]] [source-ip <src-ip-addr> [mask-bits <mask-bits>]] [ipv6-source-ip <src- ip6-addr> [mask-bits <mask-bits>]] [source-socket <socket-num>] [destination-ip <dest-ip-addr> [mask-bits <mask-bits>]] [ipv6-destination-ip <dest-ip6-addr> [mask-bits <mask-bits>]] [destination-socket <socket-num>] [inactive]>	45
classifier help	46
classMask <998or997-M1c 997-M1x 997-M2x 998-M1x 998-M2x 998ADE-M2x HPE-M1>	286
classMask <a998ORb997M1cORC998B>	286
clear arp inspection filter	28
clear arp inspection log	29
clear arp inspection statistics	28
clear arp inspection statistics vlan <vlan-list>	28
clear cfm mep-counter level <0~7> vlan <1~4094> mepid <1~8191>	39
clear cpu-protection interface port-channel <port-list> cause <ARP BPDU>	75
clear dhcp snooping database statistics	65
clear dhcpv6 relay counter <cr>	69
clear dhcpv6 relay counter <port-list>	69
clear interface <port-number>	102
clear ipv6 mld snooping-proxy statistics all	139
clear ipv6 mld snooping-proxy statistics port	139
clear ipv6 mld snooping-proxy statistics system	139
clear ipv6 mld snooping-proxy statistics vlan	139
clear ipv6 neighbor	135
clear ipv6 neighbor <interface-type> <interface-number>	144
clear ipv6 neighbor <vlan mgmt> <vlan-id mgmt-id>	135
clear l2protocol-tunnel	154
clear lldp remote-info	163
clear lldp remote-info interface port-channel <port-list>	163
clear lldp statistic	163
clear loopguard	166
clear multicast port <port-list>	323
clear multicast port all	323

clear multicast vlan <vid>	323
clear multicast vlan all	323
clear ndp inspection filter	187
clear ndp inspection log	187
clear ndp inspection statistics	187
clear ndp inspection statistics vlan <vlan-list>	188
cluster <vlan-id>	47
cluster member <mac-address> password <password>	47
cluster name <cluster-name>	47
cluster rcommand <mac-address>	47
compatiblemode <1~4>	276
compatibleMode <none adsl2 adsl2+>	287
configure	321
copy logging <level> sftp <ip> <port> <username> <password> <remote-file>	235
copy logging <level> tftp <ip> <remote-file>	235
copy running-config interface port-channel <port> <port-list> [<attribute> [<...>]]	235
copy running-config sftp <ip> <port> <username> <password> <remote-file>	236
copy sftp config <index> <ip> <port> <username> <password> <remote-file>	236
copy sftp flash <ip> <port> <username> <password> <remote-file> [index]	236
correctedThresXtuc <0~4294967295>	265
correctedThresXtur <0~4294967295>	265
cpu-protection cause <ARP BPDU> rate-limit <0-256>	75
cpu-protection cause help	75
cvThresXtuc <0~4294967295>	265
cvThresXtur <0~4294967295>	265
default-management <in-band out-of-band>	325
dhcp dhcp-vlan <vlan-id>	65
dhcp mode <0 1>	53
dhcp relay <vlan-id>	57
dhcp relay <vlan-id> helper-address <remote-dhcp-server1> [<remote-dhcp-server2>]	
[<remote-dhcp-server3>] [circuit-id] [circuitID-type <user-define hostname system>] [circuitID-information <information>] [circuitID-user-define <format>] [remote-id] [remoteID-type <portname system all user-define>] [remoteID-information <information>] [remoteID-user-define <format>] [swap-circuit-remote-id] [spv-option <private sp pv sv spv>] [delimiter <none # ; .comma / space>] [remoteID-delimiter <character>] [linechar-enable] [linechar-mode <rate full>]	
54	
dhcp relay <vlan-id> helper-address <remote-dhcp-server1> [remote-dhcp-server2] [remote-dhcp-server3] [circuit-id] [circuitID-type <hostname system>] [circuitID-information <information>] [remote-id] [remoteID-type <portname system all>] [remoteID-information <information>] [swap-circuit-remote-id] [spv-option <private sp pv sv spv>] [delimiter <none # ; .comma / space>] [remoteID-delimiter <character>]	56
dhcp relay helper-address <remote-dhcp-server1> [<remote-dhcp-server2> [remote-dhcp-server3]]	53
dhcp relay information <string>	57
dhcp relay option	57
dhcp relay-broadcast	58
dhcp server starting-address <ip> <mask> size-of-client-ip-pool <1~253> [default-gateway <ip-address>] [primary-dns <ip-address>] [secondary-dns <ip-address>]	58
dhcp smart-relay	58
dhcp smart-relay circuitID-type <user-define hostname system>	58
dhcp smart-relay circuitID-user-define <format>	59
dhcp smart-relay delim <none # ; .comma / space>	60
dhcp smart-relay helper-address <remote-dhcp-server1> [remote-dhcp-server2] [remote-dhcp-server3]	59
dhcp smart-relay information	59
dhcp smart-relay linechar	59
dhcp smart-relay linechar mode <rate full>	59
dhcp smart-relay option	59

dhcp smart-relay option-information <string>	59
dhcp smart-relay remote-id	59
dhcp smart-relay remoteID-delim <character>	60
dhcp smart-relay remoteID-information <remoteid-information>	60
dhcp smart-relay remoteID-type <portname system all>	60
dhcp smart-relay remoteID-type <portname system all user-define>	60
dhcp smart-relay remoteID-user-define <format>	60
dhcp smart-relay spv-option <private sp pv sv spv>	60
dhcp smart-relay swap-circuit-remote-id	60
dhcp snooping	62
dhcp snooping database <tftp://host/filename>	63
dhcp snooping database timeout <seconds>	63
dhcp snooping database write-delay <seconds>	63
dhcp snooping limit rate <pps>	65
dhcp snooping trust	65
dhcp snooping vlan <vlan-list>	63
dhcp snooping vlan <vlan-list> circuit-id-type <none hostname user-define>	62
dhcp snooping vlan <vlan-list> circuit-id-user-define <format>	63
dhcp snooping vlan <vlan-list> delimiter <none # ; . comma / space>	63
dhcp snooping vlan <vlan-list> information	65
dhcp snooping vlan <vlan-list> linechar	63
dhcp snooping vlan <vlan-list> linechar-mode <rate full>	64
dhcp snooping vlan <vlan-list> option	65
dhcp snooping vlan <vlan-list> remote-id-delim <none # ; . comma / space>	64
dhcp snooping vlan <vlan-list> remote-id-info <remoteid-information>	64
dhcp snooping vlan <vlan-list> remote-id-type <portname system all>	64
dhcp snooping vlan <vlan-list> remote-id-type <portname system all user-define>	64
dhcp snooping vlan <vlan-list> remote-id-user-define <format>	64
dhcp snooping vlan <vlan-list> spv-option <private sp pv sv spv>	65
dhcp-relay <relay agent>	53
dhcp-relay <relay agent>	57
dhcp-relay helper-address <remote-dhcp-server1> [<remote-dhcp-server2> [<remote-dhcp-server3>]]	53
dhcp-relay information	57
dhcp-relay option	57
dhcp-relay remote-id	57
dhcp-relay remoteID-information <remoteid-information>	57
dhcpv6 relay <1-4094>	67
dhcpv6 relay <1-4094> exit	67
dhcpv6 relay <1-4094> ldra	67
dhcpv6 relay <1-4094> ldra client-facing <port-list>	67
dhcpv6 relay <1-4094> ldra forbidden <port-list>	67
dhcpv6 relay <1-4094> ldra network-facing <port-list>	67
dhcpv6 relay <1-4094> ldra untrust client-facing <port-list>	67
dhcpv6 relay <1-4094> no ldra	67
dhcpv6 relay <1-4094> no ldra untrust client-facing	67
dhcpv6 relay <1-4094> no ldra untrust client-facing <port-list>	68
dhcpv6 relay <1-4094> no option	68
dhcpv6 relay <1-4094> no option interface-id	68
dhcpv6 relay <1-4094> no option remote-id	68
dhcpv6 relay <1-4094> option interface-id	68
dhcpv6 relay <1-4094> option interface-id <format>	68
dhcpv6 relay <1-4094> option remote-id	68
dhcpv6 relay <1-4094> option remote-id <format>	69
dhcpv6 snooping	70
diffserv	71
diffserv	71
diffserv dscp <0~63> priority <0~7>	71
disable	321

dlf-limit	35
dlf-limit <pkt/s>	35
DoS-prevention-setting active	72
DoS-prevention-setting ICMP-fragment	72
DoS-prevention-setting IP-address-checking	72
DoS-prevention-setting Mac-address-checking	72
DoS-prevention-setting TCP-control/SN	72
DoS-prevention-setting TCP-FIN/URG/PSH/SN	72
DoS-prevention-setting TCP-fragment	72
DoS-prevention-setting TCP-port	72
DoS-prevention-setting TCP-SYN	72
DoS-prevention-setting TCP-SYN/FIN	72
DoS-prevention-setting UDP-port	72
dpbo <1:enable 2:disable>	276
dpbo <escma escmb escmc> <0~640>	277
dpbo epsd level <break-point> <0~255>	277
dpbo epsd shape <1:CO 2:Flat 3:CAB_ANSI 4:CAB_ETSI 5:EXCH_ANSI 6:EXCH_ETSI 7:custom>	277
dpbo epsd tone <break-point> <0~4096>	277
dpbo esel <0~511>	277
dpbo fmax <32~6956>	277
dpbo fmin <0~2048>	277
dpbo mus <0~255>	277
dpboEPsd <tone-index1> <psd-level> [<tone-index2> <psd-level>] ...	287
dpboESCMA <0~640>	287
dpboESCMB <0~640>	287
dpboESCMC <0~640>	287
dpboEsel <0~511>	287
dpboEselMin <0 - 511>	288
dpboFmax <32~6956>	287
dpboFmin <0~2048>	287
dpboMus <0~255>	287
dpboType <G9971 TCOM>	288
Drop-unknown-multicast	309
dsinterdelay <0~4,8>	277
dspayloadrate max <rate>	277
dspayloadrate min <rate>	277
dynamicDepthUs <enable disable>	288
egress <0~1,000,000>	210
egress active	210
egress set <port-list>	198
egress set <port-list>	307
enable	321
enable <0-14>	321
erase running-config	236
erase running-config ext pwd	236
erase running-config help	236
erase running-config interface port-channel <port-list> [<attribute> [<...>]]	236
errdisable detect cause <ARP BPDU>	75
errdisable detect cause <ARP BPDU> mode <inactive-reason rate-limitation>	75
errdisable detect cause help	75
errdisable recovery	75
errdisable recovery cause <ARP BPDU>	75
errdisable recovery cause <ARP BPDU> interval <30-2592000>	75
errdisable recovery cause help	75
exit	150
exit	150
exit	264
exit	264
exit	266

exit	281
exit	281
exit	284
exit	288
exit	298
exit	321
externalalarm <index> name <string>	83
externalalarm <index> off	83
externalalarm <index> on	83
externalalarm extalarm1 <alarmname_string>	83
externalalarm extalarm2 <alarmname_string>	83
externalalarm extalarm3 <alarmname_string>	83
externalalarm extalarm4 <alarmname_string>	83
fe-iat-offset <3..511>	284
fe-iat-step <0..7>	284
fe-inmcc <0..64>	284
fe-inpEqMode <0..3>	285
fe-spq <Q0~Q7>	326
fixed <port-list>	302
flow-control	103
forbidden <port-list>	302
force-agent-information <force transparent>	65
force-agent-information <force transparent keep drop>	102
frame-type <all tagged untagged>	102
fullinits <0~900>	264
garp join <join-timer> leave <200~65535> leaveall <200~65535>	85
gbond <group-id>	298
ge-spq <q0~q7>	103
Ginp ETRmaxDs <0-100032>	281
Ginp ETRmaxUs <0-100032>	281
Ginp ETRminDs <0-100032>	281
Ginp ETRminUs <0-100032>	281
Ginp INPminDs <0-31>	282
Ginp INPminUs <0-31>	282
Ginp leftrThresholdDs <0-99>	282
Ginp leftrThresholdUs <0-99>	282
Ginp maxDelayDs <1-63>	282
Ginp maxDelayUs <1-63>	282
Ginp minDelayDs <0-63>	282
Ginp minDelayUs <0-63>	282
Ginp NDRmaxDs <424-100032>	282
Ginp NDRmaxUs <424-100032>	282
Ginp reinCfgDs <0-7> <100 120>	282
Ginp reinCfgUs <0-7> <100 120>	282
Ginp rtxModeDs <0 1 2 3>	282
Ginp rtxModeUs <0 1 2 3>	282
Ginp shineRatioDs <0-100>	282
Ginp shineRatioUs <0-100>	283
group <name-str> start-address <ip-address> end-address <ip-address>	185
GroupName <group-name>	298
gvrp	87
hamband <notch1start notch1stop> <0~30000>	277
hamband <notch2start notch2stop> <0~30000>	277
hamband mask <0000000-1111111>	277
hardware-alarm-setting cpu-utilization <percentage>	325
hardware-alarm-setting memory-usage <percentage>	325
hardware-alarm-setting packet-buffer <percentage>	326
hardware-alarm-setting temperature <index> <centigrade>	326
help	302

help	309
help	8
history	8
hostname <hostname>	326
hsTxPsd <value1> <value2>... <value6>	288
https cert-regeneration <rsa dsa>	88
https key-regeneration dh generator <2 5 dsa> length <512 1024 2048>	237
https timeout <0~65535>	88
igmp-filtering	99
igmp-filtering profile <name>	99
igmp-filtering profile <name> start-address <ip-address> end-address <ip-address>	99
igmp-flush	94
igmp-group-limited	96
igmp-group-limited number <0~255>	96
igmp-immediate-leave	96
igmp-msg-limited	96
igmp-msg-limited number <0~255>	96
igmp-proxy	96
igmp-proxy v3mode	96
igmp-querier-mode <auto fixed edge>	97
igmp-snooping	94
igmp-snooping 8021p-priority <0~7>	94
igmp-snooping host-timeout <1-16711450>	94
igmp-snooping leave-timeout <1-16711450>	94
igmp-snooping mld-support	94
igmp-snooping reserve-multicast-frame <drop flooding>	95
igmp-snooping unknown-multicast-frame <drop flooding>	95
igmp-snooping vlan <vlan-id> [name <name>]	95
igmp-snooping vlan mode <auto fixed>	95
inactive	103
inactive	184
inactive	302
ingress <0~1,000,000>	210
ingressC <0~1,000,000>	210
ingressC active	210
ingress-check	101
ingressP <0~1,000,000>	210
ingressP active	210
initFailure <on off>	264
inm-profile <inm-profile-name>	281
interface port-channel <port-list>	101
interface port-channel <port-list>	102
interface port-channel <port-list>	139
interface port-channel <port-list>	154
interface port-channel <port-list>	159
interface port-channel <port-list>	166
interface port-channel <port-list>	171
interface port-channel <port-list>	176
interface port-channel <port-list>	186
interface port-channel <port-list>	198
interface port-channel <port-list>	205
interface port-channel <port-list>	211
interface port-channel <port-list>	261
interface port-channel <port-list>	29
interface port-channel <port-list>	305
interface port-channel <port-list>	312
interface port-channel <port-list>	320
interface port-channel <port-list>	321
interface port-channel <port-list>	33

interface port-channel <port-list>	35
interface port-channel <port-list>	39
interface port-channel <port-list>	65
interface port-channel <port-list>	71
interface port-channel <port-list>	75
interface port-channel <port-list>	87
interface port-channel <port-list>	96
interface port-channel <port-list>	99
interface port-channel <port-list> dhcpv6 snooping limit rate <pps>	70
interface port-channel <port-list> ipqos-profilename <name>	150
interface port-channel <port-list> no dhcpv6 snooping limit rate	70
interface port-channel <port-list> telephone <port-telephone-number>	58
interface vlan <1-4094>	142
interleavedelay ds <0~255>	278
interleavedelay us <0~255>	278
ip address <ip-address> <mask>	111
ip address <ip-address> <mask> [manageable]	302
ip address default-gateway <ip-address>	111
ip address default-gateway <ip-address>	303
ip address default-gateway ipv6 <ipv6-address>	120
ip address inband-default <ip-address> <mask>	303
ip address inband-default dhcp-bootp	303
ip address inband-default dhcp-bootp release	303
ip address inband-default dhcp-bootp renew	303
ip address ipv6 <ipv6-address/maskbits>	120
ip inband address <ip-address> <mask>	110
ip inband client [release renew]	110
ip inband default-gateway <ip-address>	110
ip ipv6 default-gateway <ipv6-address>	120
ip ipv6 inband-default <ipv6-address/maskbits>	121
ip mvid <vlan-id>	111
ip name-server <ip ipv6>	110
ip name-server <ip-address>	111
ip outband address <ip-address> <mask>	111
ip route <ip-address> <mask> <next-hop-ip> [metric <metric>] [name <name>] [inactive]	251
ip source binding <mac-addr> vlan <vlan-id> <ip> [interface port-channel <interface-id>]	152
ippvc interface port-channel <interface-id> vpi <0-255> vci <32-65535> pvid <vlan-id> encaps <llc/vc> priority <0-7> subnet <ip> <mask> default-route <ip> [inactive]	24
ipqos-profile <name>	150
ipv6	134
ipv6 <cr>	132
ipv6 address <ipv6-address>/<prefix-length>	134
ipv6 address <ipv6-address>/<prefix-length> [eui-64]	132
ipv6 address <ipv6-address>/<prefix-length> <cr>	132
ipv6 address <ipv6-address>/<prefix-length> eui-64	134
ipv6 address <ipv6-address>/<prefix-length> link-local	132
ipv6 address <ipv6-address>/<prefix-length> link-local	134
ipv6 address autoconfig	134
ipv6 address autoconfig <cr>	132
ipv6 address default-gateway <gateway-ipv6-address>	134
ipv6 address default-gateway <ipv6-address>	133
ipv6 address dhcp client <ia-na> [rapid-commit]	136
ipv6 address dhcp client information refresh minimum <600-4294967295>	137
ipv6 address dhcp client option <[dns][domain-list]>	137
ipv6 dhcp relay vlan <1-4094> helper-address <remote-dhcp-server>	137
ipv6 dhcp relay vlan <1-4094> option interface-id	137
ipv6 dhcp relay vlan <1-4094> option remote-id <remote-id>	137

ipv6 disable <cr>	133
ipv6 disable <cr>	134
ipv6 global default-management <interface-name>	133
ipv6 hop-limit <1-255>	144
ipv6 icmp error-interval <0-2147483647> [bucket-size <1-200>]	138
ipv6 mld snooping-proxy	139
ipv6 mld snooping-proxy 8021p-priority <0-7>	139
ipv6 mld snooping-proxy filtering	139
ipv6 mld snooping-proxy filtering group-limited	139
ipv6 mld snooping-proxy filtering group-limited number <number>	139
ipv6 mld snooping-proxy filtering profile <name>	139
ipv6 mld snooping-proxy filtering profile <name> start-address <ip> end-address <ip>	139
ipv6 mld snooping-proxy vlan <vlan-id>	139
ipv6 mld snooping-proxy vlan <vlan-id> downstream interface port-channel <port-list>	139
ipv6 mld snooping-proxy vlan <vlan-id> downstream interface port-channel <port-list> fast-leave-timeout <2-16775168>	139
ipv6 mld snooping-proxy vlan <vlan-id> downstream interface port-channel <port-list> leave-timeout <2-16775168>	140
ipv6 mld snooping-proxy vlan <vlan-id> downstream interface port-channel <port-list> mode <immediate normal fast>	140
ipv6 mld snooping-proxy vlan <vlan-id> downstream query-interval <1000-31744000>	140
ipv6 mld snooping-proxy vlan <vlan-id> downstream query-max-response-time <1000-25000>	140
ipv6 mld snooping-proxy vlan <vlan-id> upstream interface port-channel <port-list>	140
ipv6 mld snooping-proxy vlan <vlan-id> upstream last-listener-query-interval <1-8387584>	140
ipv6 mld snooping-proxy vlan <vlan-id> upstream query-interval <1000-31744000>	140
ipv6 mld snooping-proxy vlan <vlan-id> upstream query-max-response-time <1000-25000>	141
ipv6 mld snooping-proxy vlan <vlan-id> upstream robustness-variable <1-25>	141
ipv6 nd dad-attempts <0-600>	133
ipv6 nd dad-attempts <0-600>	134
ipv6 nd ns-interval <1000-3600000>	133
ipv6 nd ns-interval <1000-3600000>	134
ipv6 nd reachable-time <1000-2147483647>	133
ipv6 nd reachable-time <1000-2147483647>	134
ipv6 neighbor <interface-type> <interface-number> <ipv6-address> <mac-address>	144
ipv6 neighbor <vlan mgmt> <vlan-id mgmt-id> <ipv6-address> <mac-address>	133
ipv6 route <ipv6-prefix>/<prefix-length> <next-hop>	144
ipv6 route <ipv6-prefix>/<prefix-length> <next-hop> <interface-type> <interface-number>	144
ipv6 source binding <mac-addr> vlan <vlan-id> <ipv6-addr> <ipv6-addr>/<prefix-length>	152
ipv6 source binding <mac-addr> vlan <vlan-id> <ipv6-addr> <ipv6-addr>/<prefix-length> interface port-channel <interface-id>	152
isolation	302
kick tcp <session-id>	111
l2protocol-tunnel	154
l2protocol-tunnel	155
l2protocol-tunnel cdp	154
l2protocol-tunnel mac <mac-addr>	155
l2protocol-tunnel mode <access tunnel>	154
l2protocol-tunnel point-to-point	154
l2protocol-tunnel point-to-point lacp	154
l2protocol-tunnel point-to-point pagp	154
l2protocol-tunnel point-to-point udld	155
l2protocol-tunnel stp	155
l2protocol-tunnel vtp	155
lacp	157
lacp daisy-chain	157
lacp port-selection <1:SA 2:DA 3:SA+DA 4:SIP 5:DIP 6:SIP+DIP>	157
lacp system-priority <1-65535>	157
lan-setting commit	217

lan-setting DHCP disable	217
lan-setting DHCP enable <start-ip> <end-ip> <mask>	217
lan-setting DHCP relay ip <ip-address>	217
lan-setting ip <ip-address> <mask>	217
lan-setting status	218
layer2-setting bcaststorm <0 1 2 3>	218
layer2-setting commit	218
layer2-setting igmp-snooping <enable disable>	218
layer2-setting status	218
layer2-setting unknown-mcast <0 1>	218
layer2-setting vlan-type <802.1q port-based>	218
LeftrsThresXtuc <0-900>	265
LeftrsThresXtur <0-900>	266
level <0~7> vlan <1~4094>	38
limitMAC <1~16384>	311
limitMAC <numbers>	302
limitMask <d32 d48 d64 d128 b7-1 .. b7-10 b8-1 .. b8-16>	288
limitMask <d32 d48 d64 d128 b7-1 ... b7-10 b8-1 ... b8-12>	288
limitMaskGvector <enable disable>	288
limitpsdmask <psdmask-id>	278
line-profile <line-profile-name>	281
LineTemplate <template-name>	298
LineTemplate_2 <template-name>	298
LineTemplateMode <0 1>	298
lldp	162
lldp admin-status <disabled tx-only rx-only tx-rx>	159
lldp basic-tlv management-address	159
lldp basic-tlv port-description	159
lldp basic-tlv system-capabilities	160
lldp basic-tlv system-description	160
lldp basic-tlv system-name	160
lldp med location civic [country <country>]	
[state <state>]	
[county <county>]	
[city <city>]	
[division <division>]	
[neighbor <neighbor>]	
[street <street>]	
[leading-street-direction <value>]	
[trailing-street-suffix <value>]	
[street-suffix <value>]	
[house-number <num>]	
[house-number-suffix <value>]	
[landmark <landmark>]	
[additional-location <value>]	
[name <value>]	
[zip-code <value>]	
[building <value>]	
[unit <value>]	
[floor <value>]	
[room-number <value>]	
[place-type <value>]	
[postal-community-name <value>]	
[post-office-box <value>]	
[additional-code <value>]	160
lldp med location coordinate [latitude <north south> <value>]	
[longitude <west east> <value>]	
[altitude <meters floor> <value>]	
[datum <WGS84 NAD83-NAVD88 NAD83-MLLW>]	161

lldp med location elin <number>	161
lldp med network-policy <voice voice-signaling guest-voice guest-voice-signaling softphone-voice video-conferencing streaming-video video-signaling> [tagged untagged] [vlan <vlan-id>] [priority <priority>] [dscp <dscp>]	161
lldp med topology-change-notification	161
lldp notification	159
lldp org-specific-tlv dot1 port-protocol-vlan-id	160
lldp org-specific-tlv dot1 port-vlan-id	160
lldp org-specific-tlv dot3 link-aggregation	160
lldp org-specific-tlv dot3 mac-phy	160
lldp org-specific-tlv dot3 max-frame-size	160
lldp org-specific-tlv med location	160
lldp org-specific-tlv med network-policy	161
lldp reinitialize-delay <seconds>	162
lldp transmit-delay <seconds>	162
lldp transmit-hold <value>	163
lldp transmit-interval <seconds>	163
loginMessage <string>	326
loginPrecedence <LocalOnly LocalRADIUS RADIUSOnly>	165
logins username <name> password <pwd>	164
logins username <name> password <pwd> index <1~4>	164
logins username <name> privilege <0~14>	164
logout	298
logout	321
loopback count <count> size <size>	219
loopguard	166
loopguard	166
loopguard mode <fix dynamic>	166
loopguard recover-time <60~600>	166
mac-aging-time <10~3000>	168
mac-authentication	170
mac-authentication	171
mac-authentication nameprefix <name-string>	170
mac-authentication password <name-string>	170
mac-authentication timeout <1~3000>	170
mac-based-vlan name <name> mac-address <mac-address> vlan <vid> priority <0~7>	172
mac-based-vlan name <name> mac-address <mac-address> vlan <vid> priority <0~7> inactive	172
mac-filter name <name> mac <mac-addr> vlan <vlan-id> drop <src dst both>	174
mac-filter name <name> mac <mac-addr> vlan <vlan-id> drop <src dst both> inactive	174
mac-flush [port-num]	168
mac-forward name <name> mac <mac-addr> vlan <vlan-id> interface <interface-id>	175
mac-forward name <name> mac <mac-addr> vlan <vlan-id> interface <interface-id> inactive	175
mac-learning	309
maxAggRxPwrUs <-255~255 disable>	288
maxDelayDs <0~63>	283
maxDelayUs <0~63>	283
maxNomAtpDs <0~255>	289
maxNomAtpUs <0~255>	289
maxpower ds <range>	278
maxpower us <range>	278
maxRateDs <64~100032>	283
maxRateUs <64~100032>	283
maxSnrmDs <0~310 disable>	289
maxSnrmUs <0~310 disable>	289
mibPsdMaskDs <tone-index1> <psd-level> [<tone-index2> <psd-level>]	289
mibPsdMaskUs <tone-index1> <psd-level> [<tone-index2> <psd-level>]	289
minINP <ds us> <5~160>	278

minInp8Ds <0..16>	283
minInp8Us <0..16>	283
minInpDs <0 0.5 1~16>	283
minInpUs <0 0.5 1~16>	283
minRateDs <64~100032>	283
minRateUs <64~100032>	283
minSnrmDs <0~310>	289
minSnrmUs <0~310>	289
mirror	176
mirror dir <ingress egress both>	176
mirror-port	176
mirror-port <port-num>	176
mirror-port rspan-vid <vid>	176
mnt clear-counter	219
mnt commit	219
mnt console active	219
mnt console admin <password>	219
mnt console user <password>	219
mnt load-default	219
mnt reinit	219
mnt reset	219
mnt status	219
mode <dynamic compatible>	184
mode zynos	321
mrstp <tree-index>	177
mrstp <tree-index> hello-time <1~10> maximum-age <6~40> forward-delay <4~30>	177
mrstp <tree-index> priority < 0 4096 8192 12288 16384 20480 24576 28672 32768 36864 40960 45056 49152 53248 57344 61440>	177
mrstp interface <port-list>	177
mrstp interface <port-list> path-cost <1~65535>	177
mrstp interface <port-list> priority <0~255>	178
mrstp interface <port-list> tree-index <1~2>	178
msgMinDs <4~248>	289
msgMinUs <4~248>	289
mstp	179
mstp configuration-name <name>	179
mstp hello-time <1-10> maximum-age <6-40> forward-delay <4-30>	179
mstp instance <0~16> interface port-channel <port-list>	180
mstp instance <0~16> interface port-channel <port-list> path-cost <1~65535>	180
mstp instance <0~16> interface port-channel <port-list> priority <1~255>	180
mstp instance <0~16> priority < 0 4096 8192 12288 16384 20480 24576 28672 32768 36864 40960 45056 49152 53248 57344 61440>	179
mstp instance <0~16> vlan <vlan-list>	180
mstp max-hop <1~255>	179
mstp revision <0~65535>	179
multicast-forward name <name> mac <mac-address> vlan <vlan-id> interface port-channel <port-list>	249
multicast-forward name <name> mac <multicast-mac-address> vlan <vlan-id> inactive	249
multicast-limit	35
multicast-limit <pkt/s>	36
multi-login	183
mvr <vlan-id>	184
mvr <vlan-id>	321
mvr behavior <0:IGMP Snooping 1:IGMP Proxy>	184
name <name-str>	184
name <name-str>	302
name <port-name-string>	103
ndp inspection	187
ndp inspection filter-aging-time <1-2147483647>	187

ndp inspection filter-aging-time none	187
ndp inspection limit rate <0-2048> [burst interval <1-15>]	187
ndp inspection log-buffer entries <0-1024>	187
ndp inspection log-buffer logs <0-1024> [interval <0-86400>]	187
ndp inspection trust	186
ndp inspection vlan <vlan-list>	187
ndp inspection vlan <vlan-list> logging [all none permit deny]	187
ne-iat-offset <3..511>	285
ne-iat-step <0..7>	285
ne-inmcc <0..64>	285
ne-inpEqMode <0..3>	285
ne-isdd-sensitivityDB <-12.8 ~ 12.7>	286
no aaa accounting commands	22
no aaa accounting dot1x	22
no aaa accounting exec	22
no aaa accounting system	22
no aaa accounting update	21
no aaa authentication enable	21
no aaa authentication login	21
no aaa authorization exec	22
no active	298
no arp	27
no arp inspection	28
no arp inspection filter <mac-addr> vlan <vlan-id>	28
no arp inspection filter-aging-time	28
no arp inspection limit	29
no arp inspection log-buffer entries	29
no arp inspection log-buffer logs	29
no arp inspection trust	29
no arp inspection vlan <vlan-list>	30
no arp inspection vlan <vlan-list> logging	30
no bandwidth-control	33
no bandwidth-limit	33
no bcp-transparency	326
no broadcast-limit	35
no cfm domain <domain-name all>	39
no cfm-action cc level <0-7> vlan <1-4094>	39
no cfm-action enable	39
no cfm-action loopback level <0-7> vlan <1-4094> mepid <mepid>	39
no cfm-action loopback print	39
no classifier <name>	45
no classifier <name>	47
no classifier <name> inactive	46
no cluster	47
no cluster member <mac-address>	47
no dhcp dhcp-vlan	65
no dhcp relay	57
no dhcp relay <vlan-id>	57
no dhcp relay <vlan-id> information	58
no dhcp relay <vlan-id> option	58
no dhcp relay <vlan-id> remote-id	58
no dhcp relay <vlan-id> swap-circuit-remote-id	57
no dhcp relay information	57
no dhcp relay option	57
no dhcp relay-broadcast	58
no dhcp server	58
no dhcp server default-gateway	58
no dhcp server primary-dns	58
no dhcp server secondary-dns	58

no dhcp smart-relay	58
no dhcp smart-relay information	59
no dhcp smart-relay linechar	59
no dhcp smart-relay option	59
no dhcp smart-relay remote-id	60
no dhcp smart-relay swap-circuit-remote-id	60
no dhcp snooping	62
no dhcp snooping database	63
no dhcp snooping database timeout	63
no dhcp snooping database write-delay <seconds>	63
no dhcp snooping limit rate	65
no dhcp snooping trust	65
no dhcp snooping vlan <vlan-list>	63
no dhcp snooping vlan <vlan-list> circuit-id-type	62
no dhcp snooping vlan <vlan-list> circuit-id-user-define	63
no dhcp snooping vlan <vlan-list> delimiter	63
no dhcp snooping vlan <vlan-list> information	65
no dhcp snooping vlan <vlan-list> linechar	63
no dhcp snooping vlan <vlan-list> option	65
no dhcp snooping vlan <vlan-list> remote-id-delim	64
no dhcp snooping vlan <vlan-list> remote-id-info	64
no dhcp snooping vlan <vlan-list> remote-id-type	64
no dhcp snooping vlan <vlan-list> remote-id-user-define	64
no dhcp snooping vlan <vlan-list> spv-option	65
no dhcp-relay	57
no dhcp-relay helper-address	57
no dhcp-relay information	57
no dhcp-relay option	57
no dhcp-relay remote-id	57
no dhcpv6 relay <1-4094>	67
no dhcpv6 snooping	70
no diffserv	71
no diffserv	71
no dlf-limit	35
no DoS-prevention-setting	72
no DoS-prevention-setting active	72
no DoS-prevention-setting ICMP-fragment	72
no DoS-prevention-setting IP-address-checking	72
no DoS-prevention-setting Mac-address-checking	72
no DoS-prevention-setting TCP-control/SN	73
no DoS-prevention-setting TCP-FIN/URG/PSH/SN	73
no DoS-prevention-setting TCP-fragment	73
no DoS-prevention-setting TCP-port	73
no DoS-prevention-setting TCP-SYN	73
no DoS-prevention-setting TCP-SYN/FIN	73
no DoS-prevention-setting UDP-port	73
no Drop-unknown-multicast	309
no egress	211
no egress set <port-list>	198
no egress set <port-list>	307
no errdisable detect cause <ARP BPDU >	76
no errdisable recovery	76
no errdisable recovery cause <ARP BPDU >	76
no ethernet oam	78
no externalalarm <index> name	83
no externalalarm <index> switch	83
no externalalarm extalarm1	83
no externalalarm extalarm2	83
no externalalarm extalarm3	83

no externalalarm extalarm4	83
no fe-spq	326
no fixed <port-list>	302
no flow-control	103
no forbidden <port-list>	302
no gbond <group-id>	298
no gbond all	298
no ge-spq	103
no group	185
no group <name-str>	185
no gvrp	87
no hardware-alarm-setting cpu-utilization	325
no hardware-alarm-setting memory-usage	326
no hardware-alarm-setting packet-buffer	326
no hardware-alarm-setting temperature <index>	326
no https timeout	335
no https timeout	88
no igmp-filtering	99
no igmp-filtering profile	99
no igmp-filtering profile <name>	99
no igmp-filtering profile <name> start-address <ip-address> end-address <ip-address>	99
no igmp-group-limited	96
no igmp-immediate-leave	96
no igmp-msg-limited	97
no igmp-proxy	96
no igmp-proxy v3mode	96
no igmp-snooping	94
no igmp-snooping 8021p-priority	94
no igmp-snooping mld-support	94
no igmp-snooping vlan <vlan-id>	95
no inactive	103
no inactive	184
no inactive	302
no ingressC	211
no ingress-check	101
no ingressP	211
no interface <port-number>	102
no ip	110
no ip address <ip-address> <mask>	303
no ip address default-gateway	303
no ip address inband-default dhcp-bootp	303
no ip inband	110
no ip inband	335
no ip name-server	110
no ip outband	111
no ip outband	335
no ip route <ip-address> <mask>	251
no ip route <ip-address> <mask> inactive	251
no ip source binding <mac-addr> vlan <vlan-id>	152
no ipsvc interface port-channel <interface-id> vpi <0-255> vci <32-65535> <cr>	24
no ipsvc interface port-channel <interface-id> vpi <0-255> vci <32-65535> inactive	24
no ipqos-profile <name>	150
no ipv6 <cr>	133
no ipv6 <cr>	134
no ipv6 address <ipv6-address>/<prefix-length> <cr>	133
no ipv6 address <ipv6-address>/<prefix-length> <cr>	135
no ipv6 address <ipv6-address>/<prefix-length> eui-64	133
no ipv6 address <ipv6-address>/<prefix-length> eui-64	135
no ipv6 address <ipv6-address>/<prefix-length> link-local	133

no ipv6 address <ipv6-address>/<prefix-length> link-local	135
no ipv6 address autoconfig <cr>	133
no ipv6 address autoconfig <cr>	135
no ipv6 address default-gateway <cr>	133
no ipv6 address default-gateway <cr>	135
no ipv6 address dhcp client [rapid-commit]	136
no ipv6 address dhcp client option <[dns][domain-list]>	137
no ipv6 dhcp relay vlan <1-4094>	137
no ipv6 dhcp relay vlan <1-4094> option interface-id	137
no ipv6 dhcp relay vlan <1-4094> option remote-id	137
no ipv6 dhcp6 relay vlan <1-4094>	137
no ipv6 dhcp6 relay vlan <1-4094> option interface-id	137
no ipv6 dhcp6 relay vlan <1-4094> option remote-id	137
no ipv6 disable	133
no ipv6 disable	135
no ipv6 hop-limit	144
no ipv6 in-band	121
no ipv6 mld snooping-proxy	141
no ipv6 mld snooping-proxy filtering	141
no ipv6 mld snooping-proxy filtering group-limited	139
no ipv6 mld snooping-proxy filtering profile	139
no ipv6 mld snooping-proxy filtering profile <name>	141
no ipv6 mld snooping-proxy filtering profile <name> start-address <ip> end-address <ip>	141
no ipv6 mld snooping-proxy vlan <vlan-id>	141
no ipv6 mld snooping-proxy vlan <vlan-id> downstream interface port-channel <port-list>	141
no ipv6 mld snooping-proxy vlan <vlan-id> upstream interface port-channel <port-list>	141
no ipv6 nd dad-attempts	133
no ipv6 nd dad-attempts	135
no ipv6 nd ns-interval	133
no ipv6 nd ns-interval	135
no ipv6 nd reachable-time	134
no ipv6 nd reachable-time	135
no ipv6 neighbor <interface-type> <interface-number> <ipv6-address>	144
no ipv6 neighbor <vlan mgmt> <vlan-id mgmt-id> <ipv6-address>	134
no ipv6 out-of-band	121
no ipv6 route <ipv6-prefix>/<prefix-length>	144
no ipv6 source binding <mac-addr> vlan <vlan-id>	152
no isolation	302
no l2protocol-tunnel	155
no l2protocol-tunnel	155
no l2protocol-tunnel cdp	155
no l2protocol-tunnel point-to-point	155
no l2protocol-tunnel point-to-point lacp	155
no l2protocol-tunnel point-to-point pagp	155
no l2protocol-tunnel point-to-point udld	155
no l2protocol-tunnel stp	155
no l2protocol-tunnel vtp	155
no lacp	157
no lacp daisy-chain	157
no lldp	162
no lldp admin-status	161
no lldp basic-tlv management-address	161
no lldp basic-tlv port-description	161
no lldp basic-tlv system-capabilities	161
no lldp basic-tlv system-description	161
no lldp basic-tlv system-name	161

no lldp med location <civic coordinate elin>	161
no lldp med location	161
no lldp med network-policy	161
no lldp med network-policy <voice voice-signaling guest-voice guest-voice-signaling softphone-voice video-conferencing streaming-video video-signaling>	162
no lldp med topology-change-notification	162
no lldp notification	161
no lldp org-specific-tlv dot1 port-protocol-vlan-id	162
no lldp org-specific-tlv dot1 port-vlan-id	162
no lldp org-specific-tlv dot3 link-aggregation	162
no lldp org-specific-tlv dot3 mac-phy	162
no lldp org-specific-tlv dot3 max-frame-size	162
no lldp org-specific-tlv med location	162
no lldp org-specific-tlv med network-policy	162
no loginMessage	326
no logins username <name>	164
no loopguard	166
no loopguard	166
no loopguard recover-time	166
no mac-authentication	170
no mac-authentication	171
no mac-authentication timeout	171
no mac-based-vlan all	172
no mac-based-vlan mac-address <mac-address>	172
no mac-filter mac <mac-addr> vlan <vlan-id>	174
no mac-filter mac <mac-addr> vlan <vlan-id> inactive	174
no mac-forward mac <mac-addr> vlan <vlan-id> interface <interface-id>	175
no mac-forward mac <mac-addr> vlan <vlan-id> interface <interface-id> inactive	175
no mac-learning	309
no mirror	176
no mirror	176
no mirror-port	176
no mrstp <tree-index>	178
no mrstp interface <port-list>	178
no mstp	179
no mstp instance <0~16>	179
no mstp instance <0~16> interface port-channel <port-list>	180
no mstp instance <0~16> vlan <1-4094>	180
no multicast-forward mac <mac-address> vlan <vlan-id>	249
no multicast-forward mac <mac-address> vlan <vlan-id> inactive	249
no multicast-limit	36
no multi-login	183
no mvr <vlan-id>	185
no ndp inspection	186
no ndp inspection filter <mac-addr> vlan <vlan-id>	188
no ndp inspection filter-aging-time	186
no ndp inspection limit	187
no ndp inspection log-buffer entries	186
no ndp inspection log-buffer logs	186
no ndp inspection trust	187
no ndp inspection vlan <vlan-list>	186
no ndp inspection vlan <vlan-list> logging	186
no packet-filter interface port-channel <interface-id> vpi <0-255> vci <32-65535>	190
no paepvc interface port-channel <interface-id> vpi <0-255> vci <32-65535> <cr>	25
no paepvc interface port-channel <interface-id> vpi <0-255> vci <32-65535> inactive	25
no password privilege <0~14>	191
no policy <name>	194
no policy <name> inactive	195
no port-access-authenticator	91

no port-access-authenticator <port-list>	91
no port-access-authenticator <port-list> reauthenticate	91
no port-security	196
no port-security <port-list>	196
no port-security <port-list> learn inactive	196
no port-security <port-list> spoofing	196
no pppoe+	200
no pppoe+ circuit-id	200
no pppoe+ circuitID-type	200
no pppoe+ circuitID-user-define	200
no pppoe+ linechar	200
no pppoe+ remote-id	201
no pppoe+ remoteID-type	201
no pppoe+ remoteID-user-define	201
no pppoe+ vlan <vlan-id>	202
no pppoe+ vlan <vlan-id> circuit-id	202
no pppoe+ vlan <vlan-id> circuitID-type	202
no pppoe+ vlan <vlan-id> circuitID-user-define	202
no pppoe+ vlan <vlan-id> linechar	202
no pppoe+ vlan <vlan-id> remote-id	203
no pppoe+ vlan <vlan-id> remoteID-type	203
no pppoe+ vlan <vlan-id> remoteID-user-define	203
no protocol-based-vlan ethernet-type <ethernet-type>	206
no protocol-based-vlan packet-format <EtherII SNAP LLC> ethernet-type <ethernet-type> ..	206
no protovlan	302
no pvc interface port-channel <interface-id> vpi <0-255> vci <32-65535> <cr>	26
no pvc interface port-channel <interface-id> vpi <0-255> vci <32-65535> inactive	26
no radius-accounting <index>	209
no radius-server	335
no radius-server <index>	208
no ratelimit-profile <profile-name>	211
no ratelimit-profile <profile-name>	212
no ratelimit-profile per-queue <profile-name>	211
no ratelimit-profile per-queue <profile-name>	212
no ratelimit-profile per-queue all	212
no receiver-port <port-list>	184
no remote-management <index>	233
no remote-management <index> service [<telnet>] [ftp] [http] [icmp] [snmp] [ssh] [https]>	233
no remote-management ALL	233
no service <ma-name>	38
no service-control ftp	237
no service-control http	237
no service-control https	237
no service-control icmp	237
no service-control snmp	237
no service-control ssh	238
no service-control telnet	238
no sfp <port-number>	240
no sfp <port-number> rx-power	241
no sfp <port-number> temperature	241
no sfp <port-number> tx-bias	241
no sfp <port-number> tx-power	241
no sfp <port-number> voltage	241
no sfp user-input-enable	240
no snmp-server trap-destination <ip-address>	244
no snmp-server trap-destination <ip-address> enable traps	244
no snmp-server trap-destination <ip-address> enable traps aaa	244
no snmp-server trap-destination <ip-address> enable traps aaa <options>	245

no snmp-server trap-destination <ip-address> enable traps authentication	244
no snmp-server trap-destination <ip-address> enable traps authentication <options>	245
no snmp-server trap-destination <ip-address> enable traps interface	245
no snmp-server trap-destination <ip-address> enable traps interface <options>	245
no snmp-server trap-destination <ip-address> enable traps ip	245
no snmp-server trap-destination <ip-address> enable traps ip <options>	245
no snmp-server trap-destination <ip-address> enable traps switch	245
no snmp-server trap-destination <ip-address> enable traps switch <options>	245
no snmp-server trap-destination <ip-address> enable traps system	245
no snmp-server trap-destination <ip-address> enable traps system <options>	246
no snmp-server trap-destination <ip-address> enable traps vdsl	246
no snmp-server trap-destination <ip-address> enable traps vdsl <options>	246
no source-port <port-list>	184
no spanning-tree	253
no spanning-tree <port-list>	253
no ssh key <rsal rsa dsa>	247
no ssh known-hosts <host-ip>	247
no ssh known-hosts <host-ip> <1024 ssh-rsa ssh-dsa>	247
no storm-control	35
no storm-limit	35
no subnet-based-vlan	257
no subnet-based-vlan dhcp-vlan-override	257
no subnet-based-vlan ipv6 source-ip <ipv6-address> mask-bits <mask-bits>	257
no subnet-based-vlan source-ip <ip> mask-bits <mask-bits>	257
no syslog	258
no syslog server <ip-address>	258
no syslog server <ip-address> inactive	258
no syslog type <type>	258
no tacacs-accounting <index>	259
no tacacs-server <index>	259
no tagged <port-list>	185
no time daylight-saving-time	51
no timesync	51
no trtcm	261
no trtcm	261
no trtcm-profile <name>	150
no trunk <T1 T2>	260
no trunk <T1 T2> interface <port-list>	260
no trunk <T1 T2> lacp	260
no unknown-multicast flooding	309
no untagged <port-list>	302
no vdsl-alarmprofile <profile-name>	264
no vdsl-alarm-template <template-name>	264
no vdsl-chan-alarm-profile <profile-name>	266
no vdsl-chan-profile <profile-name>	284
no vdsl-inm-profile <profile-name>	286
no vdsl-line-alarm-profile <profile-name>	265
no vdsl-line-profile <profile-name>	293
no vdsl-line-template <template-name>	281
no vdsl-profile <profile-name>	276
no vdsl-psd profile <name>	280
no vdsl-psd profile <profile-name> physide <1 2> frequency <0~3000>	281
no vlan <vlan-id>	303
no vlanlq commit	223
no vlanlq gvrp	87
no vlanlq port-isolation	307
no vlanlq vid <1~4094>	223
no vlan-mapping	305
no vlan-mapping interface port-channel <port> vlan <1-4094>	305

no vlan-mapping interface port-channel <port> vlan <1-4094> inactive	305
no vlan-profile <name-str>	309
no vlan-profile all	309
no vlan-security	311
no vlan-stacking	313
no vlan-stacking selective-qinq interface port-channel <port> cvid <vlan-id>	313
no vlan-stacking selective-qinq interface port-channel <port> cvid <vlan-id> inactive	313
no vlan-translation <port-num>	317
no vlan-translation <port-num> <seq-num>	317
no vlan-trunking	320
no wfq fe-spg	327
normal <port-list>	302
optusage <1~2>	278
packet-filter interface port-channel <interface-id> vpi <0-255> vci <32-65535> accept-all	189
packet-filter interface port-channel <interface-id> vpi <0-255> vci <32-65535> accept-all inactive	189
packet-filter interface port-channel <interface-id> vpi <0-255> vci <32-65535> custom <[pppoe] [ip] [arp] [dhcp] [netbios] [eapol] [igmp] [inactive]>	190
packet-filter interface port-channel <interface-id> vpi <0-255> vci <32-65535> pppoe-only	189
packet-filter interface port-channel <interface-id> vpi <0-255> vci <32-65535> pppoe-only inactive	189
paepvc interface port-channel <interface-id> vpi <0-255> vci <32-65535> pvid <vlan-id> encap <llc/vc> priority <0-7> [inactive]	25
password <password>	191
password <password> privilege <0-14>	191
payloadrate <maxds maxss maxus minus> <64~110000>	278
payloadrate <maxdsfast maxdsslow> <64~104960>	278
payloadrate <maxusfast maxusslow> <64~104960>	278
payloadrate <mindsfast mindsslow> <64~104960>	278
payloadrate <minusfast minusslow> <64~104960>	279
pbo uscontrol <1~3>	279
pbo uslevel <0~120>	279
PBS <256~512,000>	151
phyR <1:enable 2:disable>	279
phyRDs <disable enable auto>	283
phyRUs <disable enable auto>	283
ping <ip host-name> [in-band out-of-band vlan <vlan-id>] [size <0-1472>] [-t]	322
ping6 <ipv6-addr> [-i <vlan mgmt> <vlan-id mgmt-id>][...]	322
ping6 <ipv6-addr> <cr>	322
ping6 <ipv6-address> <[-i <interface-type> <interface-number>] [-t] [-l <1-1452>] [-n <1-65535>] [-s <ipv6-address>]	138
ping6 <ipv6-address> vlan <1-4094> [-t] [size <1-1452>] [count <1~65535>]	138
ping6 <ipv6-address/host-name> <[-i <vlan mgmt> <vlan id mgmt id>] [-t] [-l <1-1452>] [-n <1-65535>] [-s <ipv6-address>]	322
ping6 help	322
PIR <64~102,400>	151
pmMode <allowTransitionsToIdle notAllowTransitionsToIdle>	289
policy <name> classifier <classifier-list> <[vlan <vlan-id>] [egress-port <port-num>] [priority <0~7>] [dscp <0-63>] [tos <0~7>] [bandwidth <1-1023>] [outgoing-packet-format <tagged untagged>] [out-of-profile-dscp <0-63>] [forward-action <drop forward>] [queue-action <prio-set prio-queue prio-replace-tos>] [diffserv-action <diff-set-tos diff-replace-priority diff-set-dscp>] [outgoing-mirror] [outgoing-eport] [outgoing-non-unicast-eport] [outgoing-set-vlan] [metering] [out-of-profile-action <[change-dscp] [drop] [forward] [set-drop-prec]>] [inactive]>	194
policy <name> inactive	194
policy help	195
port-access-authenticator	91

port-access-authenticator <port-list>	91
port-access-authenticator <port-list> reauthenticate	91
port-access-authenticator <port-list> reauth-period <1-65535>	91
port-based commit	220
port-based port-index <1-4> member <port-list>	220
port-based status	220
port-config <index> adminstate <up down>	220
port-config <index> defpri <0~7>	220
port-config <index> flowctrl <enable disable>	220
port-config <index> pvid <1~4094>	220
port-config <index> speed <auto 10H 10F 100H 100F>	220
port-config commit	221
port-config status	221
PortList <port-list>	298
port-security	196
port-security <port-list>	196
port-security <port-list> address-limit <number>	196
port-security <port-list> learn inactive	196
port-security <port-list> MAC-freeze	196
port-security <port-list> spoofing <cr>	196
pppoe+ [circuit-id]	199
pppoe+ circuitID-information <string>	199
pppoe+ circuitID-type <user-define system hostname>	199
pppoe+ circuitID-user-define <format>	200
pppoe+ delim <none # ; . comma / space>	200
pppoe+ linechar	200
pppoe+ linechar mode <rate full>	200
pppoe+ remote-id	200
pppoe+ remoteID-delimiter <character>	200
pppoe+ remoteID-information <string>	200
pppoe+ remoteID-type <system port all>	200
pppoe+ remoteID-type <system port all user-define>	201
pppoe+ remoteID-user-define <format>	201
pppoe+ spv-option <private sp pv sv spv>	201
pppoe+ vlan <vlan-id> [circuit-id]	201
pppoe+ vlan <vlan-id> circuitID-information <string>	201
pppoe+ vlan <vlan-id> circuitID-type <user-define system hostname>	202
pppoe+ vlan <vlan-id> circuitID-user-define <string>	202
pppoe+ vlan <vlan-id> delim <none # ; . comma / space>	202
pppoe+ vlan <vlan-id> linechar	202
pppoe+ vlan <vlan-id> linechar mode <rate full>	202
pppoe+ vlan <vlan-id> remote-id	202
pppoe+ vlan <vlan-id> remoteID-delimiter <character>	202
pppoe+ vlan <vlan-id> remoteID-information <string>	202
pppoe+ vlan <vlan-id> remoteID-type <system port all>	203
pppoe+ vlan <vlan-id> remoteID-type <system port all user-define>	203
pppoe+ vlan <vlan-id> remoteID-user-define <string>	203
pppoe+ vlan <vlan-id> spv-option <private sp pv sv spv>	203
profile <name-str>	309
protocol-based-vlan name <name> ethernet-type <ethernet-type> vlan <vlan-id>	205
protocol-based-vlan name <name> ethernet-type <ethernet-type> vlan <vlan-id> inactive	206
protocol-based-vlan name <name> packet-format <EtherII SNAP LLC> ethernet-type <ethernet-type> vlan <vlan-id> priority <0~7>	206
protocol-based-vlan name <name> packet-format <EtherII SNAP LLC> ethernet-type <ethernet-type> vlan <vlan-id> priority <0~7> inactive	206
protocol-stack <ipv4-only ipv6-only dual-stack>	321
protovlan	302
psdtemplate ds <1~2>	279
psdtemplate us <1~2>	279

pvc interface port-channel <interface-id> vpi <0-255> vci <32-65535> pvid <vlan-id> encap <llc/vc> priority <0-7> <fcs/no-fcs> mvlan <enable/disable> [inactive]	26
pvid <1~4094>	103
qos priority <0-7>	103
queue level <0-7> priority <0-7>	326
queue priority <0-7> level <0-7>	326
queue0-cir <0~1,000,000>	211
queue0-pir <0~1,000,000>	211
queue1-cir <0~1,000,000>	211
queue1-pir <0~1,000,000>	211
queue2-cir <0~1,000,000>	211
queue2-pir <0~1,000,000>	211
queue3-cir <0~1,000,000>	211
queue3-pir <0~1,000,000>	211
queue4-cir <0~1,000,000>	211
queue4-pir <0~1,000,000>	211
queue5-cir <0~1,000,000>	211
queue5-pir <0~1,000,000>	211
queue6-cir <0~1,000,000>	211
queue6-pir <0~1,000,000>	211
queue7-cir <0~1,000,000>	211
queue7-pir <0~1,000,000>	211
queuemapping commit	221
queuemapping level <0~7> queue <0~3>	221
queuemapping status	221
radius-accounting host <index> <ip> [acct-port <socket-number>] [key <key-string>]	209
radius-accounting timeout <1-1000>	209
radius-server host <index> <ip-address>	208
radius-server host <index> <ip-address> [acct-port <socket-number>] [key <key-string>]	208
radius-server host <index> <ip-address> [acct-port <socket-number>] [key <key-string>]	208
radius-server mode <index-priority round-robin>	208
radius-server timeout <1-1000>	208
raDsNrmDs <0~310>	289
raDsNrmUs <0~310>	289
raDsTimeDs <0~16383>	289
raDsTimeUs <0~16383>	289
raModeDs <manual raInit dynamicRa dynamicSos>	290
raModeUs <manual raInit dynamicRa dynamicSos>	290
rate-adaption <fix adaption>	279
ratelimit-profile <profile-name>	210
ratelimit-profile per-queue <profile-name>	211
ratelimit-profilename <profile-name>	211
ratelimit-profilename per-queue <profile-name>	211
ratemode <ds us> <1:manual 2:adaptAtInit>	279
rateratio ds <0~100>	279
rateratio us <0~100>	279
raUsNrmDs <0~310>	290
raUsNrmUs <0~310>	290
raUsTimeDs <0~16383>	290
raUsTimeUs <0~16383>	290
receiver-port <port-list>	184
refVnDs <tone-index1> <noise-level> [<tone-index2> <noise-level>]	290
refVnUs <tone-index1> <psd-level> [<tone-index2> <psd-level>]	290
reload config [1 2]	323
remotefunc <snmp ssh tftp telnet web> active <0:Off 1:ALL On 2:LAN On 3:WAN On>	222
remotefunc commit	222
remotefunc status	222
remotefunc Wireless active <0:Off 1:On>	222
remote-management <index>	233

remote-management <index> start-addr <ip-address> end-addr <ip-address> service <[telnet] [ftp] [http] [icmp] [snmp] [ssh] [https]>	233
renew dhcp snooping database	65
renew dhcp snooping database <tftp://host/filename>	65
reset cpu-protection interface port-channel <port-list> cause <ARP BPDU>	75
reset cpu-protection interface port-channel <port-list> cause help	75
restart ipv6 dhcp client vlan <1-4094>	136
rfi <disable annex_f etsi t1e1>	279
rfiBand <start-tone-index1> <stop-tone-index1> [<start-tone-index2> <stop-tone-index2>]	291
rmt-fw-upgrade Auto-detect	214
rmt-fw-upgrade FW-version <firmware-version>	214
rmt-fw-upgrade Image_info	214
rmt-fw-upgrade Model <model-name>	214
rmt-fw-upgrade port-channel <port-list>	214
rmt-fw-upgrade release	214
rmt-vtur port-channel <port>	215
rmt-vtur port-channel <port>	216
rmt-vtur port-channel <port>	217
rmt-vtur port-channel <port>	218
rmt-vtur port-channel <port>	219
rmt-vtur port-channel <port>	219
rmt-vtur port-channel <port>	220
rmt-vtur port-channel <port>	220
rmt-vtur port-channel <port>	221
rmt-vtur port-channel <port>	222
rmt-vtur port-channel <port>	222
rmt-vtur port-channel <port>	223
rmt-vtur port-channel <port>	224
rmt-vtur port-channel <PORT>	224
rmt-vtur port-channel <port-list>	321
rocEnableDs <enable disable>	291
rocEnableUs <enable disable>	291
rocMinInpDs <0..16>	291
rocMinInpUs <0..16>	291
rocSnrMarginDs <0..310>	291
rocSnrMarginUs <0..310>	291
sDs <enable disable>	288
service <ma-name> ccm-interval <3~7>	38
service <ma-name> vlan <1~4094> [name-format <1:PVID 2:String 3:Integer>]	38
service-control ftp <socket-number>	237
service-control ftp <socket-number> inactive	237
service-control http <socket-number>	237
service-control http <socket-number> <timeout>	237
service-control http <socket-number> <timeout> inactive	237
service-control https <socket-number>	237
service-control https <socket-number> inactive	237
service-control icmp	237
service-control snmp	237
service-control ssh <socket-number>	237
service-control ssh <socket-number> inactive	237
service-control telnet <socket-number>	238
service-control telnet <socket-number> inactive	238
sfp <port-list> load-default-value	240
sfp <port-number> rx-power high-alarm-threshold	240
sfp <port-number> rx-power high-warning-threshold	240
sfp <port-number> rx-power low-alarm-threshold	240
sfp <port-number> rx-power low-warning-threshold	240
sfp <port-number> temperature high-alarm-threshold <threshold>	239

sfp <port-number> temperature high-warning-threshold <threshold>	239
sfp <port-number> temperature low-alarm-threshold <threshold>	239
sfp <port-number> temperature low-warning-threshold <threshold>	239
sfp <port-number> tx-bias high-alarm-threshold	240
sfp <port-number> tx-bias high-warning-threshold	240
sfp <port-number> tx-bias low-alarm-threshold	240
sfp <port-number> tx-bias low-warning-threshold	240
sfp <port-number> tx-power high-alarm-threshold	240
sfp <port-number> tx-power high-warning-threshold	240
sfp <port-number> tx-power low-alarm-threshold	240
sfp <port-number> tx-power low-warning-threshold	240
sfp <port-number> voltage high-alarm-threshold	239
sfp <port-number> voltage high-warning-threshold	240
sfp <port-number> voltage low-alarm-threshold	240
sfp <port-number> voltage low-warning-threshold	240
sfp user-input-enable	239
show aaa accounting	21
show aaa accounting commands	22
show aaa accounting dot1x	22
show aaa accounting exec	22
show aaa accounting system	22
show aaa accounting update	21
show aaa authentication	21
show aaa authentication enable	21
show aaa authentication login	21
show aaa authorization	22
show aaa authorization exec	22
show alarm-status	323
show arp inspection	28
show arp inspection filter [<mac-addr>] [vlan <vlan-id>]	28
show arp inspection interface port-channel <port-list>	29
show arp inspection log	29
show arp inspection statistics	28
show arp inspection statistics vlan <vlan-list>	28
show arp inspection vlan <vlan-list>	30
show auto-save config	323
show auto-save logging	323
show boot-image	323
show cfm domain <domain-name all>	39
show cfm-action	39
show cfm-action counter level <0~7> vlan <1~4094> mepid <1~8191>	39
show cfm-action ltmreplylist level <0~7> vlan <1~4094> mepid <1~8191>	40
show cfm-action ltmreplylist level <0~7> vlan <1~4094> mepid <1~8191> transid <trans- id>	40
show cfm-action mepccmdb level <0~7> vlan <1~4094>	39
show cfm-action mipccmdb level <0~7> vlan <1~4094>	40
show classifier [name]	45
show cluster	47
show cluster candidates	47
show cluster member	47
show cluster member config	47
show cluster member mac <mac-address>	47
show consoleSetting	222
show cpe-port-status <port-list>	323
show cpe-port-status info <cr>	323
show cpe-port-status info <port-list>	323
show cpu-protection interface port-channel <port-list>	75
show cpu-utilization	323
show dhcp	53

show dhcp dhcp-relay	57
show dhcp relay <vlan-id>	57
show dhcp relay all	57
show dhcp smart-relay	58
show dhcp snooping	62
show dhcp snooping binding	62
show dhcp snooping circuit-id-user-define	62
show dhcp snooping circuit-id-user-define vlan <vlan-list>	62
show dhcp snooping database	62
show dhcp snooping database detail	62
show dhcp snooping remote-id-info <cr>	62
show dhcp snooping remote-id-info vlan <vlan-list>	62
show dhcp snooping remote-id-user-define	62
show dhcp snooping remote-id-user-define vlan <vlan-list>	62
show dhcpv6 relay counter <cr>	69
show dhcpv6 relay counter <port-list>	69
show dhcpv6 relay ldra <cr>	69
show dhcpv6 relay ldra <vlan-id>	69
show dhcpv6 snooping <cr>	70
show dhcpv6 snooping binding	70
show diffserv	71
show DoS-prevention-setting	73
show errdisable	76
show errdisable detect	76
show errdisable recovery	76
show ethernet oam discovery <port-list>	78
show ethernet oam statistics <port-list>	78
show ethernet oam summary	78
show externalalarm	83
show garp	85
show gbond <cr>	298
show gbond config <cr>	299
show gbond config <group-id>	299
show gbond counters ptm <group-id>	299
show gbond status <cr>	299
show gbond status <group-id>	299
show general	222
show hardware-alarm-setting	323
show hardware-monitor <C F>	323
show hardware-monitor <cr>	323
show https	88
show https certificate	88
show https key <rsa dsa>	88
show https key <rsa dsa dh>	88
show https session	88
show https timeout	88
show igmp-filtering profile [<name> all]	99
show igmp-proxy	95
show igmp-proxy current-group <port-number>	95
show igmp-proxy join-counter <port-number>	95
show igmp-proxy leave-counter <port-number>	95
show igmp-proxy query-counter <port-number>	95
show igmp-snooping	94
show igmp-snooping current-group <port-number>	94
show igmp-snooping join-counetr <port-number>	94
show igmp-snooping leave-counetr <port-number>	94
show igmp-snooping querier	94
show igmp-snooping query-counetr <port-number>	94
show igmp-snooping vlan	95

show interface <port-number>	102
show interfaces <port-list>	102
show interfaces config <port-list>	102
show interfaces config <port-list> bandwidth-control	33
show interfaces config <port-list> bstorm-control	35
show interfaces config <port-list> egress	198
show interfaces config <port-list> igmp-filtering	99
show interfaces config <port-list> igmp-group-limited	96
show interfaces config <port-list> igmp-immediate-leave	96
show interfaces config <port-list> igmp-msg-limited	96
show interfaces config <port-list> igmp-query-mode	96
show interfaces config <port-list> protocol-based-vlan	205
show interfaces transceiver <port-list>	323
show ip	110
show ip arp	27
show ip arp flush	27
show ip ipv6	121
show ip ipv6 default-router	121
show ip ipv6 destination	121
show ip ipv6 neighbor	121
show ip ipv6 prefix	121
show ip ipv6 route	121
show ip name-server	111
show ip route	251
show ip route static	251
show ip source binding [<mac-addr>] [...]	152
show ip source binding help	152
show ip tcp	111
show ip udp	111
show ippvc <cr>	24
show ipqos-profile [name]	150
show ipv6	135
show ipv6 <vlan mgmt> <vlan-id mgmt-id>	135
show ipv6 dhcp	136
show ipv6 dhcp vlan <1-4094>	136
show ipv6 dhcp6	136
show ipv6 dhcp6 vlan <1-4094>	136
show ipv6 mld snooping-proxy	141
show ipv6 mld snooping-proxy filtering profile	142
show ipv6 mld snooping-proxy group	142
show ipv6 mld snooping-proxy statistics interface port-channel <port-list>	142
show ipv6 mld snooping-proxy statistics system	142
show ipv6 mld snooping-proxy statistics vlan <vlan-list>	142
show ipv6 mld snooping-proxy vlan <vlan-id>	142
show ipv6 mtu	135
show ipv6 mtu	138
show ipv6 multicast	142
show ipv6 neighbor	136
show ipv6 neighbor <vlan mgmt> <vlan-id mgmt-id>	136
show ipv6 prefix	144
show ipv6 prefix <interface-type> <interface-number>	144
show ipv6 route	144
show ipv6 route static	144
show ipv6 router	136
show ipv6 router <vlan mgmt> <vlan-id mgmt-id>	136
show ipv6 source binding [mac-addr] [<ipv6-addr> <ipv6-addr>/<prefix-length>] [dhcpv6-snooping static] [vlan <vlan-id>] [interface port-channel <interface-id>]	152
show ipv6 source binding help	152

show ipv6 vlan <1-4094>	136
show l2protocol-tunnel	155
show l2protocol-tunnel interface port-channel <port-list>	155
show lacp	157
show lan-setting	218
show layer2-setting	218
show linkInitStatus	223
show lldp config	163
show lldp config interface port-channel <port-list>	163
show lldp info local	163
show lldp info local interface port-channel <port-list>	163
show lldp info remote	163
show lldp info remote interface port-channel <port-list>	163
show lldp info statistic	163
show lldp info statistic interface port-channel <port-list>	163
show logging	323
show loginMessage	323
show loginPrecedence	165
show logins	164
show loopback	219
show loopguard	166
show loopguard port-mode	167
show loopguard port-recover-time	167
show mac address-table all [<sort>]	168
show mac address-table count	168
show mac address-table multicast	249
show mac address-table port <port-list> [<sort>]	168
show mac address-table static	168
show mac address-table vlan <vlan-id> [<sort>]	168
show mac-aging-time	168
show mac-authentication	170
show mac-authentication config	170
show MacTable	223
show mac-vlan	172
show memory-usage	323
show mirror	176
show mrstp <tree-index>	177
show mstp	179
show mstp instance <0~16>	179
show multicast	323
show multicast [vlan]	323
show multicast counter	323
show multicast counter query <port-list>	323
show multicast counter receive <port-list>	324
show multicast counter report <port-list>	324
show multicast counter specific <port-list>	324
show multicast counter transmit <port-list>	324
show multicast join-port	324
show multicast mode-querier	324
show multicast port <cr>	324
show multicast port <port-list>	324
show multicast port query <port-list>	324
show multicast port receive <port-list>	324
show multicast port report <port-list>	324
show multicast port specific <port-list>	324
show multicast port transmit <port-list>	324
show multicast snooping-vlan	324
show multicast vlan <cr>	324
show multicast vlan <vid>	324

show multicast vlan receive	324
show multicast vlan specific	324
show multicast vlan transmit	324
show multi-login	183
show mvr	184
show mvr <vlan-id>	184
show ndp inspection	186
show ndp inspection filter	186
show ndp inspection filter [<mac-addr>] [vlan <vlan-id>]	186
show ndp inspection interface port-channel <port-list>	186
show ndp inspection log	186
show ndp inspection statistics	186
show ndp inspection statistics vlan <vlan-list>	186
show ndp inspection vlan <vlan-list>	186
show packet-buffer	323
show packet-filter	189
show paepvc <cr>	25
show policy [name]	194
show port-access-authenticator	91
show port-access-authenticator <port-list>	91
show port-based	220
show port-security	196
show port-security <port-list>	196
show portstatus	223
show pppoe+	199
show pppoe+ vlan <vlan-id all>	199
show protocol-stack	324
show pvc <cr>	26
show queuemapping	221
show radius-accounting	209
show radius-server	208
show ratelimit-profile [profile-name]	210
show ratelimit-profile per-queue [profile-name]	210
show RemoteFunc	222
show remote-management [index]	233
show running-config [page]	236
show running-config help	236
show running-config interface port-channel <port-list> [<attribute> [<...>]]	236
show service-control	237
show sfp	239
show slotID	324
show snmp-server	243
show spanning-tree config	253
show ssh	247
show ssh key <rsa rsa dsa>	247
show ssh known-hosts	247
show ssh session	247
show subnet-vlan	256
show syslog server	258
show syslog type	258
show system-information	324
show tacacs-accounting	259
show tacacs-server	259
show time	50
show time daylight-saving-time	51
show timesync	51
show trtcm-profile [name]	150
show trunk	260
show user	236

show vdsl-alarmprofile [profile-name]	263
show vdsl-alarm-template	264
show vdsl-chan-alarm-profile [profile-name]	265
show vdsl-chan-profile [profile-name]	281
show vdsl-common	297
show vdsl-counters <port-number> channel-counters 15mins-counters <1-96>	267
show vdsl-counters <port-number> channel-counters 1day-counters	267
show vdsl-counters <port-number> channel-counters persistence	267
show vdsl-counters <port-number> inm 15M-history <1-96>	267
show vdsl-counters <port-number> inm 1day-history <1-7>	267
show vdsl-counters <port-number> inm current	267
show vdsl-counters <port-number> performance-data 15M-history <1-96>	267
show vdsl-counters <port-number> performance-data 15mins-counters <1~96>	268
show vdsl-counters <port-number> performance-data 1day-counters	268
show vdsl-counters <port-number> performance-data 1day-history <1-7>	268
show vdsl-counters <port-number> performance-data current	268
show vdsl-counters <port-number> sub-carrier hlog	268
show vdsl-counters <port-number> sub-carrier qln	268
show vdsl-counters <port-number> sub-carrier snr	268
show vdsl-inm-profile [profile-name]	284
show vdsl-line-alarm-profile [profile-name]	264
show vdsl-line-profile [profile-name]	286
show vdsl-line-template	281
show vdsl-opstatus	297
show vdsl-profile [profile-name]	276
show vdsl-status band-status <port-number>	268
show vdsl-status line-status <port-number>	268
show vdsl-status medley-psd <port-number>	268
show vdsl-status subcarrier bitAlloc <port-number> <1 2>	268
show vdsl-status subcarrier gainAlloc <port-number> <1 2>	269
show vdsl-status subcarrier hlog <port-number> <1 2>	269
show vdsl-status subcarrier qln <port-number> <1 2>	269
show vdsl-status subcarrier snr <port-number> <1 2>	269
show vdsl-vectoring DS-Fext-Cancel-Priority <LineId>	269
show vdsl-vectoring DS-Xlin-Req <xtalkId> <LineId>	269
show vdsl-vectoring US-Fext-Cancel-Priority <LineId>	269
show vdsl-vectoring US-Xlin-Req <xtalkId> <LineId>	269
show version [flash]	324
show vlan	302
show vlan <vlan-id>	302
show vlan counters <vlan-id> <port-number>	302
show vlanlq	223
show vlanlq gvrp	87
show vlanlq port-isolation	307
show vlan-mapping <cr>	306
show vlan-mapping entry	306
show vlan-profile	309
show vlan-profile <name-str>	309
show vlan-security	311
show vlan-stacking	313
show vlan-stacking selective-qinq	314
show vlan-translation	317
show vlan-translation <port-num>	317
snmp-server [contact <system-contact>] [location <system-location>]	243
snmp-server get-community <property>	243
snmp-server set-community <property>	243
snmp-server trap-community <property>	243
snmp-server trap-destination <ip-address>	244
snmp-server trap-destination <ip-address> enable traps	244

snmp-server trap-destination <ip-address> enable traps aaa	244
snmp-server trap-destination <ip-address> enable traps aaa <options>	244
snmp-server trap-destination <ip-address> enable traps authentication	244
snmp-server trap-destination <ip-address> enable traps authentication <options>	244
snmp-server trap-destination <ip-address> enable traps help	246
snmp-server trap-destination <ip-address> enable traps interface	245
snmp-server trap-destination <ip-address> enable traps interface <options>	245
snmp-server trap-destination <ip-address> enable traps ip	245
snmp-server trap-destination <ip-address> enable traps ip <options>	245
snmp-server trap-destination <ip-address> enable traps switch	245
snmp-server trap-destination <ip-address> enable traps switch <options>	245
snmp-server trap-destination <ip-address> enable traps system	245
snmp-server trap-destination <ip-address> enable traps system <options>	246
snmp-server trap-destination <ip-address> enable traps vdsl	246
snmp-server trap-destination <ip-address> enable traps vdsl <options>	246
snmp-server username <name> sec-level <noauth auth priv> [auth <md5 sha>] [priv <des aes>]	244
snmp-server version <v2c v3 v3v2c>	244
snr <dsmax usmax> <0~310 disable>	279
snr <dsmin dstarget usmin ustarget> <0~310>	279
snr dsmax <0~127>	279
snr dsmin <0~127>	279
snr dstarget <0~127>	279
snr usmax <0~127>	279
snr usmin <0~127>	279
snr ustarget <0~127>	279
snrModeDs <virtualNoiseEnabled virtualNoiseDisabled>	291
snrModeUs <virtualNoiseEnabled virtualNoiseDisabled>	291
sosCrcDs <0-65535>	291
sosCrcUs <0-65535>	291
sosMaxDs <0-15>	291
sosMaxUs <0-15>	292
sosMinBitRateLODs <8-100032>	283
sosMinBitRateLOUs <8-100032>	284
sosMultiStepMaxTonesDs <all 256 512 1024>	292
sosMultiStepMaxTonesUs <all 256 512 1024>	292
sosNTonesDs <0-100>	292
sosNTonesUs <0-100>	292
sosTimeDs <64-16320>	292
sosTimeUs <64-16320>	292
source-port <port-list>	184
spanning-tree	253
spanning-tree <port-list>	253
spanning-tree <port-list> path-cost <1-65535>	253
spanning-tree <port-list> priority <0-255>	253
spanning-tree hello-time <1-10> maximum-age <6-40> forward-delay <4-30>	253
spanning-tree help	254
spanning-tree mode <RSTP MRSTP MSTP>	177
spanning-tree mode <RSTP MRSTP MSTP>	179
spanning-tree mode <RSTP MSTP>	253
spanning-tree priority < 0 4096 8192 12288 16384 20480 24576 28672 32768 36864 40960 45056 49152 53248 57344 61440>	254
speed-duplex <auto 10-half 10-full 100-half 100-full 1000-full>	103
spq	327
sp_wrr	327
ssh <1 2> <[user@]dest-ip> [command </>]	247
ssh known-hosts <host-ip> <1024 ssh-rsa ssh-dsa> <key>	247
storm-control	35
storm-limit	35

storm-limit CIR <cir>	35
subnet-based-vlan	256
subnet-based-vlan dhcp-vlan-override	256
subnet-based-vlan ipv6 name <name> source-ip <ipv6-address> mask-bits <mask-bits> vlan <vlan-id> priority <0-7>	256
subnet-based-vlan ipv6 name <name> source-ip <ipv6-address> mask-bits <mask-bits> vlan <vlan-id> priority <0-7> inactive	256
subnet-based-vlan name <name> source-ip <ip> mask-bits <mask-bits> vlan <vlan-id> priority <0-7>	256
subnet-based-vlan name <name> source-ip <ip> mask-bits <mask-bits> vlan <vlan-id> priority <0-7> inactive	257
syslog	258
syslog server <ip-address> inactive	258
syslog server <ip-address> level <level>	258
syslog type <type>	258
syslog type <type> facility <0~7>	258
tacacs-accounting host <index> <ip> [acct-port <socket-number>] [key <key-string>]	259
tacacs-accounting timeout <1-1000>	259
tacacs-server host <index> <ip> [auth-port <socket-number>] [key <key-string>]	259
tacacs-server mode <index-priority round-robin>	259
tacacs-server timeout <1-1000>	259
tagged <port-list>	184
targetslowburst ds <0~1275>	280
targetslowburst us <0~1275>	280
targetSnrmDs <0~310>	292
targetSnrmUs <0~310>	292
test	103
test <internal external>	103
test interface port-channel <port-list>	324
test interface port-channel <port-list> <internal external>	325
test interface port-channel <port-list> F5-loopback <vpi> <vci> <cnt>	324
time <hour:min:sec>	50
time date <month/day/year>	50
time daylight-saving-time	50
time daylight-saving-time end-date <week> <day> <month> <o'clock>	51
time daylight-saving-time help	51
time daylight-saving-time start-date <week> <day> <month> <o'clock>	51
time help	51
time timezone <-1200 ... 1200>	50
timesync <daytime time ntp>	51
timesync server <ip-address>	51
traceroute <ip host-name> [in-band out-of-band vlan <vlan-id>] [ttl <1-255>] [wait <1-60>] [queries <1-10>]	325
traceroute help	325
traceroute6 <ip host-name> [-i <vlan mgmt> <vlan id mgmt id>] [-m <1-255>] [-w <1-60>] [-q <1-10>]	325
traceroute6 help	325
trtcm	261
trtcm	261
trtcm cir <rate>	261
trtcm dscp green <0~63>	261
trtcm dscp red <0~63>	262
trtcm dscp yellow <0~63>	262
trtcm mode <color-aware color-blind>	261
trtcm pir <rate>	261
trtcm-profile <name>	150
TrTCM-profile1 <name>	150
TrTCM-profile2 <name>	150
TrTCM-profile3 <name>	150

TrTCM-profile4 <name>	150
TrTCM-profile5 <name>	150
TrTCM-profile6 <name>	150
TrTCM-profile7 <name>	150
TrTCM-profile8 <name>	150
trunk <T1 T2>	260
trunk <T1 T2> interface <port-list>	260
trunk <T1 T2> lacp	260
trunk interface <port-list> timeout <lacp-timeout>	260
unknown-multicast flooding	309
untagged <port-list>	302
upbo <1:Auto 2:Manual 3:Disable>	280
upbo <band1a band2a> <4000~8095>	280
upbo <band1b band2b> <0~4095>	280
upbo upboKL <0~1270>	280
upboKL <0~1280>	292
upboKLF <auto override disableUpbo>	292
upboPsdA <value-for-us1> [value-for-us2]	292
upboPsdB <value-for-us1> [value-for-us2]	293
us0disable <allow disable>	293
us0Mask <eu32 eu36 eu40 eu44 eu48 eu52 eu56 eu60 eu64 eu128>	293
usinterdelay <0~4,8>	277
uspayloadrate max <rate>	280
uspayloadrate min <rate>	280
vdsl <port-list> loop-diagnostic delt start	273
vdsl <port-list> loop-diagnostic selt calibration show	274
vdsl <port-list> loop-diagnostic selt calibration test	274
vdsl <port-list> loop-diagnostic selt getSeltQln	274
vdsl <port-list> loop-diagnostic selt get-vdslecho4096	274
vdsl <port-list> loop-diagnostic selt report	274
vdsl <port-list> loop-diagnostic selt start	274
vdsl <port-list> loop-diagnostic selt startSeltQln <duration> <measure-tones>	274
vdsl <port-list> loop-diagnostic selt start-vdslecho4096 <duration> <agc setting> <measure-tones>	274
vdsl <port-list> remote-reset	297
vdsl <port-list> remote-test	297
vdsl <port-list> reset	297
vdsl <port-list> retrain	297
vdsl <port-number> loop-diagnostic delt abort	274
vdsl <port-number> loop-diagnostic delt actatp	273
vdsl <port-number> loop-diagnostic delt attndr	273
vdsl <port-number> loop-diagnostic delt clear	274
vdsl <port-number> loop-diagnostic delt hlin-ps	273
vdsl <port-number> loop-diagnostic delt hlog-ps	273
vdsl <port-number> loop-diagnostic delt latn-pb	273
vdsl <port-number> loop-diagnostic delt qln-ps	274
vdsl <port-number> loop-diagnostic delt satn-pb	274
vdsl <port-number> loop-diagnostic delt snrm-pb	274
vdsl <port-number> loop-diagnostic delt snr-ps	274
vdsl <port-number> loop-diagnostic delt status	273
vdsl clrcnt <all <port-number>>	267
vdsl PINTransform <index>	297
vdsl2frequencyplan <index>	280
vdsl2Profile <vdsl2-profile-type>	293
vdsl2Profile enable <vdsl2-profile-type> <30a 17a 12a 12b 8a 8b 8c 8d>	280
vdsl-alarmprofile <profile-name>	263
vdsl-alarmprofile <profile-name>	321
vdsl-alarm-template <template-name>	264
vdsl-chan-alarm-profile <profile-name>	265

vdsl-chan-profile <profile-name>	281
vdsl-common bandplan <0>	297
vdsl-common latency <0 1>	297
vdsl-common pbo <1 2>	297
vdsl-common psdmask <1 2 3 4>	297
vdsl-inm-profile <profile-name>	284
vdsl-line-alarm-profile <profile-name>	264
vdsl-line-profile <profile-name>	286
vdsl-line-template <profile-name>	281
vdsl-port <port-list> <enable disable>	298
vdsl-port <port-list> alarm-profilename <name>	263
vdsl-port <port-list> alarm-template <vdsl-alarm-template-name>	298
vdsl-port <port-list> line-fallback-template <vdsl-template-name>	298
vdsl-port <port-list> line-template <vdsl-template-name>	298
vdsl-port <port-list> profilename <name>	276
vdsl-port <port-list> psd-profilename <profile-name>	280
vdsl-profile <profile-name>	276
vdsl-profile <profile-name>	321
vdsl-psd profile	280
vdsl-psd profile <profile-name>	280
vdsl-psd profile <profile-name> physide <1 2> frequence <0~30000> level <125~1400>	281
vectoring <enable disable>	293
vlan <1~4094>	311
vlan <1-4094>	134
vlan <1-4094>	136
vlan <1-4094>	309
vlan <1-4094> ip address inband-default dhcp-bootp option-12	110
vlan <1-4094> ip address inband-default dhcp-bootp option-12 <hostname>	110
vlan <1-4094> ip address inband-default dhcp-bootp option-60	110
vlan <1-4094> ip address inband-default dhcp-bootp option-60 <vendor-class-id>	111
vlan <1-4094> no ip address inband-default dhcp-bootp option-12	110
vlan <1-4094> no ip address inband-default dhcp-bootp option-12 <hostname>	110
vlan <1-4094> no ip address inband-default dhcp-bootp option-60	111
vlan <1-4094> no ip address inband-default dhcp-bootp option-60 <vendor-class-id>	111
vlan <vlan-id>	302
vlan <vlan-id>	321
vlanlq commit	223
vlanlq gvrp	87
vlanlq port-isolation	307
vlanlq port-isolation <Normal Enhanced>	307
vlanlq port-isolation <Normal Enhanced>	307
vlanlq port-isolation <port-list>	307
vlanlq port-isolation <port-list>	321
vlanlq status	223
vlanlq vid <1~4094> egress <port-list>	223
vlanlq vid <1~4094> untag <port-list>	223
vlan-mapping	305
vlan-mapping name <name> interface port-channel <port> vlan <1-4094> translated-vlan <1-4094> priority <0-7> replace <0:Don't replace 1:Replace original prio>	305
vlan-mapping name <name> interface port-channel <port> vlan <1-4094> translated-vlan <1-4094> priority <0-7> replace <0:Don't replace 1:Replace original prio> inactive	305
vlan-profile <name-str>	309
vlan-security	311
vlan-stacking	313
vlan-stacking <sptpid>	313
vlan-stacking active-copyctagprio <1 0>	312
vlan-stacking active-innertag <1 0>	312
vlan-stacking cpriority <0-7>	312

vlan-stacking CPVID <1-4094>	312
vlan-stacking innerQ-txuntag <1 0>	312
vlan-stacking priority <0-7>	312
vlan-stacking role <normal access tunnel>	313
vlan-stacking selective-qinq name <name> interface port-channel <port> cvid <cvid> spvid <spvid> priority <0-7> activeprio <0 1>	313
vlan-stacking selective-qinq name <name> interface port-channel <port> cvid <cvid> spvid <spvid> priority <0-7> activeprio <0 1> inactive	314
vlan-stacking SPVID <1-4094>	313
vlan-stacking tunnel-tpid <tpid>	313
vlan-translation <port-num> single-tag <active> <cvid> <svid> <cvids>	317
vlan-translation <port-num> single-tag <active> <cvid> <svid> <cvids> seq <seq-num>	318
vlan-translation <port-num> tls <active> <svid> <spri>	318
vlan-translation <port-num> tls <active> <svid> <spri> seq <seq-num>	318
vlan-translation <port-num> untag-ethernet <active> <eti> <svid> <cvids> <spri> <cpri>	318
vlan-translation <port-num> untag-ethernet <active> <ETI> <sVid> <cVidS> <sPri> <cPri> seq <seq-num>	318
vlan-translation <port-num> untag-normal <active> <sVid> <cVidS> <sPri> <cPri>	318
vlan-translation <port-num> untag-normal <active> <sVid> <cVidS> <sPri> <cPri> seq <seq-num>	318
vlan-trunking	320
vlan-type <802.1q port-based>	198
vlan-type <802.1q port-based>	302
wan-common autoGateway <enable disable>	224
wan-common commit	224
wan-common defaultGateway <ip-address>	224
wan-common QoS <enable disable>	224
wan-common status	224
wan-common virtual-port <enable disable>	224
wan-entry <1-4> active <enable disable>	225
wan-entry <1-4> delete	225
wan-entry <1-4> Firewall <enable disable>	224
wan-entry <1-4> IGMP <enable disable>	224
wan-entry <1-4> MER <enable disable>	225
wan-entry <1-4> MER DHCP <enable disable>	225
wan-entry <1-4> MER ip <address> mask <mask>	225
wan-entry <1-4> nat <enable disable>	225
wan-entry <1-4> PPPoE <enable disable>	225
wan-entry <1-4> PPPoE Password <password>	225
wan-entry <1-4> PPPoE UserName <username>	225
wan-entry <1-4> vlantagging autovlan	225
wan-entry <1-4> vlantagging disable	225
wan-entry <1-4> vlantagging vlanmux vid <1-4094> 802.1p <0~7>	225
wan-entry <1-4> wan-protocol <PPPoE MER bridge>	225
wan-entry commit	225
wan-entry status	225
weight <wt1> <wt2> ... <wt8>	103
wfq	327
wfq fe-spq <Q0-Q7>	327
write memory [<index>]	325
wrr	327
wrr <wt1> <wt2> ... <wt8>	327
xdsl2Mode <g9932AnnexA>	293
xdsl2Mode <g9932AnnexA g9932AnnexB>	293
xtucEs <0~900>	264
xtucFecs <0~900>	264
xtucLofs <0..900>	265
xtucLoss <0~900>	265

xtucSes <0~900>	265
xtucUas <0~900>	265
xturEs <0~900>	265
xturFecs <0~900>	265
xturLofs <0~900>	265
xturLoss <0~900>	265
xturLprs <0~900>	265
xturSes <0~900>	265
xturUas <0~900>	265