Station6 2×2 Dish

EnGenius Station Wi-Fi 6 2×2 5GHz Outdoor Long Range CPE (EnStation6)

Introduction

This Quick Start Guide is designed to guide you through the installation of the **2×2 Outdoor** access point/CPE, model **EnStation6**, including hardware mounting and configuration.



Station6 2×2 Dish

EnGenius Station Wi-Fi 6 2×2 5GHz Outdoor Long Range CPE

Model: EnStation6


- Wi-Fi 6 technology for high-performance Wi-Fi in high-density, multidevice environments.
- Boost speed up to 1,200 Mbps air performance in 5GHz frequency band.
- In conjunction with 2.4GHz management interface helps device configuration and monitoring more easily on a smartphone or tablet.

∨ Content Quick Links

- Hardware Mounting
- Powering the EnGenius Fit AP
- Management Plane
- Option A: Cloud Management
- Option B: Standalone Configuration

Package Contents



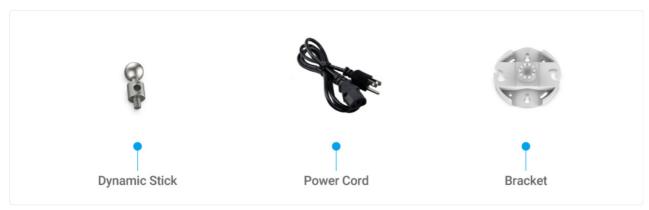



System Requirements

Web Browser

• Google Chrome (57.0.2987.110 and later)

- Microsoft Edge (80.0.361.103 and later)
- Mozilla Firefox (52.0 and later)

Hardware Overview



(i) Reset by EnGenius PoE Adapter:

 Reset to default: Press and hold the reset button for over 10 seconds, and the LED (PWR) will start Fast Flashing (0.2 sec). Then, the device will be reset to factory default settings.

LEDs

Status	LED Color						LED Behavior
Power On	PWR (Green)						Solid On
LAN Connected	LAN (Yellow)						Solid On
LAN Transmitting	LAN (Yellow)						Flashing
5GHz Radio On	5GHz (Green)						Solid On
5GHz Transmitting	5GHz (Green)						Flashing
Firmware Upgrading	PWR	LAN	WLAN	Link Quality R	Link Quality Y	Link Quality G	Flashing (0.5 Sec)
Reset to Default	PWR (Green)						Fast Flashing (0.2 sec)
Station mode or Repeater mode (Weak Signal)	Link Quality R						Solid on
Station mode or Repeater mode (Normal Signal)	Link Quality Y						Solid on
Station mode or Repeater mode (Good Signal)	Link Qualit G						Solid on