



*Networking your world*

**NVF-200LS/R ver.S**

**4 Band VDSL CO/CPE Bridge with Dip Switch**

**USER'S MANUAL**



[Http://www.netsys.com.tw](http://www.netsys.com.tw)



## **Copyright**

Copyright © 2011 by National Enhance Technology Corp. All rights reserved.

### **Trademarks**

NETSYS is a trademark of National Enhance Technology Corp.

Other brand and product names are registered trademarks or trademarks of their respective holders.

### **Legal Disclaimer**

The information given in this document shall in no event be regarded as a guarantee of conditions or characteristics. With respect to any examples or hints given herein, any typical values stated herein and/or any information regarding the application of the device, National Enhance Technology Corp. hereby disclaims any and all warranties and liabilities of any kind, including without limitation warranties of non-infringement of intellectual property rights of any third party.

### **Statement of Conditions**

In the interest of improving internal design, operational function, and/or reliability, NETSYS reserves the right to make changes to the products described in this document without notice. NETSYS does not assume any liability that may occur due to the use or application of the product(s) or circuit layout(s) described herein.

Maximum signal rate derived from IEEE Standard specifications. Actual data throughput will vary. Network conditions and environmental factors, including volume of network traffic, building materials and construction, and network overhead lower actual data throughput rate. Netsys does not warrant that the hardware will work properly in all environments and applications, and makes no warranty and representation, either implied or expressed, with respect to the quality, performance, merchantability, or fitness for a particular purpose. Make sure you follow in line with the environmental conditions to use this product.



## **Foreword: VDSL Point to Point Solution**

Attention:

**Be sure to read this manual carefully before using this product. Especially Legal Disclaimer, Statement of Conditions and Safty Warnings.**

The NVF-200LS/R ver.S works as Ethernet to/from VDSL subscriber-site conversion bridge. The NVF-200LS/R ver.S uses QAM-based 4-band VDSL technology which supports max distance **1.9km (6333 ft.) at 5M/5M or 1.3km (4333 ft.) at 15M/15M, or 800m (2666 ft.) at 25M/25M** symmetrical data service. The NVF-200R ver.S also works with NVF-800S/NVF-2400S VDSL IP DSLAM, together to form a cost-effective solution for services such as remote lecturing, telemedicine, video conferencing, Video-on-Demand (VOD), IP-TV, Internet access, and various high-speed data applications.

The front-panel provides LED indicators of system and interface status. The built-in POTS/ISDN splitter allows a standard POTS phone or ISDN device to be connected. Full or half-duplex mode of LAN operations is automatically sensed and configured. VDSL link rates are configured by local bridge or IP DSLAM over auto speed or fix speed function.

Therefore, NVF-200LS/R ver.S supports plug & play operations on the subscriber-site and can do auto and manual selection of the data speed. An ideal solution for delivering cost-effective, high-performance broadband/multimedia services to Multi-Dwelling Units (MDU) and Multi-Tenant Units (MTU) such as hotels, campuses and hospitals environments.



**Caution:**

The NVF-200 is for **indoor** applications only. This product does not have waterproof protection. We do not recommend for harsh environments. If user insist to install it for industrial applications (-20℃ ~ 70℃ (-4℉ ~ 158℉)), please do not use the included commercial-grade power supply. Please use of industrial-grade power supply for industrial applications.

## Safety Warnings

For your safety, be sure to read and follow all warning notices and instructions before device use.

- ◆ **DO NOT** open the device or unit. Opening or removing covers can expose you to dangerous high voltage points or other risks. ONLY qualified service personnel can service the device. Please contact your vendor for further information.
- ◆ **Use ONLY** the dedicated power supply for your device. Connect the power cord or power adaptor to the right supply voltage (110V AC used for North America and 230V AC used for Europe).
- ◆ **DO NOT** use the device if the power supply is damaged as it might cause electrocution. If the power supply is damaged, remove it from the power outlet. DO NOT attempt to repair the power supply. Contact your local vendor to order a new power supply.
- ◆ **Place** connecting cables carefully so that no one will step on them or stumble over them. DO NOT allow anything to rest on the power cord and do NOT locate the product where anyone can work on the power cord.
- ◆ **DO NOT** install nor use your device during a thunderstorm. There may be a remote risk of electric shock from lightning.
- ◆ **DO NOT** expose your device to dampness, dust or corrosive liquids.
- ◆ **DO NOT** use this product near water, for example, in a wet basement or near a swimming pool.
- ◆ **Connect ONLY** suitable accessories to the device.
- ◆ **Make sure** to connect the cables to the correct ports.
- ◆ **DO NOT** obstruct the device ventilation slots, as insufficient airflow may harm your device.
- ◆ **DO NOT** store things on the device.
- ◆ **DO NOT** use the device for outdoor applications, and make sure all the connections are indoors. There may be a remote risk of electric shock from lightning.
- ◆ **Be careful** when unplugging the power, because the transformer may be very hot.
- ◆ **Keep** the device and all its parts and accessories out of children's reach.
- ◆ **Clean** the device using a soft and dry cloth rather than liquid or atomizers. Power off the equipment before cleansing it.
- ◆ This product is **recyclable**. Dispose of it properly.



## Table of Contents

COPYRIGHT .....	1
FOREWORD: VDSL POINT TO POINT SOLUTION.....	2
<b>SAFETY WARNINGS .....</b>	<b>4</b>
<b>CHAPTER 1. UNPACKING INFORMATION.....</b>	<b>7</b>
1.1 Check List .....	7
<b>CHAPTER 2. INSTALLING THE BRIDGE.....</b>	<b>8</b>
2.1 Hardware Installation.....	8
2.2 Pre-installation Requirements .....	8
2.3 General Rules .....	9
2.4 Connecting the Bridge.....	9
2.5 Connecting the RJ-11 / RJ-45 Ports .....	10
<b>CHAPTER 3. HARDWARE DESCRIPTION.....</b>	<b>12</b>



3.1 Front Panel.....	12
3.2 Front Indicators .....	13
<b>3.3 Rear Panel.....</b>	<b>14</b>
3.4 Side Panel.....	15
<b>CHAPTER 4: FIRMWARE DESCRIPTION .....</b>	<b>17</b>
<b>APPENDIX A: CABLE REQUIREMENTS .....</b>	<b>18</b>
<b>APPENDIX B: PRODUCT SPECIFICATION .....</b>	<b>21</b>
<b>APPENDIX C: 4 BAND VDSL ELECTRICAL CHARACTERISTICS .....</b>	<b>23</b>
<b>APPENDIX D: TROUBLESHOOTING .....</b>	<b>24</b>
<b>APPENDIX E: COMPLIANCE AND SAFETY INFORMATION .....</b>	<b>29</b>
<b>WARRANTY .....</b>	<b>32</b>

## **CHAPTER 1. UNPACKING INFORMATION**

### **1.1 Check List**

Carefully unpack the package and check its contents against the checklist.

Package Contents

- VDSL 4-Band Bridge (NVF-200LS for CO side / NVF-200R ver.S for CPE side)
- 1 x AC to DC **5V or 12V** Power Adapter
- 4 x rubber foot
- 1 x CD User's Manual
- 1 x RJ-45 cable
- 1 x RJ-11 cable

#### **Note1:**

Please inform your dealer immediately for any missing or damaged parts.

If possible, retain the carton including the original packing materials.

Use them to repack the unit in case there is a need to return for repair.

#### **Note2:**

1. Do not use sub-standard power supply, connect the power supply in device before be sure to check compliance with specifications. The NVF-200LS/R ver.S of the power supply use DC 5-12V/1A.
2. Power supply included in package is commercial-grade. Do not use in industrial applications.



## **Chapter 2. Installing the Bridge**

### **2.1 Hardware Installation**

This chapter describes how to install the bridge and establishes network connections and may install the bridge on any level surface (e.g. a table or shelf). However, please take note of the following minimum site requirements before one begin. Stick the 4 rubber feet at the bottom to avoid scratches.

### **2.2 Pre-installation Requirements**

Before you start the actual hardware installation, make sure you can provide the right operating environment, including power requirements, sufficient physical space, and proximity to other network devices that are to be connected.

Verify the following installation requirements:

- Power requirements: DC **5-12V / 1A** or above
- The bridge should be located in a cool dry place, with at least **10cm/4in** of space at the front and back for ventilation.
- Place the bridge away from direct sunlight, heat sources, or areas with a high amount of electromagnetic interference.
- Check if the network cables and connectors needed for installation are available.
- Do Not install phone lines strapped together with AC power lines, or telephone office line with voice signal.
- Avoid installing this device radio amplifying station nearby or transformer station nearby.
- Please note NVF-200 internal splitter, can pass through voice spectrum is 0KHz ~ 630KHz.

## **2.3 General Rules**

Before making any connections to the bridge, please note the following rules:

- **Ethernet Port (RJ-45)**

All network connections to the bridge Ethernet port must be made using Category 5 UTP for 100Mbps, Category 3, 4 UTP for 10Mbps.

No more than 100 meters of cabling may be use between the MUX or HUB and an end node.

- **VDSL Port (RJ-11)**

All Home network connections to the RJ-11port must use **24~26** gauge with twisted pair phone wiring.

We **do not recommend** the use of the telephone line 24 gauge below or 26 gauge above.

## **2.4 Connecting the Bridge**


The bridge has one Ethernet port which support connection to Ethernet operation. The devices attached to these ports must support auto-negotiation or 10Base-T OR 100Base-TX unless they will always operate at half duplex. Use any of the Ethernet ports to connect to devices such as NIC, Switch, bridge or router.

**Note:**

- 1.The RJ11 Line port is used to connect to the wall RJ-11 modular socket (outlet) that is connected to VDSL 4-Band CPE bridge side (Point to point solution).
- 2.The RJ11 Phone port of the bridge can be connected to a telephone for making calls.

## **2.5 Connecting the RJ-11 / RJ-45 Ports**

1. The bridge's RJ-11 ports supports max distance 1.9km at 5M/5M or max rate 25M/25M symmetrical and distances up to 800m data service across existing phone wiring, without interfering with standard voice transmissions, easy-to-use which do not require installation of additional wiring. Every RJ-11 modular phone jack in the home can become a port on the LAN. Networking devices can be installed on a single telephone wire that can span within 1.9km or 800m (depends on speed) between the two farthest points. (Figure 2.1)

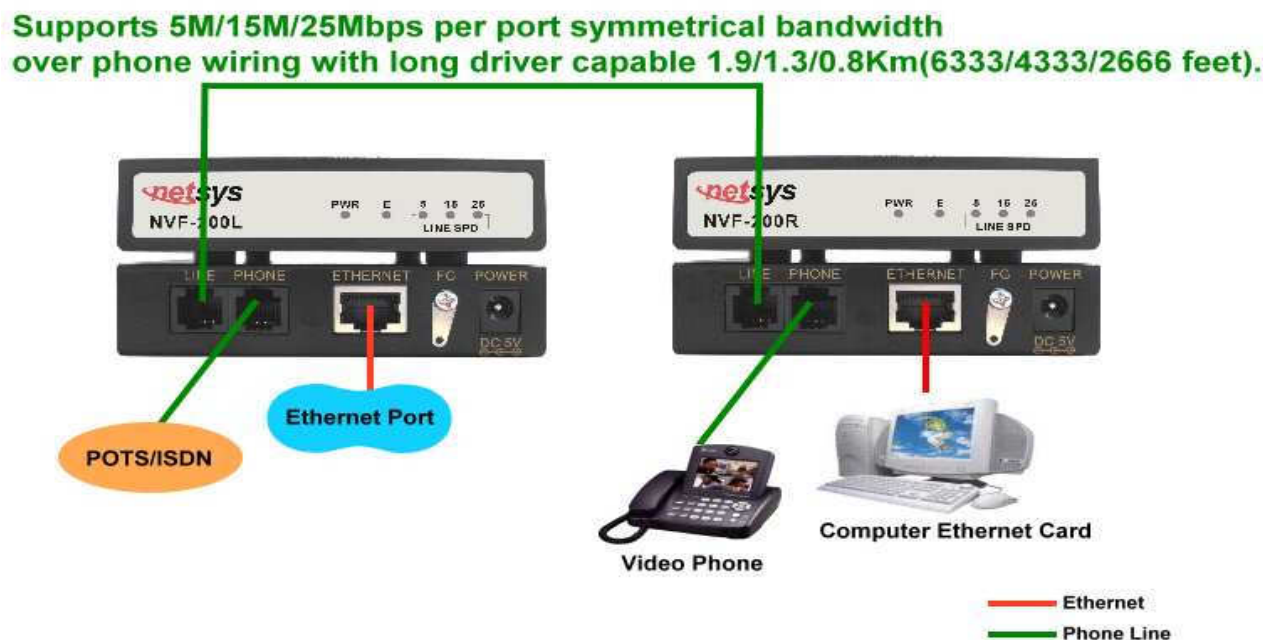

**Figure 2.1 VDSL Point-to-Point application**



**NVF-200LS/R ver.S 4 Band VDSL CO/CPE Bridge USER'S MANUAL Ver. B.3**

2. NVF-200LS/R bridge has an embedded splitter between every VDSL side (Line) and POTS (Phone) side. It permits one to deliver broadband service on the same lines as Plain Old Telephone Service (POTS), PBX, ISDN traffic and VDSL Signal.
3. When inserting a RJ-11 plug, make sure the tab on the plug clicks into position to ensure that it is properly seated.
4. **Do not** plug a RJ-11 phone jack connector into the Ethernet port (RJ-45 port). This may damage the bridge. Instead, use only twisted-pair cables with RJ-45 connectors that conform to Ethernet standard.

**Notes:**

1. Be sure each twisted-pair cable (RJ-45) does not exceed 100 meters (333 feet).
2. RJ-11 port use **24 ~ 26** gauge with twisted pair phone wiring.
3. We advise using Category 3 ~7 cables for Cable bridge or Router connections to avoid any confusion or inconvenience in the future when you attached to high bandwidth devices.
4. Be sure phone cable has been installed before NVF-200LS and NVF-200R ver.S powered on.

## **Chapter 3. Hardware Description**

This section describes the important parts of the bridge. It features the front panel, side panel and rear connectors.



**NVF-200LS/R ver.S Outlook**

### **3.1 Front Panel**

The figure shows the front panel. ([Figure 3.1](#))



**Figure 3.1 Front Panel**

**Tip:**

At a quick glance of the front panel, it is easy to tell if the CO or CPE bridge has power, if it has signal from its Ethernet RJ-45 port and if there is phone line signal on RJ-11 port.

### **3.2 Front Indicators**


The bridge has **Five** LED indicators. The following Table shows the description. (Table 3-1)

**Table 3-1** LED Indicators Description and Operation

LED	Color	Status	Descriptions
PWR (Power LED)	Green	On	The device is receiving the power and functioning properly.
		Off	The device is not ready or has malfunctioned.
E (Ethernet LED)	Green	On	The device has a good Ethernet connection.
		Blinking	The device is sending or receiving data.
		Off	The LAN is not connected.
5 (VDSL LED)	Green	On	VDSL is in good linkage <a href="#">at 5Mbps data rate.</a>
		Off	The VDSL connection is down.
15 (VDSL LED)	Green	On	VDSL is in good linkage <a href="#">at 15Mbps data rate.</a>
		Off	The VDSL connection is down.
25 (VDSL LED)	Green	On	VDSL is in good linkage <a href="#">at 25Mbps data rate.</a>
		Off	The VDSL connection is down.

### 3.3 Rear Panel

The following figure shows the rear connectors. (Figure 3.2)

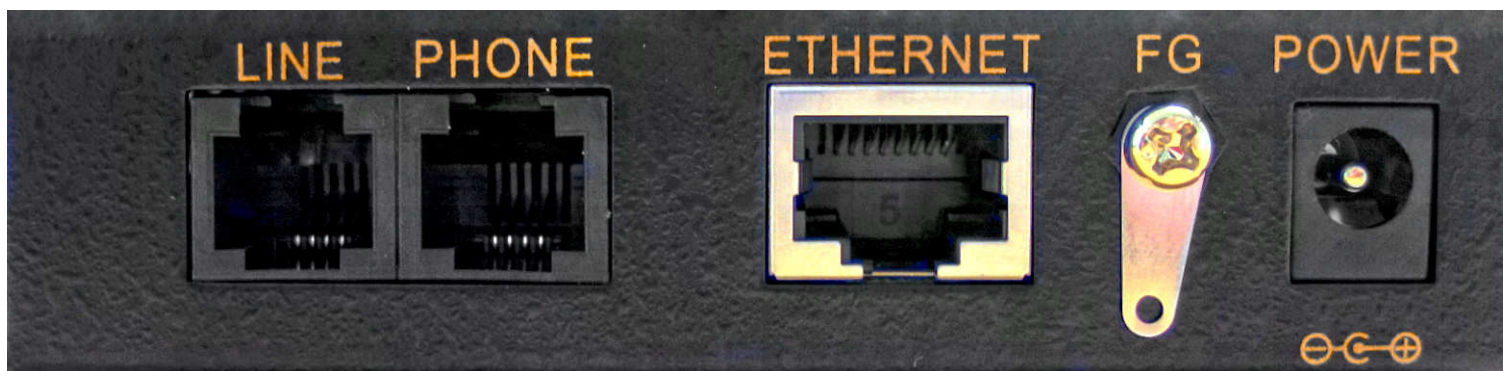

**Figure 3.2 Rear connectors**

And the table shows the description. (Table 3-2)

**Table 3-2** Description of the bridge rear connectors

Connectors	Type	Description
Line	RJ-11	For connecting to the VDSL bridge.
Phone	RJ-11	For connecting to the telephone or Fax, ISDN bridge
Ethernet	RJ-45	For connecting to a Ethernet equipped device

**Note:**

If it is needed to connect to the ISDN bridge, please refer to Appendix C for further details.


### **3.4 Side Panel**

The following figure shows the DIP switch connection. (Figure 3.3)



**Figure 3.3** Side panel

At quick glance, it is easy to see that the DIP switch pin 1 is switch ON where it is in auto-speed and that is also the default mode. (Figure 3.4)

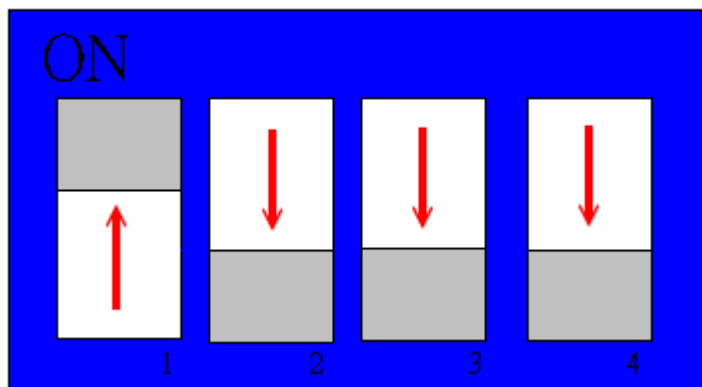

**Figure 3.4** DIP switch setting



To set the data speed to 25Mbps simply switch ON the pin 2 while the other pins are switch OFF. To change it to 15Mbps, switch ON the pin 3 while the other pins are switch OFF, for 5Mbps switch on the pin 4 while other are switch OFF. Remember that no two pins can be activated at the same time or it will result in error and for data speed of 5Mbps. Table shows the summary of DIP switch configuration. ([Table 3-3](#))

**Table 3-3** DIP Switch Configuration

Speed mode	Pin 1	Pin 2	Pin 3	Pin 4
Auto speed	On	Off	Off	Off
25Mbps	Off	On	Off	Off
15Mbps	Off	Off	On	Off
5Mbps	Off	Off	Off	On

## Chapter 4. Firmware Description

### Auto and manual data speed selector description:

NVF-200LS/R is a 4band VDSL solution which supports real plug & play and can do auto and manual selection of the data speed, the setting of the data speed depends on the phone cable length limit, they can support 5M/15M/25M symmetrical data service but depends on installation environment. If NVF-200LS try to link at 25Mbps data speed but fails to do so then NVF-200LS data speed must be lower due to the limitation of the phone cable length. If the cable length is unsure, then auto selection of the data speed at the default setting is recommended. Power must be unplug before changing of data speed then powered on and wait for VDSL to link again at the correct data speed function.

### Speed mode limitation:

1. **5M/5M** mode within 1.9km (6333 ft.)
2. **15M/15M** mode within 1.3km (4333 ft.)
3. **25M/25M** mode within 800m (2666 ft.)

#### Tip:

**With the above phone cable limit based on without PBX noise.**

#### Note1:

We recommend phone cable that must meet Cat. 3 standard or above and without clustering, otherwise the above guarantee will be void.

#### Note2:

The performance data above is for reference only, the actual distance will vary on the quality of the copper wire and environment factors. **We recommend using 24~26 gauge and Cat. 3 standard or above phone wiring.**


## Appendix A: Cable Requirements

### A.1 Ethernet Cable

A CAT 3, 4 or 5 UTP (unshielded twisted pair) cable is typically used to connect the Ethernet device to the modem. A 10Base-T cable often consists of four pairs of wires, two of which are used for transmission. The connector at the end of the 10Base-T cable is referred to as an RJ-45 connector and it consists of eight pins. The Ethernet standard uses pins 1, 2, 3 and 6 for data transmission purposes. (Table A-1)

**Table A-1** RJ-45 Ethernet Connector Pin Assignments


PIN #	MDI		MDI-X	
	Signal	Media Dependant interface	Signal	Media Dependant interface-cross
1	TX+	Transmit Data +	RX+	Receive Data +
2	TX-	Transmit Data -	RX-	Receive Data -
3	RX+	Receive Data +	TX+	Transmit Data +
4	--	Unused	--	Unused
5	--	Unused	--	Unused
6	RX-	Receive Data -	TX-	Transmit Data -
7	--	Unused	--	Unused
8	--	Unused	--	Unused

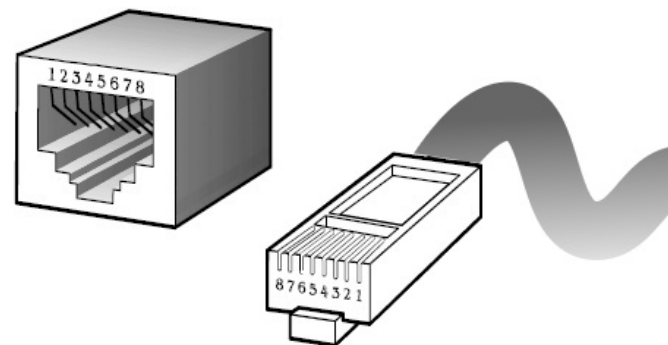

**Figure A-1** Standard RJ-45 repeater/connector

**Note:**

Please make sure your connected cables are with same pin assignment as above table before deploying the cables into your network.

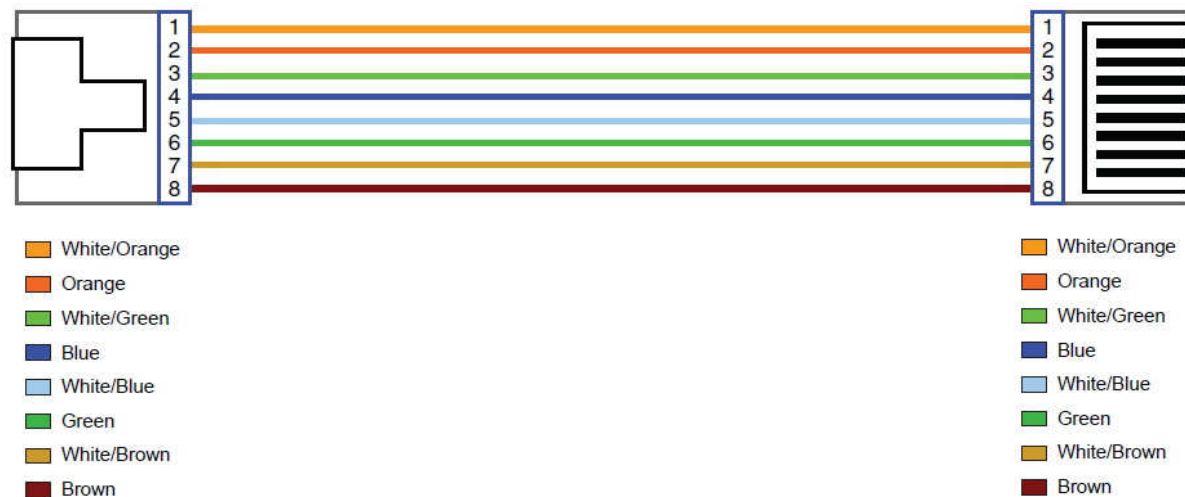


**Figure A-2 Pin Assignments and Wiring for an RJ-45 Straight-Through Cable**



**Figure A-3 Pin Assignments and Wiring for an RJ-45 Crossover Cable**

## **A.2 Telephone wire**

Standard telephone wire of any gauge or type-flat, twisted or quad is used to connect the Modem to the telephone network. A telephone cable typically consists of three pairs of wires, one of which is used for transmission. The connector at the end of the telephone cable is called an RJ-11 connector and it consists of six pins. POTS (plain old telephone services) use pins 3 and 4 for voice transmission. A telephone cable is shown below. ([Figure A-4](#))

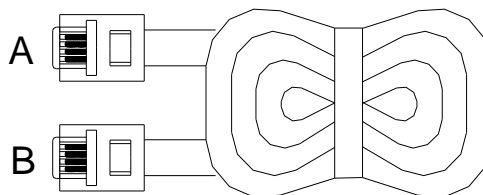

**Figure A-4 Telephone cable**

The A and B connectors on the rear of the Modem are RJ-11 connectors. These connectors are wired identically. The RJ-11 connectors have six positions, two of which are wired. The Modem uses the center two pins. The pin out assignment for these connectors is presented below. ([Table A-2](#))

**Table A-2 RJ-11 Pin out Assignments**

Pin#	MNEMONIC	FUNCTION
1	NC	Unused
2	NC	Unused
3	<b>TIP</b>	<b>POTS</b>
4	<b>RING</b>	<b>POTS</b>
5	NC	Unused
6	NC	Unused_

## **Appendix B: Product Specification**

### **Key Features & Benefits**

- Max speed at 5M/5M with distance up to 1.9km(6333ft), Max speed at 15M/15M with distance up to 1.3km(4333ft), Max speed at 25M/25M with distance up to 800m(2666ft)
- Supports 1 \* RJ-11 connector for Ethernet over VDSL
- Supports 1 \* RJ-11 connector for telephone/PBX connection
- Supports 1 \* RJ-45 port for 10/100Mbps Ethernet with Auto MDI/MDIX
- Supports 1\* Dip switch(NVF-200LS only) for speed mode selection
- Supports Auto/5/15/25Mbps speed mode and full duplex for VDSL port
- Supports long packet size up to 1536 bytes
- Supports POTS/ISDN voice pass
- Supports PBO(Power Back Off) function for NVF-200R
- Supports 4wires phone set pass through
- Voice and Data work on the same telephone line
- Spectral compatibility with xDSL, ISDN (2B1Q/4B3T)
- Supports flow control IEEE802.3x for Full Duplex & Back Pressure for Half Duplex
- Supports Surge protection
- Provides Power LED and LED indication Link/Active Status for Ethernet port and Link/Speed for VDSL port
- Plug & Play, mini size and metal case design
- External Power Adapter: Input: AC 85~240Volts/50~60Hz Output: DC 5-12V/1A
- EMI certified by CE, FCC Class B, and VCCI Class B
- Safety compliant EN60950-1

## Product Specification

<b>Standard:</b>	IEEE802.3 standard IEEE802.3u standard Compliant with ETSI, ITU & ANSI standards
<b>Interface:</b>	1 * RJ-45 10/100Mbps Ethernet port 1 * RJ-11 connector for EoVDSL 1 * RJ-11 connector for telephone connection
<b>Cable Connections:</b>	RJ-45 (Ethernet): Category 3, 4, 5 UTP/STP RJ-11 (EoVDSL): Twisted Pair phone wire
<b>LED indication:</b>	Power Link/Active Status for Ethernet port Link/Speed for VDSL port
<b>VDSL Frequency Spectrum:</b>	NVF-200LS Transmitter: 900 kHz ~ 3.9MHz Receiver: 4MHz & 7.9MHz NVF-200R ver.S Transmitter: 4MHz ~ 7.9MHz Receiver: 900 kHz ~ 3.9MHz
<b>POTS/ISDN pass filter Spectrum:</b>	0 ~ 630kHz
<b>Power Consumption:</b>	NVF-200LS (LT): 2.15W NVF-200R ver.S (NT): 2.75W
<b>Operating Temperature:</b>	0℃ ~ 50℃ (32℉ ~ 122℉)
<b>Storage Temperature:</b>	-20℃ ~ 70℃ (-4℉ ~ 158℉)
<b>Humidity:</b>	10% to 90% (non-condensing)
<b>Weight:</b>	About 0.68kg
<b>Dimensions:</b>	95 x 110 x 24 mm (3.74" x 4.33" x 0.94")

## **Appendix C: 4 Band VDSL Electrical Characteristics**

Parameter		Min.	Typ.	Max.	Unit
Spectrum	Transmit	0.9		3.9	MHz
	Receive	4		7.9	MHz
PSD Level	Transmit	-70		-61.5	dBm/Hz
	Receive	-70		-60	dBm/Hz
Noise Margin			6		dB
5Mbps Link Margin	Transmit	27	31	35	dB
	Receive	27	31	35	dB
15Mbps Link Margin	Transmit	36	38	40	dB
	Receive	36	38	40	dB
25Mbps Link Margin	Transmit	41	43	45	dB
	Receive	41	43	45	dB




## **Appendix D: Troubleshooting**

### **Diagnosing the Bridge's Indicators**

The bridge can be easily monitored through its comprehensive panel indicators. These indicators assist the network manager in identifying problems the hub may encounter. This section describes common problems you may encounter and possible solutions.

<b>1. Symptom:</b>	POWER indicator does not light up (green) after power on.
<b>Cause:</b>	Defective External power supply
<b>Solution:</b>	Check the power plug by plugging in another that is functioning properly. Check the power cord with another device. If these measures fail to resolve the problem, have the unit power supply replaced by a qualified distributor.
<b>Note:</b>	Don't use other AC to DC power adapter
<b>2. Symptom:</b>	Link indicator does not light up (green) after making a connection.
<b>Cause:</b>	Network interface (ex. a network adapter card on the attached device), network cable, or switch port is defective.
<b>Solution:</b>	2.1 Power off and re-power on the VDSL bridge. 2.2 Verify that the switch and attached device are power on. 2.3 Be sure the cable is plugged into both the switch and corresponding device. 2.4 Verify that the proper cable type is used and its length does not exceed specified limits. 2.5 Check the bridge on the attached device and cable connections for possible defects. 2.6 Make sure that the phone wire must be connected between NVF-200LS and NVF-200Rver.S first, when both are to be power on. 2.7 Replace the defective bridge or cable if necessary.

<b>3. Symptom:</b>	VDSL Link cannot be established.
<b>Cause:</b>	VDSL speed mode setting failure or phone cable length is over the specification limit of the speed mode.
<b>Solution:</b>	<p>3.1 Please make sure that the phone wire must be connected between NVF-200LS and NVF-200R ver.S when both are power on. NVF-200LS will do link speed function depending on speed mode setting and phone wire length, therefore if NVF-200LS can't detect NVF-200R ver.S over phone wire while both power on, this will cause the link to fail.</p> <p>3.2 Please check phone cable must be 24 gauge with twisted pair and without rust, and the length is not over 1.9km.</p> <p>3.3 Please check the correct Dip Switch setting.</p>
<b>Note:</b>	Phone cable must meet CAT 3 standard or above and without clustering, otherwise will cause more cross talk issue to reduce DSL power driver.
<b>4. Symptom:</b>	VDSL speed mode LED is always flashing
<b>Cause:</b>	VDSL speed mode link is at the limit of phone cable length
<b>Solution:</b>	Please change speed mode through Dip switch.
<b>Note:</b>	Don't use phone cable that is without twisted pair and under 0.4mm (26 Gauge) diameter.
<b>5. Symptom:</b>	We tested with a regular S0 bus from an NTBA - data works, but ISDN telephone does not.

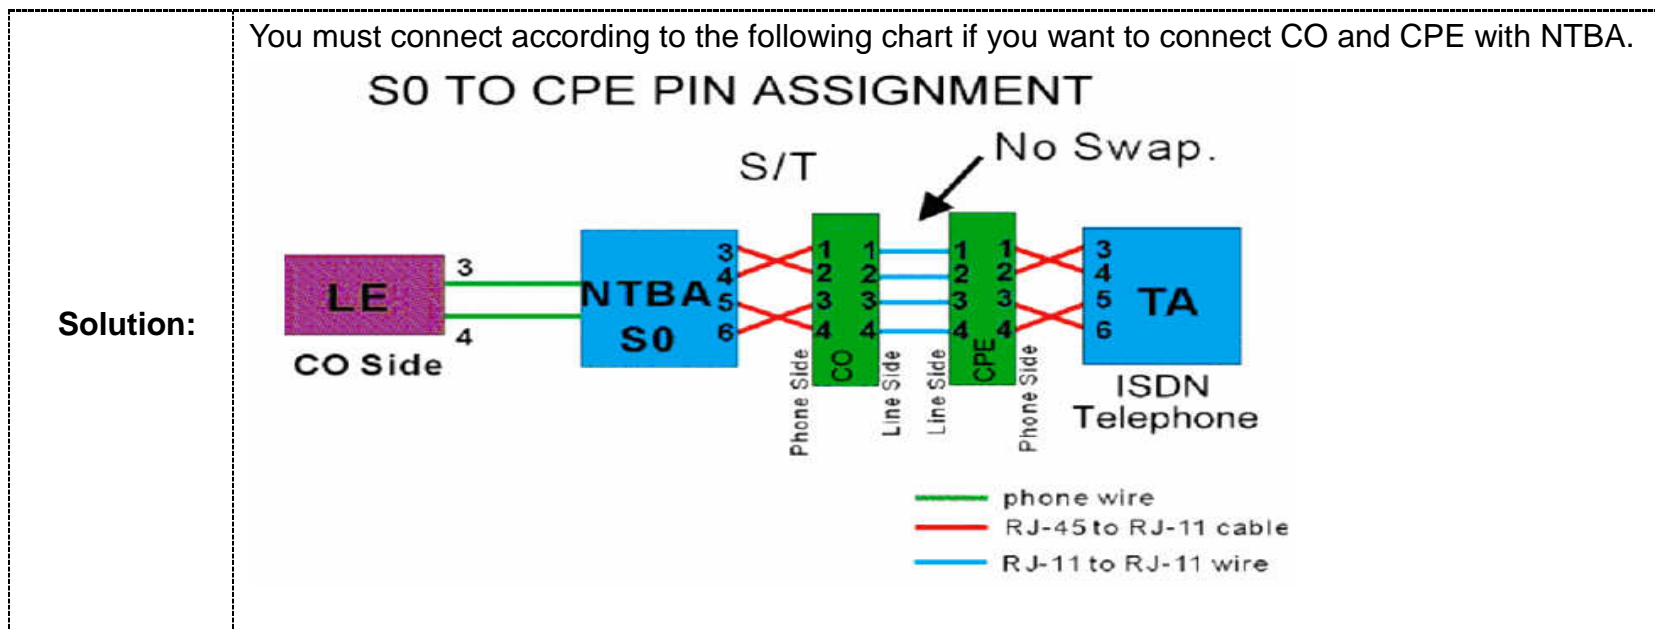

<b>6. Symptom:</b>	VDSL line is at link margin.
<b>Cause:</b>	When the VDSL line is linking between 2 speeds at 5/15Mbps or 15/25Mbps.
<b>Solution:</b>	Fixed the speed to 5Mbps when it is linking between 5/15Mbps or fixed the speed to 15Mbps when it is linking between 15/25Mbps.

<b>7. Symptom:</b>	VDSL flickers at 25Mbps when multicast streams.
<b>Cause:</b>	Power level is too high and noise immunity is weak.
<b>Solution:</b>	Fixed the speed to 15Mbps, since 15Mbps is ideal for multicast streaming while 25Mbps is for transferring large data file at high speed.

## **System Diagnostics**

### **Power and Cooling Problems**

If the POWER indicator does not turn on when the power cord is plugged in, you may have a problem with the power outlet, power cord, or internal power supply as explained in the previous section. However, if the unit power is off after running for a while, check for loose power connections, power losses or surges at the power outlet, and verify that the fan on back of the unit is unobstructed and running prior to shutdown. If you still cannot isolate the problem, then the internal power supply may be defective. In this case, please contact your local dealer.

### **Installation**

Verify that all system components have been properly installed. If one or more components appear to be malfunctioning (e.g. the power cord or network cabling), test them in an alternate environment where you are sure that all the other components are functioning properly.

### **Transmission Mode**

The default method of selecting the transmission mode for RJ-45 ports is 10/100 Mbps ETHERNET, for RJ-11 port are 5/15/25Mbps VDSL. Therefore, if the Link signal is disrupted (e.g. by unplugging the network cable and plugging it back in again, or by resetting the power), the port will try to reestablish communications with the attached device via auto-negotiation. If auto-negotiation fails, then communications are set to half duplex by default. Based on this type of industry-standard connection policy, if you are using a full-duplex device that does not support auto-negotiation, communications can be easily lost (i.e. reset to the wrong mode) whenever the attached device is reset or experiences a power fluctuation. The best way to resolve this problem is to upgrade these devices to a version that support Ethernet and VDSL.



### **Physical Configuration**

If problems occur after altering the network configuration, restore the original connections, and try to track the problem down by implementing the new changes, one step at a time. Ensure that cable distances and other physical aspects of the installation do not exceed recommendations.

### **System Integrity**

As a last resort verify the switch integrity with a power-on reset. Turn the power to the switch off and then on several times. If the problem still persists and you have completed all the preceding diagnoses, then contact your dealer.

## **Appendix E: Compliance and Safety Information**

### **FCC Radio Frequency Interference Statement**

This equipment has been tested and found to comply with the limits for a computing device, pursuant to Part 15 of FCC rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

1. Reorient or relocate the receiving antenna.
2. Increase the separation between the equipment and receiver.
3. The equipment and the receiver should be connected to outlets on separate circuits.
4. Consult the dealer or an experienced radio/television technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

If this telephone equipment causes harm to the telephone network, the telephone company will notify you in advance that temporary discontinuance of service may be required. But if advance notice isn't practical, the telephone company will notify the customer as soon as possible. Also, you will be advised of your right to file a complaint with the FCC if you believe it is necessary.

The telephone company may make changes in its facilities, equipment, operations or procedures that could affect the



proper functioning of your equipment. If they do, you will be notified in advance in order for you to make necessary modifications to maintain uninterrupted service.

This equipment may not be used on coin service provided by the telephone company. Connection to party lines is subject to state tariffs.

### **Important Safety Instructions**

- ◆ **Caution:** The direct plug-in wall transformer serves as the main product for disconnecting. The socket outlet shall be installed near the product and be readily accessible.
- ◆ **Caution:** Use only the power supply included with this product. In the event the power supply is lost or damaged: In the United States, use only with CSA certified or UL listed Class 2 power supply, rated **5-12Vdc 1A** or above.  
IN Europe, use only with CE certified power supply, rated **5-12Vdc 1A** or above.
- ◆ **Do not** use this equipment near water, for example in a wet basement.
- ◆ **Avoid** using a telephone during an electrical storm. There may be a remote risk of electrical shock from lightning.
- ◆ **Do not** use the telephone to report a gas leak in the vicinity of the leaking area.
- ◆ If you experience trouble with this unit, please contact customer service of your dealer immediately.
- ◆ **DO NOT DISASSEMBLE THIS EQUIPMENT.** It does not contain any user serviceable components.

**FCC Warning**



This equipment has been tested to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment can generate, use, and radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at owner's expense.

**CE Mark Warning**



This is a class B product. In a domestic environment, this product may cause radio interference in which case the user may be required to take adequate measures.

**WEEE Warning**



To avoid the potential effects on the environment and human health as a result of the presence of hazardous substances in electrical and electronic equipment, end users of electrical and electronic equipment should understand the meaning of the crossed-out wheeled bin symbol. Do not dispose of WEEE as unsorted municipal waste and have to collect such WEEE separately.



## Warranty

The original owner that the product delivered in this package will be free from defects in material and workmanship for one year parts after purchase.

There will be a minimal charge to replace consumable components, such as fuses, power transformers, and mechanical cooling devices. The warranty will not apply to any products which have been subjected to any misuse, neglect or accidental damage, or which contain defects which are in any way attributable to improper installation or to alteration or repairs made or performed by any person not under control of the original owner.

The above warranty is in lieu of any other warranty, whether express, implied, or statutory, including but not limited to any warranty of merchantability, fitness for a particular purpose or any warranty arising out of any proposal, specification or sample. We shall not be liable for incidental or consequential damages. We neither assume nor authorize any person to assume for it any other liability.



### **WARNING:**

- 1.DO NOT TEAR OFF OR REMOVE THE WARRANTY STICKER AS SHOWN, OR THE WARRANTY IS VOID.**
- 2. WARRANTY VOID IF USE COMMERCIAL-GRADE POWER SUPPLY IS USED AT INDUSTRIAL ENVIRONMENTS.**